DataComm Electronics, Inc. 6349 Peachtree Street Norcross, GA 30071-1725 888.223.7977 770.662.8205 www.datacommelectronics.com




## Instruction/ Installation Sheet

## DataComm Electronics 4-Gang 110 4x8 Phone Plate & 1x6 Splitter with Tester 70-0078

#### Telephone Installation

- Locate the central point where all telephone home runs meet.
- Install either a 4-gang mounting bracket or a 4 gang switch box at the central point where the telephone wires come together.
- Install the cable from the telephone company demarcation point to the top 110 IDC on the plate.
- Install the remaining twisted pair cables from each location in the house to the remaining 110 IDC connectors. Match the color-coding of the wires to the colors on the 110 IDC connectors. To connect phone service, insert the three inch patch cord into the Telco port and the Home port. Incoming service can be tested using the Telco port.
- The wires should be punched down, using an industry standard punch-down tool, to the 110 IDC connectors following the T568A wiring configuration as shown below
- Secure the plate to either the mounting bracket or switch box.
- Line 1 is Blue, Line 2 is Orange, Line 3 is Green and Line 4 is Brown.

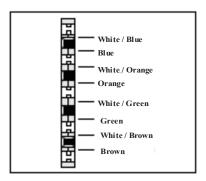

#### **Video Installation**

- Attach a male F-connector onto the cable TV service or satellite service incoming cable. Screw the incoming cable with F-connector to the connector marked input.
- Using F-connectors, terminate all coaxial leads that have been pulled through the four gang in the wall to the remaining connectors on the splitter.

### INSTRUCTIONS ARE CONTINUED ON THE BACK SIDE OF THIS PAGE

## **Instruction/ Installation Sheet**

# DataComm Electronics 4-Gang 110 4x8 Phone Plate & 1x6 Splitter with Tester 70-0078

#### CAUTION

- Never install telephone wiring during lighting storms.
- Never install telephone jacks in wet locations unless the jack is specifically designed for wet locations.
- Never touch un-insulated wires or terminals unless the telephone line has been disconnected at the network interface.
- Use caution when installing or modifying telephone lines.

## **IMPORTANT INSTRUCTIONS**

- Read and understand all instructions.
- Follow all warnings and instructions marked on the product.
- Do not use this product near water, for example near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
- SAVE THESE INSTRUCTIONS.

### ONLY LICENSED PROFESSIONALS SHOULD INSTALL THIS PRODUCT



ETL LISTED

CONFORMS TO

UL STD 1863

ANSI/UL STD 60950

CERTIFIED TO

CAN/CSA STD C22.2 NO 609501