


IMPORTANT:

Before beginning, familiarize yourself with the included instructions and parts list.


CUSTOMER SERVICE:

Toll-free customer service is available weekdays from 7:00 AM to 6:00 PM Central Time at **800-463-0660**.


TOOLS NECESSARY:

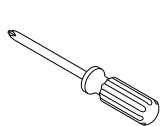

Phillips
Screwdriver

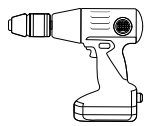


Screw
Gun

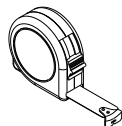

Tape
Measure

NOTE: If screw gun has a clutch, set to lowest setting so as not to over tighten and/or strip screws.

PARTS IDENTIFICATION:

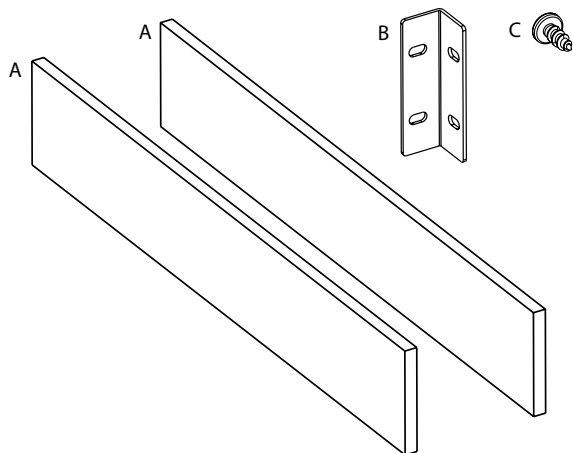

A	Wood Pilaster Supports (Top & Bottom)	2
B	Support Brackets	4
C	#6 x 3/8" Pan Head Wood Screw	16

Wood Pilaster Center Stile Solution CENTERPIL


Installation Instructions

Scan QR or visit link to
view Drawer Box Width
Deduction Sheet.

<https://delivr.com/2jrmd>





Step 1: Measure the Inside Depth of the Cabinet

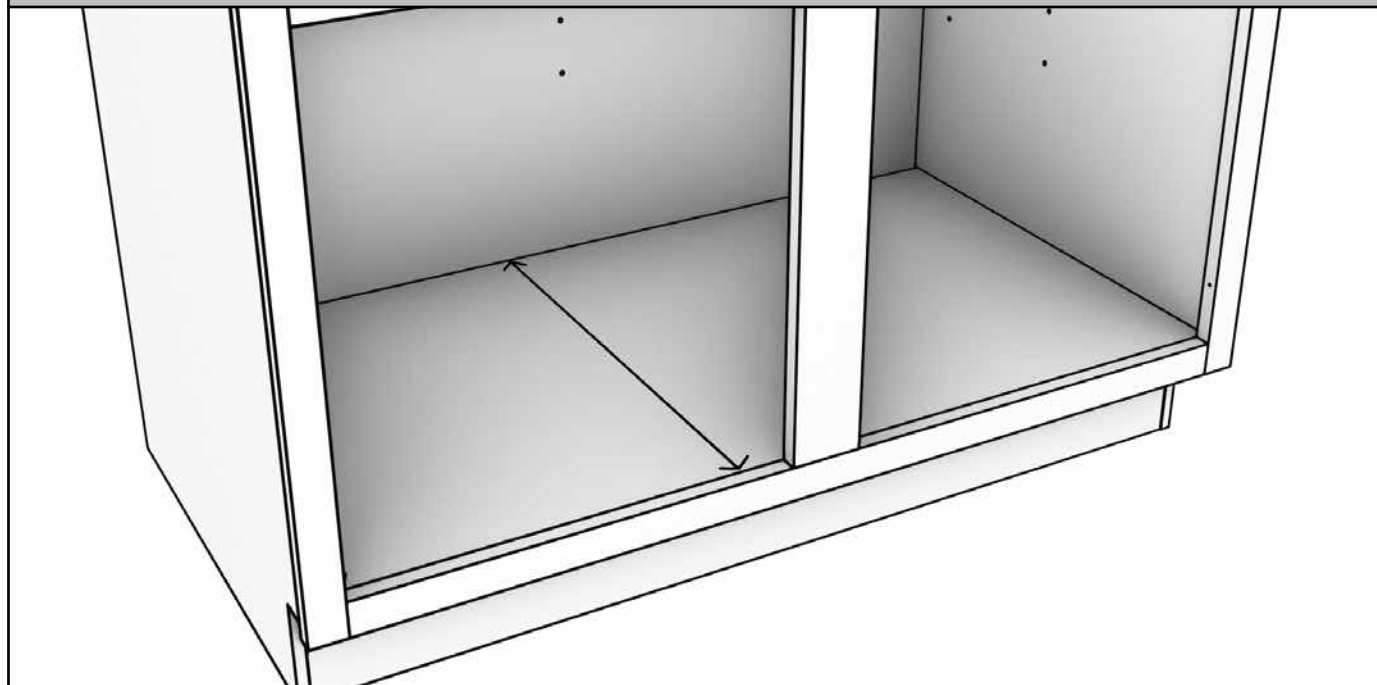





Measure inside depth of the cabinet from the back of the face frame to the back of the cabinet. After measuring, cut both **(A) Wood Pilaster Supports** to length.

Step 2: Attach Support Brackets

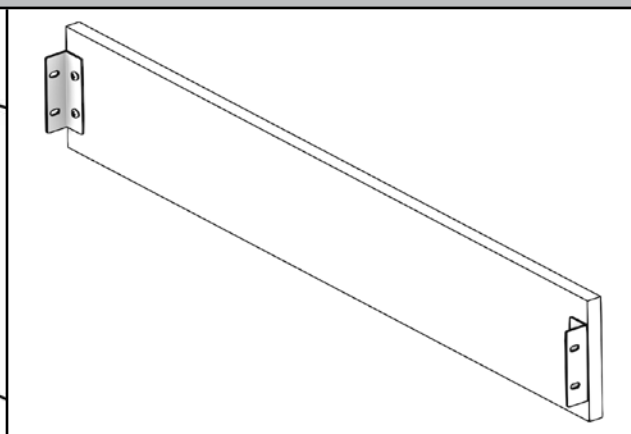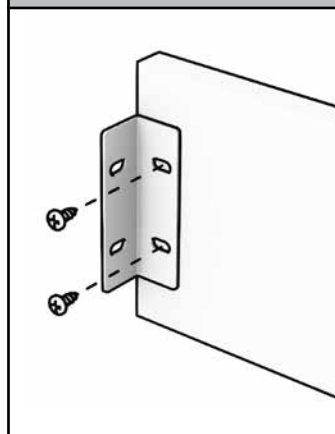

Use two **(C) #6 x 3/8" Pan Head Wood Screws** to attach a **(B) Support Bracket** to the left and right side of the **(A) Wood Pilaster Support**. Center the brackets on each end. Repeat for second **(A) Wood Pilaster Support**.

NOTE: Ensure the brackets are on the side that the pilasters will be mounted.

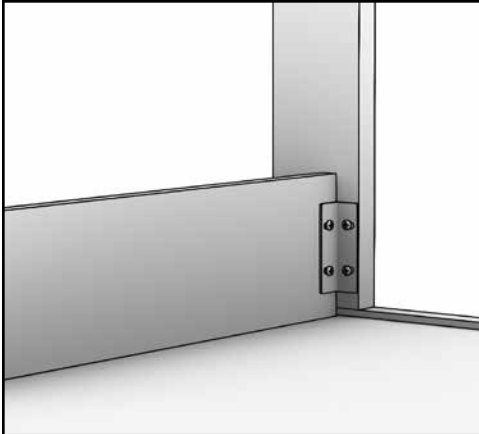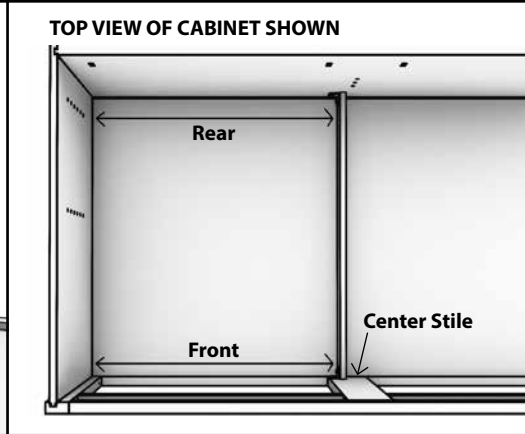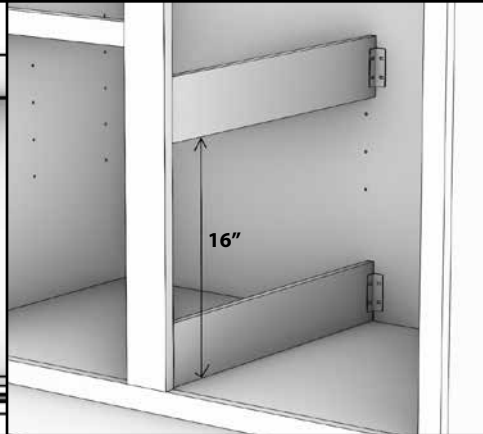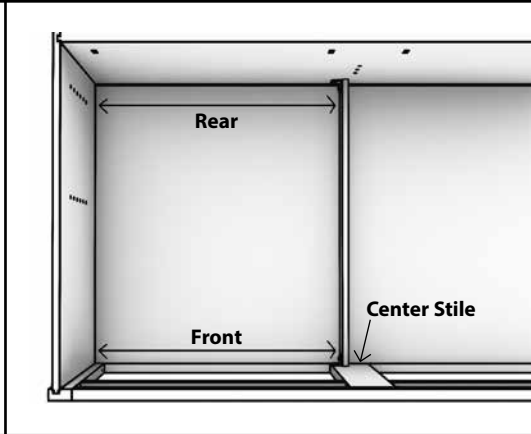Step 3: Install Bottom Wood Pilaster Support		Step 4: Install Top Wood Pilaster Support	
			
Align the edge of the (B) Support Bracket with the edge of the center stile. Secure the (A) Wood Pilaster Support flush to the bottom of the cabinet using two (C) #6 x 3/8" Pan Head Wood Screws. Measure from the side of the cabinet to the (A) Wood Pilaster Support to ensure the front and rear ends of the support are equal distance from the side of the cabinet. Secure with two (C) #6 x 3/8" Pan Head Wood Screws.		Measure 16" from the bottom of the cabinet and place the (A) Wood Pilaster Support flush against the center stile. Align the edge of the (B) Support Bracket with the edge of the center stile. Secure the (A) Wood Pilaster Support with two (C) #6 x 3/8" Pan Head Wood Screws. Measure from the side of the cabinet to the (A) Wood Pilaster Support to ensure the front and rear ends of the support are equal distance from the side of the cabinet. Secure with two (C) #6 x 3/8" Pan Head Wood Screws.	
Once the Wood Pilaster Center Stile Solution is installed, please refer to the Woode Pilaster Instructions that came with the system to finish installation.			