
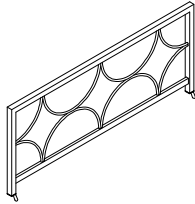
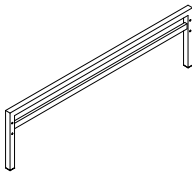
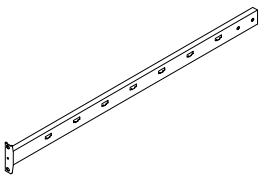
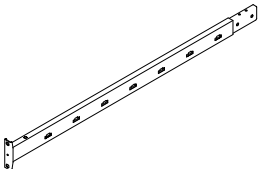
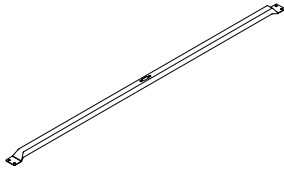
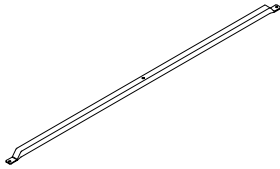
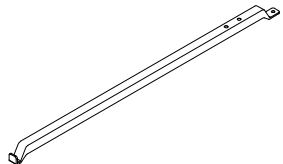












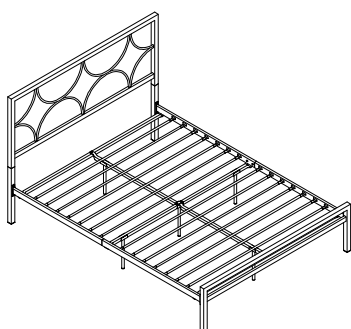


ASSEMBLY INSTRUCTION

ASTROID METAL PLATFORM FULL/QUEEN BED



A Headboard Leg 	B Headboard 	C Footboard 	D Front Side Rail 
2PCS E Rear Side Rail 	1PC F Center Cross Bar 	1PC G Side Cross Bar 	2PCS H Center Rail 
2PCS I Center Support Leg 	1PC J Support Leg 	2PCS K Slat 	2PCS L Slat Connector 
3PCS M Bracket 65 x 25 x 2mm 	2PCS N Bolt 1/4" x 19mm 	14PCS O Bolt 5/16" x 19mm 	28PCS P Bolt 1/4" x 17.5mm 
1PC Q Bolt 1/4" x 40mm 	16PCS R Nut 1/4" 	8PCS S Ratchet Tool 4mm 	8PCS T Wrench 1/4" x 5/16" 
4PCS	4PCS	1PC	1PC



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


How to Use the Ratchet Tool (S)

1. Before assembling the furniture, please adjust the lock as needed.

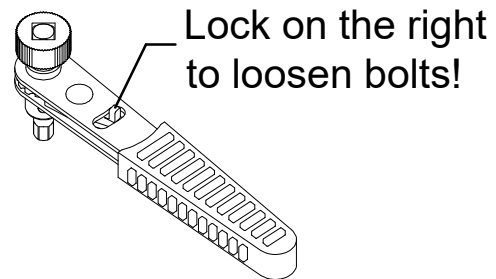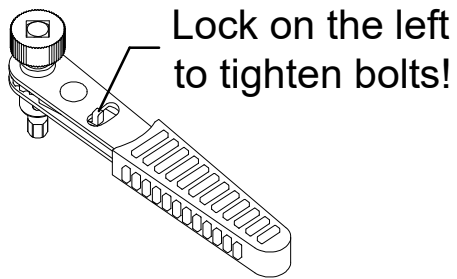


2. Tighten or loosen bolts.

- **Tighten bolts:** Locate the turncap and rotate it clockwise to screw the bolt quickly until it cannot be rotated any more. Then start rotating the handle clockwise to finalize tightening the bolt.

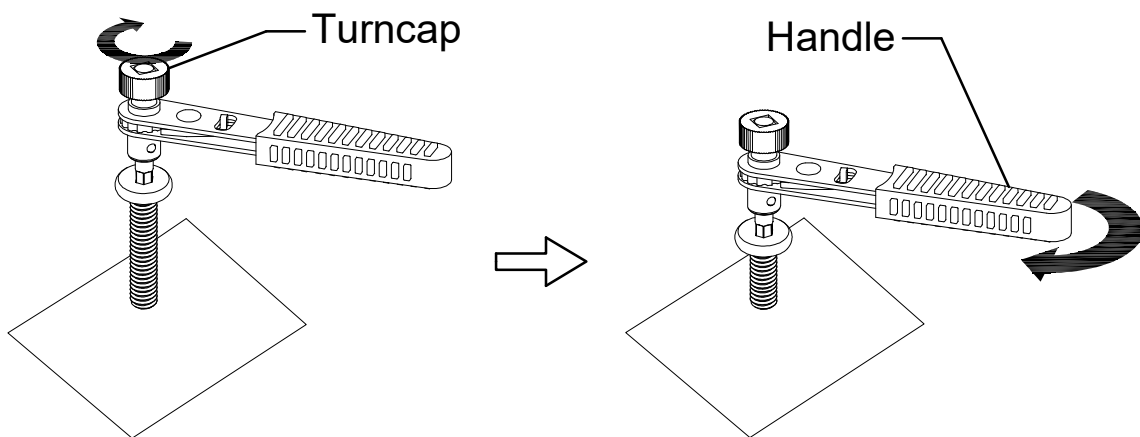


- **Loosen bolts:** Rotate the handle counterclockwise to loosen the bolt. Then continue rotating the turncap in the same direction to remove the bolt completely.

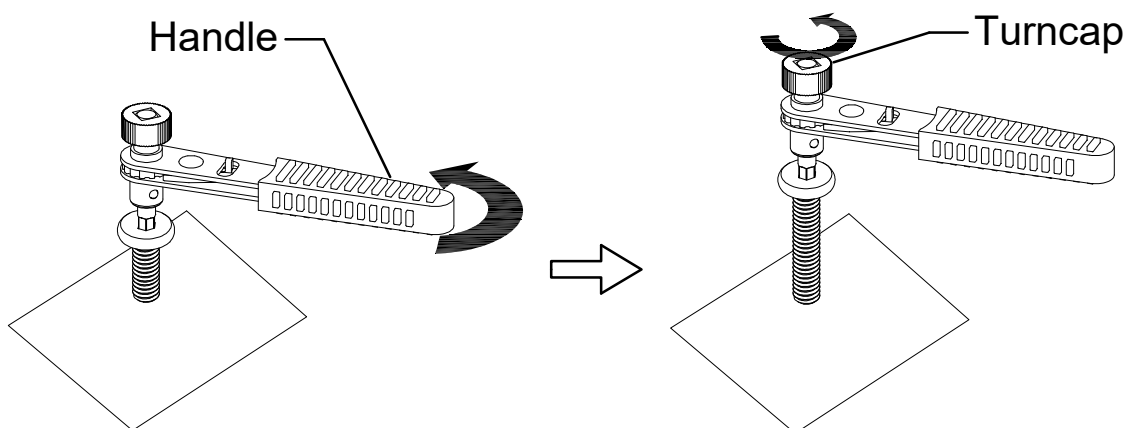


1


Remove the plastic plugs from the Headboard (B).

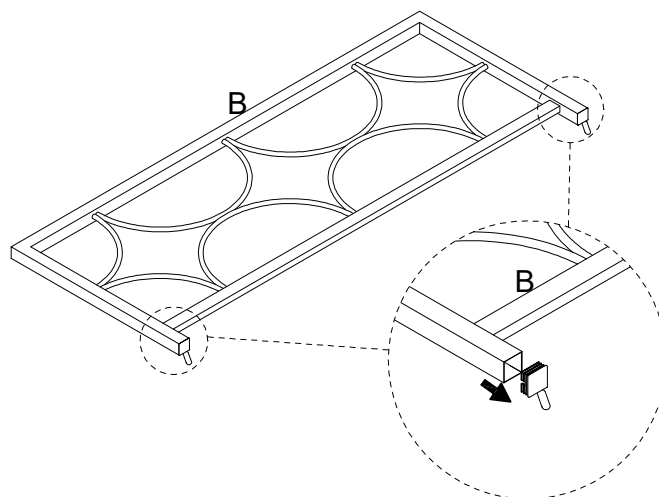**2**

Attach the Headboard Leg (A) to Headboard (B), insert the Bolt (P), turn the Ratchet Tool (S) to tighten them.

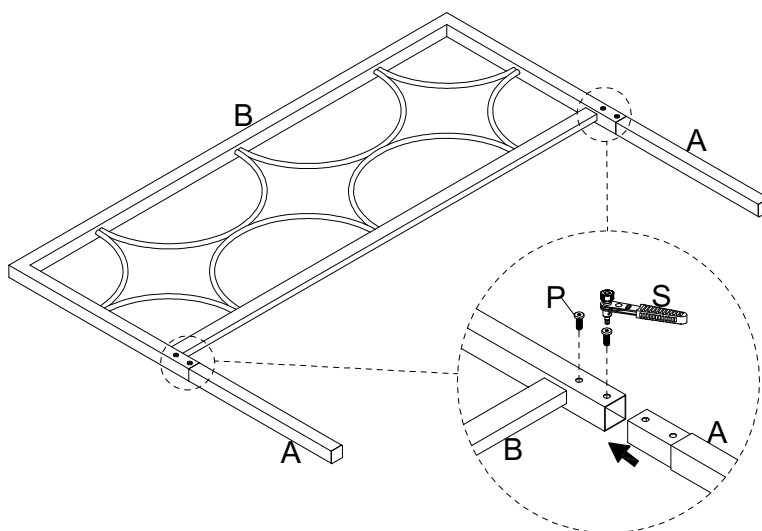
**3**

Attach the Rear Side Rail (E) to Front Side Rail (D), insert the Bolt (P), turn the Ratchet Tool (S) to tighten them.

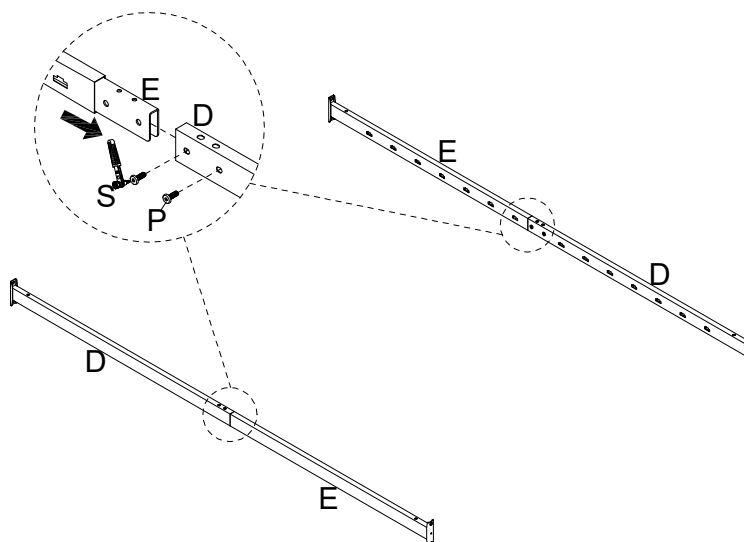


4

Attach the Side Cross Bar (G) and Center Cross Bar (F) to Side Rails (D & E), insert the Bolt (N), turn the Ratchet Tool (S) to tighten them.

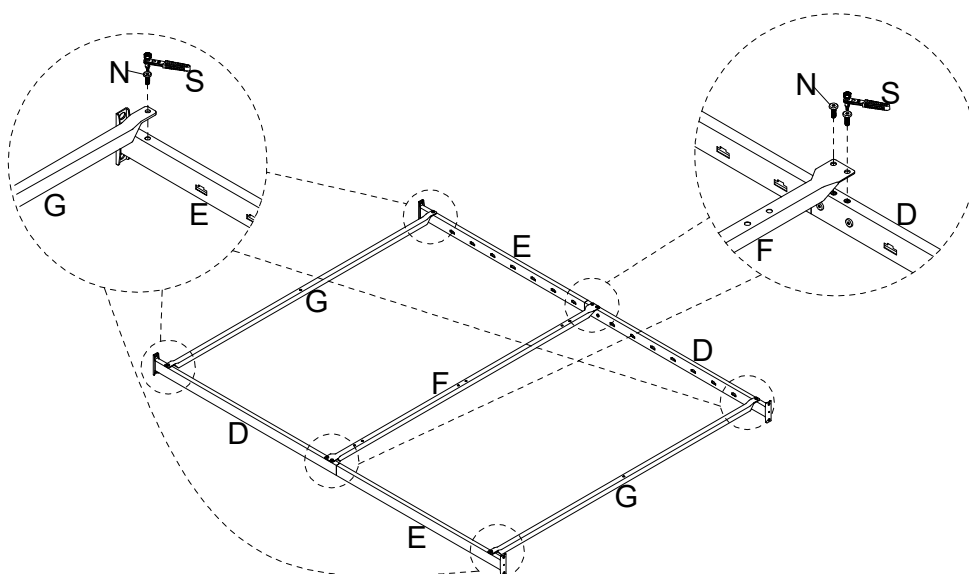


5

Attach the Center Support Leg (I) to Center Cross Bar (F), insert the Bolt (N), turn the Ratchet Tool (S) to tighten them.

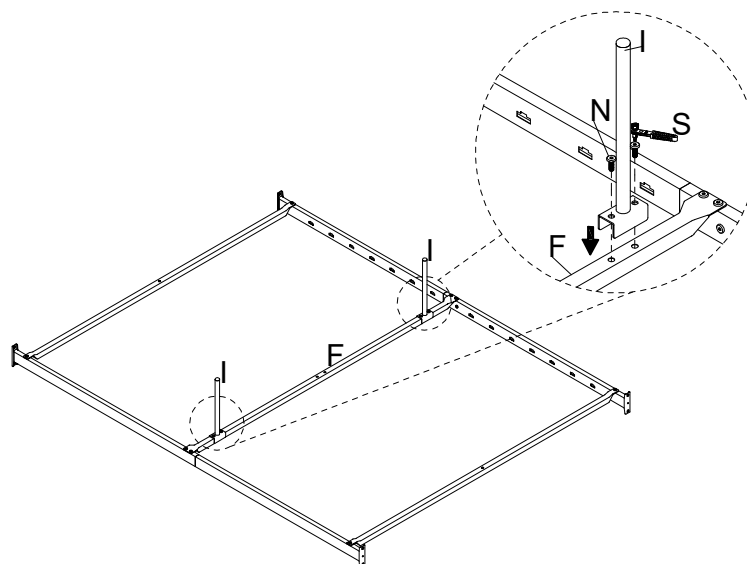


6

Attach the Headboard Leg (A) and Footboard (C) to Side Rails (D & E), insert the Bolt (O), turn the Ratchet Tool (S) to tighten them.

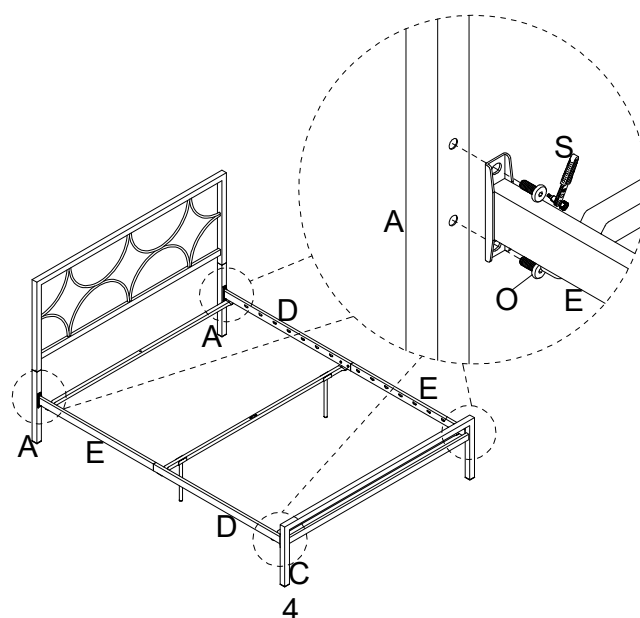


7

Attach the Center Rail (H) to Center Cross Bar (F) and Side Cross Bar (G), insert the Bolt (Q) and Nut (R), turn the Ratchet Tool (S) and Wrench (T) to tighten them.

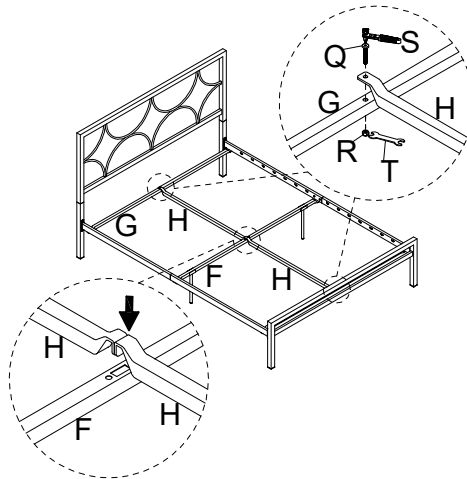


8

Attach the Support Leg (J) to Center Rail (H), insert the Bolt (N), turn the Ratchet Tool (S) to tighten them. Attach the Center Support Leg (I) and Bracket (M) to Center Cross Bar (F), insert the Bolt (Q) and Nut (R), turn the Ratchet Tool (S) and Wrench (T) to tighten them.

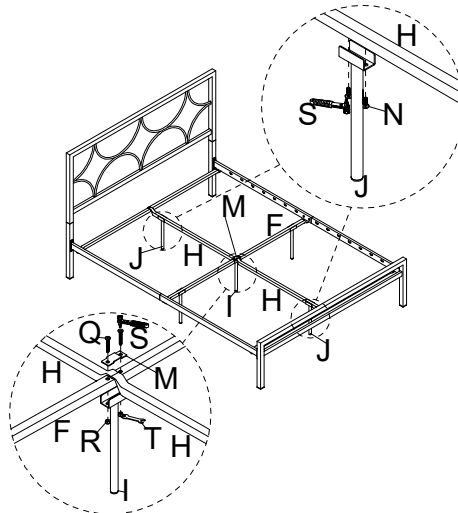

9

Insert Slat (K) into Side Rails (D & E) as illustrated, then lock Slat Connector (L) to fix Slat (K).

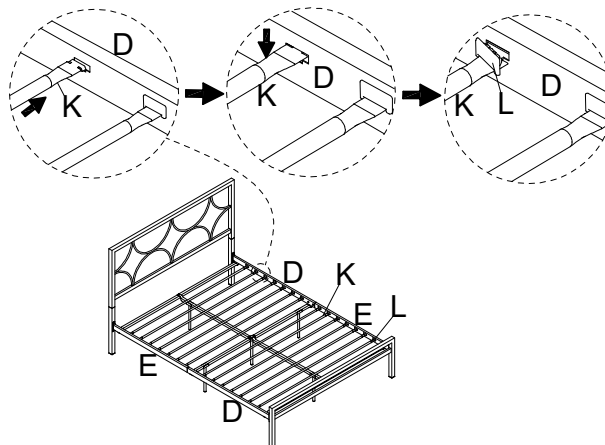

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.