

ASSEMBLY INSTRUCTION

L4568-13P2

DORIAN LEATHER GLIDER RECLINER W/PWR HR & FR



Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose during shipment. Identify and count all items and compare with the parts list shown below. It is recommended to have two people during assembling and to remove the back and base of the furniture out from the box.


Please follow the drawings below to assemble the item

PARTS LIST			
ITEM	DESCRIPTION	SKETCH	QTY
A	SEAT		1 PC
B	LEFT SIDE FACING (LSF) BACKREST		1 PC
C	CABLE		1 PC
D	PLUG		1 PC
E	ADAPTOR		1 PC

WEIGHT CAPACITY (PER SEAT)


300 LBS

HARDWARE DIMENSIONS
VERIFICATION TOOL

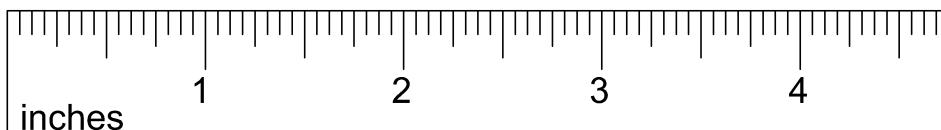


MADE IN MALAYSIA



STEP 1: Install the backrests (B) by align and insert the metal bracket on the backrests (B) to the metal bracket of the seat (A). Please make sure the brackets are inserted all the way and secured into position.

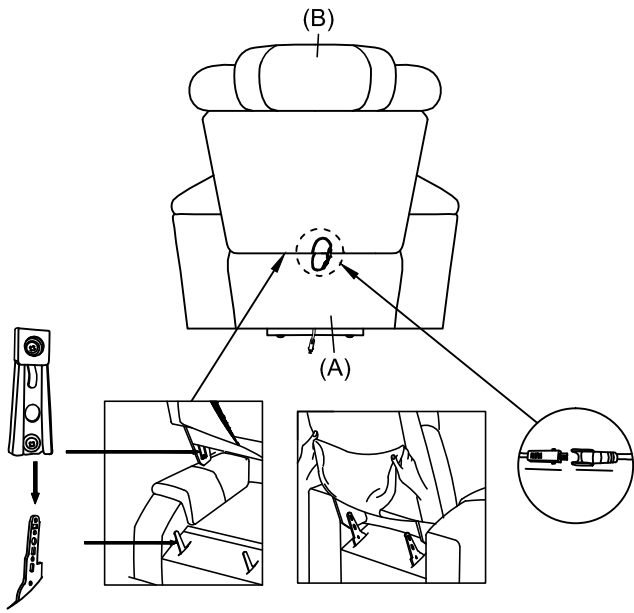


STEP 2: Connect the cable (C) to the power adaptor (F), then connect the power cord (D) to the adaptor and plug it into the wall outlet. Ensure all connections are secure before operating the chair.

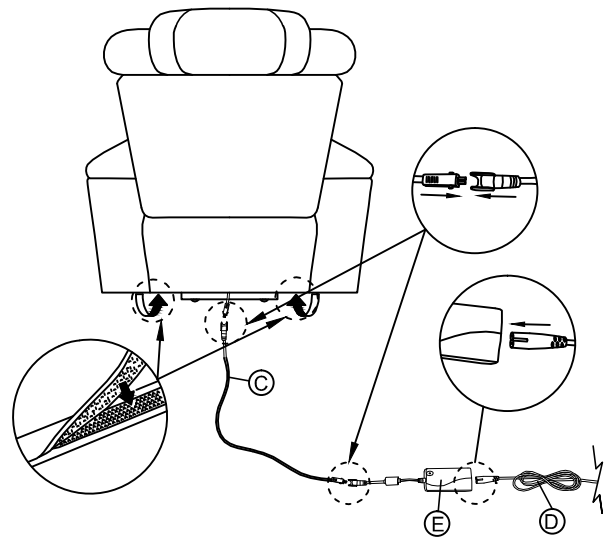

STEP 3: Open the footrest by pressing the button to operate.

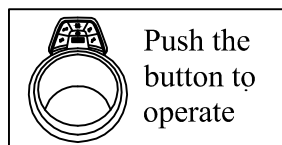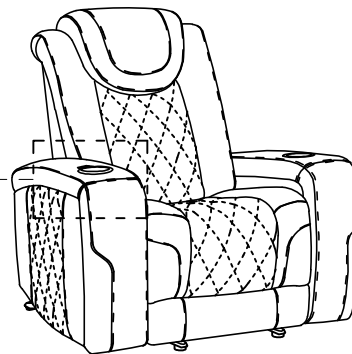

STEP 4: Complete

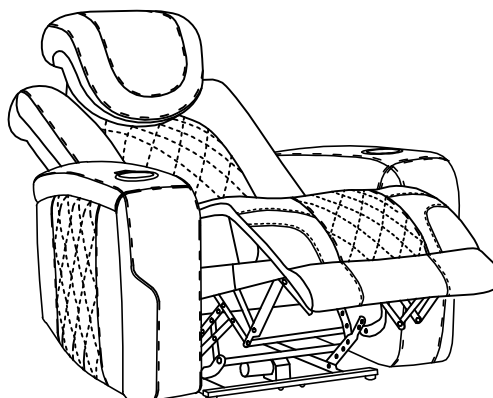

ASSEMBLY COMPLETED
MADE IN MALAYSIA