




Quality Gloves Since 1975

HANGTAG ASSEMBLY INSTRUCTIONS - STAPLE APPLICATION (1 PAIR)

STEP 1:

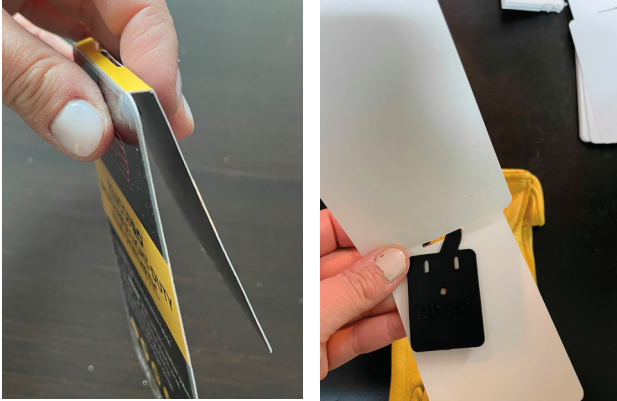

Bend the bridge of the hangtag at both creases. Place the black hook through the hole in the bridge, with the "Kinco" logo facing the front of the hangtag.

STEP 2:



Stack the gloves together with the right hand on top and left hand facing palm out and put the back of the hangtag into the back cuff.

STEP 3:



Rest the black hook on the front glove and fold the tag down.

STEP 4:



Turn gloves over and staple through the hole on back of the hangtag.

STEP 5:



Ensure that the staple goes through both gloves, the black hook, and the front of the hangtag so all parts are attached to one another.

FINISHED ASSEMBLY



Side view

Back view