



TOOLS REQUIRED:



Ratchet with 9/16" socket



1/2" Masonry Drill Bit



Hammer Drill

INCLUDED HARDWARE:



(1) Mounting Bolt Cap



(1) 1/2" x 3" Lag Bolt

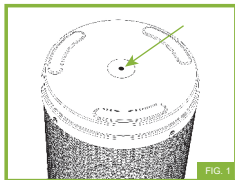


FIG. 1

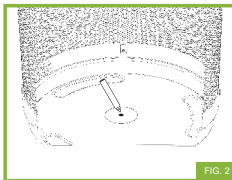


FIG. 2

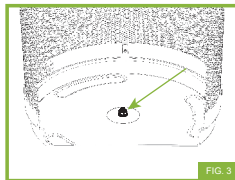


FIG. 3

STEP-BY-STEP INSTRUCTIONS

- 1 Remove the lid from your VistaBin and set aside. (bag should also be removed during install)
- 2 Flip your VistaBin onto its Top Rim. Bottom of the bin should now be facing up.
- 3 Locate and mark the center of the Base. Drill a hole through the center using a drill and 1/2" masonry drill bit. **(FIG. 1)**
- 4 Flip your VistaBin back over so base is on the ground. Move bin to desired location and mark the ground through the hole in base using chalk or a marker. **(FIG. 2)**
- 5 Move your VistaBin over so your marked spot is accessible. On your marked spot, drill a hole using a hammer drill and 1/2" masonry drill bit at least 3.5" deep.
- 6 Slide your VistaBin over the mounting hole so both holes align.
- 7 Insert Lag Bolt through inside of bin into hole in ground surface until flush, then tighten Lag Bolt with a 9/16" socket wrench until snug. **(FIG. 3)**
- 8 Thread Mounting Bolt Cap over exposed Lag Bolt inside the body and hand tighten until snug.

