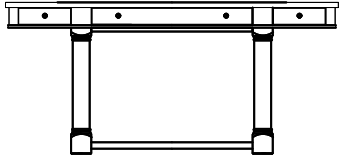




HEKMAN®

X A HOWARD MILLER COMPANY

27837 SQUARE TOP WRITING DESK





Hardware List

A	B	C	D	H	
BOLT M8 x 100 6 PCS.	HALF WASHER M8 6 PCS.	SPRING W. M8 10 PCS.	FLAT W8 M8 4 PCS.	WRENCH KEY (FOR HEXA BOLT) 1 PC.	
					
	E	F	G		
	HEXAGONAL BOLT M8 (6 PCS.)	ALLEN BOLT M8 X 50 (4 PCS.)	ALLEN KEY L5 (FOR ALLEN BOLT) 1 PC.		
					

Assembly Instruction

STEP 1:

INSERT CONNECTING BOLT (A) TO INSERT THAT ARE FIXED IN LEG. PLACE STRETCHER UP (2 PCS) AND STRETCHER LOW (1 PC) IN POSITION AND LOCK BY TURNING CLOCKWISE THE HALFMOON WASHER (B), SPRING WASHER (C), HEX BOLT (E) USING WRENCH KEY (H) PROVIDED.

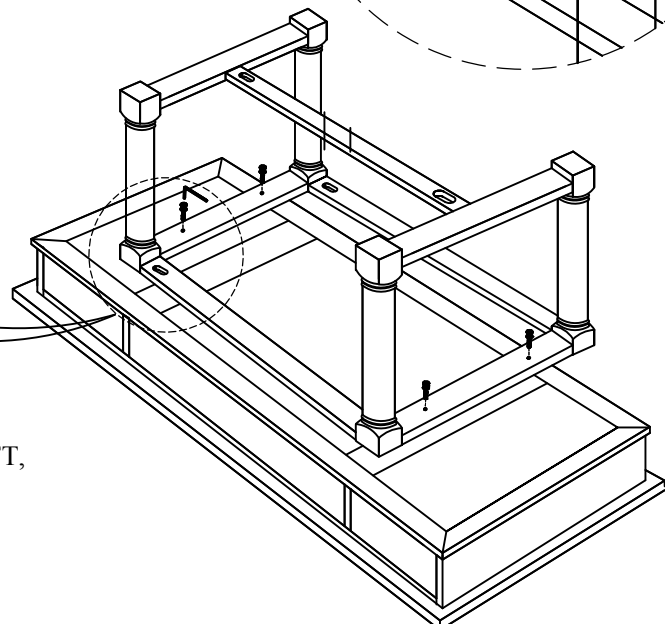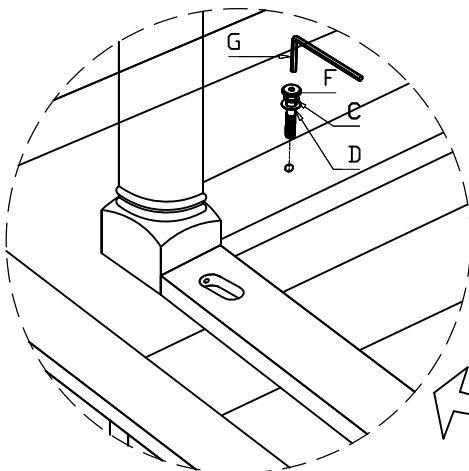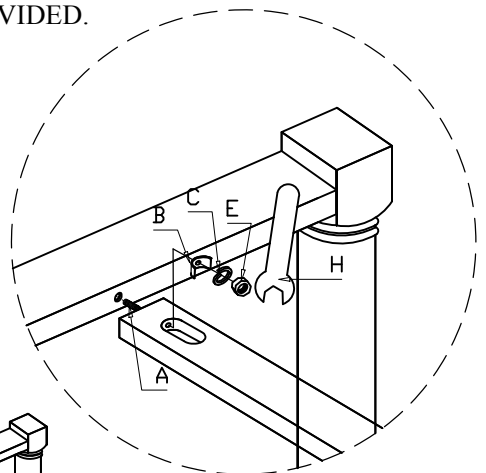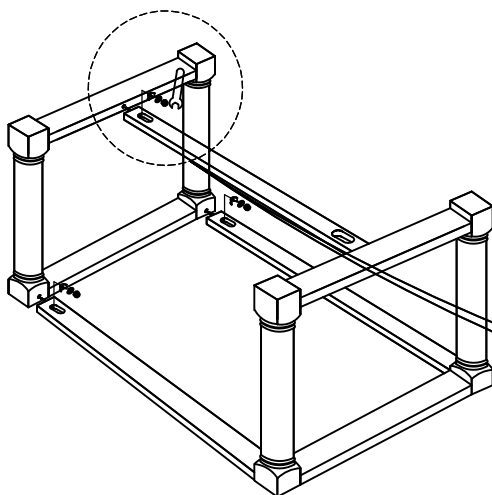

STEP 2.

LAY BODY TOP PANEL UPSIDE DOWN ON A SOFT, CLEAN AND FLAT SURFACE. ALIGN LEG TO HOLES ON TOP PANEL AND CONNECT USING FLAT WASHER (D), SPRING WASHER (C), ALLEN BOLT (F) AND ALLEN KEY (G) PROVIDED.