


# OXFORD MIRROR ASSEMBLY INSTRUCTIONS

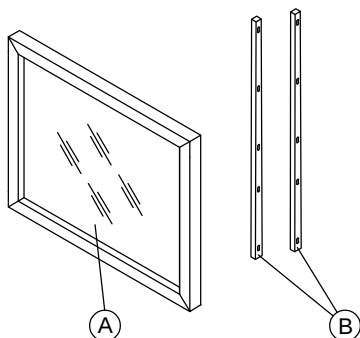


## BOX #1:

A. DRESSER MIRROR 1 PC  
B. MIRROR SUPPORTS 2 PCS  
\* MIRROR HARDWARE PACK




## BOX #2:

C. DRESSER (SOLD SEPARATELY) 1 PC

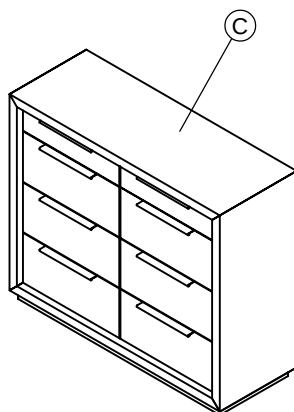


## HARDWARE KIT PACKED IN BOX #1

| No. | Description         | Image | Quantity |
|-----|---------------------|-------|----------|
| 1   | ALLEN BOLT (6x50mm) |       | 8 PCS    |
| 2   | FLAT WASHER (M6)    |       | 8 PCS    |
| 3   | SPRING WASHER (M6)  |       | 8 PCS    |
| 4   | ALLEN KEY           |       | 1 PC     |




## OPTION 1: DRESSER MOUNTING


### STEP 1:

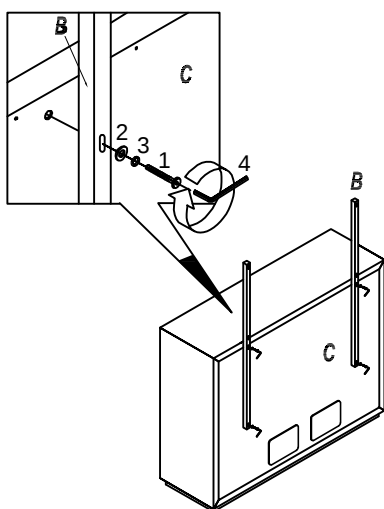

### STEP 2:

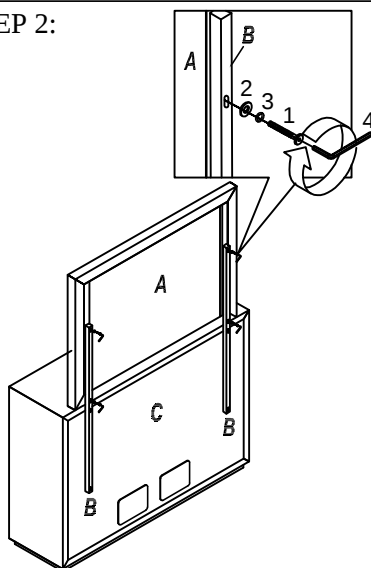


### STEP 3:

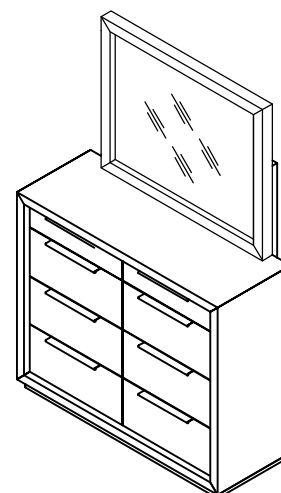


ASSEMBLY COMPLETE

## OPTION 2: WALL MOUNTING


### STEP 1:

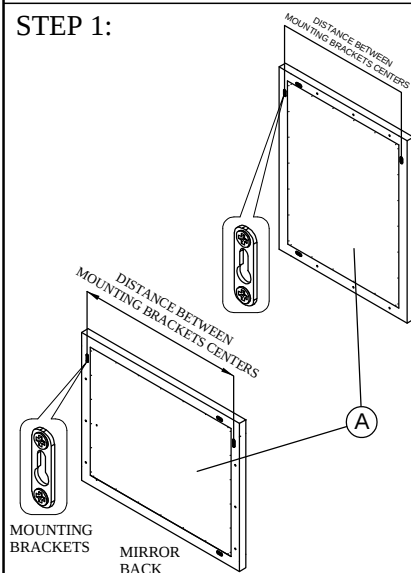

### STEP 2:

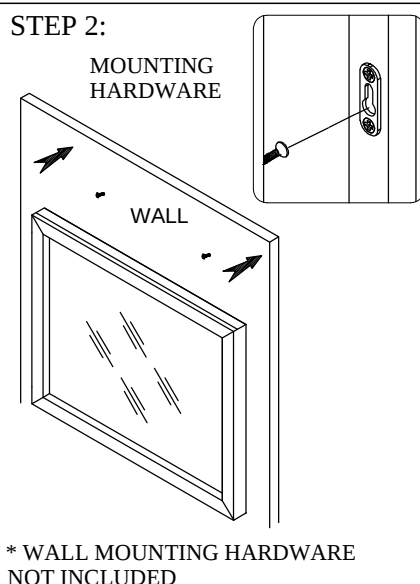

### STEP 3:

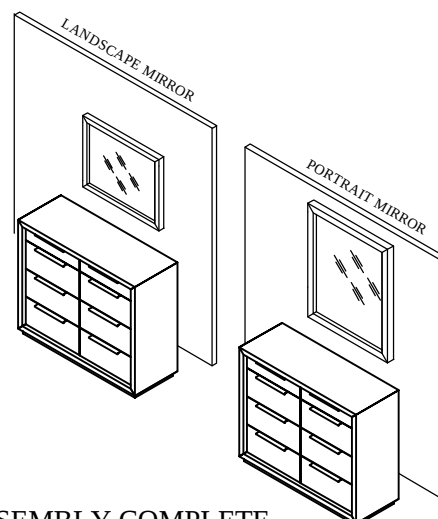

ASSEMBLY COMPLETE