


# TANE ALARM PRODUCTS



## Installation instructions for TANE-22 and TANE-22 TC 3/4" Recessed Reed "Push" Button Ball Contacts

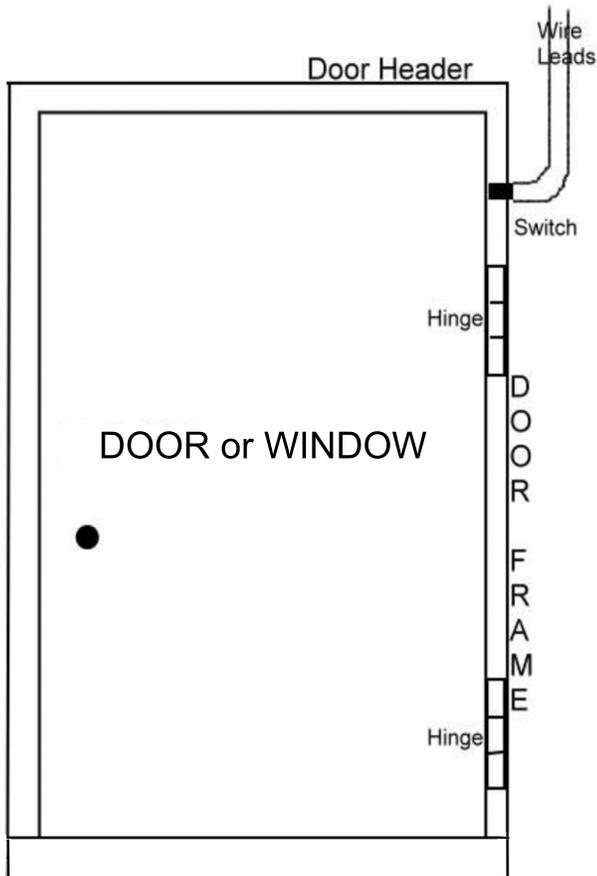

ON HINGE SIDE of door or window frame drill a 3/4" hole for the switch  
Closing door or window compresses Button Ball into contact shell deactivating alarm \*\*  
When the door or window opens the button ball extends and the alarm is activated \*\*  
For TANE-22 splice wire leads into alarm circuit  
For TANE-22 TC insert leads from alarm circuit under terminals  
Designed for use on Steel, Wood and other doors and windows

**WWW.TANEALARM.COM**

906 Jericho Turnpike  
New Hyde Park, NY 11040

Tel: 516-328-3351 800-852-5050  
Fax: 516-326-9125 Email: info@tanealarm.com