
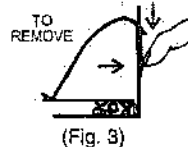
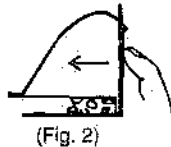


**WARNING-RISK OF FIRE MOST DWELLINGS BUILT BEFORE 1985 HAVE
SUPPLY WIRE RATED 60°C CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING.
INSTALLATION INSTRUCTIONS AND TEMPLATE
FOR 5" REMODEL HOUSING**

1. USING TEMPLATE, SCRIBE CIRCLE ON CEILING IN DESIRED LOCATION.
2. ACCURATELY CUT HOLE IN CEILING.
3. PROVIDE ELECTRICAL SERVICE WITH FLEXIBLE CABLE ONLY. PASS CABLE THROUGH OPENING AND WIRE FIXTURE IN ACCORDANCE WITH NEC OR YOUR LOCAL ELECTRICAL CODE.
4. WITH CLIPS SEATED PROPERLY IN CAN (FIG. 1), INSERT REMODEL HOUSING INTO CEILING, JUNCTION BOX FIRST.
5. HOLD FIXTURE UP AGAINST CEILING AND PUSH CLIP THROUGH HOUSING SLOT (FIG. 2).
6. TO LOCK CLIP IN PLACE PUSH FLAT PORTION AGAINST SIDE OF CAN (FIG. 2).
7. TO RELEASE PULL DOWN ON CLIP (FIG. 3).
8. INSTALL TRIM.

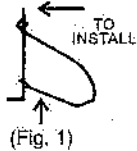

NOTE: IN AREAS WHERE EXCESSIVE CEILING VIBRATION CAN OCCUR, WE SUGGEST YOU USE A #1/4-14 x 1/2" PAN HD SHEET METAL SCREW TO FURTHER LOCK THE SPRING CLIPS AGAINST THE FIXTURE HOUSING. DRIVE THE SCREW THROUGH THE HOLE IN THE SPRING CLIP AND INTO THE HOUSING SLOT.

COMMENT INSTALLER VOTRE NOUVELLE LUMIÈRE RENFONCÉE.

ATTENTION: D'abord fermez l'électricité avant de faire des assemblages électriques.

1. Coupez votre trou (Fig. 1). Employant le calibre du cercle imprimé ci-inclus, dessinez un cercle d'une taille convenable à vos besoins sur du carton et coupez le long de la ligne circulaire.

2. Avec couvre-joint No. 1 enlevé, sortez les fils électriques à travers le trou au plafond et connectez avec les fils dans la boîte électrique. Blanc à Blanc et Noir à Noir avec connecteurs puis connectez le fil de terre vert à la vis de terre; remplacez couvre-joint à la boîte et fixez solidement.

3. insérez la lumière renfoncée à travers le trou au plafond comme dans Fig. 1 et fixez en insérant les griffes dans les rainures, ajustez à l'épaisseur du plafond Fig. 2.