

## Assembly Instructions

## ITEM NO. B1434-060 SKYLINE - MIRROR

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items and compare with the parts list and/or hardware list shown below.


Caution: please read the instruction thoroughly before assembly.

- 1. We recommended that you assemble this product with the assistance of another person, this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- 2. Please do not tighten screws or bolt until the assembly is completed.
- 3. Please put all parts on a non-abrasive floor before assembly and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PARTS LIST				
NO.	DESCRIPTION	SKETCH	QTY	
Α	MIRROR		1 pc	
В	MIRROR SUPPORT		2 pcs	
С	DRESSER		1 pc	

HARDWARE LIST				
NO.	DESCRIPTION	SKETCH	QTY	
1	JCBC - M6 x 1-9/16"	<b>%</b>	8 pcs	
2	SPRING WASHER - M6	0	8 pcs	
3	FLAT WASHER - M6 x 1/2"	0	8 pcs	
4	ALLEN KEY - M4		1 pc	

STEP 1: Assemble the Dresser (C) with the Mirror Support (B) by using Allen Key (4) with hardware 1, 2 AND 3.

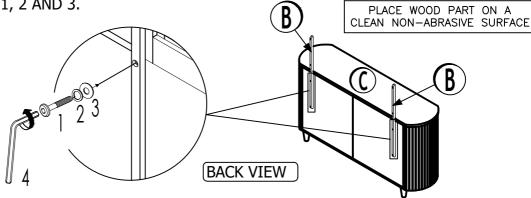

STEP 2: Assemble the Mirror Support (B) with the Mirror (A) by using Allen Key (4) with hardware 1, 2 and 3.

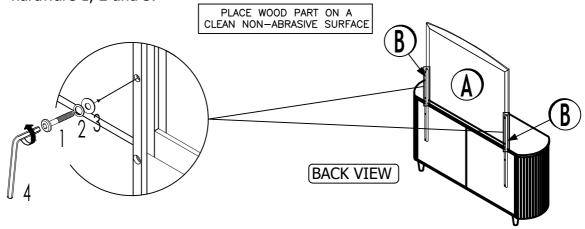

Created date :14/3/2025

PAGE 1 OF 2

MADE IN MALAYSIA