

BRUNSWICK INDUSTRIAL KITCHEN CART

ASSEMBLY INSTRUCTIONS

FIRSTIME & CO.[®]
— AMERICAN DESIGNED —


PARTS

A



1 PC

B

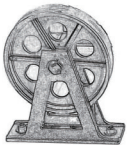

4 PC

C



8 PC

D



8 PC


E



1 PC

STEP 1

Attach wheels (B) to the bottom of the cart (A).

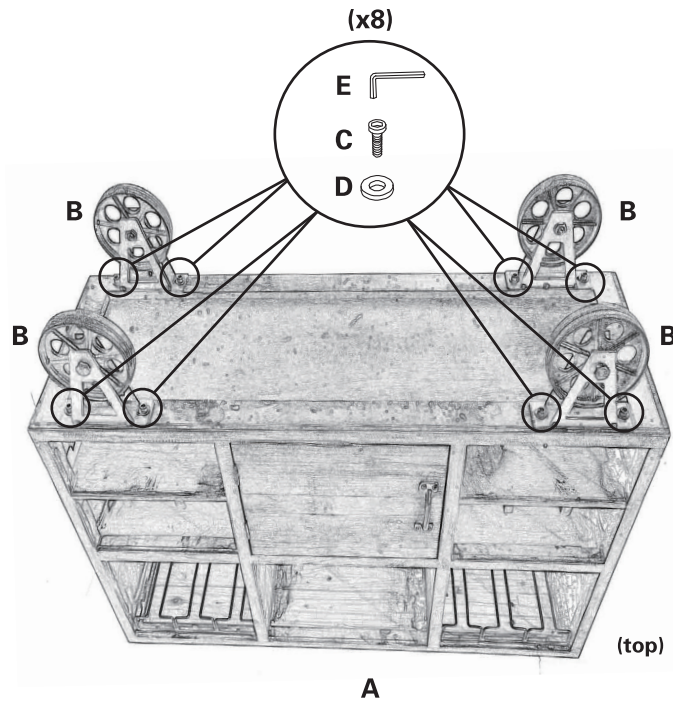

FULLY ASSEMBLED

