

CULTURED MARBLE VANITY TOPS WITH INTEGRATED BACKSPLASH

INSTALLATION INSTRUCTIONS



BEFORE YOU BEGIN!

We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing. Design House, Inc. accepts no liability for any damage to the floor, walls, plumbing, vanity cabinet, sink, countertop, or personal injury during installation.

Observe all local plumbing and building codes.

Unpack and inspect the vanity for damage prior to installation. If any damage is found, contact our Customer Care Team at **262-518-1877** or www.todaysdesignhouse.com/contact

WARNING!


Although our vanity tops are very durable, it can become extremely fragile if handled incorrectly. Here are a few tips on how to handle your vanity without damaging it.

GETTING STARTED


- Ensure that you have gathered all the required materials that are needed for the installation.
- Ensure that your bathroom floor is supported and level and your vanity top is compatible with your cabinet.
- Ensure that there is the appropriate support behind the bathroom wall prior to beginning installation.

MATERIALS

- 100% silicone
- level
- kitchen & bath caulk
- wood shims
- liquid nails or PL adhesive
- caulk edging tool
- caulking gun
- cloth towels

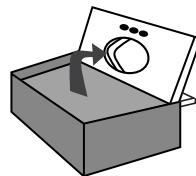


Remove vanity from box **VERTICALLY!**

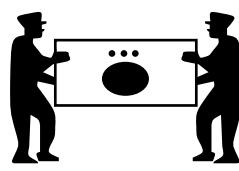


Carry the vanity upright, **NEVER** flat.




INSTALLATION

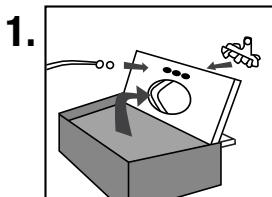


With a helper, stand the vanity up (as shown). This is a good time to install the faucet and drain per manufacturer's instructions.

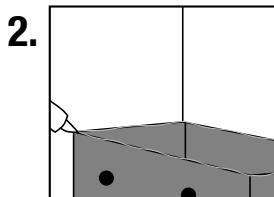


Outline the top of the cabinet with silicone.

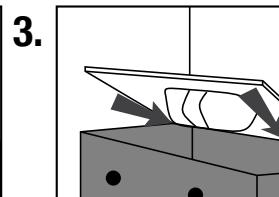


Apply adhesive to the back of the backsplash. Clean off any excess silicone and place the vanity on the cabinet, back first.

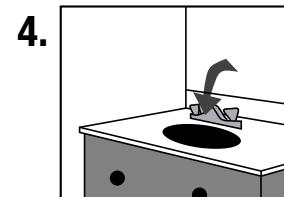


Carefully lay the vanity flat on the cabinet.

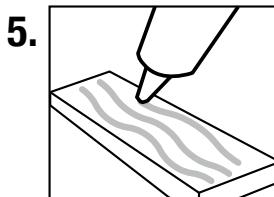


Use "Liquid Nail" or "PL Adhesive". Apply a generous amount to the back of the side splash (if installing a side splash).

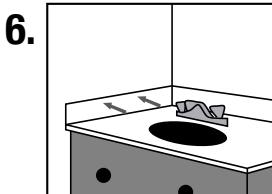


Carefully push the side splash in place, making sure you firmly press it against the wall. (If installing a side splash)

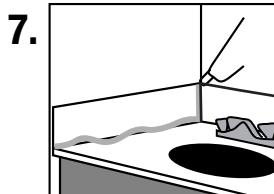


Apply 100% silicone to the seam where the side splash touches the cultured marble (indicated by gray line). Apply "kitchen & bathroom caulk" to the top edge of the side splash that touches the wall (if installing a side splash).

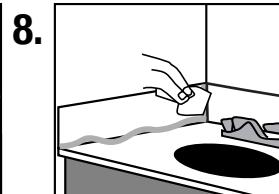

With a caulk edging tool, run it across the seams to clear away excess silicone & caulk (this technique will leave a clean line of silicone & caulk over the seams). (If installing a side splash)

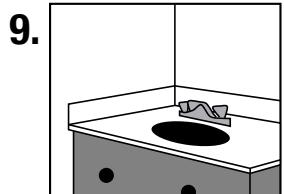


Clean vanity with clean, damp cloth and allow 24 hours for vanity to fully dry

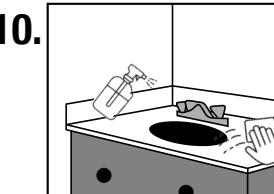


Your cultured marble vanity top is sensitive to acidic and alkaline products like toiletries, cleaners, alcohol, and medications; avoid prolonged contact. Wipe spills immediately with a damp cloth and gentle cleaner, and dry after each use.

CARE INSTRUCTIONS

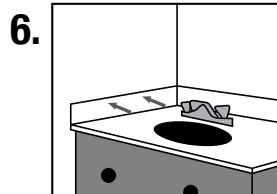

Clean vanity with clean, damp cloth and allow 24 hours for vanity to fully dry

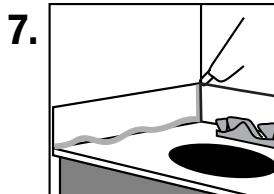

Your cultured marble vanity top is sensitive to acidic and alkaline products like toiletries, cleaners, alcohol, and medications; avoid prolonged contact. Wipe spills immediately with a damp cloth and gentle cleaner, and dry after each use.