

MORRIS WOOD/UPH QUEEN BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1:
A. HEADBOARD

1 PC

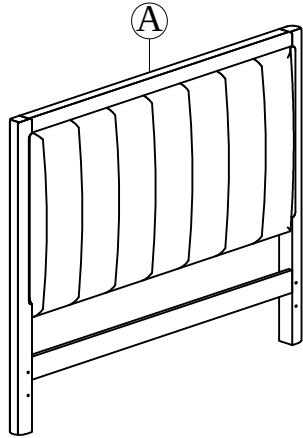


BOX #2:
B. FOOTBOARD
C. SLAT
D. SUPPORT LEG

1 PC
5 PCS
5 PCS


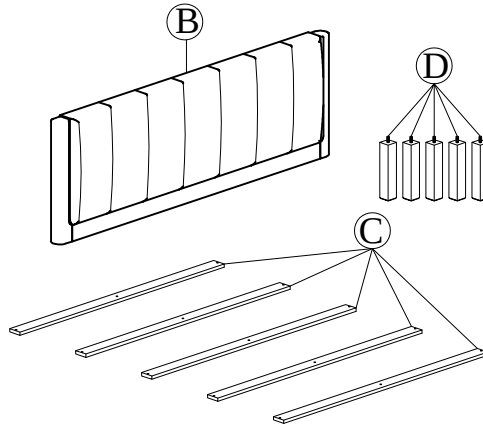


BOX #3:
E. SIDE RAILS

2 PCS

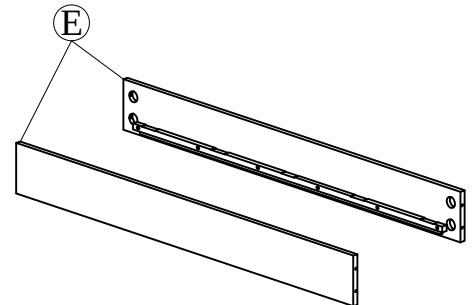

FULLY ASSEMBLED

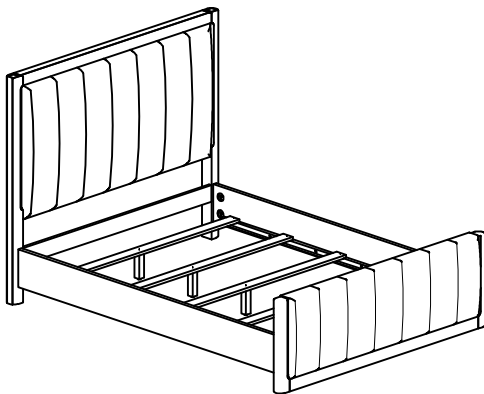


Not provided

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		8 PCS
2	HALF MOON WASHER (7x14x27mm)		8 PCS
3	HEX NUT (M8)		8 PCS
4	WRENCH (13mm)		1 PC
5	WOOD SCREW (4x30mm)		10 PCS
6	ALLEN KEY (4mm)		1 PC

STEP 1:

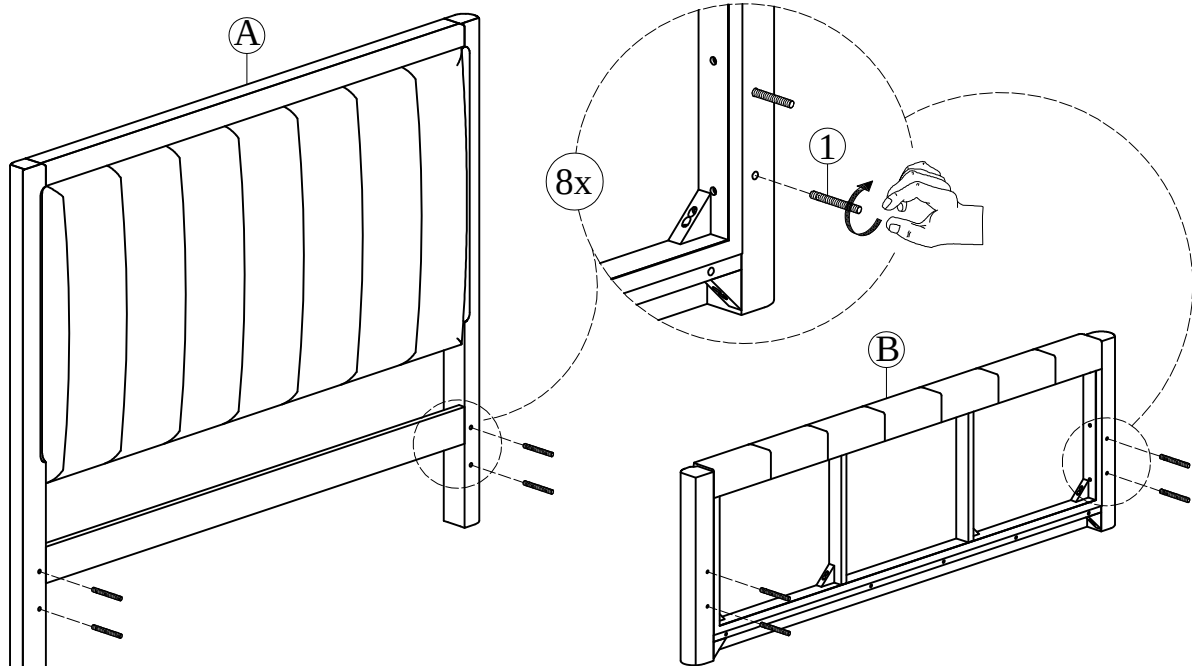


MORRIS WOOD/UPH QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 2:

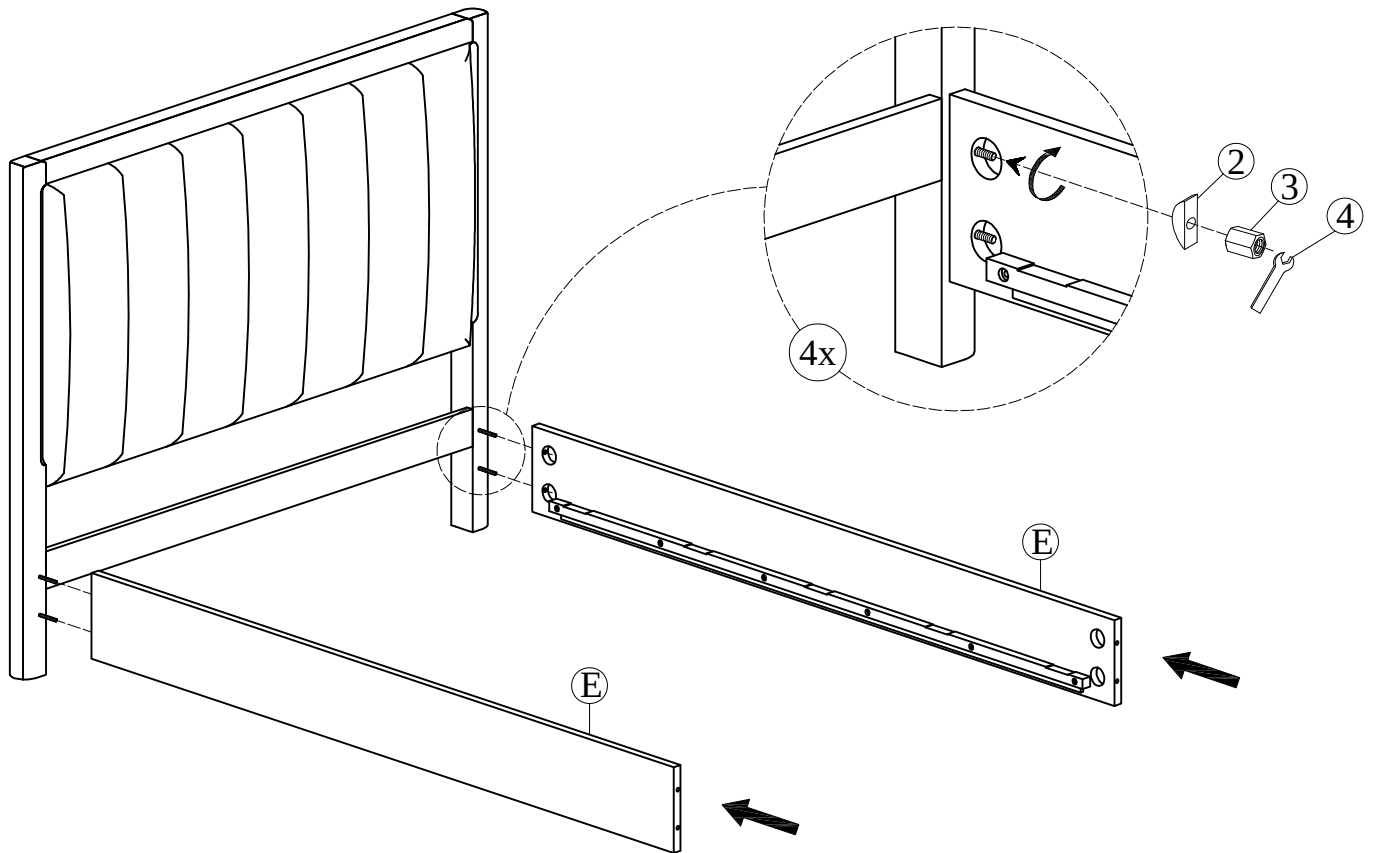

STEP 3:

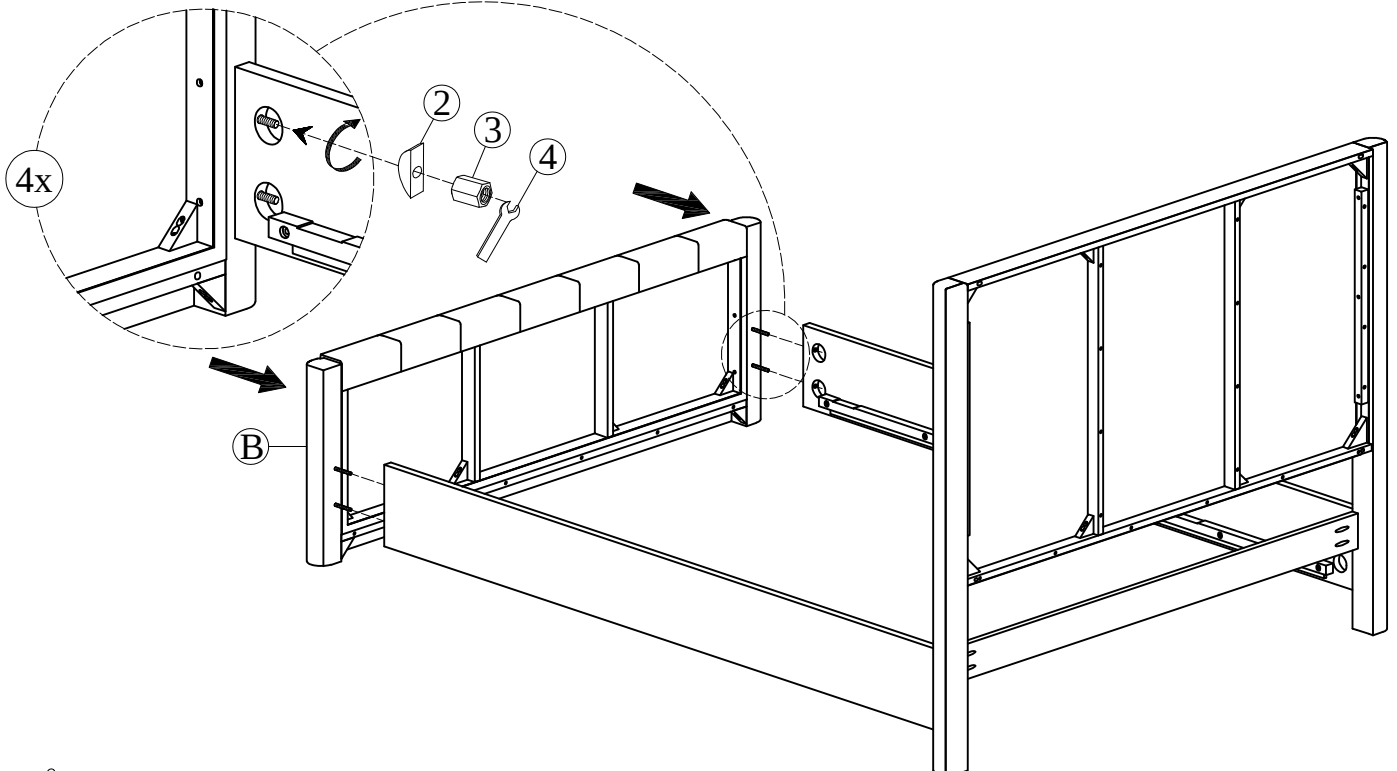

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4 & 5 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

MORRIS WOOD/UPH QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 4:

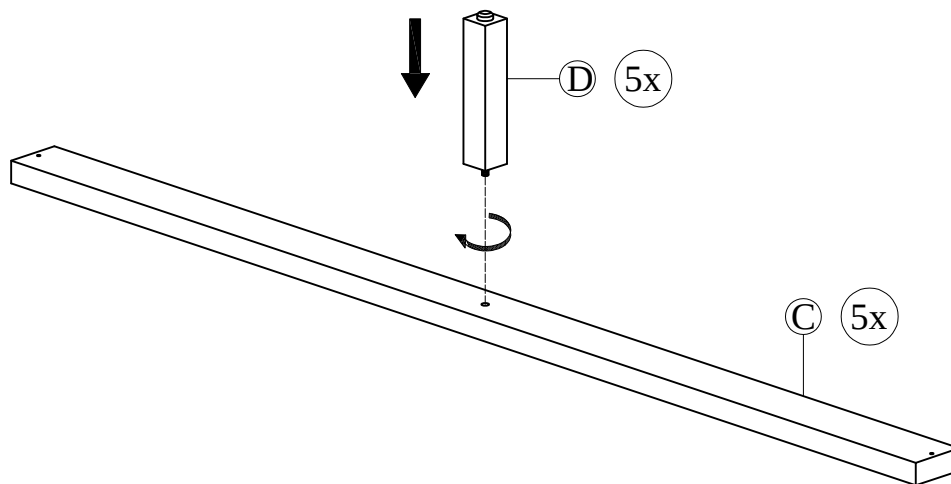


STEP 5:

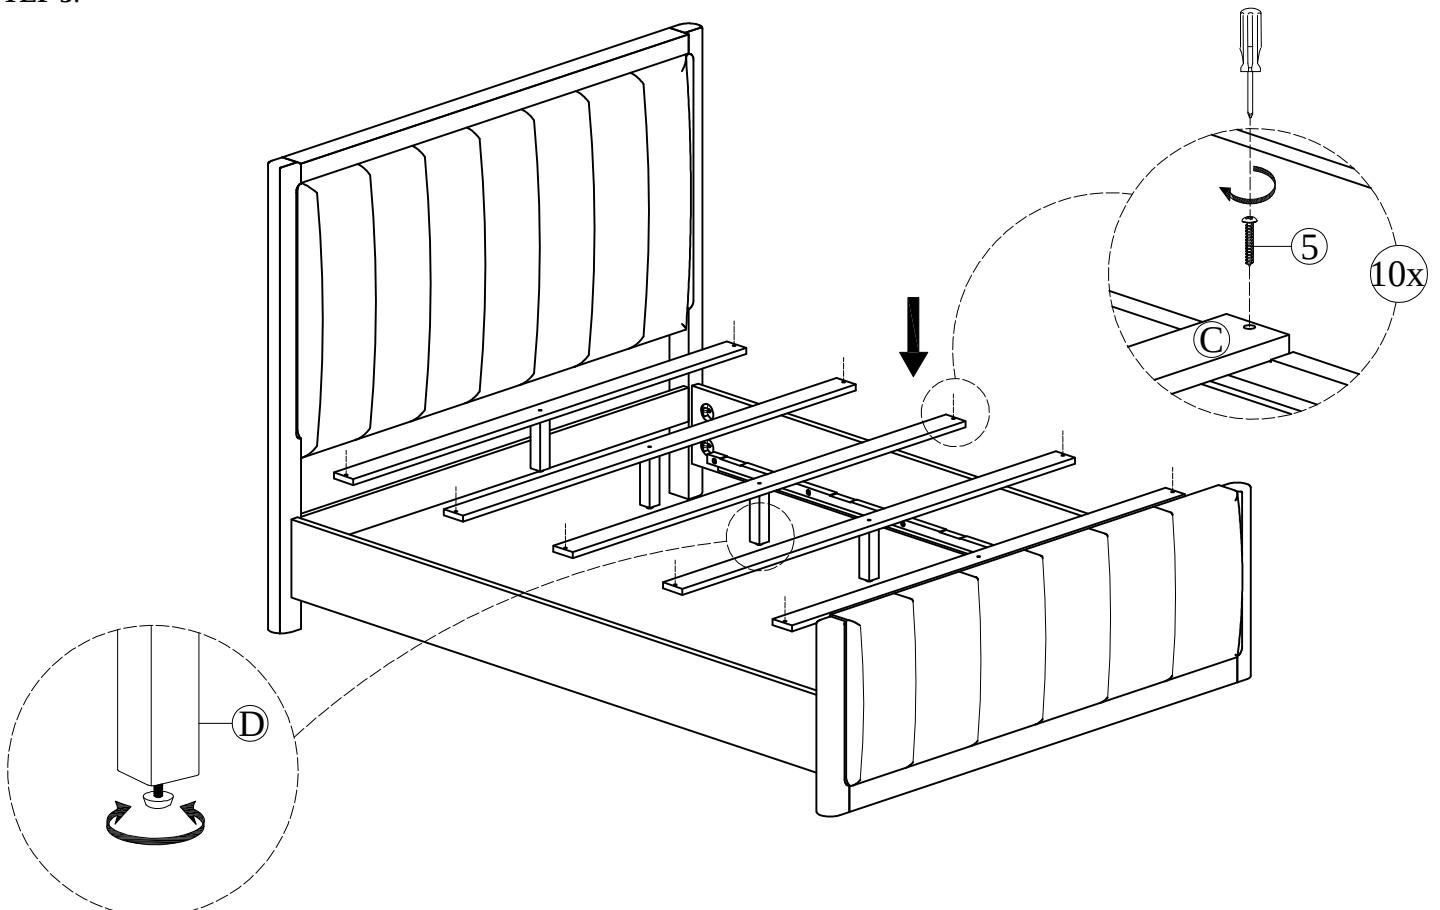

MORRIS WOOD/UPH QUEEN BED

ASSEMBLY INSTRUCTIONS

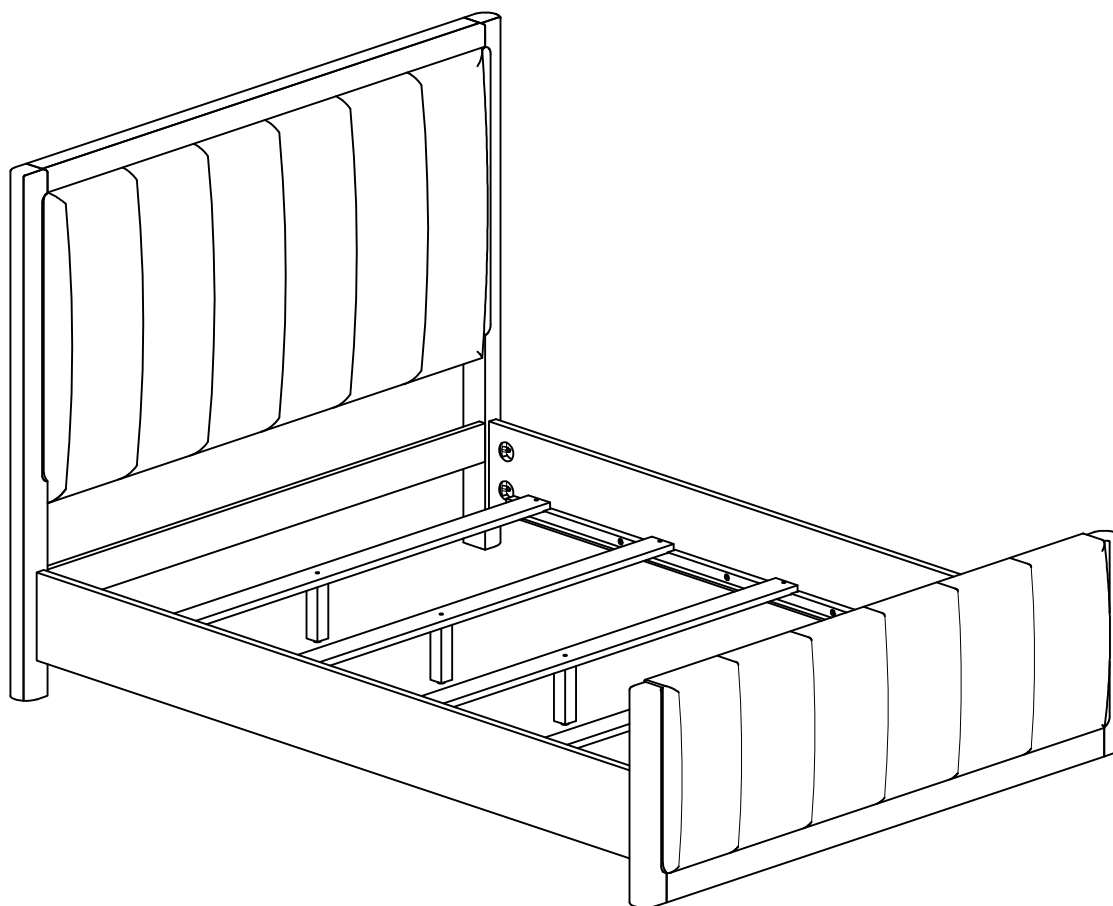


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

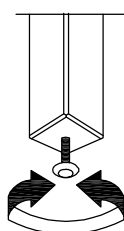

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MORRIS WOOD/UPH QUEEN BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:


C. SLAT :5 PCS

5. WOOD SCREW (4x30mm) :10 PCS

D. SUPPORT LEG :5 PCS

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

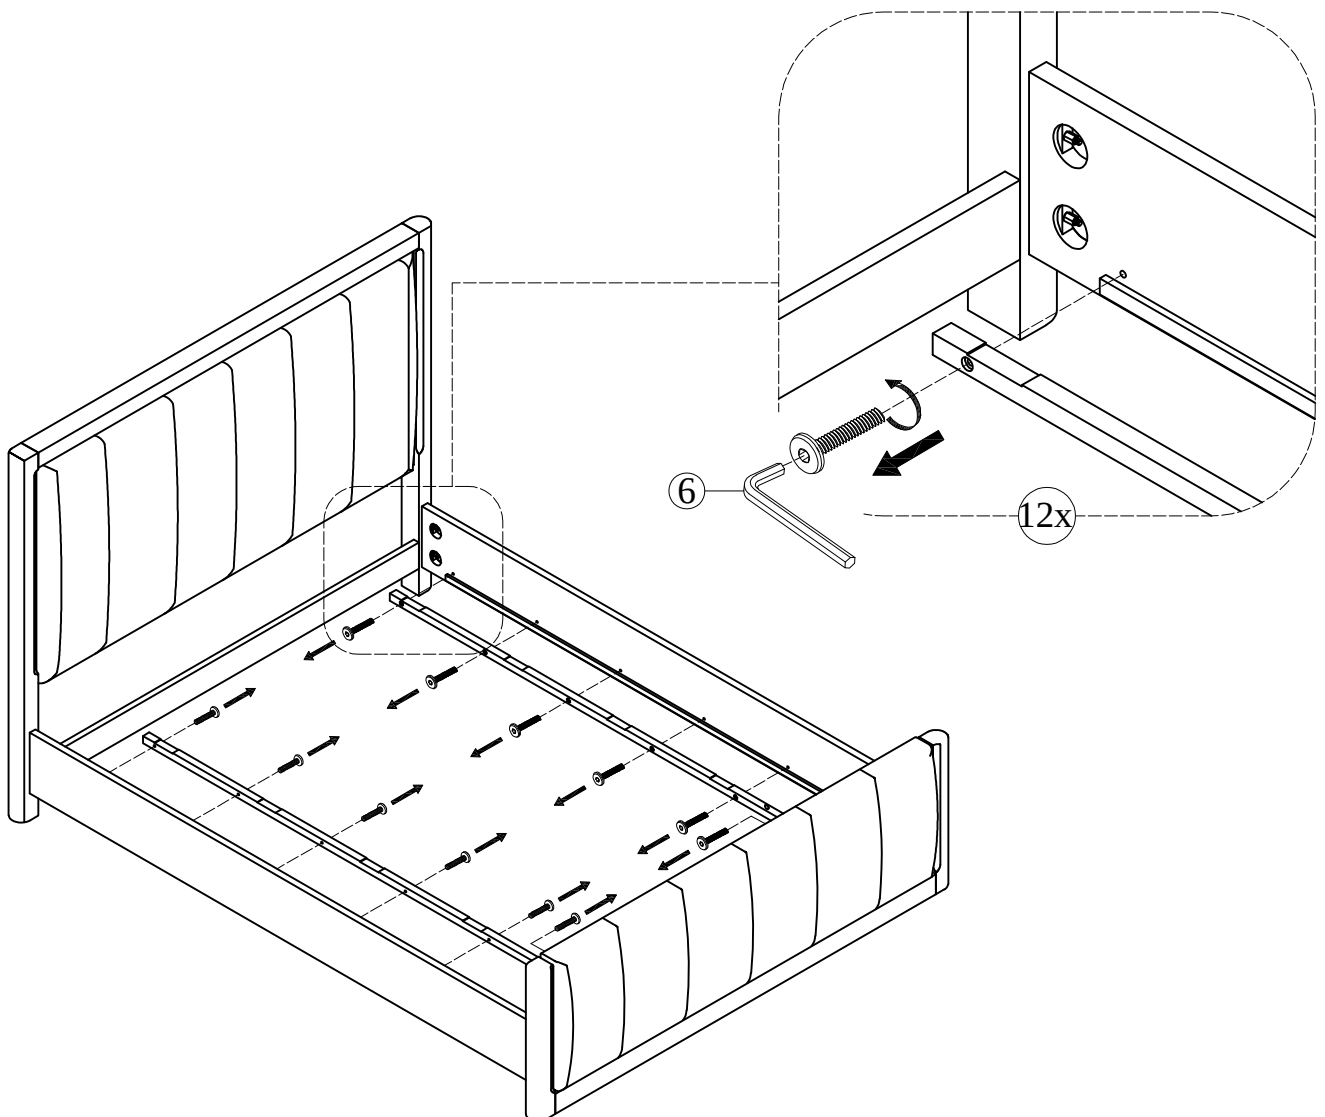

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

MORRIS WOOD/UPH KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1:
A. HEADBOARD

1 PC

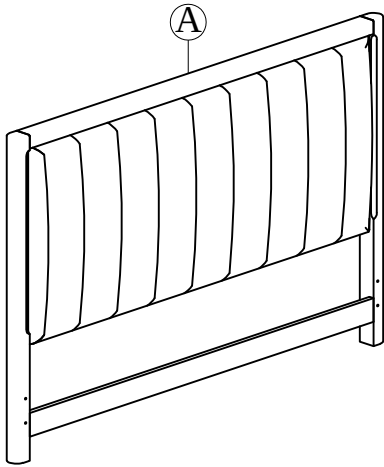


BOX #2:
B. FOOTBOARD
C. SLAT
D. SUPPORT LEG

1 PC
5 PCS
10 PCS


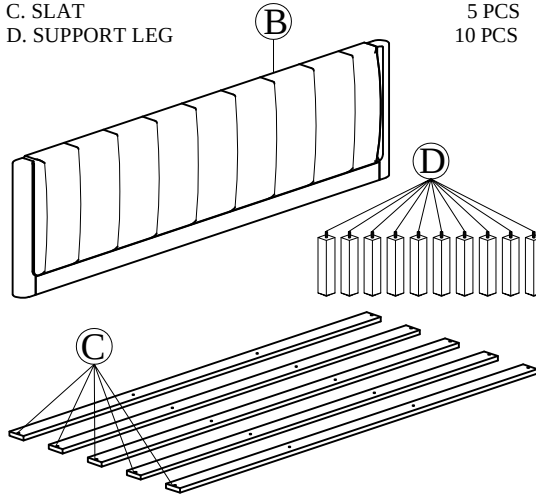


BOX #3:
E. SIDE RAILS

2 PCS

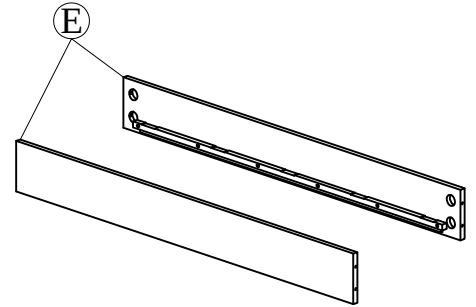

FULLY ASSEMBLED

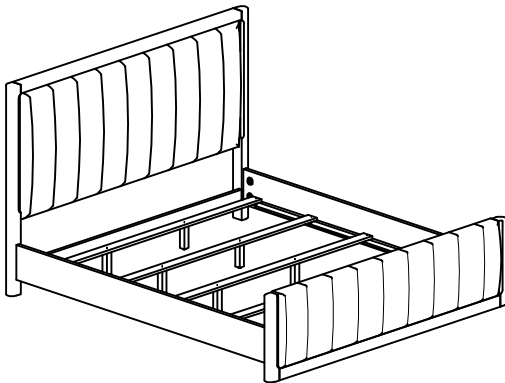


Not provided

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		8 PCS
2	HALF MOON WASHER (7x14x27mm)		8 PCS
3	HEX NUT (M8)		8 PCS
4	WRENCH (13mm)		1 PC
5	WOOD SCREW (4x30mm)		10 PCS
6	ALLEN KEY (4mm)		1 PC

STEP 1:

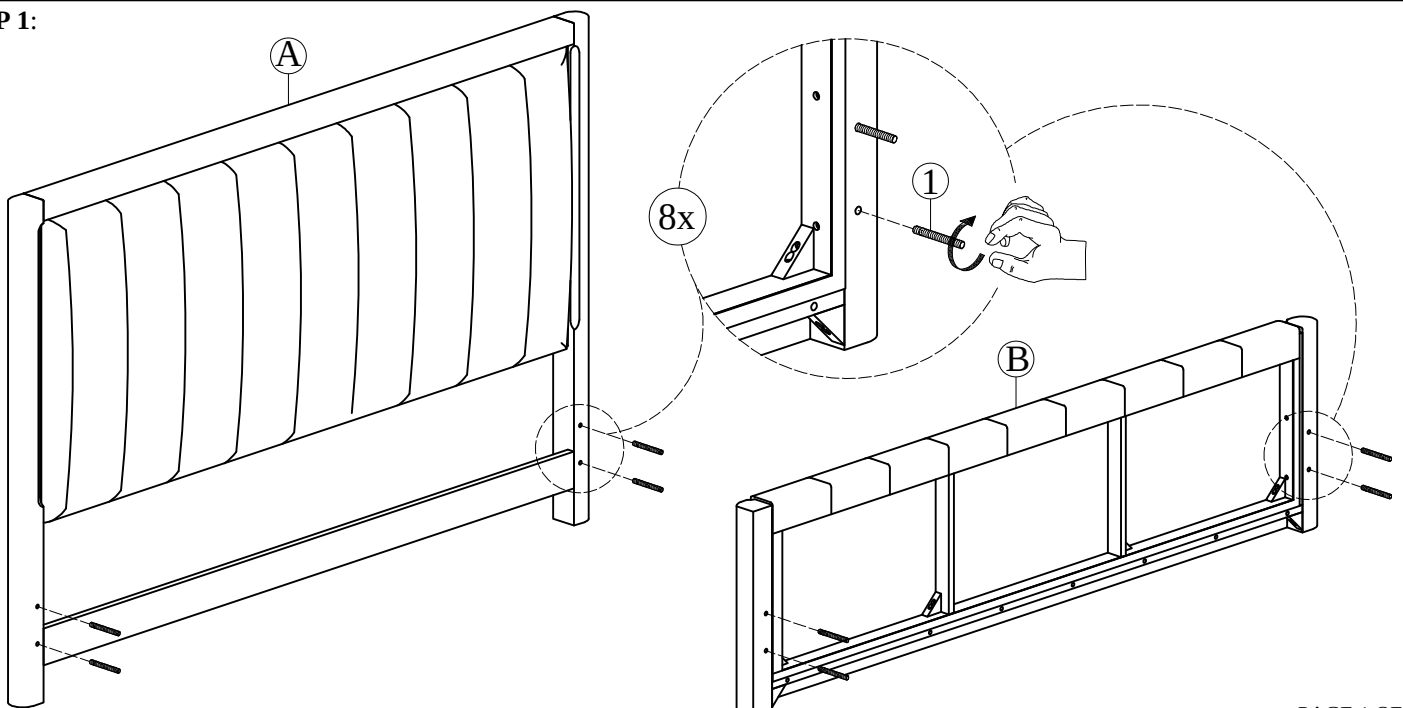


MORRIS WOOD/UPH KING BED


ASSEMBLY INSTRUCTIONS



STEP 2:

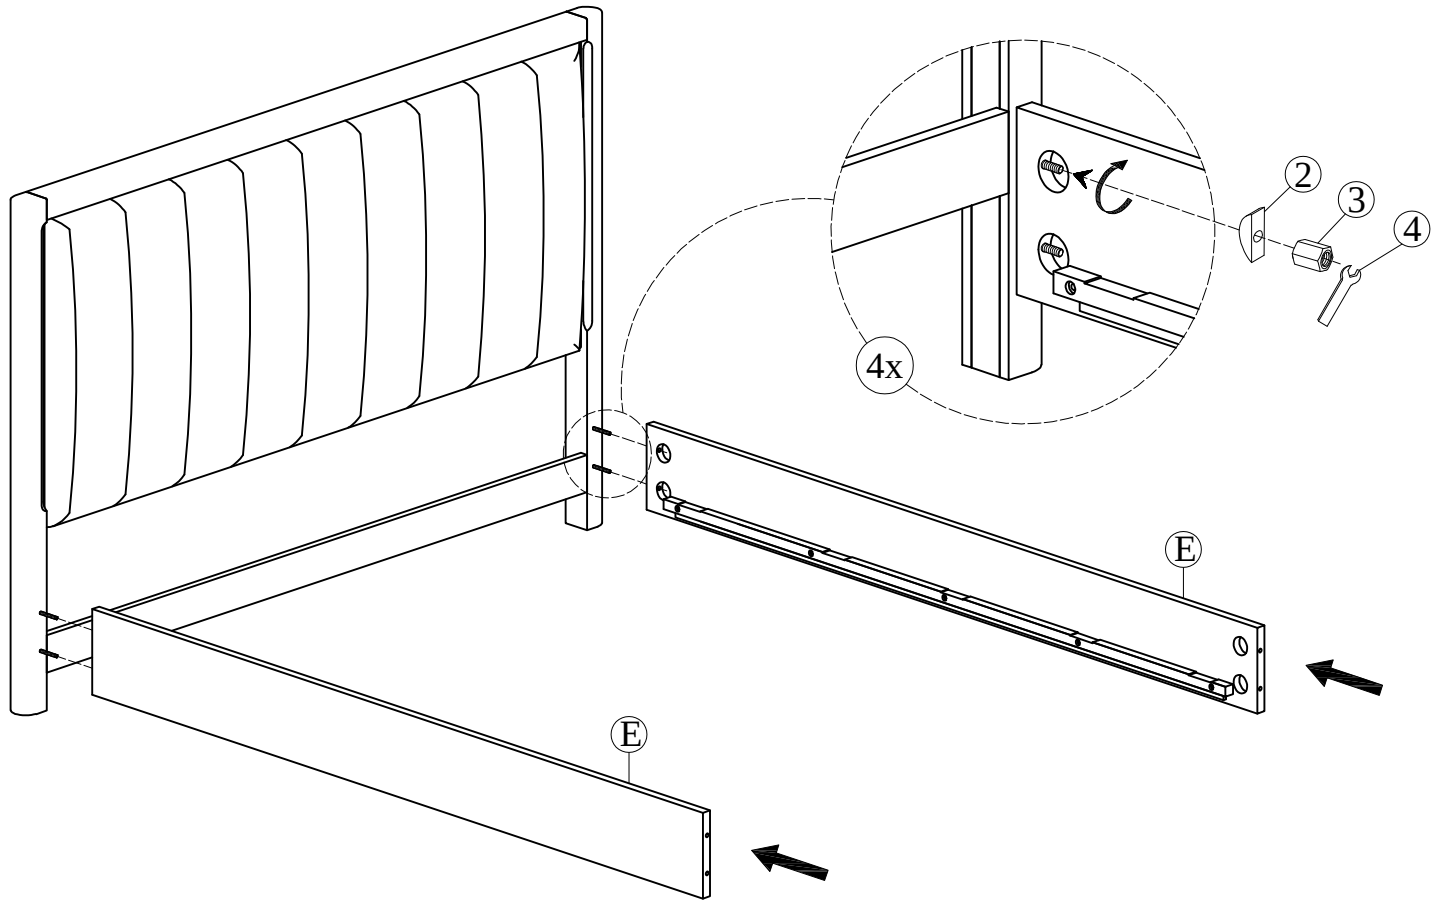

STEP 3:

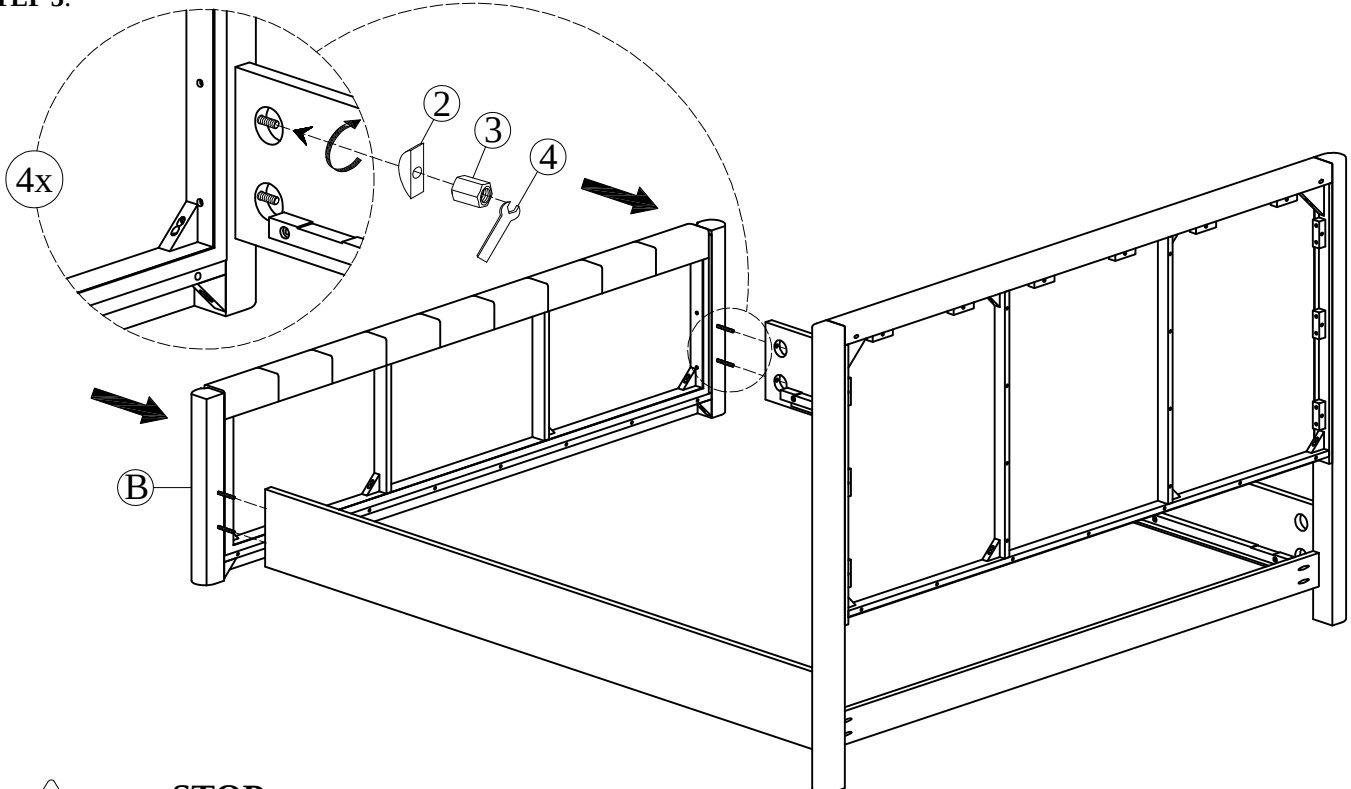

STOP


- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4 & 5 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

MORRIS WOOD/UPH KING BED


ASSEMBLY INSTRUCTIONS



STEP 4:

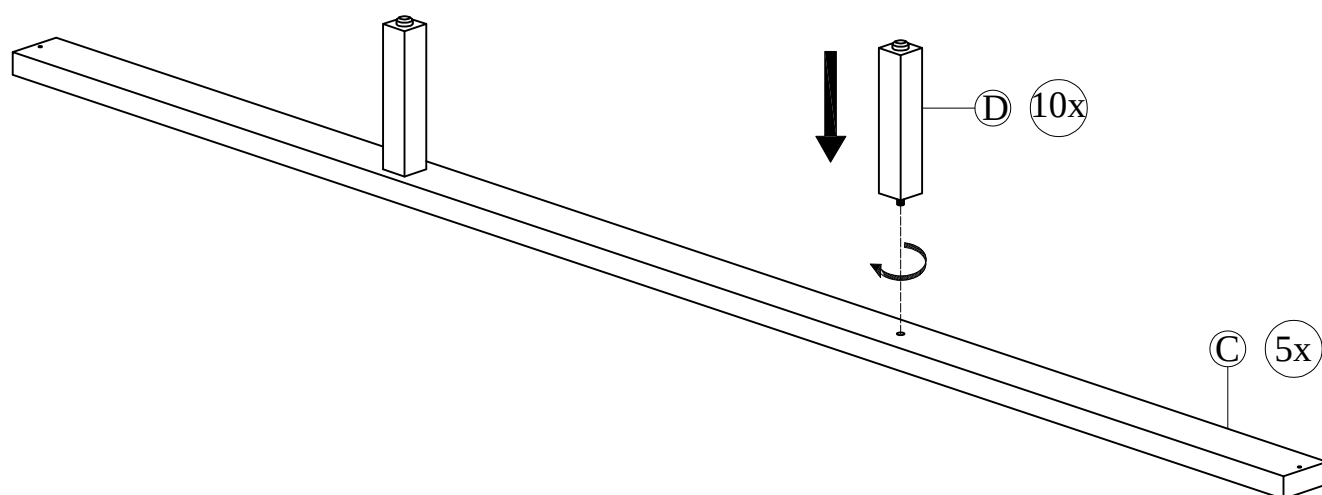


STEP 5:

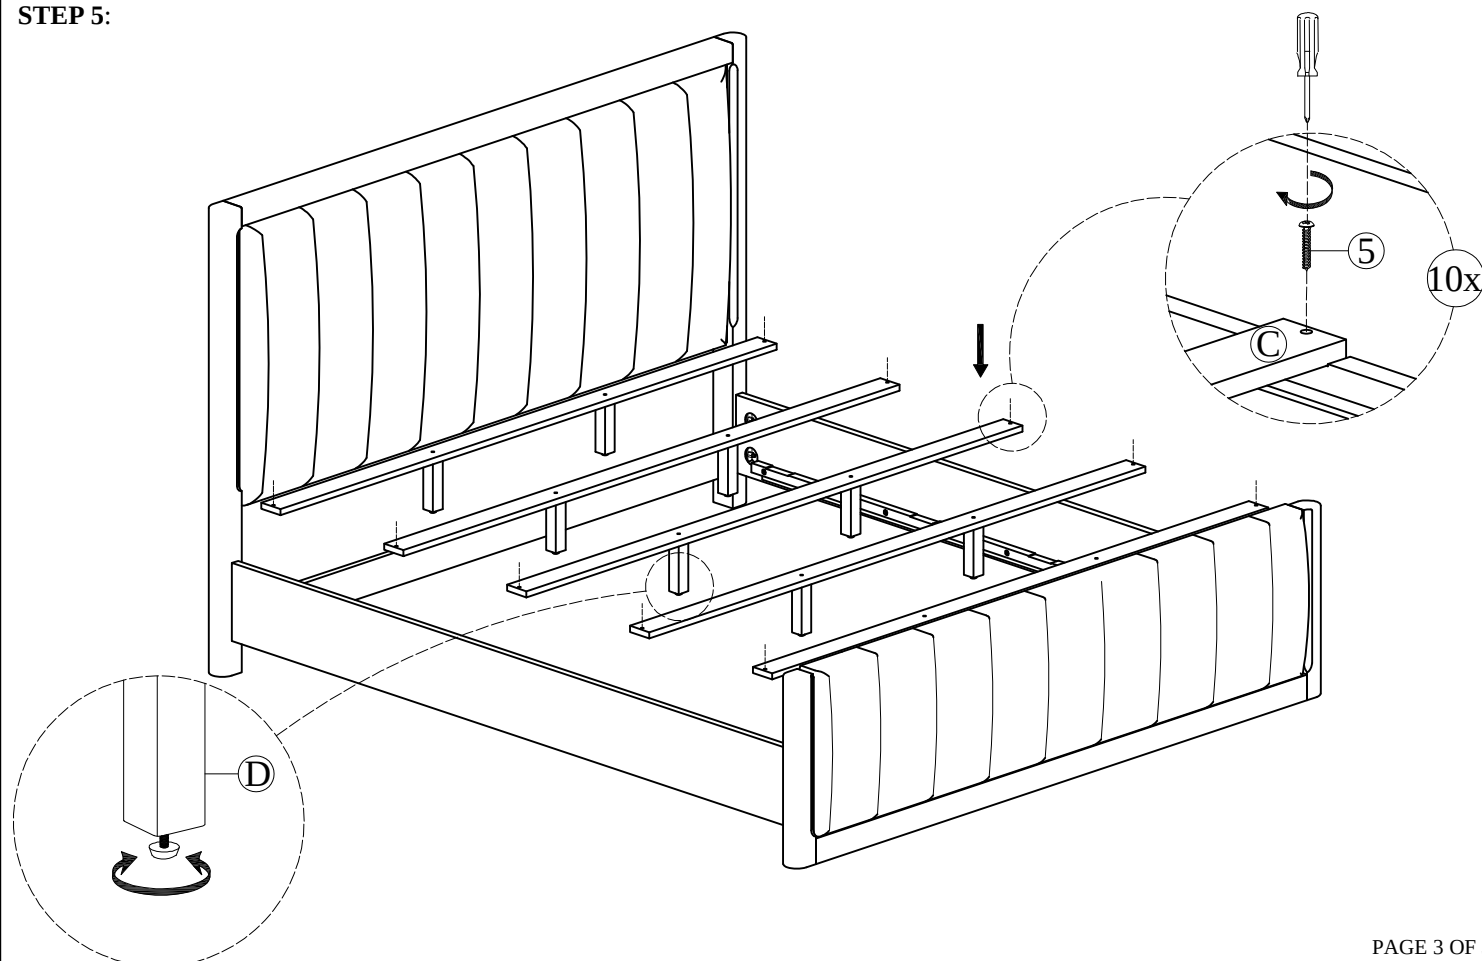

MORRIS WOOD/UPH KING BED

ASSEMBLY INSTRUCTIONS

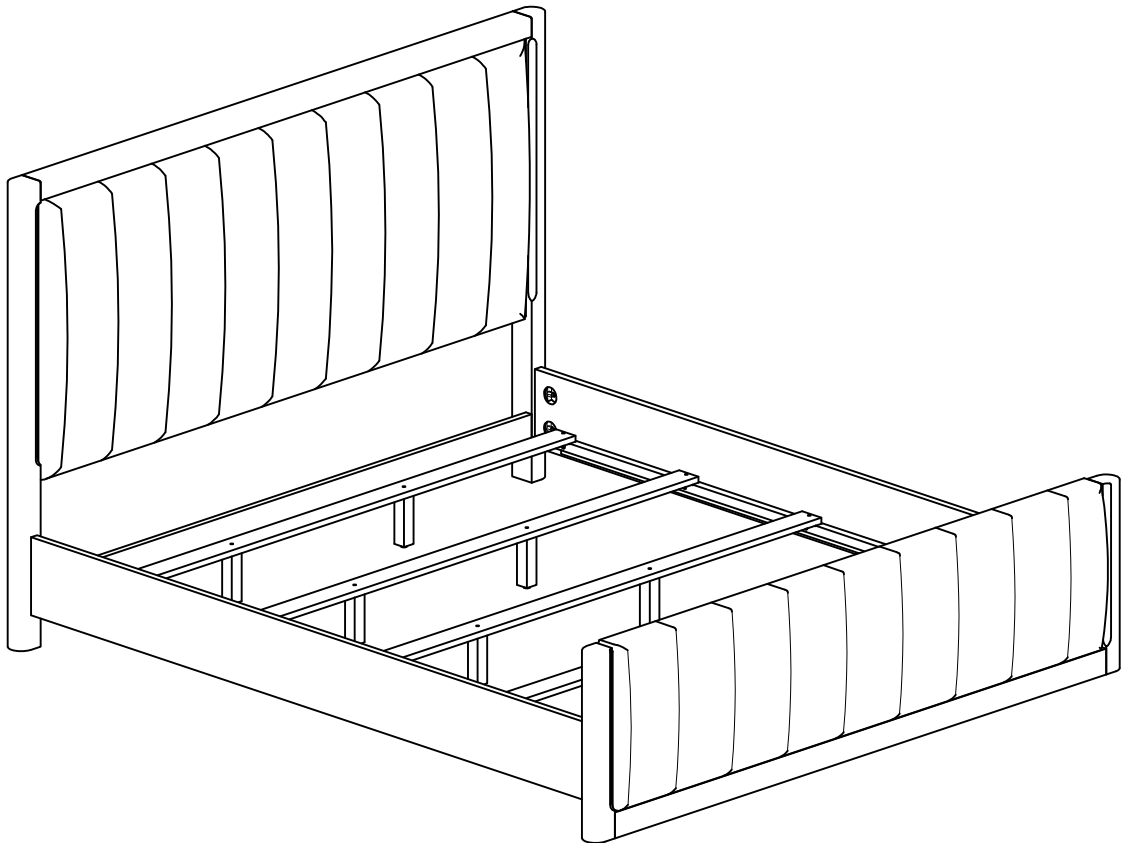


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

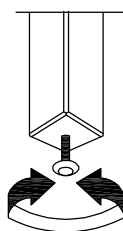

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MORRIS WOOD/UPH KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.


THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT :5 PCS
D. SUPPORT LEG :10 PCS

5. WOOD SCREW (4x30mm) :10 PCS

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

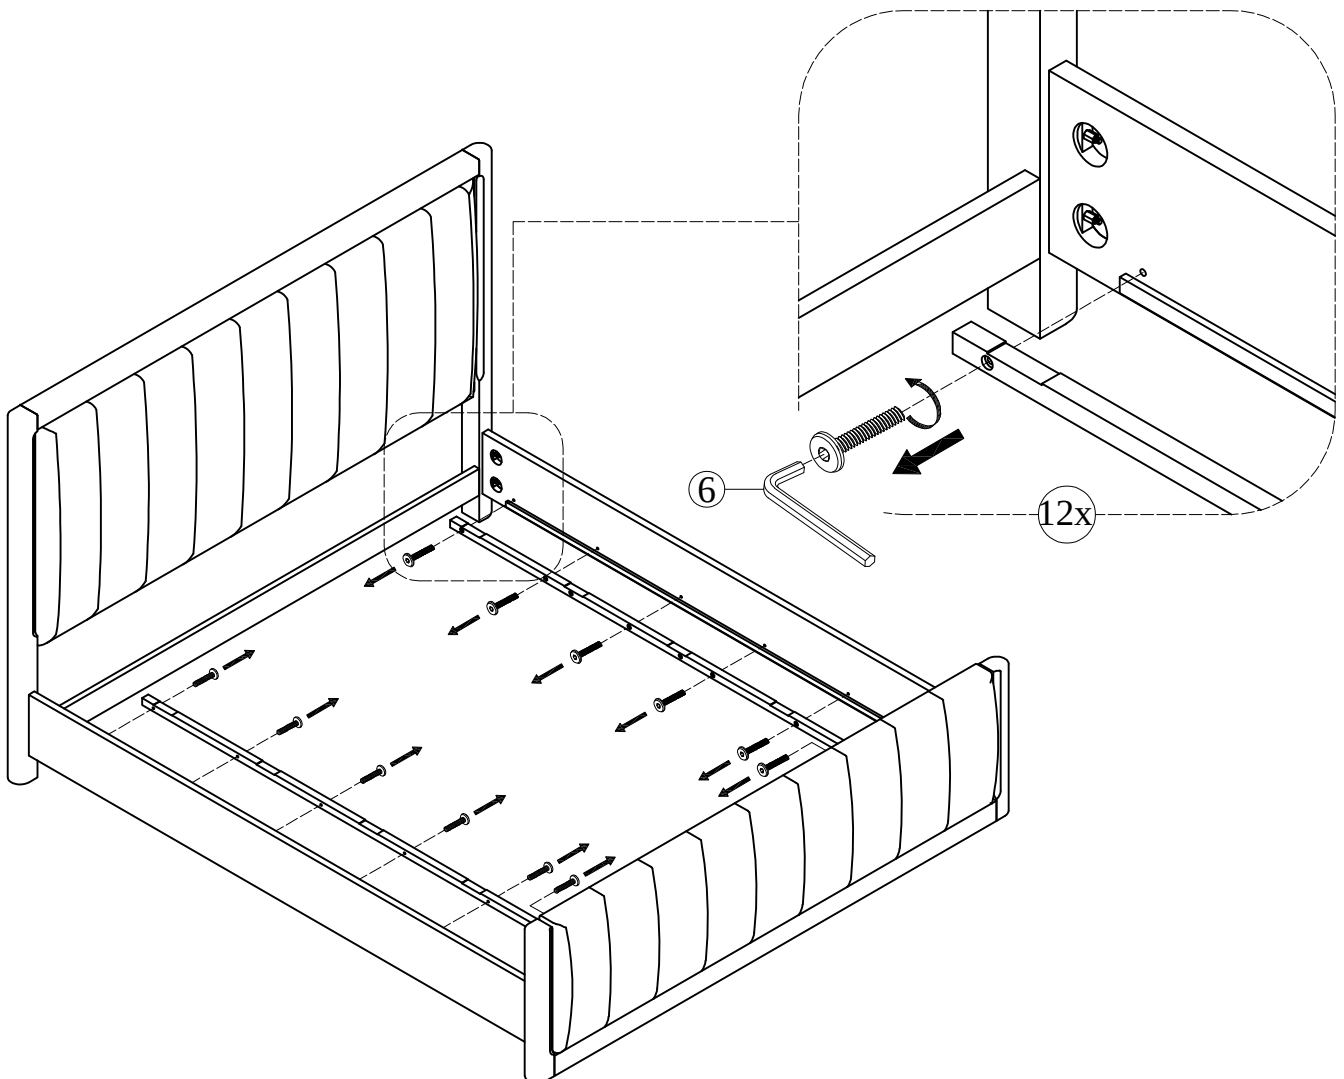

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.

MORRIS WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1:
A. HEADBOARD

1 PC

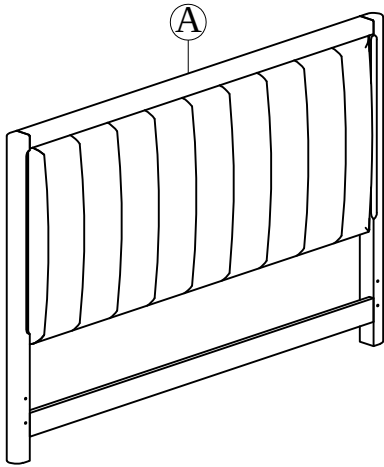


BOX #2:
B. FOOTBOARD
C. SLAT
D. SUPPORT LEG

1 PC
5 PCS
10 PCS

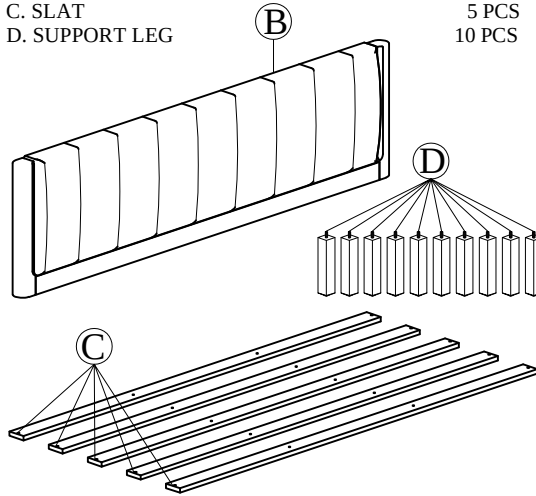


BOX #3:
E. SIDE RAILS
F. MATTRESS SPACER

2 PCS
2 PCS

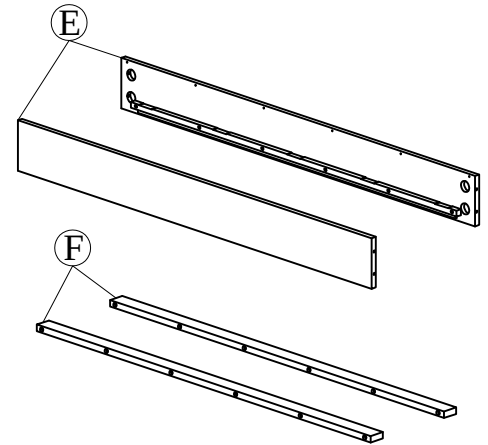

FULLY ASSEMBLED

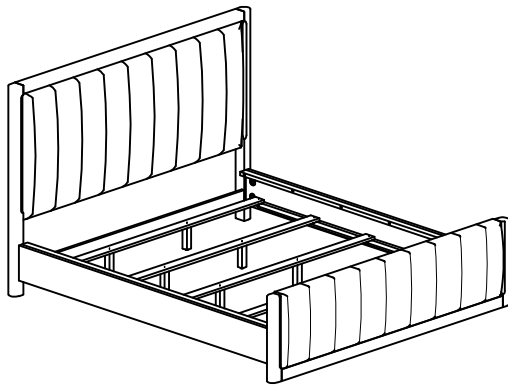


HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		8 PCS
2	HALF MOON WASHER (7x14x27mm)		8 PCS
3	HEX NUT (M8)		8 PCS
4	WRENCH (13mm)		1 PC
5	WOOD SCREW (4x30mm)		10 PCS
6	ALLEN KEY (4mm)		1 PC

HARDWARE KIT PACKED IN BOX #3

No.	Description	Image	Quantity
6	ALLEN KEY (4mm)		1 PC
7	ALLEN BOLT (6x60mm)		12 PCS
8	SPRING WASHER (M6)		12 PCS
9	FLAT WASHER (M6)		12 PCS



Not provided

ASSEMBLY INSTRUCTIONS

MODUS
FURNITURE


The diagram illustrates the assembly of the bed frame's headboard and footboard. Part A shows the headboard being attached to the frame with 8 screws. Part B shows the footboard being attached to the frame with 1 screw. A circular inset provides a detailed view of the screw being inserted into the footboard.

MORRIS WOOD/UPH CAL KING BED

ASSEMBLY INSTRUCTIONS




STEP 3:

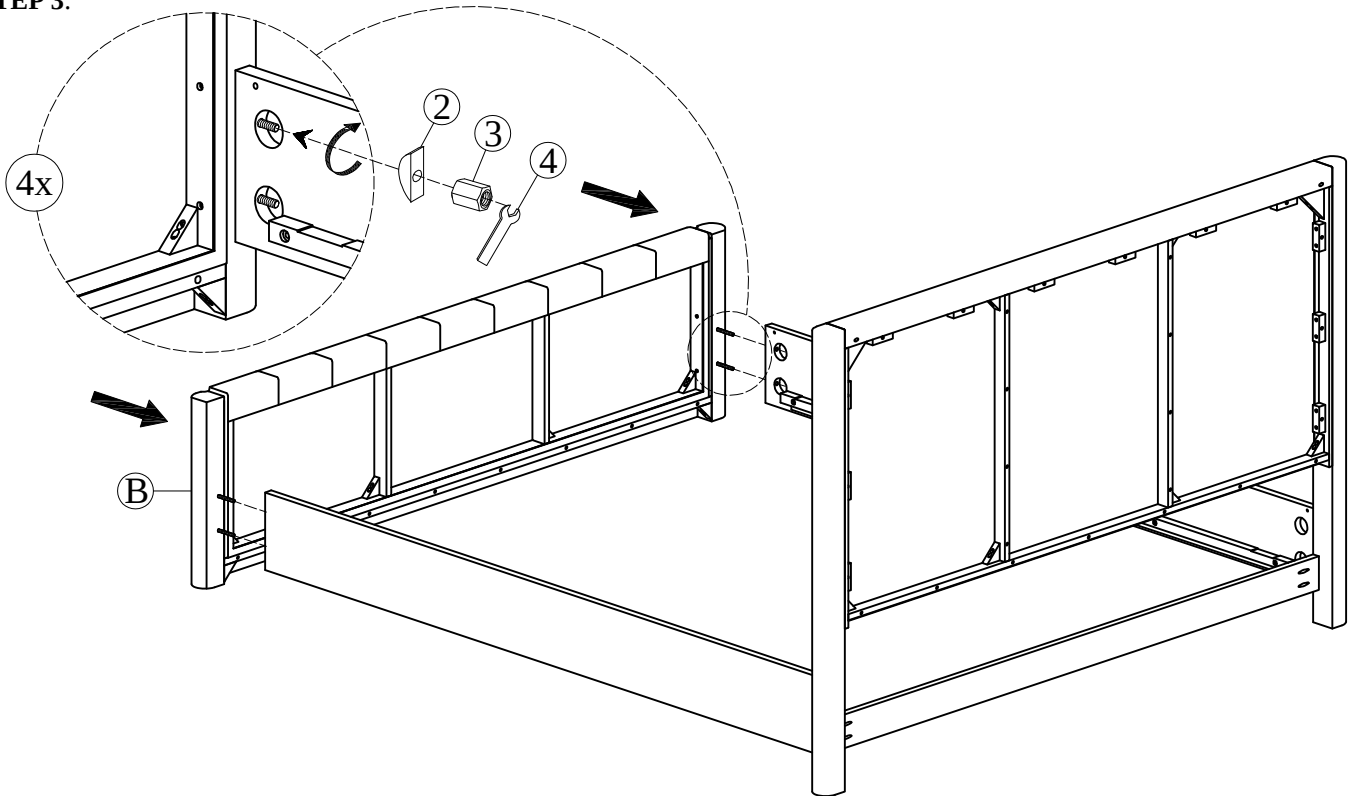

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4, 5 & 6 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4

STEP 4:

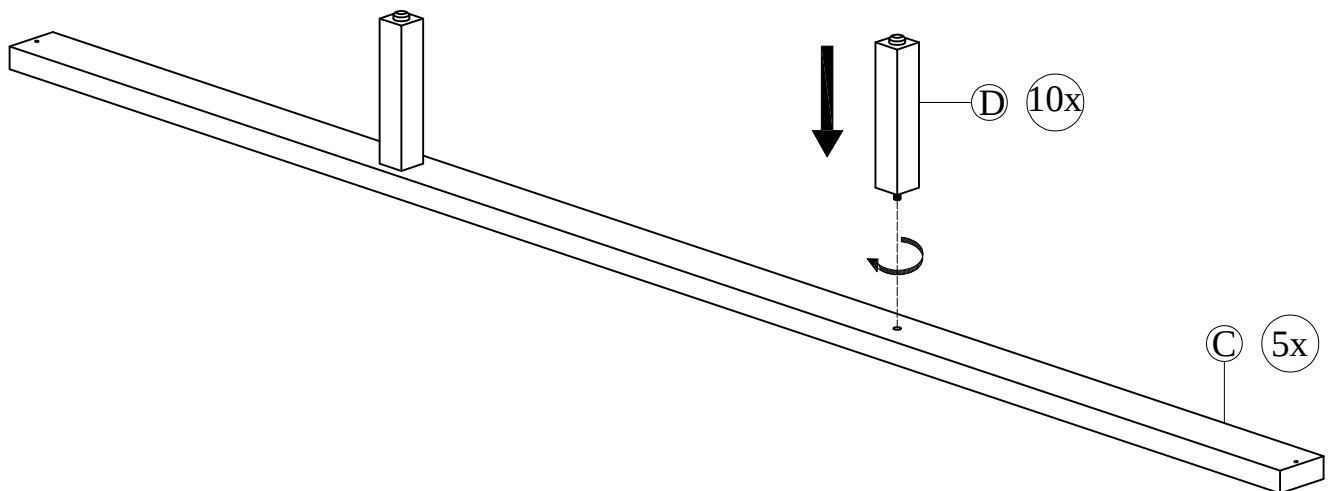


MORRIS WOOD/UPH CAL KING BED


ASSEMBLY INSTRUCTIONS



STEP 5:

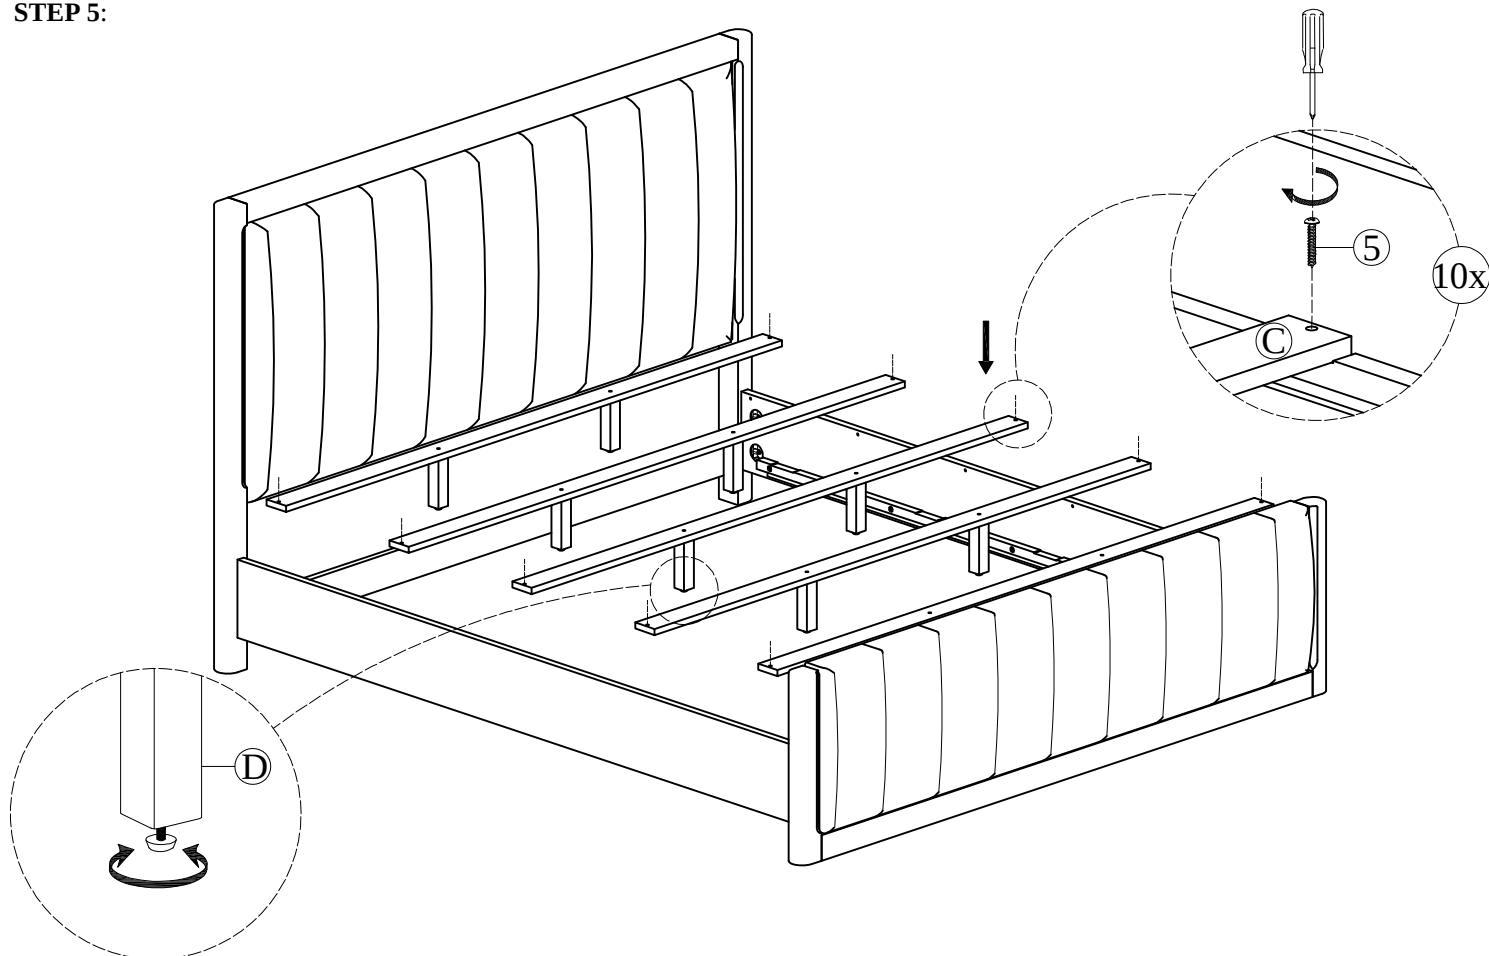


STEP 6:

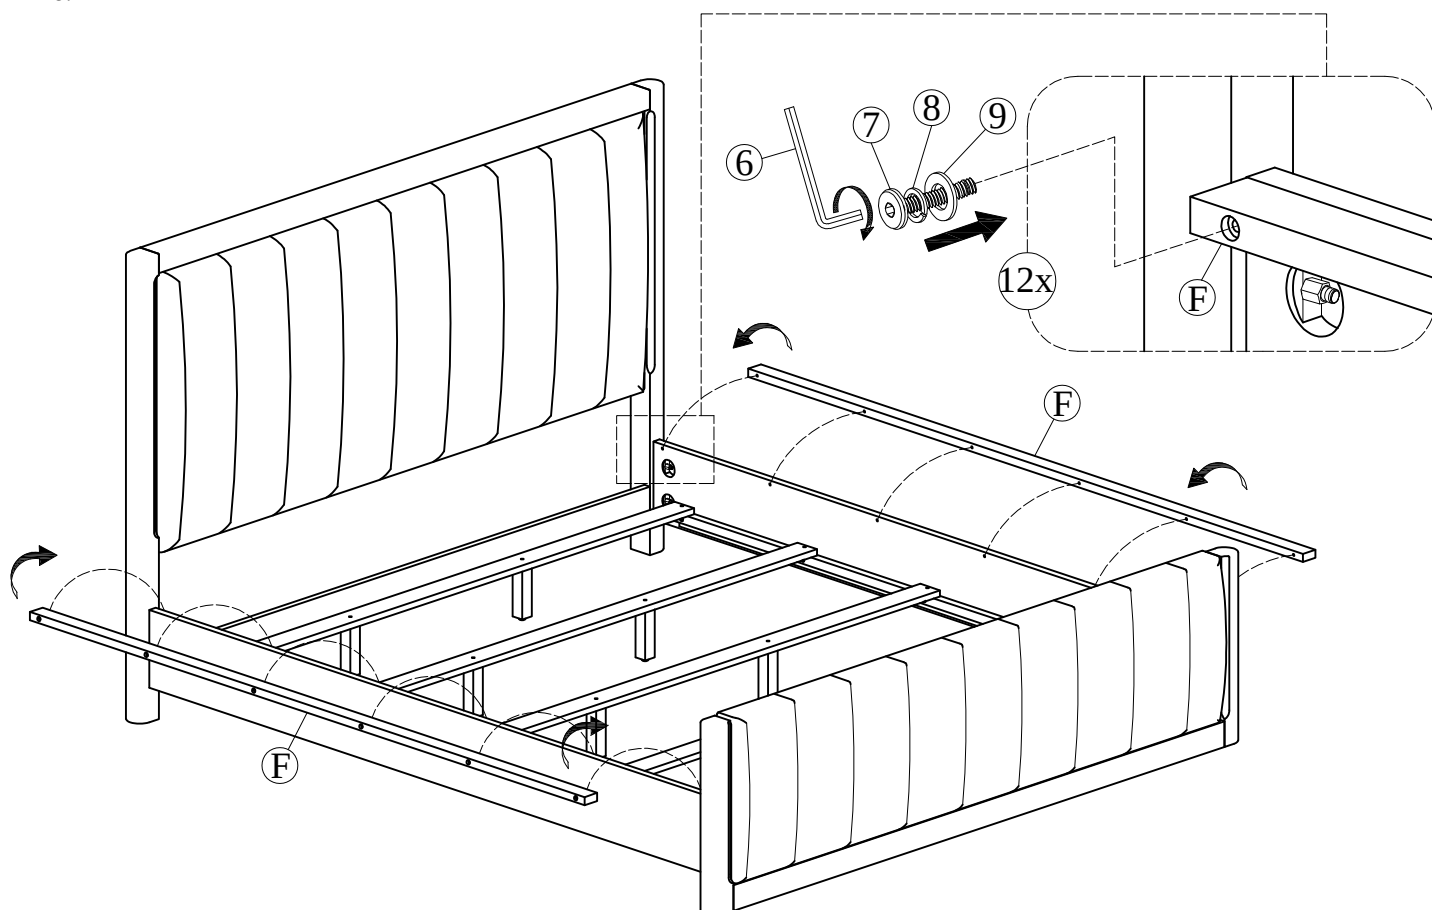

MORRIS WOOD/UPH CAL KING BED

ASSEMBLY INSTRUCTIONS

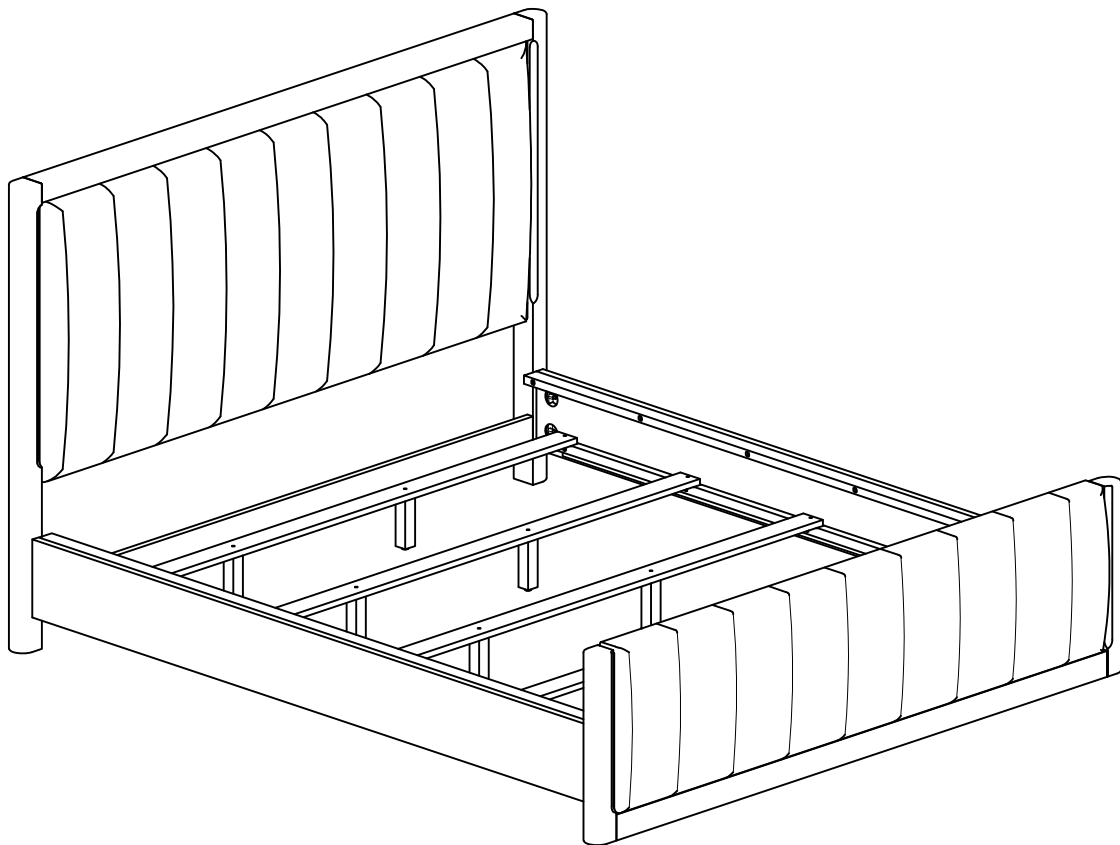


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

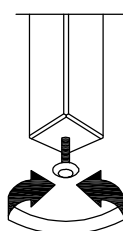

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

MORRIS WOOD/UPH CAL KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.


IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.

PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT	:5 PCS	5. WOOD SCREW (4x30mm)	:10 PCS
D. SUPPORT LEG	:10 PCS	6. ALLEN KEY (4mm)	:1 PC
F. MATTRESS SPACER	:2 PCS	7. ALLEN BOLT (6x60mm)	:12 PCS
		8. SPRING WASHER (M6)	:12 PCS
		9. FLAT WASHER (M6)	:12 PCS

STEP 1:
USE ALLEN KEY (6) IN BOX #2 OR #3 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

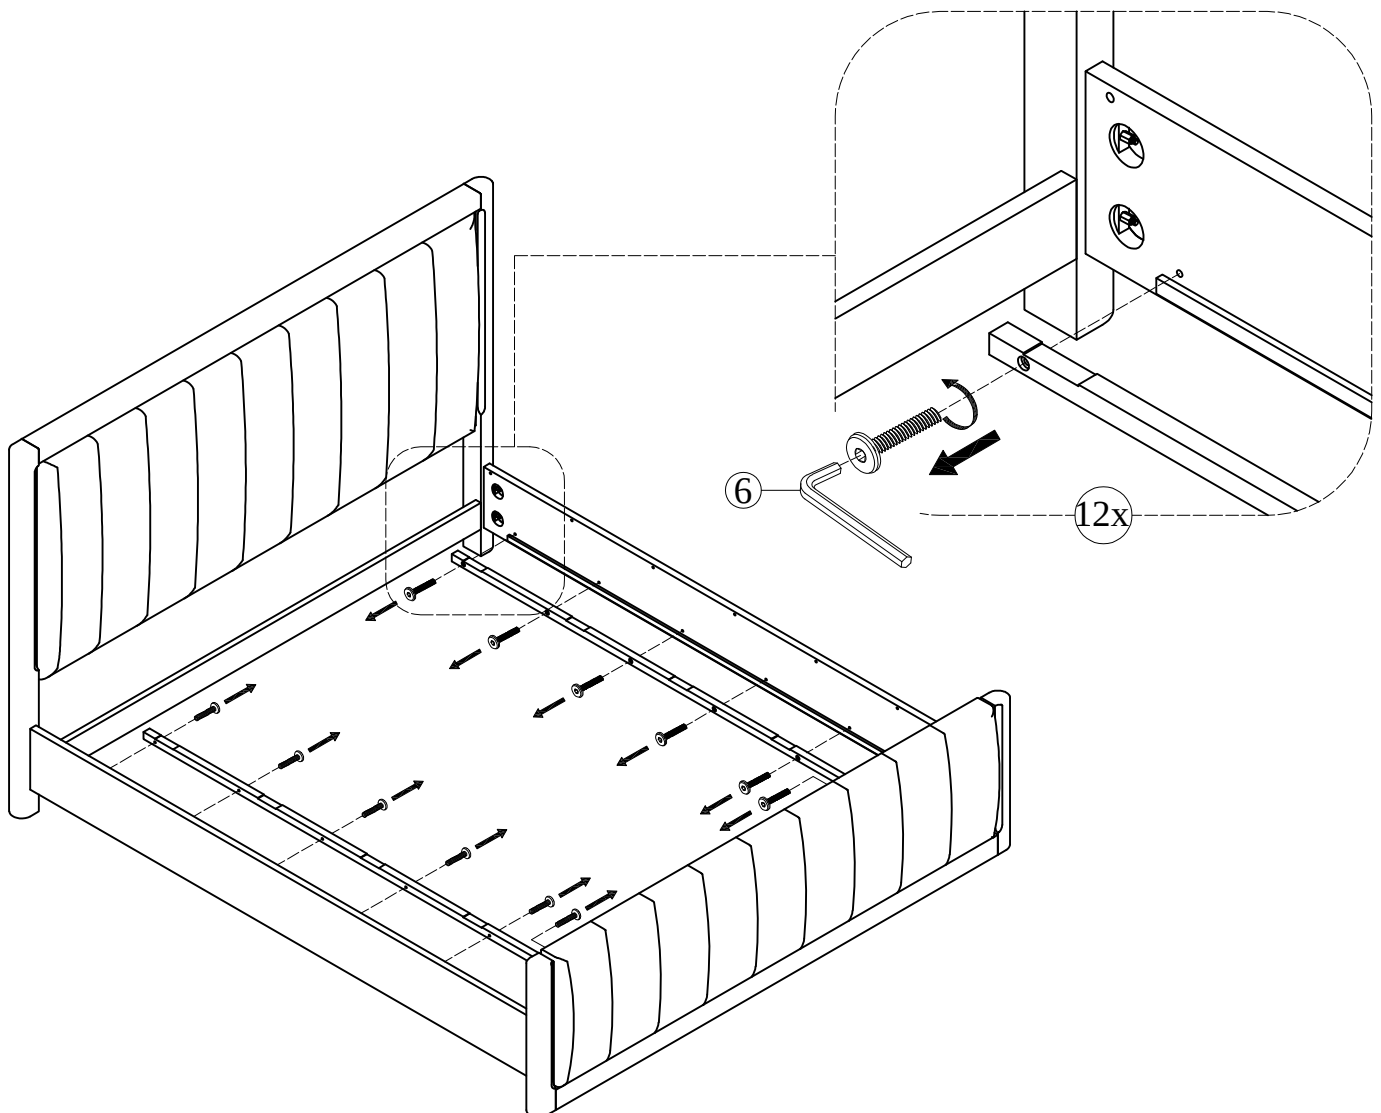

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.