





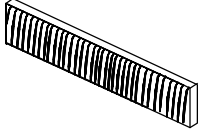
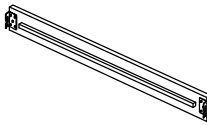
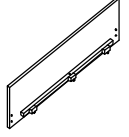
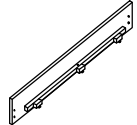
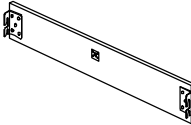












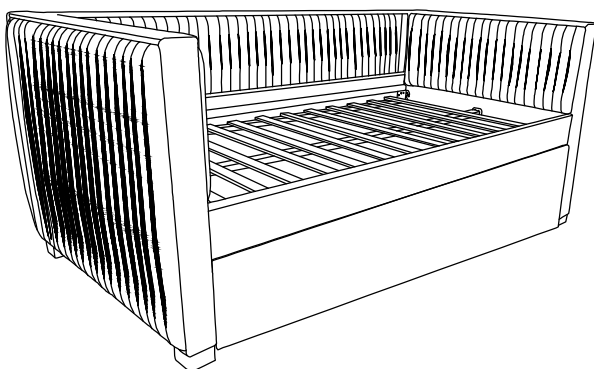


# ASSEMBLY INSTRUCTION

## PLEATED DAYBED

<b>A</b> LSF Side Arm  1 pc	<b>B</b> RSF Side Arm  1 pc	<b>C</b> Daybed Slat  13 pcs	<b>D</b> Trundle Slat  12 pcs
<b>E</b> Bunfoot  4 pcs	<b>F</b> Back Rest  1 pc	<b>G</b> LSF & RSF Side Rail  2 pcs	<b>H</b> Trundle Front Panel  1 pc
<b>I</b> Trundle Back Panel  1 pc	<b>J</b> LSF & RSF Side Panel  2 pcs	<b>K</b> Daybed Center Slat Support  1 pc	<b>L</b> Trundle Center Slat Support  1 pc
<b>M</b> Allen Bolt Ø5/16" x 1-1/2"  8 pcs	<b>N</b> Allen Bolt Ø5/16" x 2-1/2"  4 pcs	<b>O</b> Allen Bolt Ø5/16" x 3/4"  8 pcs	<b>P</b> Lock Washer Ø5/16"  20 pcs
<b>Q</b> Flat Washer Ø5/16" x 19mm  16 pcs	<b>R</b> Flat Washer Ø5/16" x 22mm  4 pcs	<b>S</b> Wood Screw #8 x 1-1/4"  75 pcs	<b>T</b> Wood Screw #8 x 2-1/2"  16 pcs
<b>U</b> Allen Key 5mm  1 pc	<b>V</b> Caster  6 pcs	<b>W</b> Wood Screw #8 x 3/4"  24 pcs	

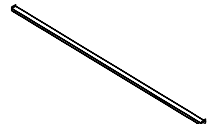


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

### IMPORTANT NOTE:


1. Do not tighten all screws / bolts until all completely assembled.
2. Keep all hardware parts out of reach of children.

\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.

- 1 Attach Bunfoot (E) to LSF & RSF Side Arm (A & B) with Wood Screw (T) and tighten by Phillips Head Screwdriver.

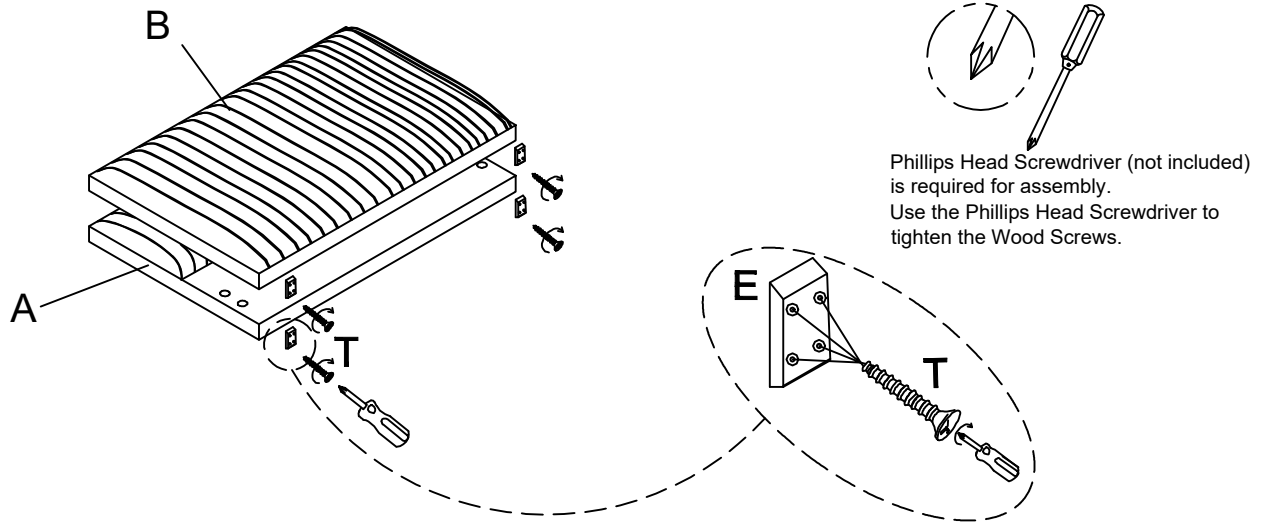


- 2 Attach LSF & RSF Side Rail (G) to LSF & RSF Side Arm (A & B) through the metal hook with Allen Bolt (M), Lock Washer (P) and Flat Washer (Q) using Allen Key (U).

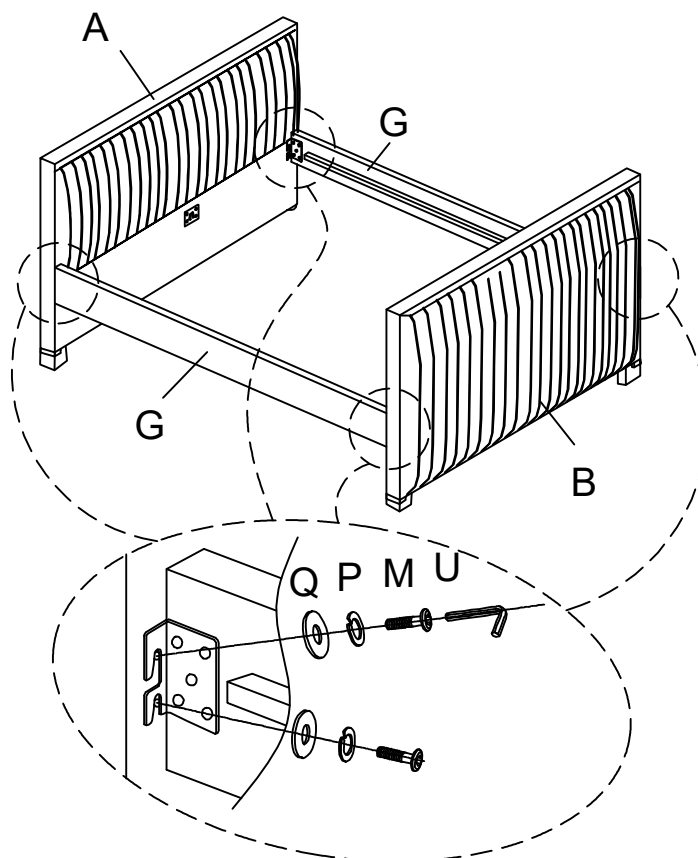


\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.

- 3** Lock Daybed Center Slat Support (K) to the LSF & RSF Side Arm (A & B) as shown.

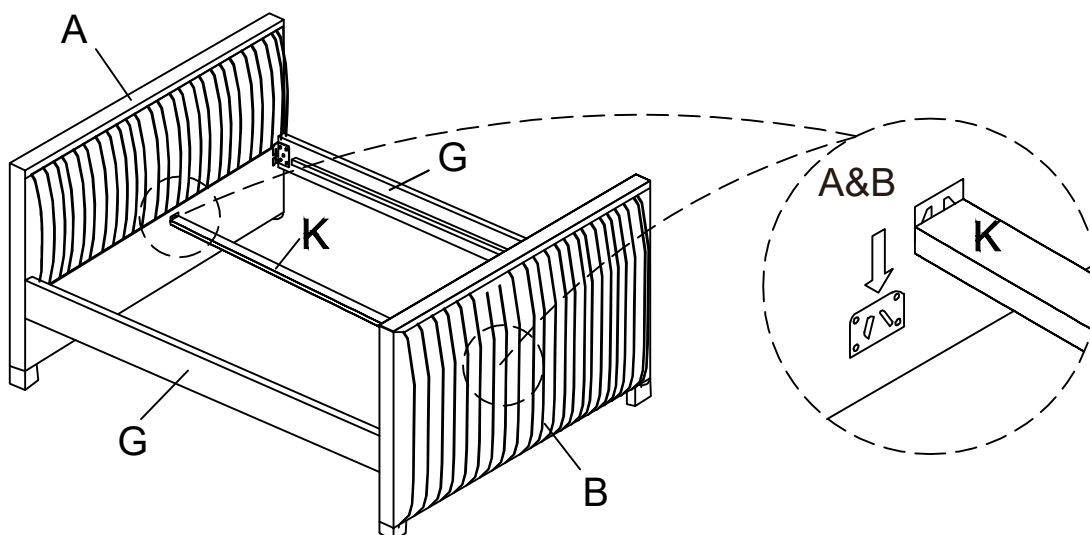


- 4** Attach Back Rest (F) to LSF & RSF Side Arm (A & B) by using Allen Bolt (N), Lock Washer (P), Flat Washer (Q) with Allen Key (U).

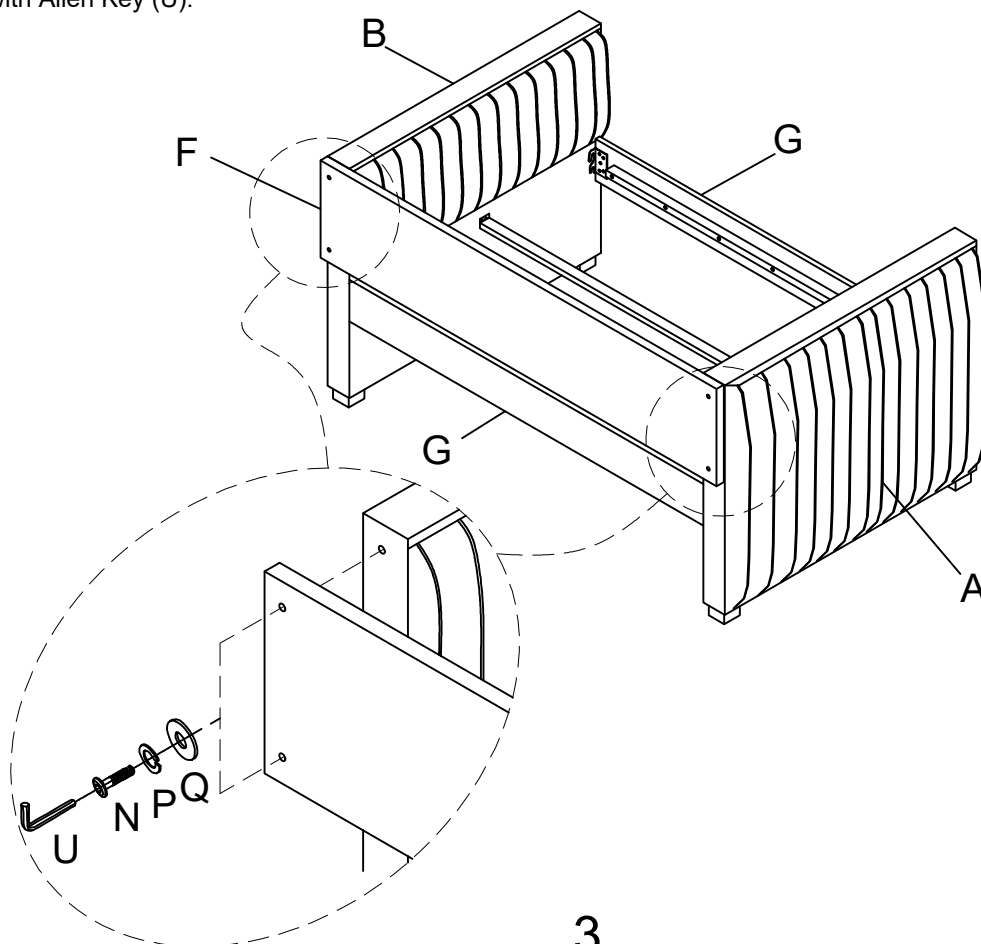


\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.

- 5** Attach Daybed Slat (C) on LSF & RSF Side Rail (G) and tighten with Wood Screw (S) by Phillips Head Screwdriver.

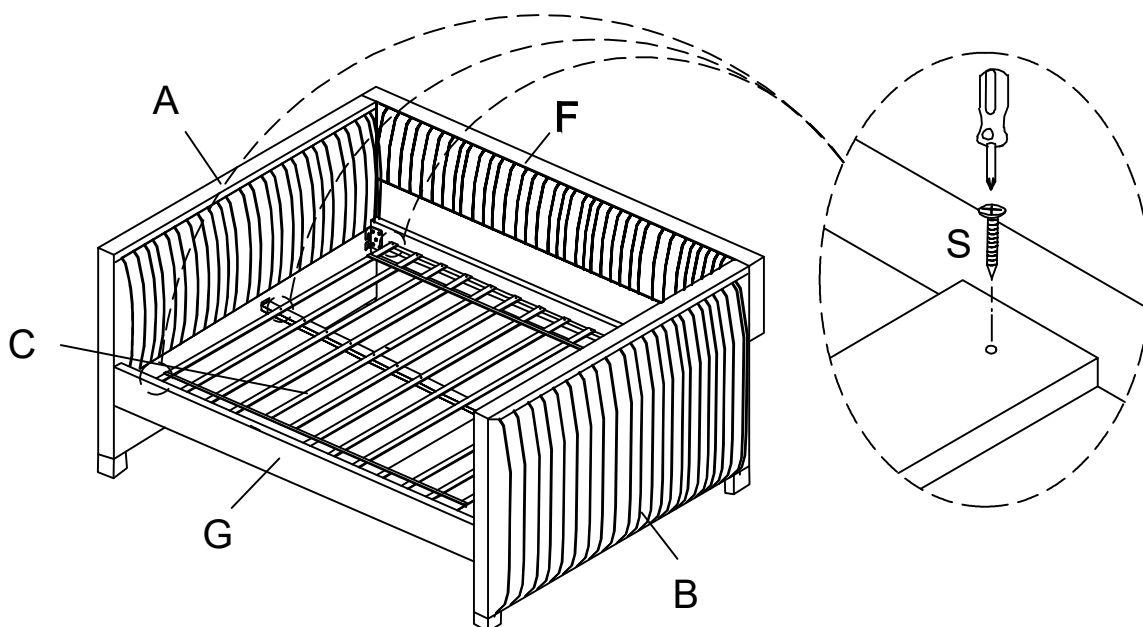


- 6** Attach Caster (V) under Trundle Front Panel (H) and tighten with Wood Screw (W) by Phillips Head Screwdriver.

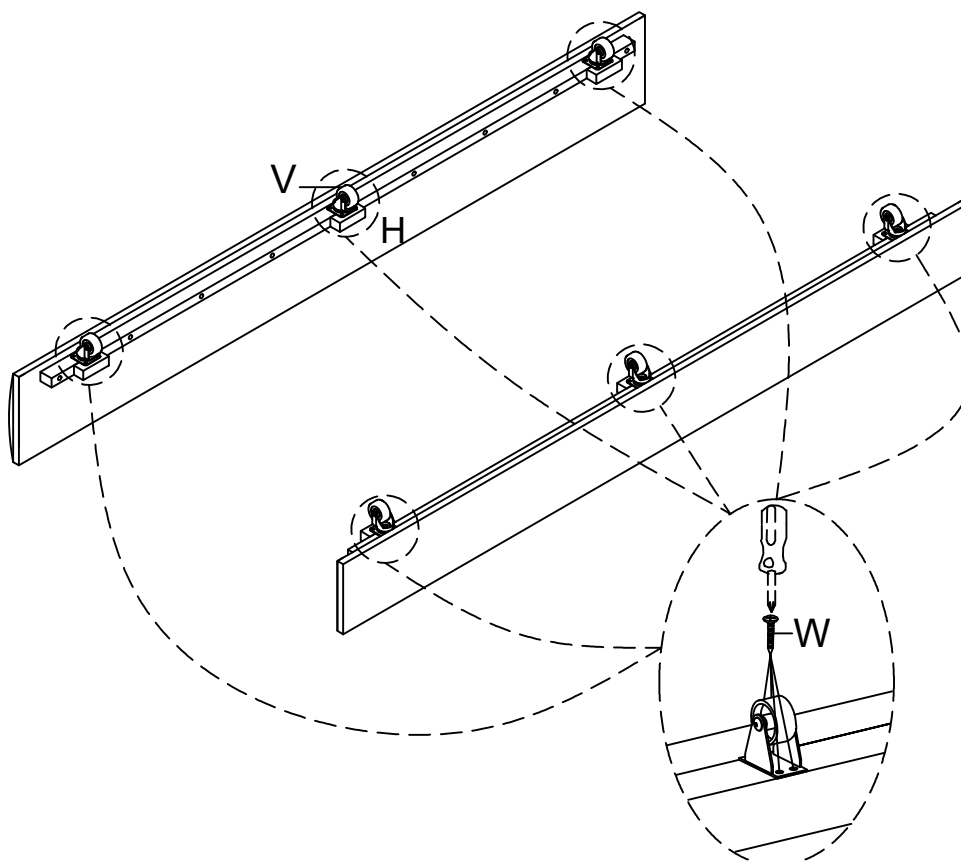


\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.

- 7** Attach LSF & RSF Side Panel (J) to Trundle Front Panel (H) and Trundle Back Panel (I) with Allen Bolt (O), Lock Washer (P) and Flat Washer (Q) using Allen Key (U).

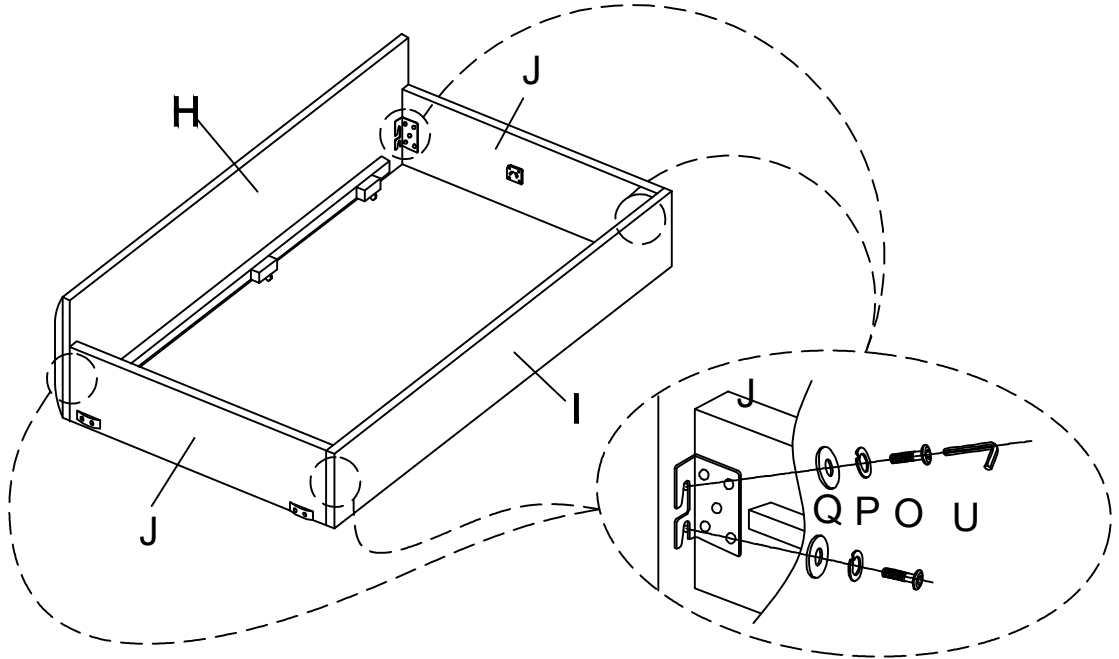


- 8** Lock Trundle Center Slat Support (L) to the LSF & RSF Side Panel (J) as shown.

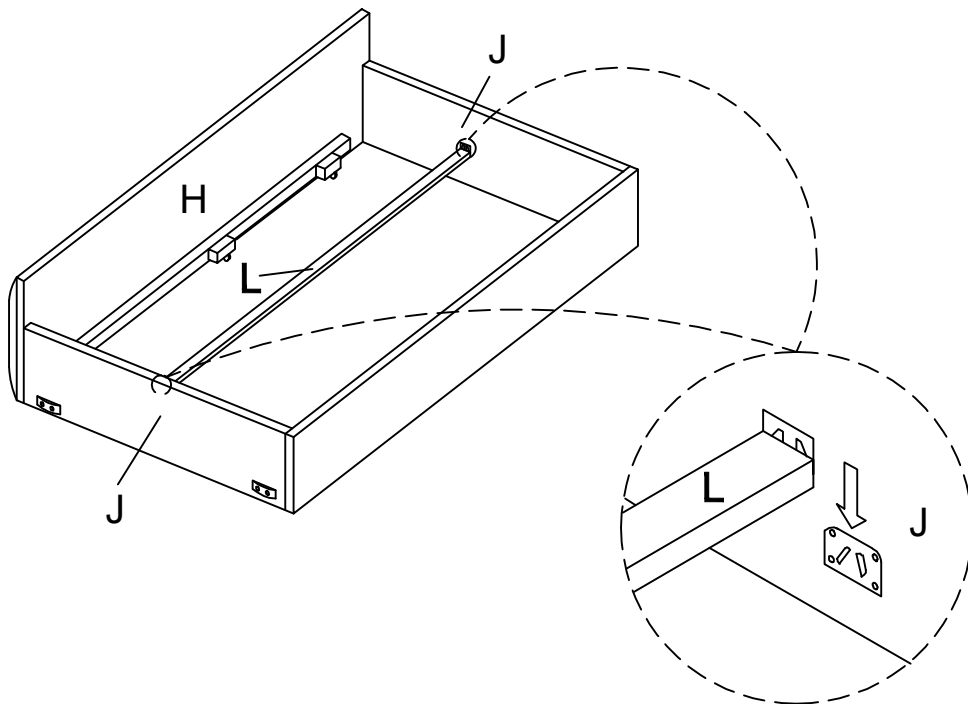

\*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.


9

Attach Trundle Slat (D) on Trundle Center Slat Support (L) and tighten with Wood Screw (S) by Phillips Head Screwdriver.

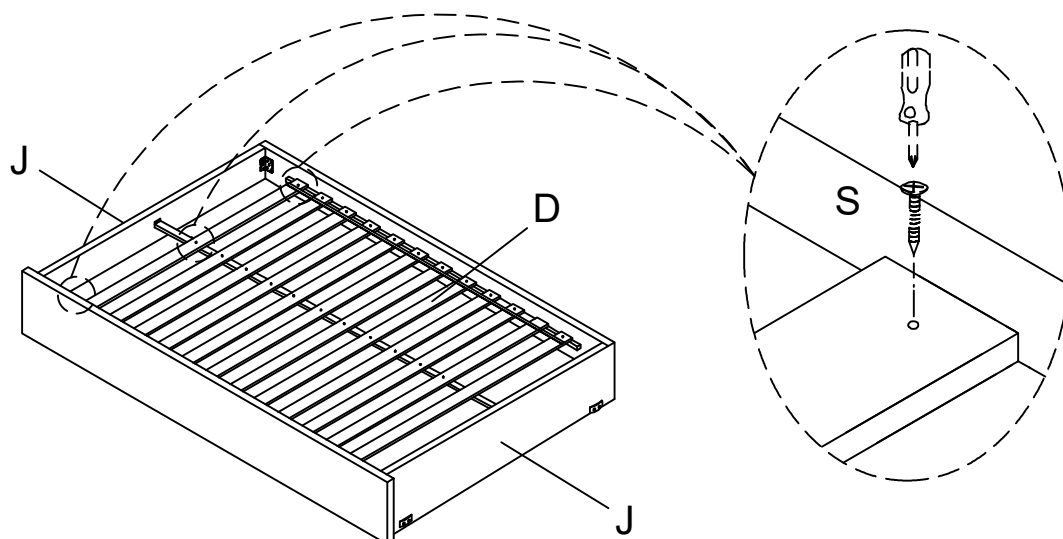

10

Insert Trundle to Daybed as shown.

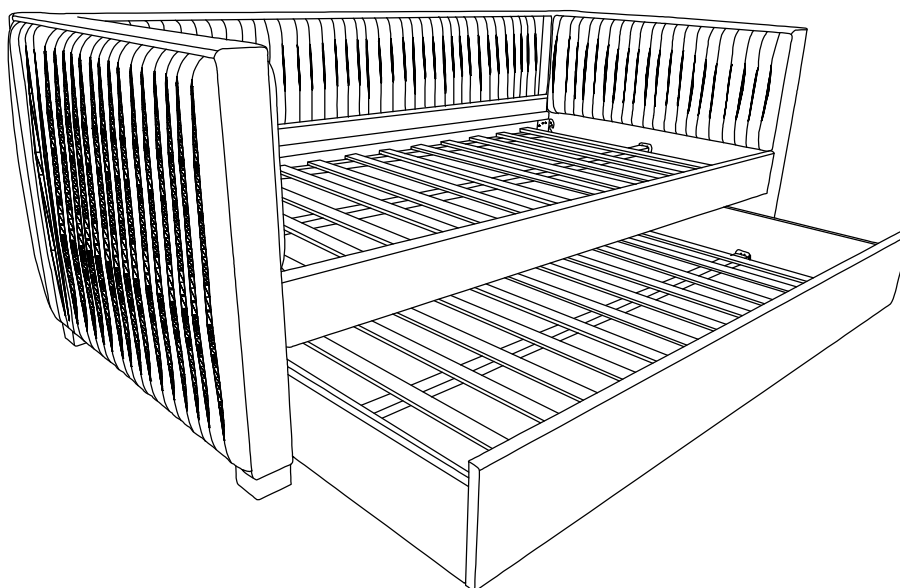

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.