


RIESLING MARBLEIZED INDUSTRIAL BAR CART

ASSEMBLY INSTRUCTIONS

FIRSTIME & CO.®
— AMERICAN DESIGNED —


STEP 1

Attach wheels (G + H) to legs (A + B) by screwing into place.

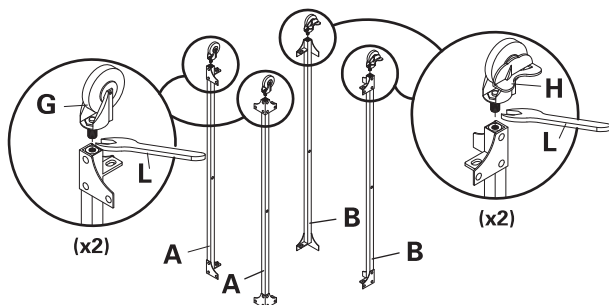


STEP 2

Attach bottom shelf (D) to the legs (A + B). Tighten screws 75%.

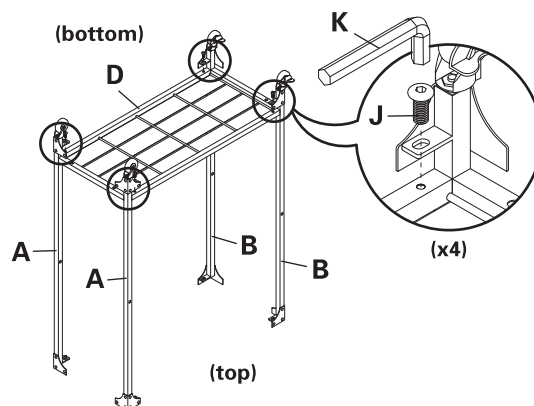


STEP 3

Attach wine bottle racks (C) to the bottom shelf (D). Tighten screws 75%.

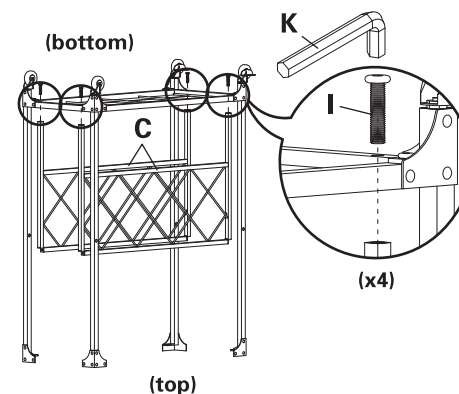


STEP 4

Attach middle shelf (E) to the legs (A + B) & wine bottle racks (C). Tighten screws 75%.

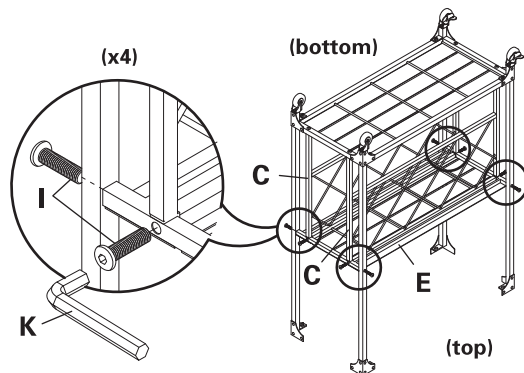


STEP 5










Attach top shelf (F) to the legs (A + B). Tighten all screws 100%. Rotate cart upright.

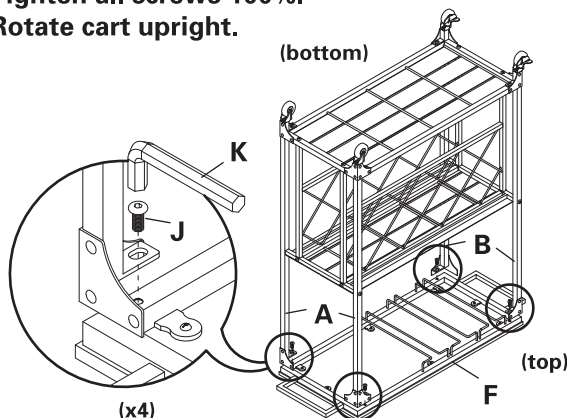

FULLY ASSEMBLED

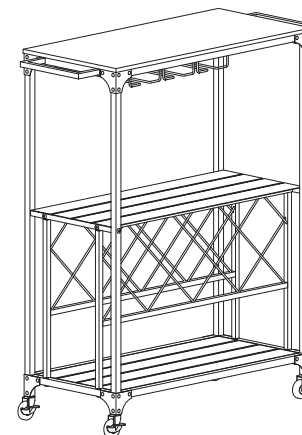

PARTS

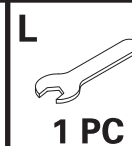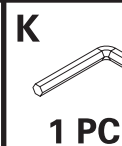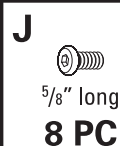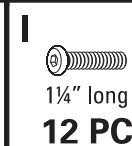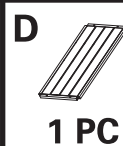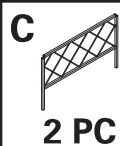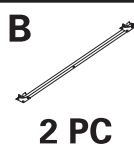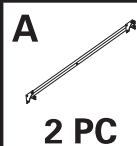

NOTE: DO NOT TIGHTEN SCREWS 100% UNTIL FULLY ASSEMBLED.