


Installation Guide

Handle Trim

K-T9540

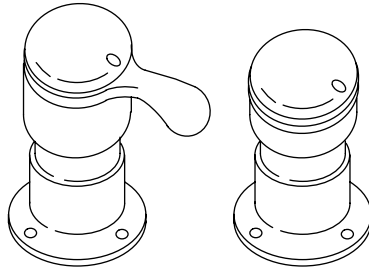

M product numbers are for Mexico (i.e. K-12345**M**)

Los números de productos seguidos de **M** corresponden a México (Ej. K-12345**M**)

French, page "Français-1"

Español, página "Español-1"


086840-2-AB

THE BOLD LOOK
OF **KOHLER**®

Thank You For Choosing Kohler Company

We appreciate your commitment to Kohler quality. Please take a few minutes to review this manual before you start installation. If you encounter any installation or performance problems please don't hesitate to contact us. Our phone numbers and website are listed on the back cover. Thanks again for choosing Kohler Company.

Tools and Materials

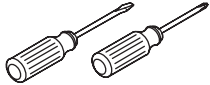


Assorted
Screwdrivers




Adjustable
Wrench



Plumbers
Putty

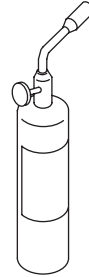

Propane
Torch

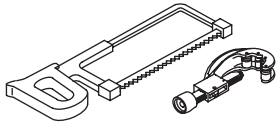

Hacksaw or
Tubing Cutter




Solder



Sealant Tape


Before You Begin

- Observe all local plumbing and building codes.
- Shut off the main water supply.
- Provide an access panel for all installations.
- Kohler Co. reserves the right to make revisions in the design of products without notice, as specified in the Price Book.

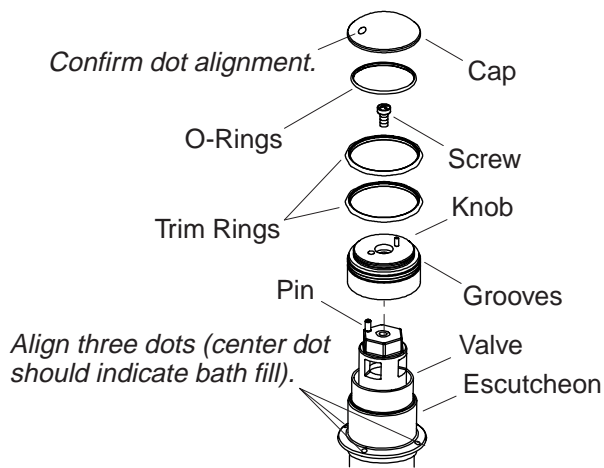

1. Round Handle Installation

- Turn the transfer valve to the bath fill position (fully clockwise for a two-way valve; center position for the three-way configuration).
- Apply a bead of plumbers putty or other sealant around the escutcheon flange according to the putty manufacturer's instructions.
- Position the escutcheon loosely on the valve so that the three dots will be clearly visible after installation. The center dot should indicate the bath fill position.
- Temporarily position the knob on the valve to confirm proper alignment of the dots.
- Remove the knob and press the escutcheon firmly into place.
- Remove any excess putty.
- Install the trim rings to the knob grooves, using care to avoid stretching.
- Secure the knob to the valve with the screw.
- Install the O-ring in the remaining groove on the knob.
- Snap the cap onto the knob.

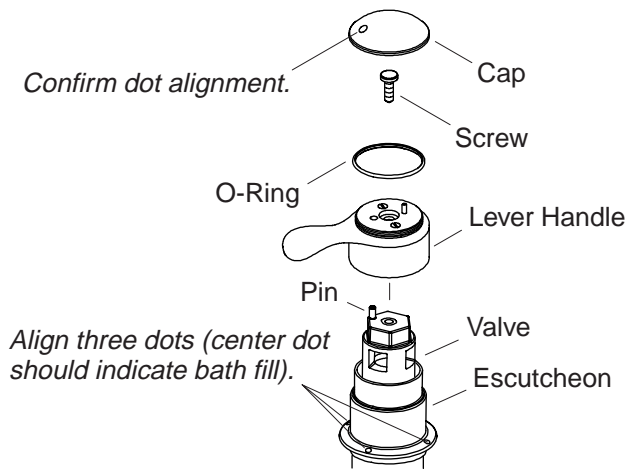

2. Lever Handle Installation

- Turn the transfer valve to the bath fill position (fully clockwise for a two-way valve; center position for the three-way configuration).
- Apply a bead of plumbers putty or other sealant around the escutcheon flange according to the putty manufacturer's instructions.
- Position the escutcheon loosely on the valve so that the three dots will be clearly visible after installation. The center dot should indicate the bath fill position.
- Temporarily position the knob on the valve to confirm proper alignment of the dots.
- Remove the knob and press the escutcheon firmly into place.
- Remove any excess putty.
- Position the lever handle onto the valve. If necessary, the pin may be broken off the valve make aligning the handle easier.
- Secure the lever handle to the valve with the screw.
- Install the O-ring over the threads of the lever handle.
- Snap the cap onto the handle so the dot lines up with the lever.