

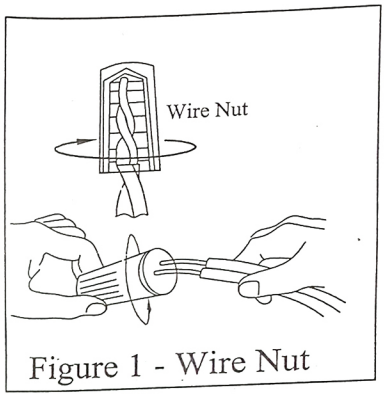


Figure 1 - Wire Nut

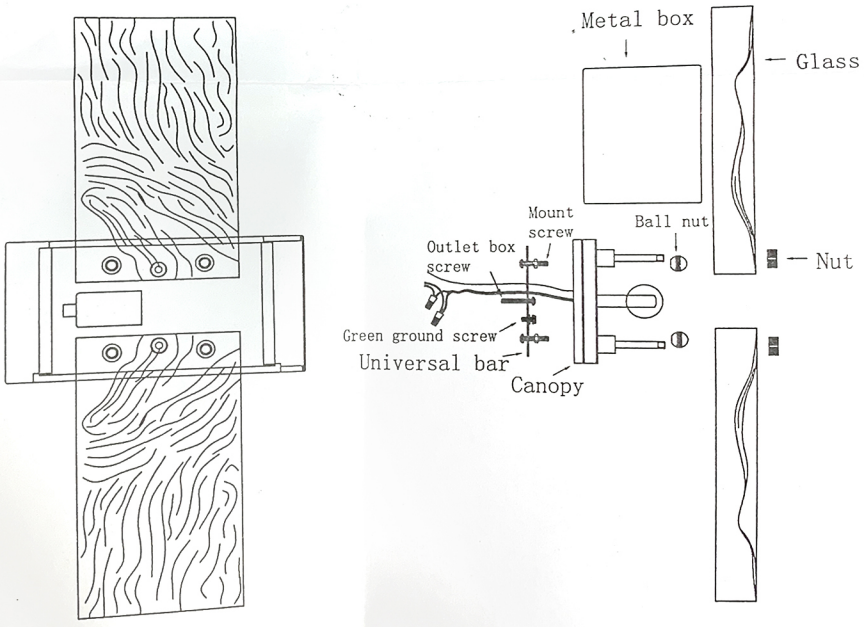

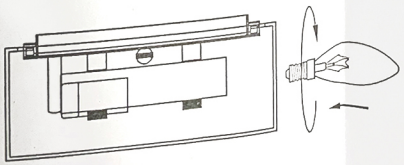

25W, TYPE B
(NOT INCLUDED)

Installation Instructions

STYLE NO.: AJC-9129

These instructions are provided for your safety. It is very important that they are read carefully and completely before beginning installation of this wall sconce. ***We strongly suggest that all direct wired fixtures be installed by a professional electrician.***

Carefully remove the parts from the carton and place them on a flat surface. Please make sure that you have all the parts indicated before you begin to assemble this item.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock.

Assembly Instructions

1. Carefully remove the parts and hardware from the carton.
2. Remove the metal box.
3. Fasten the Universal bar onto the Outlet Box by using the Outlet Box Screw .
4. Install both ground wires in the Universal bar with the Green Ground Screw supplied.
5. Place the white wire, ribbed or tinted wire evenly against the white wire from the outlet box and place the black, smooth or un-tinted wire evenly against the black wire from the outlet box. (Connecting the Wires - See Figure 1)
6. Use the Mount Screws secure the Universal bar and Lamp Body as through the Mount hole, and screw by Ball Nuts until tightly.
7. Install 25 Watt, Type B bulb (NOT INCLUDED) into the socket of the fixture.
8. Place the glass on the lamp body and secure by nuts.
9. Install the metal box back to the lamp body.

To clean,wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.