

ASSEMBLY INSTRUCTION

MODERN FLOOR LAMP

1pc

1pc

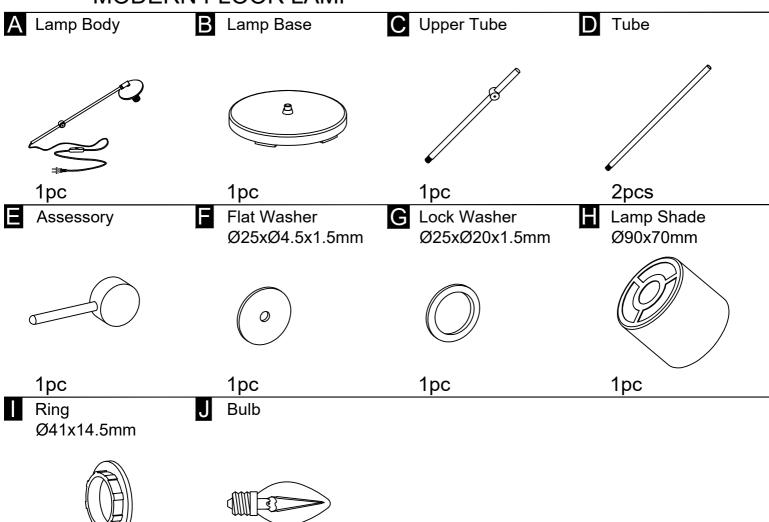

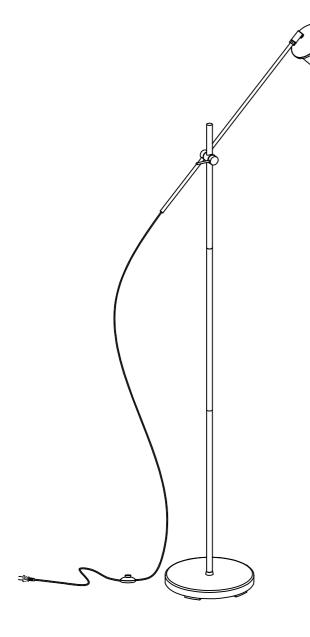


IMPORTANT SAFETY INSTRUCTIONS


THIS PENDANT LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Following the below instruction to assemble the Upper Tube (C) & Tube (D) and connet with the Lamp Base (B).

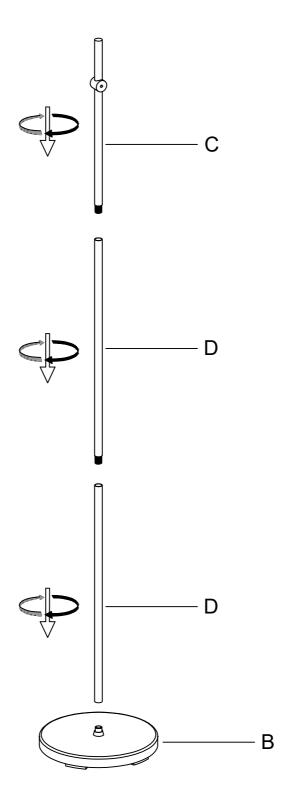


Assemble Lamp Body (A) to Upper Tube (C) using Accessory (E), Flat Washer (F) & Lock Washer (G), then you can adjust the Accessory (E) to what angle you want.

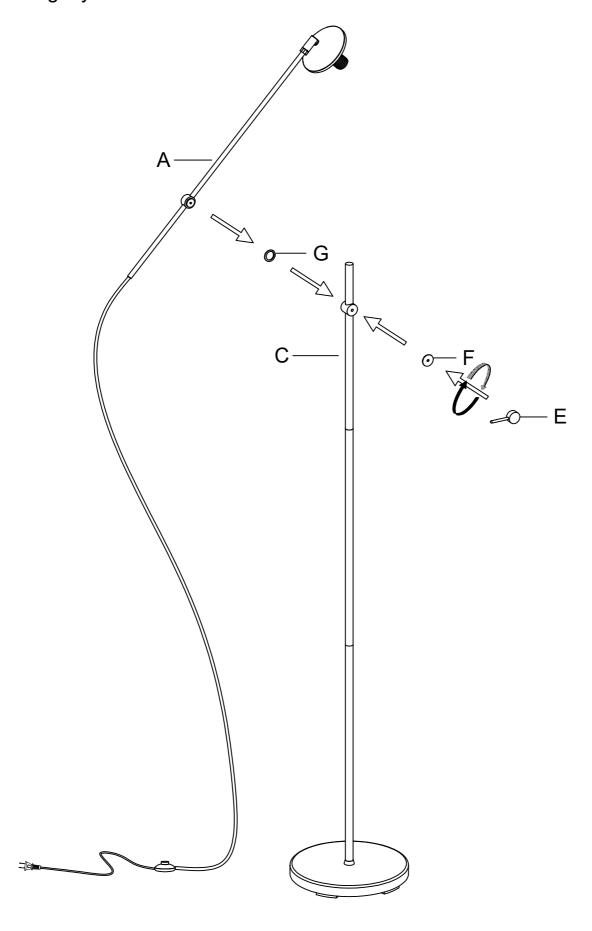

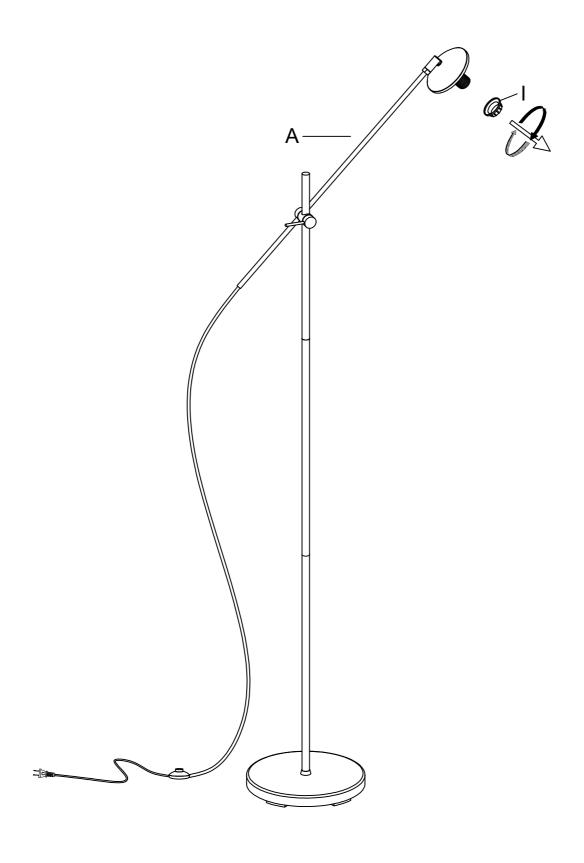

4

Assemble Lamp Shade (H) to lamp holder of Lamp Body (A) using Ring (I) to tight, then assemble Bulb (J) to the lamp holder tightly.

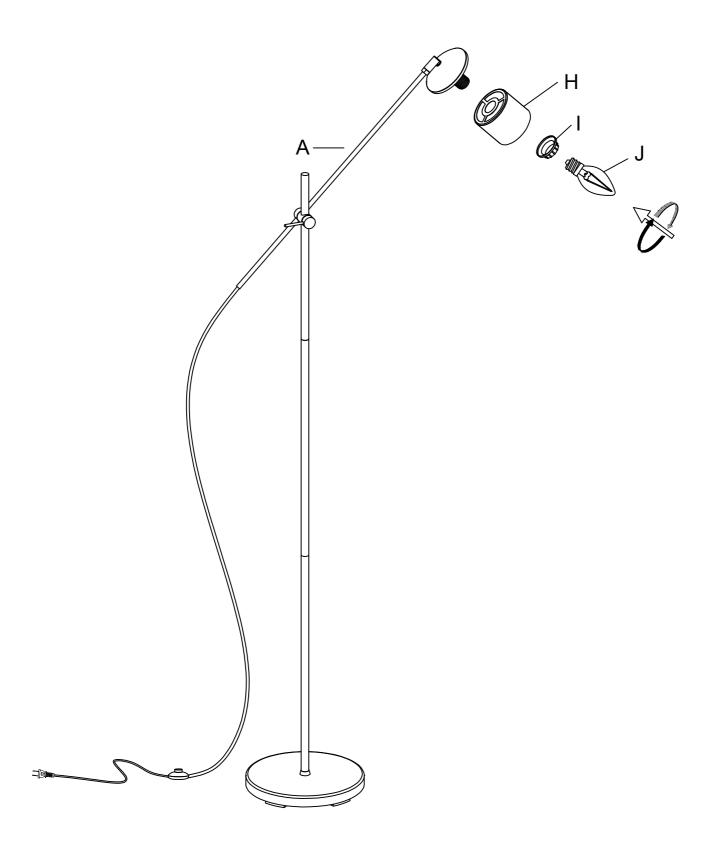

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.