








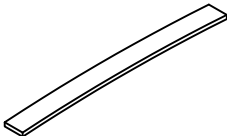
















ASSEMBLY INSTRUCTION


MODERN SLEIGH QUEEN BED

A Headboard Panel 1pc 	B Headboard Side - LSF 1pc 	C Headboard Side - RSF 1pc 	D Footboard Panel 1pc 
E Footboard Side - LSF 1pc 	F Footboard Side - RSF 1pc 	G Side Panel 2pcs 	H Middle Rail 1pc 
I Side Rail 2pcs 	J Slat 26pcs 	K Leg 4pcs 	L Support Leg 3pcs 
M Side Buckle 26pcs 	N Middle Buckle 13pcs 	O Bolt M8x60mm 10pcs 	P Bolt M8x50mm 10pcs 
Q Bolt M8x25mm 20pcs 	R Bolt M8x20mm 6pcs 	S Lock Washer M8x13mm 46pcs 	T Flat Washer M8x19mm 46pcs 
U Screw M4x20mm 16pcs 	V Allen Key M5 1pc 	W Screwdriver (Not Provided) 1pc 	

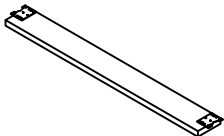


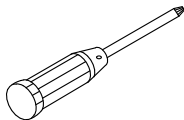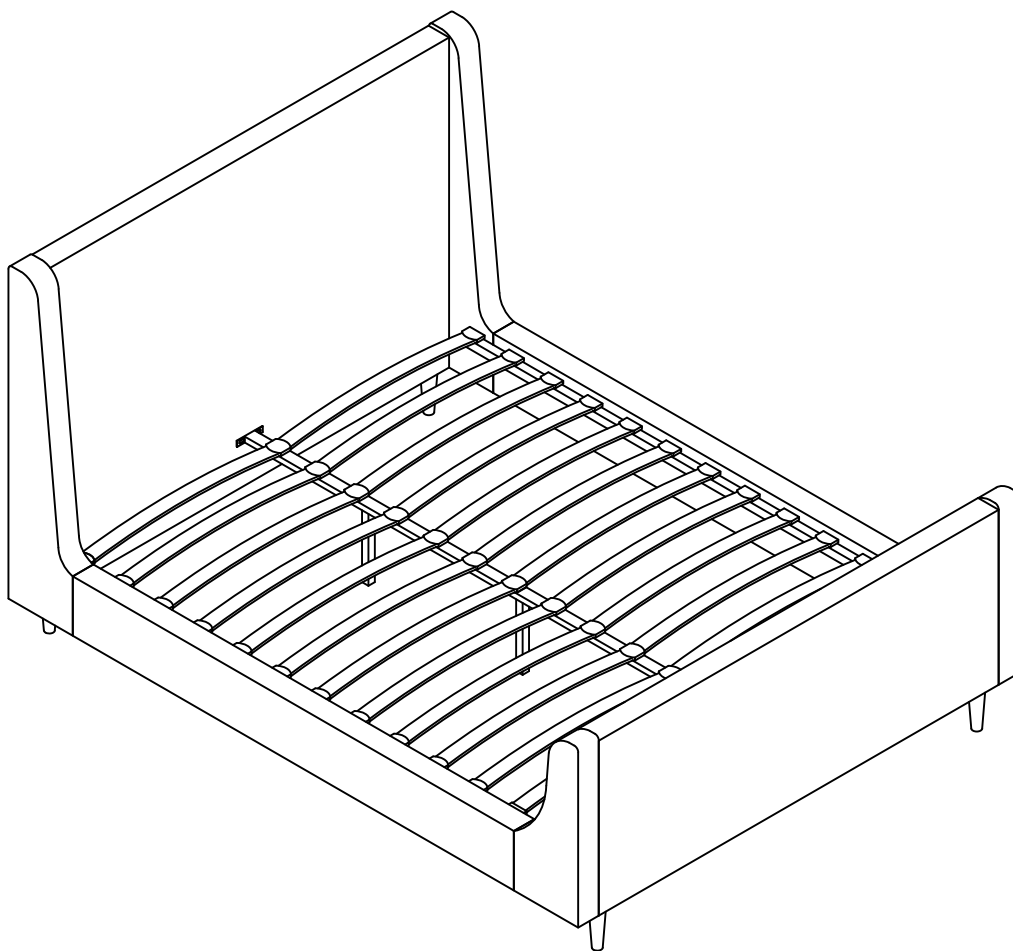First page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attach Hardboard Panel (A) to Hardboard Side - Left (B) & Hardboard Side - RSF (C), using Bolt (O), Lock Washer (S) and Flat Washer (T) by Allen Key (V).

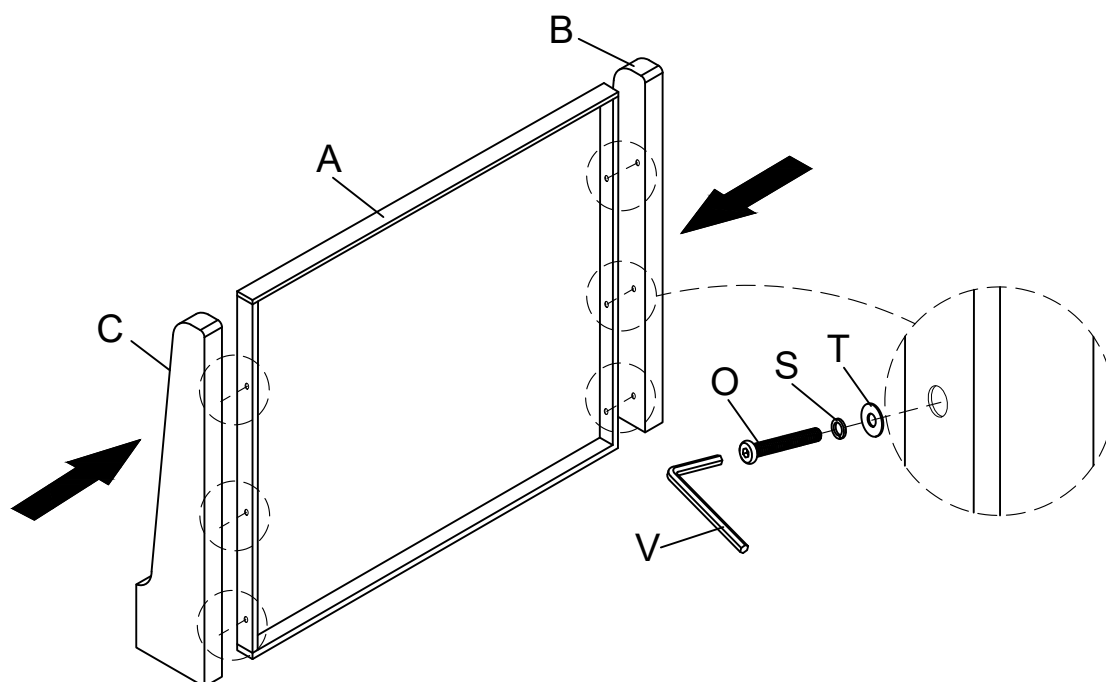


- 2** Attach Footboard Panel (D) to Footboard Side - Left (E) & Footboard Side - RSF (F), using Bolt (O), Lock Washer (S) and Flat Washer (T) by Allen Key (V).

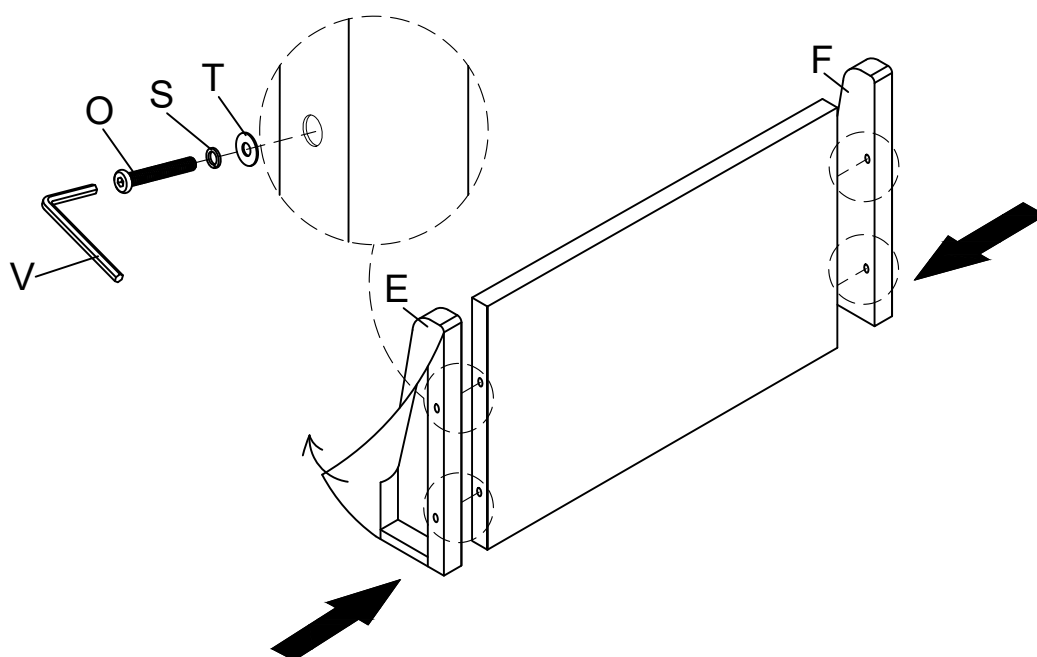


- 3** Attach Leg (K) to Hardboard Panel (A) & Footboard Panel (D), using Bolt (Q), Screw (U), Lock Washer (S) and Flat Washer (T) by Allen Key (V) and Screwdriver (W) as below shown.

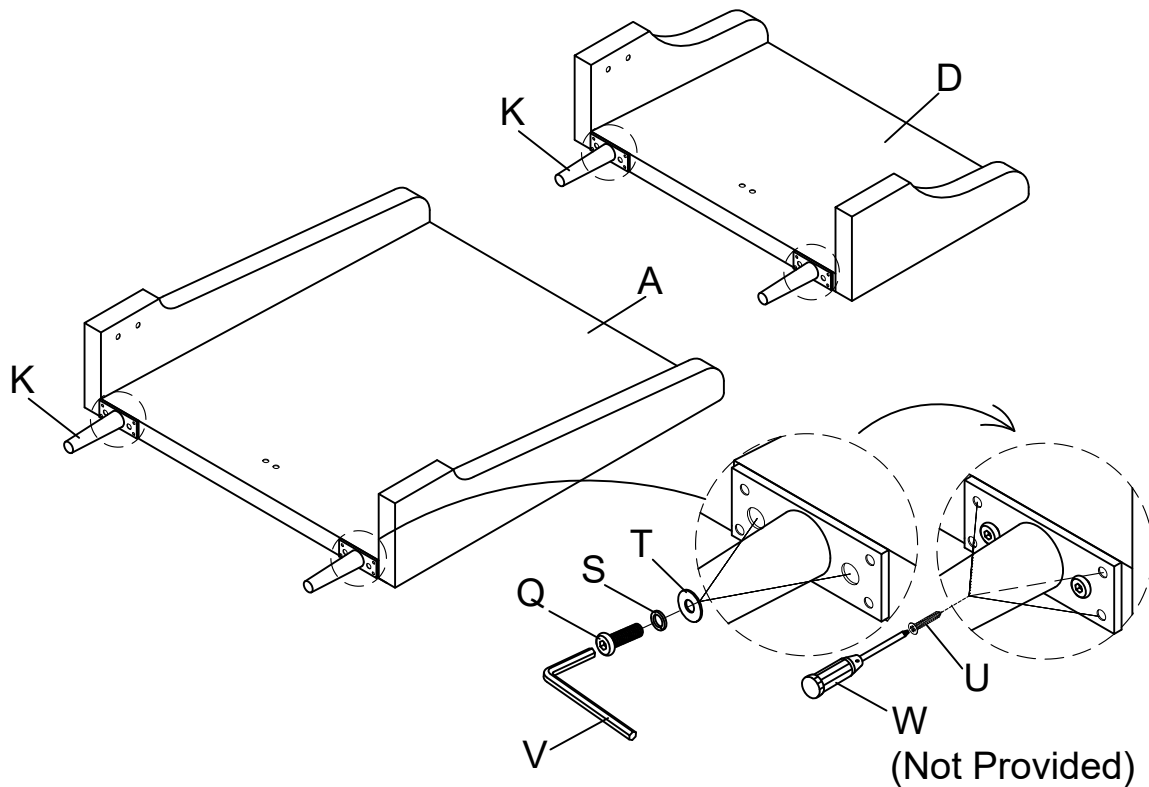


- 4** Attach Bolt (Q), Lock Washer (S) and Flat Washer (T) to Hardboard Side - LSF (B), Hardboard Side - RSF (C), Footboard Side - LSF (E) & Footboard Side - RSF (F) by Allen Key (V) as below shown. But not too tight.

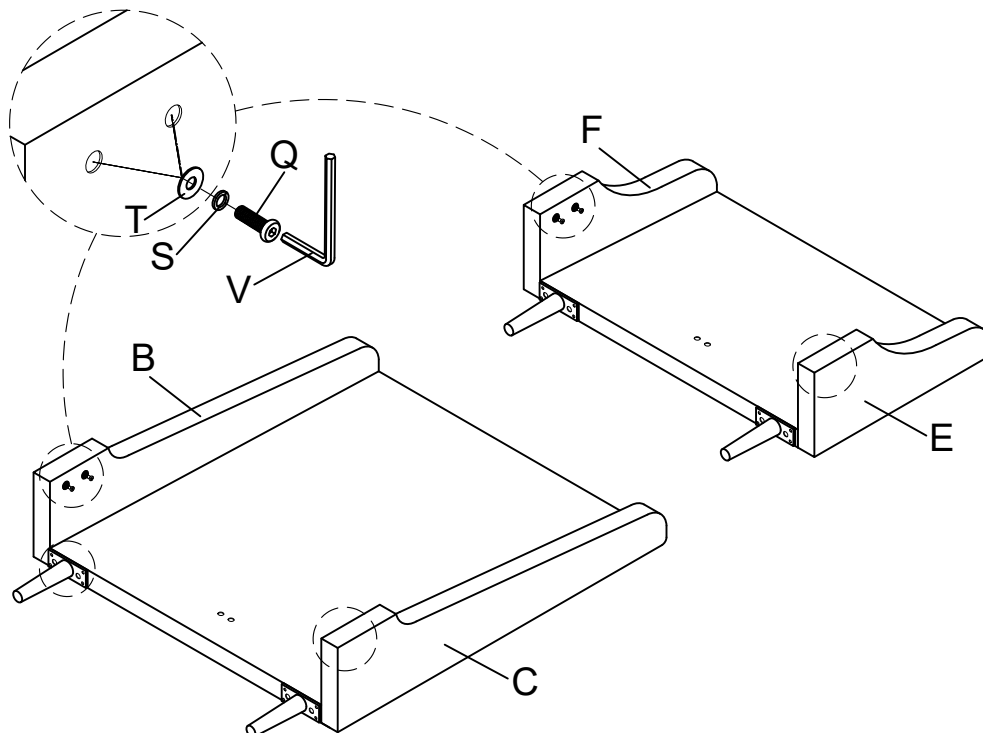

- 5** Attach Side Rail (I) to Side Panel (G), using Bolt (P), Lock Washer (S) and Flat Washer (T) by Allen Key (V) as below shown.

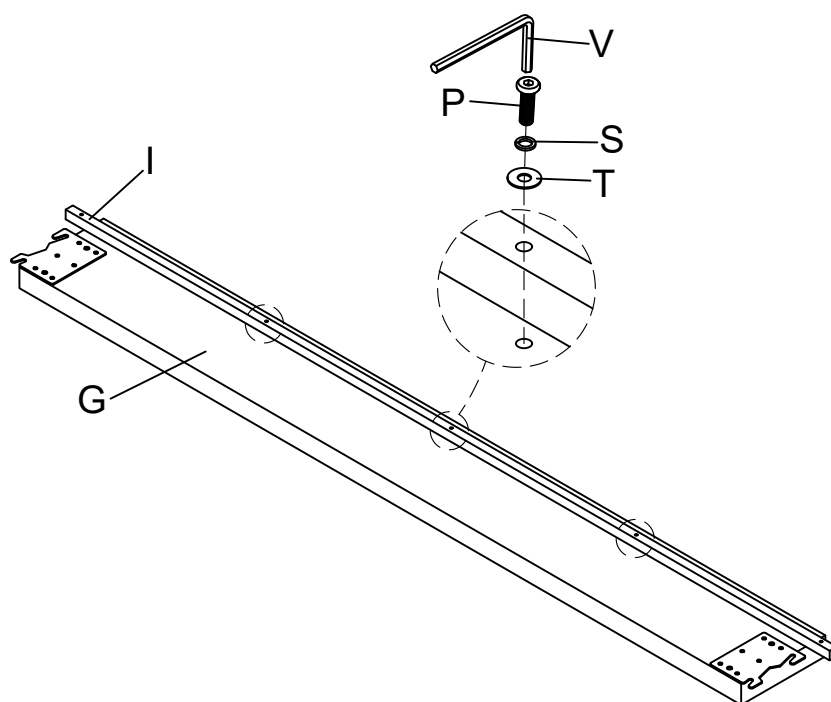


- 6** Attach Support Leg (L) to Middle Rail (H), using Bolt (R), Lock Washer (S) and Flat Washer (T) by Allen Key (V) as below shown.

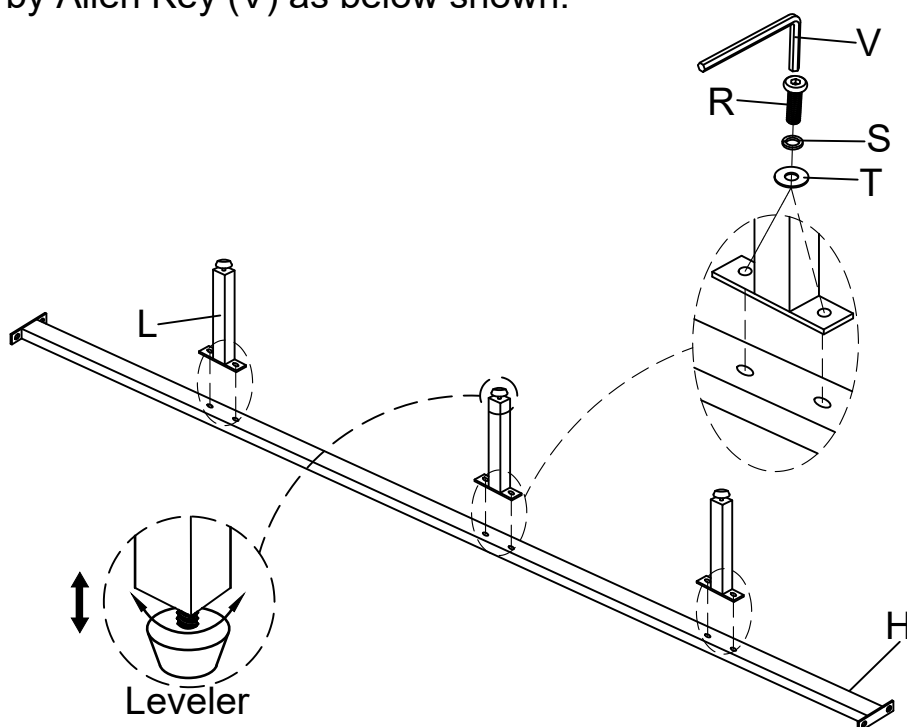


Turn left or turn right to adjust the leveler until the bed is stabilized.


- 7** Hook Side Panel (G) with Side Rail (I) to the Bolt (Q) on Hardboard Side - LSF (B), Hardboard Side - RSF (C), Footboard Side - LSF (E) & Footboard Side - RSF (F), using Bolt (P), Lock Washer (S) and Flat Washer (T) to assemble Side Rail (I) by Allen Key (V), then lock Bolt (Q) by Allen Key (V) tightly as below shown.

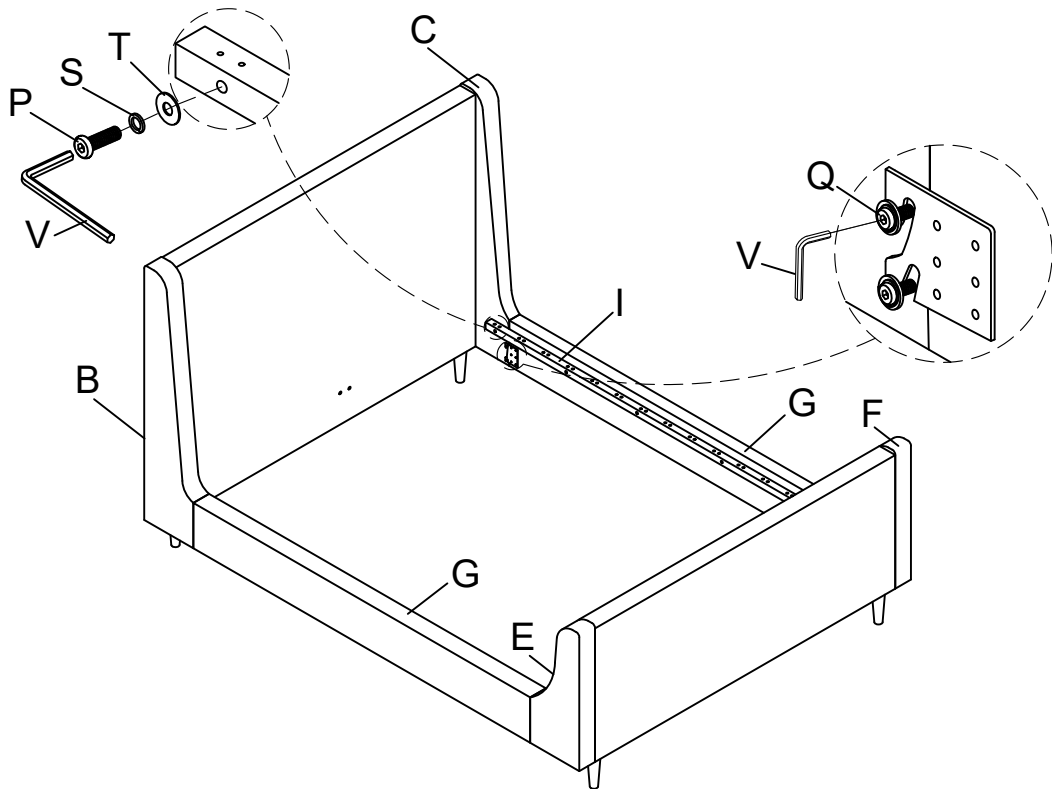

- 8** Attach Middle Rail (H) to Headboard Panel (A) & Footboard Panel (D), using Bolt (Q), Lock Washer (S) and Flat Washer (T) by Allen Key (V) as below shown.

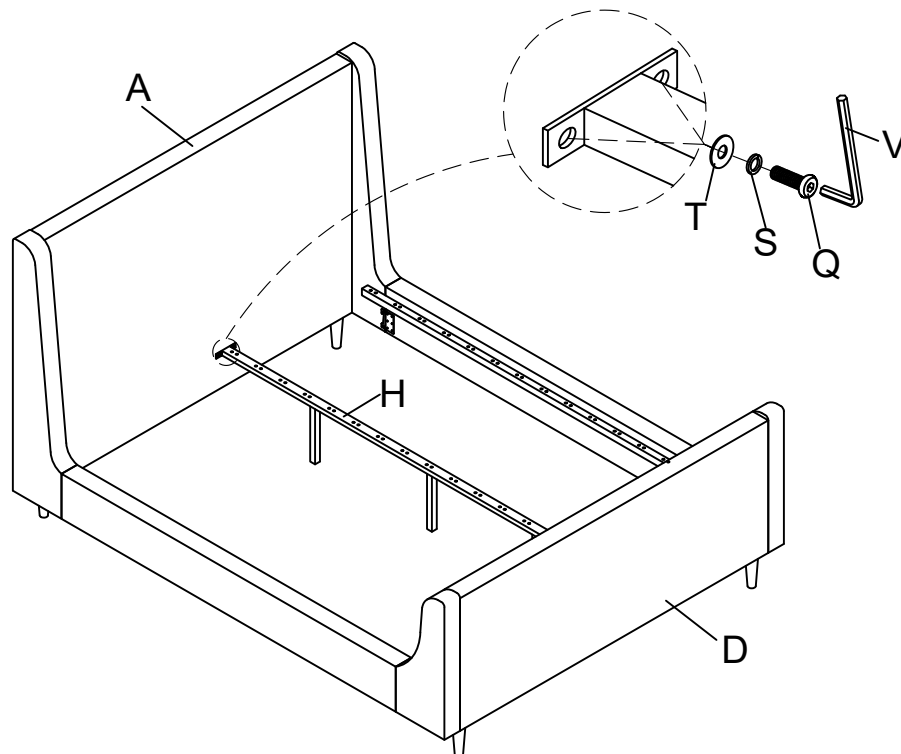

- 9** First, connect 2pcs of Slat (J) together by 1pc of Middle Buckle (N). Next, lock the assembled Slat (J) with Buckle (N) to Middle Rail (H). At last, insert two ends of Slat (J) to Buckle (M) and then push Side Buckle (M) into Side Rail (I) as below shown. Repeat the assemble steps to finish the rest slats assembling.

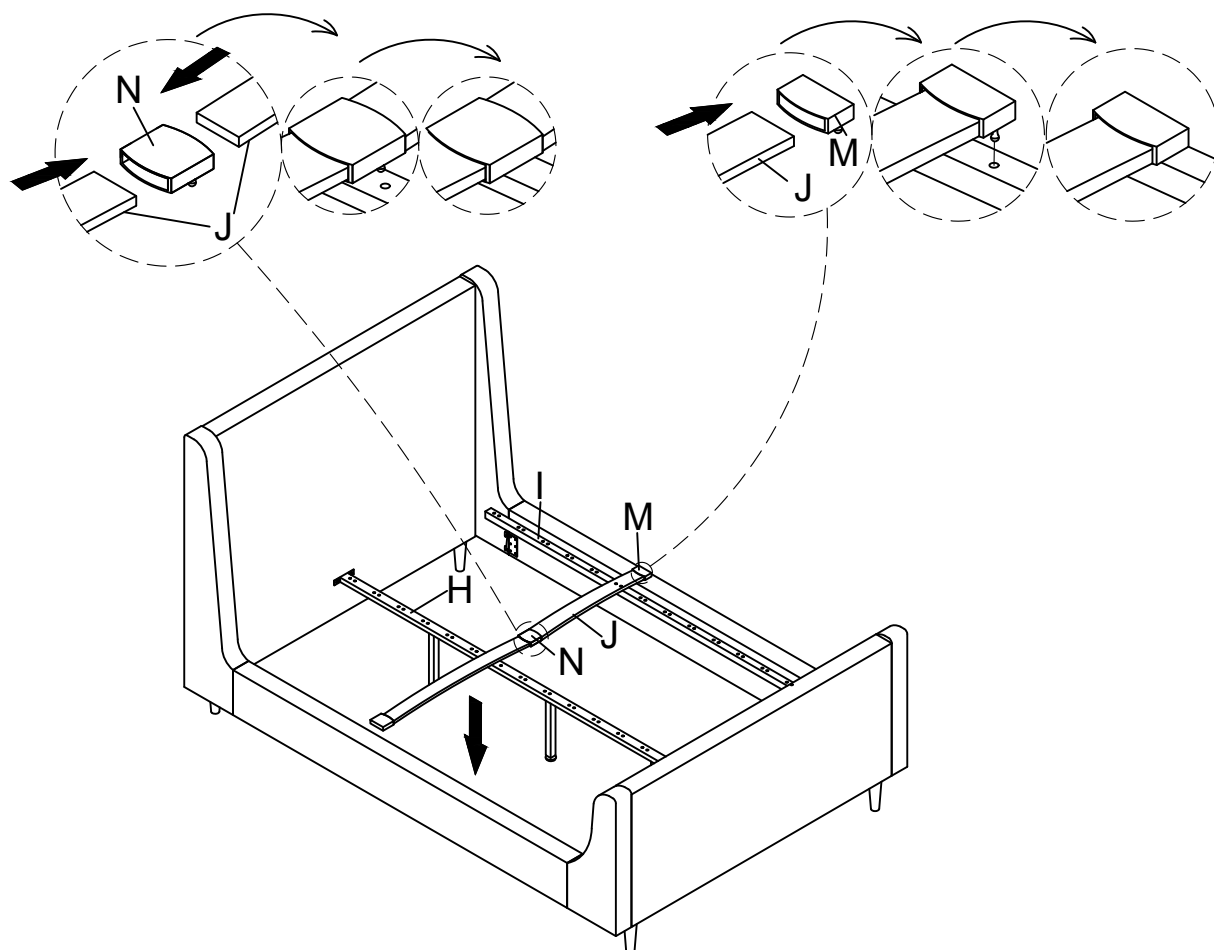

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.