PARTS LIST

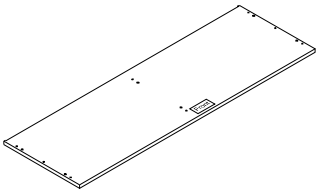

NAME: TOP PANEL
CODE: 1
QTY: 1Pc

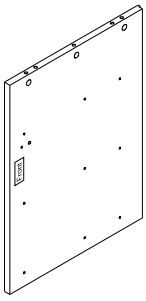

NAME: SIDE PANEL(LEFT)
CODE: 2
QTY: 1Pc

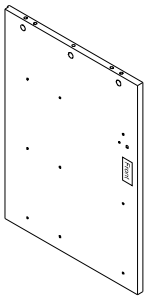

NAME: SIDE PANEL(RIGHT)
CODE: 3
QTY: 1Pc

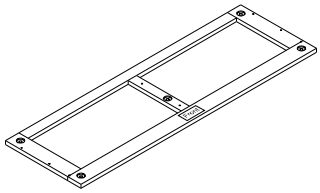

NAME: BOTTOM FRAME
CODE: 4
QTY: 1Pc

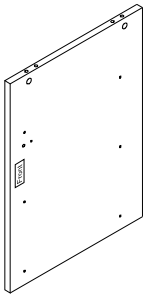

NAME: PARTITION
CODE: 5
QTY: 1Pc

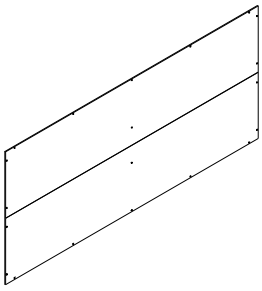

NAME: BACK PLYWOOD
CODE: 6
QTY: 1Pc

NAME: LEG
CODE: 7
QTY: 4Pcs

NAME: SUPPORT STAND
CODE: 8
QTY: 1Pc

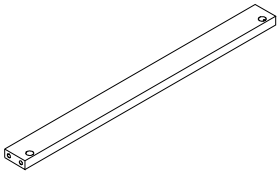

NAME: CENTER BAR
CODE: 9
QTY: 2Pcs

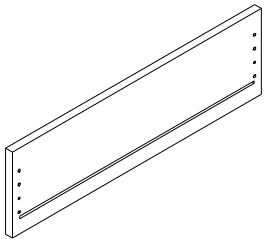

NAME: DRAWER FRONT
CODE: 101
QTY: 6Pcs

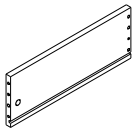

NAME: DRAWER SIDE(LEFT)
CODE: 102
QTY: 6Pcs

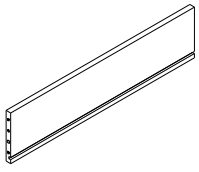

NAME: DRAWER BACK
CODE: 103
QTY: 6Pcs

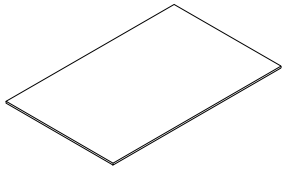

NAME: DRAWER BASE
CODE: 104
QTY: 6Pcs

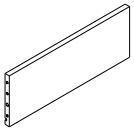

NAME: DRAWER SIDE(RIGHT)
CODE: 105
QTY: 6Pcs

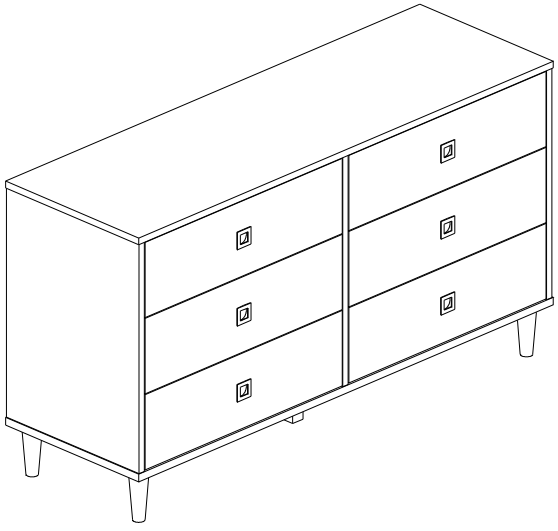

6 DRAWER DRESSER

-THE UNIT SHOULD BE ASSEMBLED BY 2 OR MORE PEOPLE
-EXTRA HARDWARE INCLUDED

HARDWARE LIST

NAME: CHIPBOARD SCREW M3X16mm
CODE: A
QTY: 72Pcs

NAME: CHIPBOARD SCREW M4X38mm
CODE: B
QTY: 8Pcs



NAME: WOOD DOWEL M8X35mm
CODE: C
QTY: 16Pcs



NAME: CAM LOCK & CAM BOLT
CODE: D
QTY: 36Sets

NAME: WOOD DOWEL M6X30mm
CODE: E
QTY: 72Pcs



NAME: RUNNER 400mm
CODE: F
QTY: 6Sets

NAME: CAM LOCK COVER
CODE: G
QTY: 36Pcs

NAME: PANHEAD CHIPBOARD SCREW M4X16mm(BLACK)
CODE: H
QTY: 20Pcs

STEP 1

A) Insert Cam Bolt(D) to Top Panel(1)

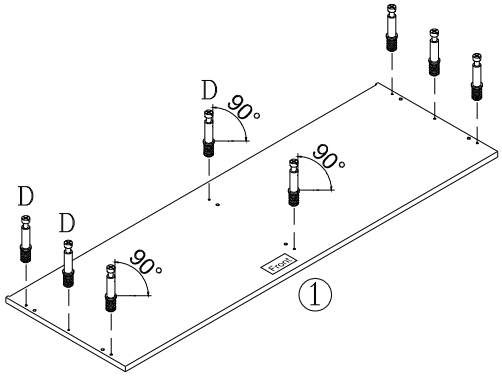

STEP 2

A) Insert Wood Dowel(C) to Left&Right Side Panel(2&3)

B) Attach Cam Lock(D) to Left&Right Side Panel(2&3)

C) Attach Cam Bolt(D) to Left&Right Side Panel(2&3)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

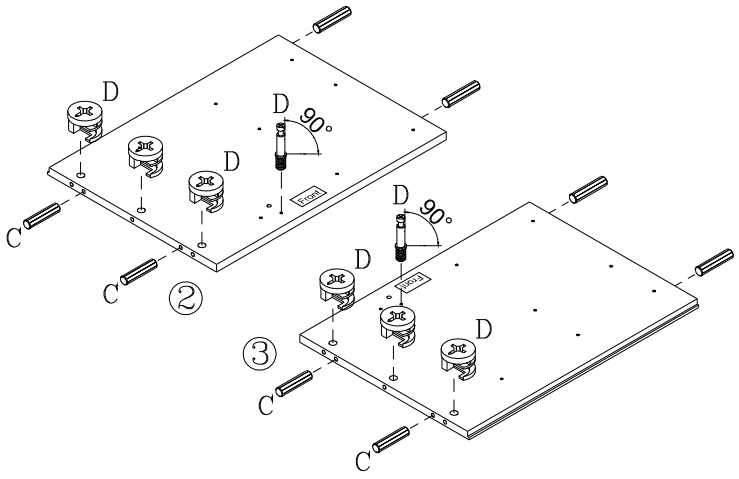

STEP 3

A) Attach Runner(F) to Left&Right Side Panel(2&3) using Chipboard Screw(A) to secure

NOTE : Do not over tighten the screw

NOTE : Runner roller should be towards the front of the panel

NOTE : Chipboard Screw(A) should be assembled from the front of the runner. Start from A^1, A^2 then A^3

NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole

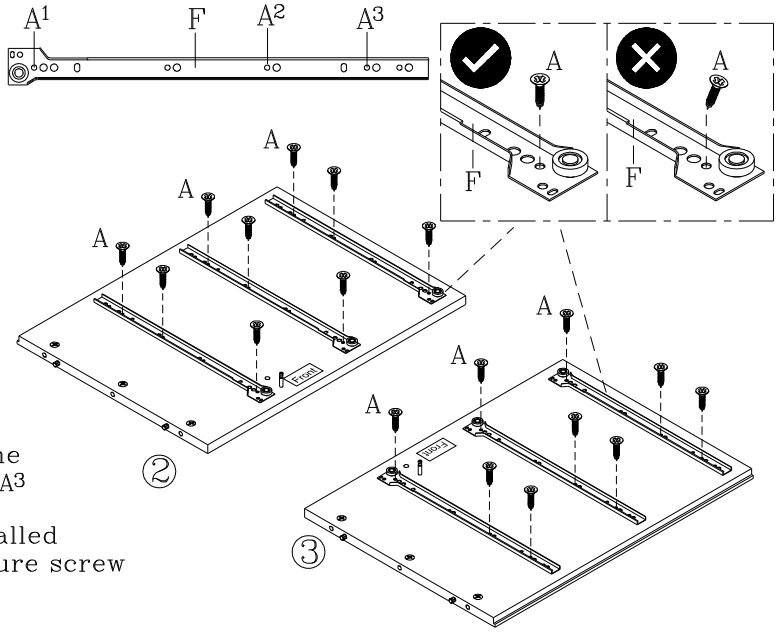

STEP 4

A) Insert Wood Dowel(C) to Partition(5)

B) Attach Cam Lock(D) to Partition(5)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

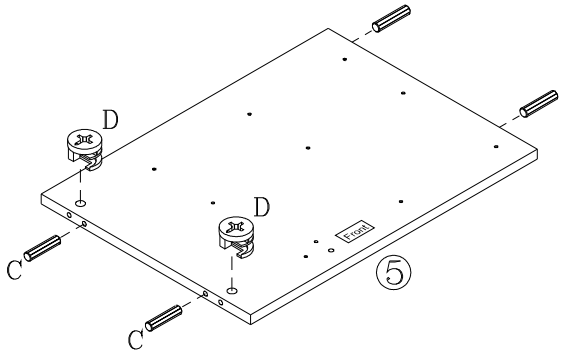

STEP 5

A) Attach Runner(F) to both side of Partition(5) using Chipboard Screw(A) to secure

NOTE : Do not over tighten the screw

NOTE : Runner roller should be towards the front of the panel

NOTE : Chipboard Screw(A) should be assembled from the front of the runner. Start from A^1, A^2 then A^3

NOTE : Make sure the screws are installed vertically without slant to ensure screw sits properly in the hole

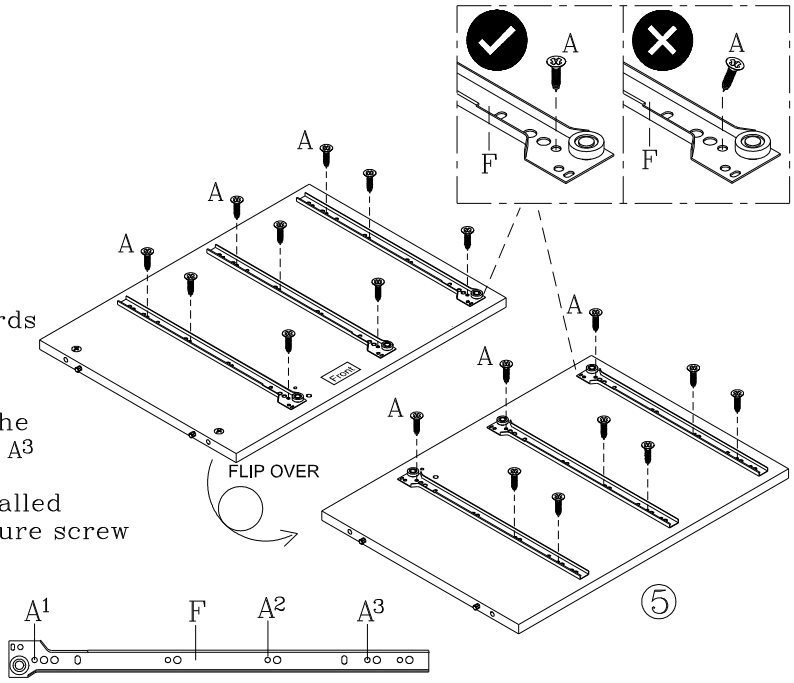

STEP 6

A) Attach Cam Bolt(D) to both side of Partition(5)

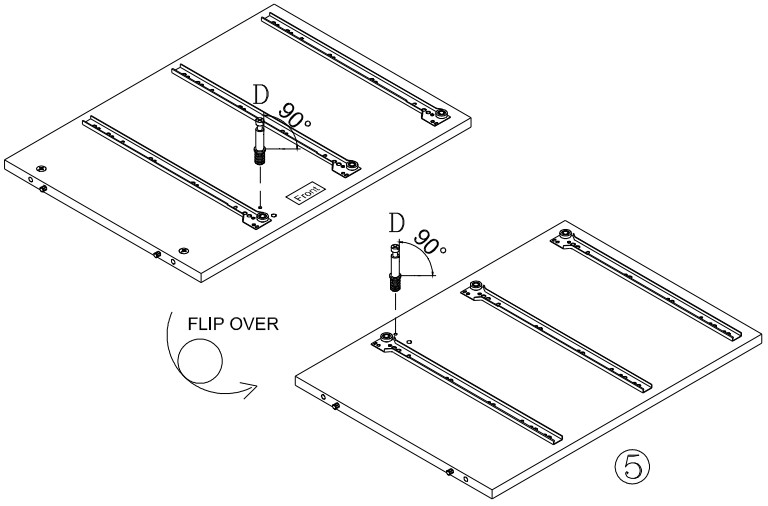

STEP 7

A) Attach Wood Dowel(C) to both of Center Bar(9)

B) Attach Cam Lock(D) to both of Center Bar(9)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

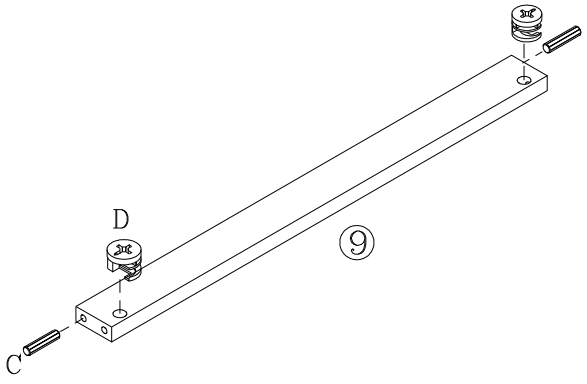

STEP 8

A) Attach Center Bar(9) to Side Panel Left&Right(2&3) and secure with Cam Lock(D)

B) Cover Cam Lock with Cam Lock Cover(G)

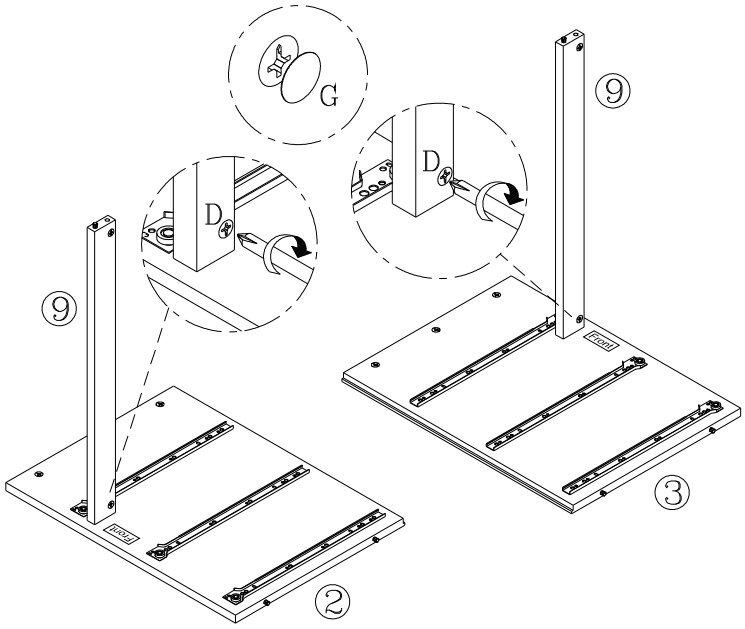

STEP 9

A) Attach Center Bar(9) to Partition(5) secure with Cam Lock(D)

B) Cover Cam Lock with Cam Lock Cover(G)

NOTE : Do not over tighten the Cam Lock

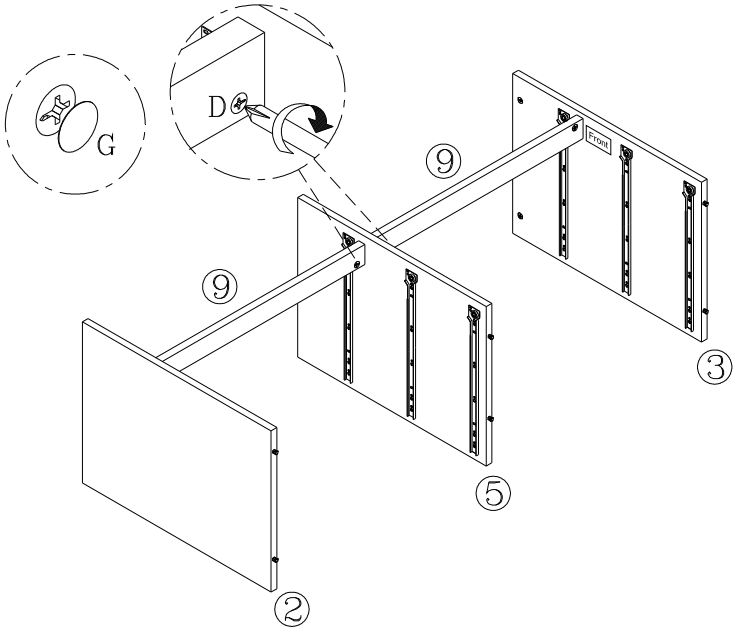

STEP 10

A) Attach Bottom Frame(4) to underneath of Side Panel Left&Right(2&3) and secure with Chipboard Screw(B)

NOTE: Do not over tighten the Screw

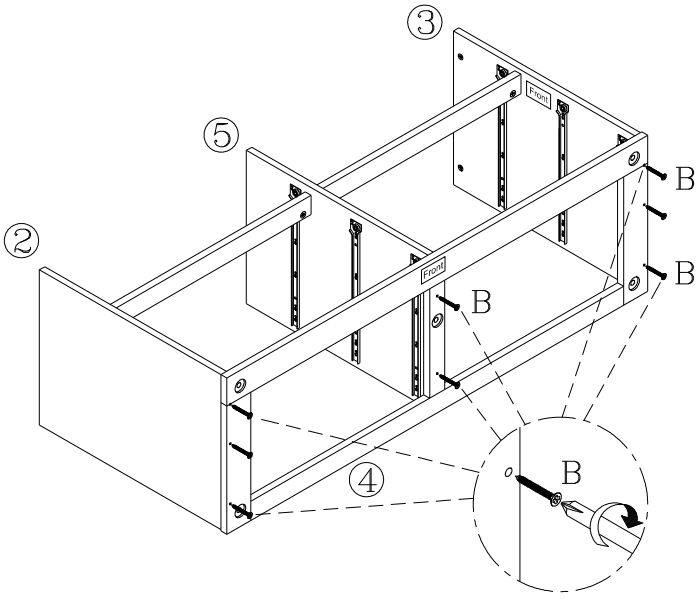

STEP 11

A) Attach and secure Leg(7) to Bottom Frame(4) clockwisely

B) Attach and secure Support Stand(8) to Bottom Frame(4) clockwisely

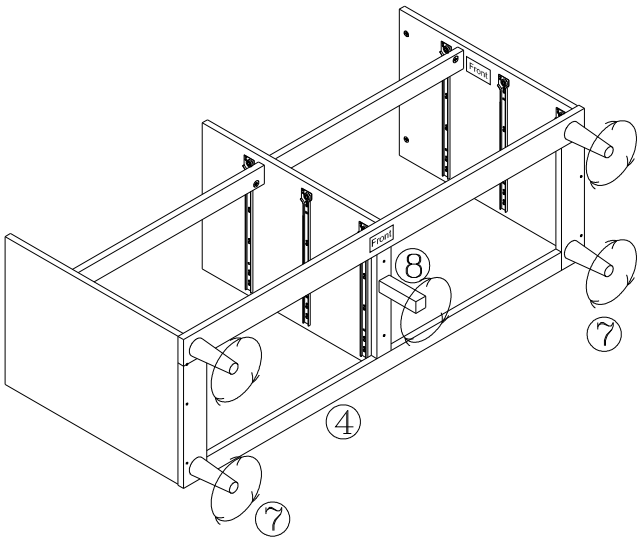

STEP 12

A) Attach Top Panel(1) to Side Panel Left&Right(2&3) secure with Cam Lock(D).

B) Cover Cam Lock with Cam Lock Cover(G)

NOTE : Do not over tighten the Cam Lock

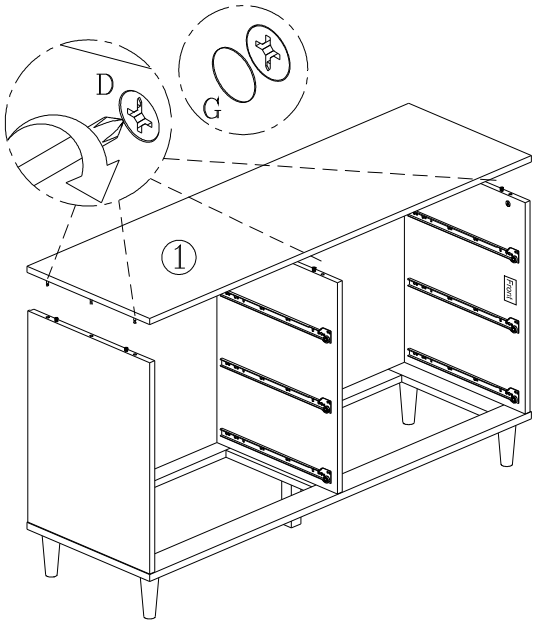

STEP 13

A) Attach Back Plywood(6) to assembled unit using Panhead Chipboard Screw(Black)(H) to secure

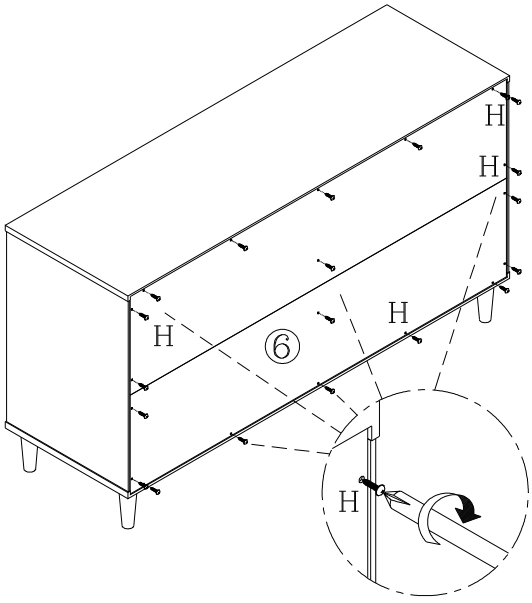

STEP 14

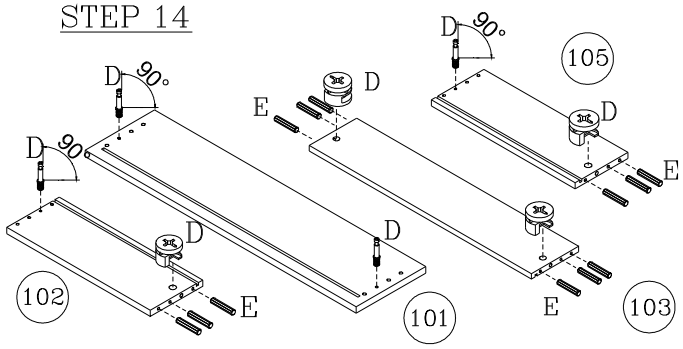

A) Insert Wood Dowel(E) to Left&Right Drawer Side(102&105) & Drawer Back(103)

B) Attach Cam Lock(D) to Left&Right Drawer Side(102&105) & Drawer Back(103)

C) Attach Cam Bolt(D) to Drawer Front(101) & Left&Right Drawer Side(102&105)

STEP 15

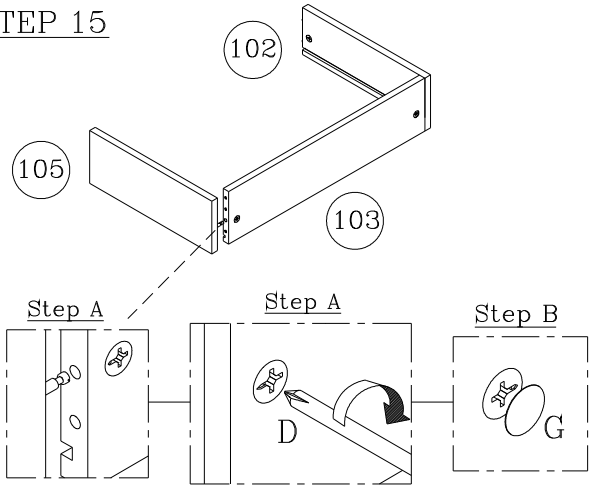

A) Attach Left&Right Drawer Side(102&105) to Drawer Back(103) secure with Cam Lock(D)

B) Using Cam Lock Cover(G) to cover Cam Lock(D)

NOTE : Make sure arrows on each Cam Lock points towards nearest edge with holes

STEP 16

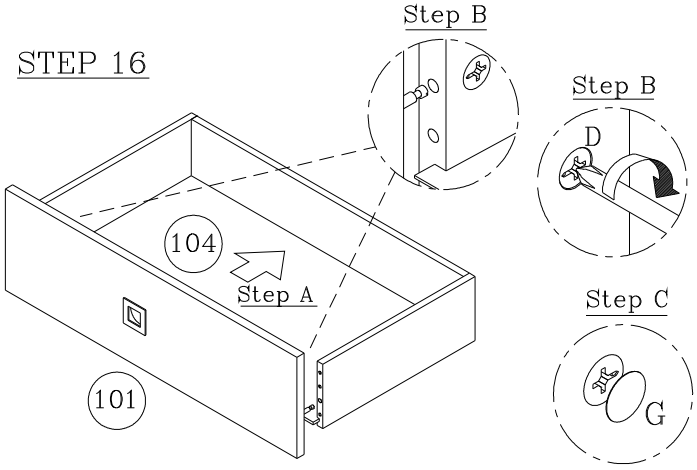

A) Slot in Drawer Base(104) in corresponding grooves

B) Attach Drawer Front(101) to Drawer Box secure with Cam Lock(D)

C) Using Cam Lock Cover(G) to Cover Cam Lock(D)

STEP 17

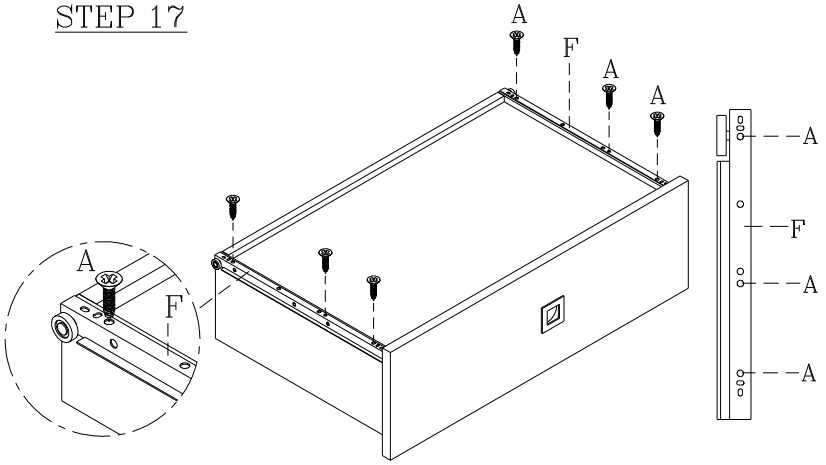

A) Turn over the Drawer box, Attach Runner(F) to Drawer Side(102&105) using Chipboard Screw(A) to secure

NOTE: Runner roller should be flush and toward the back of the Drawer Box