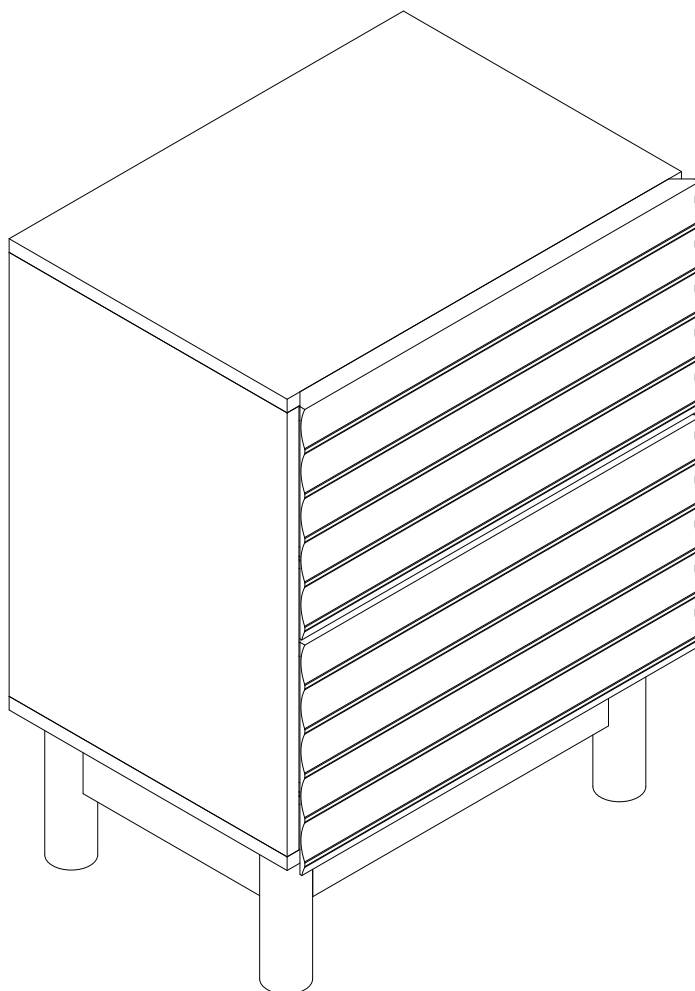


KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

Thank you for purchasing the KARLA RIBBED 2 DRAWER BEDSIDE.
Please read the instructions carefully to ensure safe operation of the product.




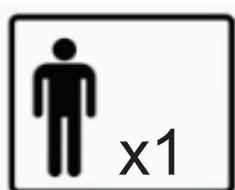

Size:40x30x55cm

PLEASE READ this sheet prior to assembly to familiarise yourself with the various stages of construction.

Carefully open the pack supplied and check the contents against the parts and fittings check list. Do not destroy any of the packaging until you are certain that you have all the necessary parts for the assembly.

CAUTION: There are small components used in the construction of this unit. These loose items should be kept away from young children whilst assembling your unit to avoid the danger of choking hazards.

Tools Required



1 Hour
Set Up

KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

IMPORTANT - READ CAREFULLY - RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

INFORMATION

Due to the size of this product we recommend that it is assembled in the room intended for use.
When you are ready to start, make sure that you have the right tools, plenty of space and a clean, dry area for assembly.
Unwrap all packaging materials and place the components on top of the carton box or on a clean floor to prevent it from scratching.
Check the pack and make sure you have all the parts listed.
Ensure that this product is fully assembled as illustrated before use.
Check all screws or bolts are tightened and inspect regularly
This product should only be used on firm, level ground.
Keep small parts out of reach of children.
Make sure the legs remain in contact with the ground.
Tools not included.

WARNINGS

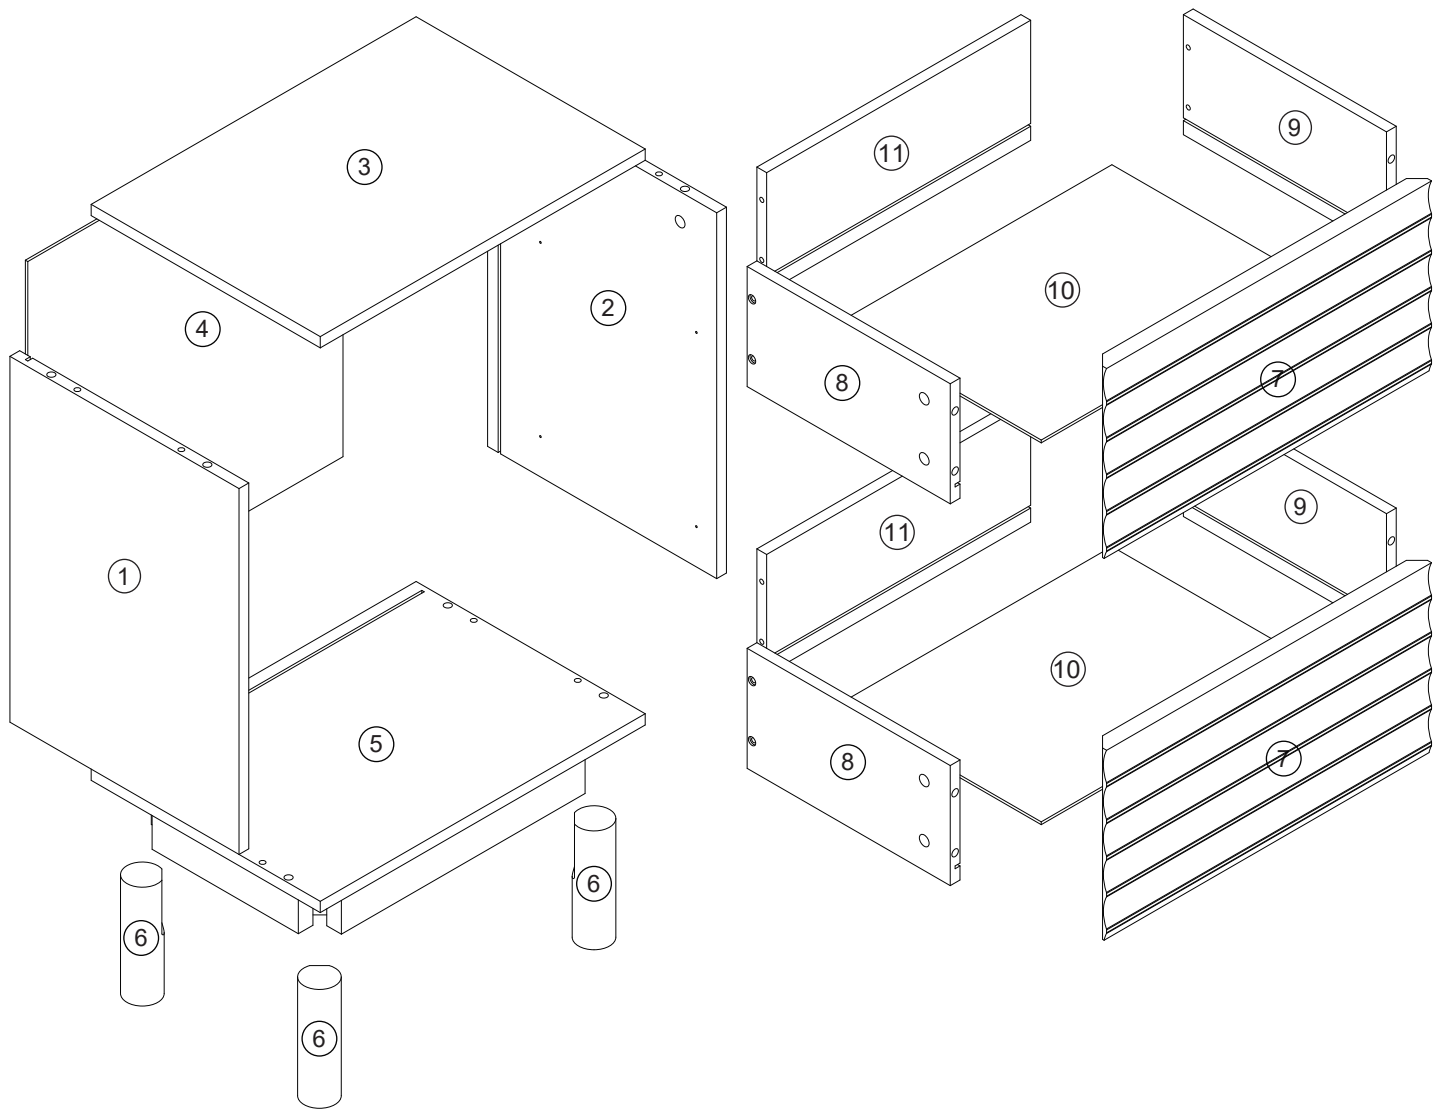
DO NOT use power tools to construct this product.
DO NOT use this product if parts are missing, damaged or worn.
DO NOT stand on the product.
DO NOT place very hot or very cold items on the surface unless adequately thick tablemats are used to prevent such items damaging your dresser top

CARE INFORMATION












Never use scourers, abrasives or chemical cleaners.
To clean wipe with a sponge and warm soapy water. Do not use solvent based cleaners or detergents as they can bleach or damage the product.

KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

PART LIST














HARDWARE LIST

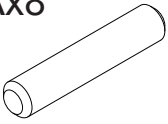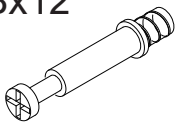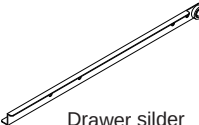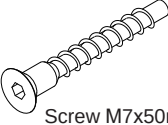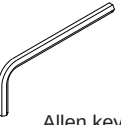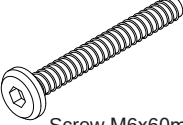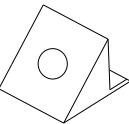
Ax8  Wood dowel	Bx12  Cam bolt M6x35mm	Cx12  Cam	Dx2  Drawer slider	Ex2  Drawer slider	Fx2  Drawer slider
Gx2  Drawer slider	Hx28  Screw M3x12mm	Ix4  Screw M7x50mm	Jx1  Allen key	Kx8  Screw M6x60mm	Lx8  Screw M4x30mm
Mx8  Spring washers	Nx8  Flat gasket	Ox4  Feet mats	Px4  Back panel support		

KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

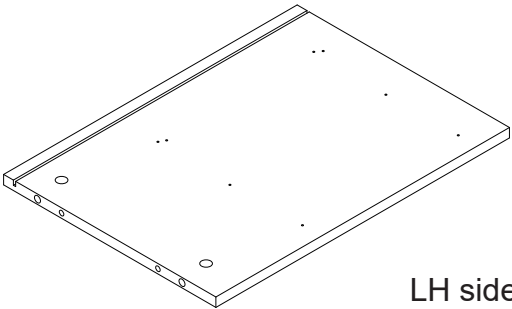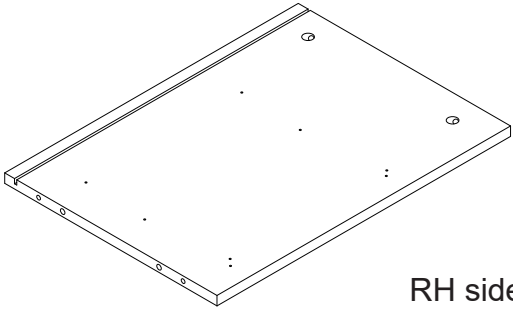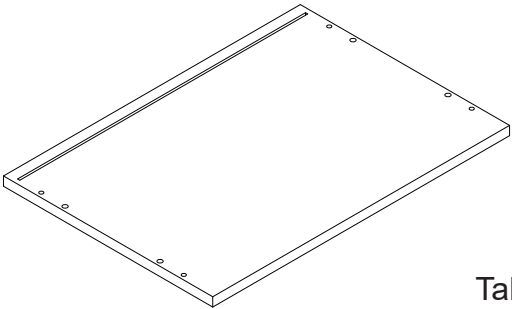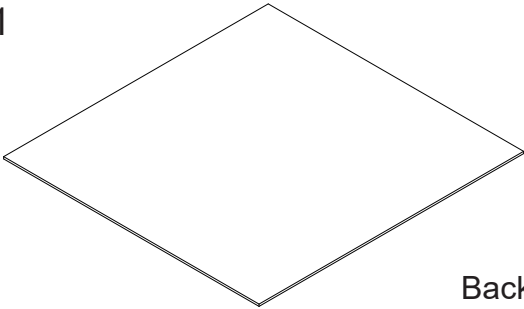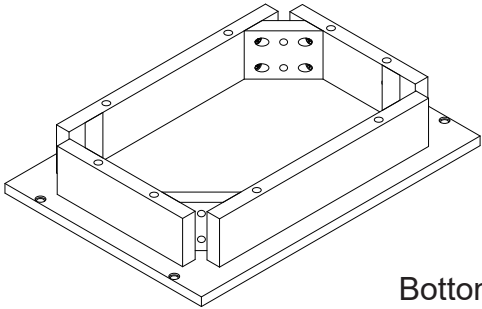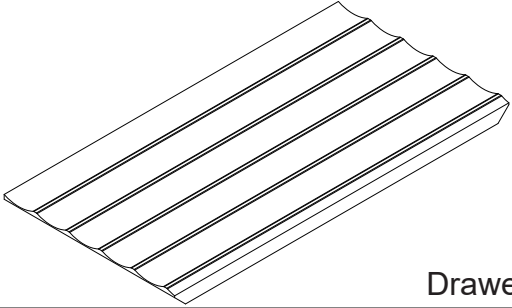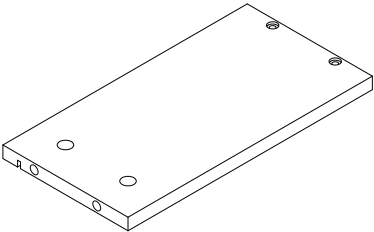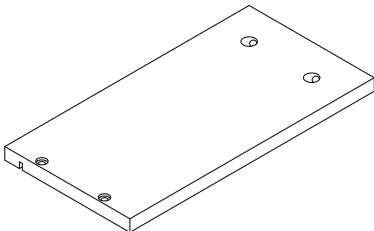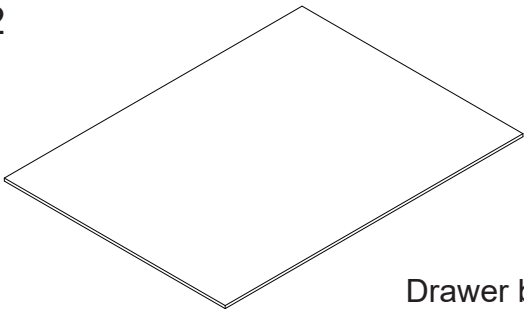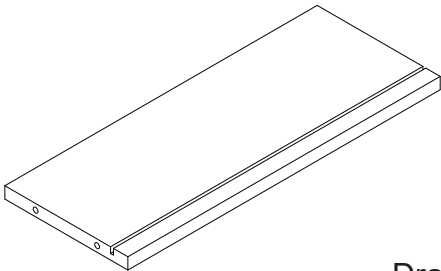
PART LIST

①x1  LH side panel	②x1  RH side panel
③x1  Table top	④x1  Back panel
⑤x1  Bottom panel	⑥x4  Leg
⑦x2  Drawer front	⑧x2  LH Drawer side
⑨x2  RH Drawer side	⑩x2  Drawer bottom
⑪x2  Drawer back	

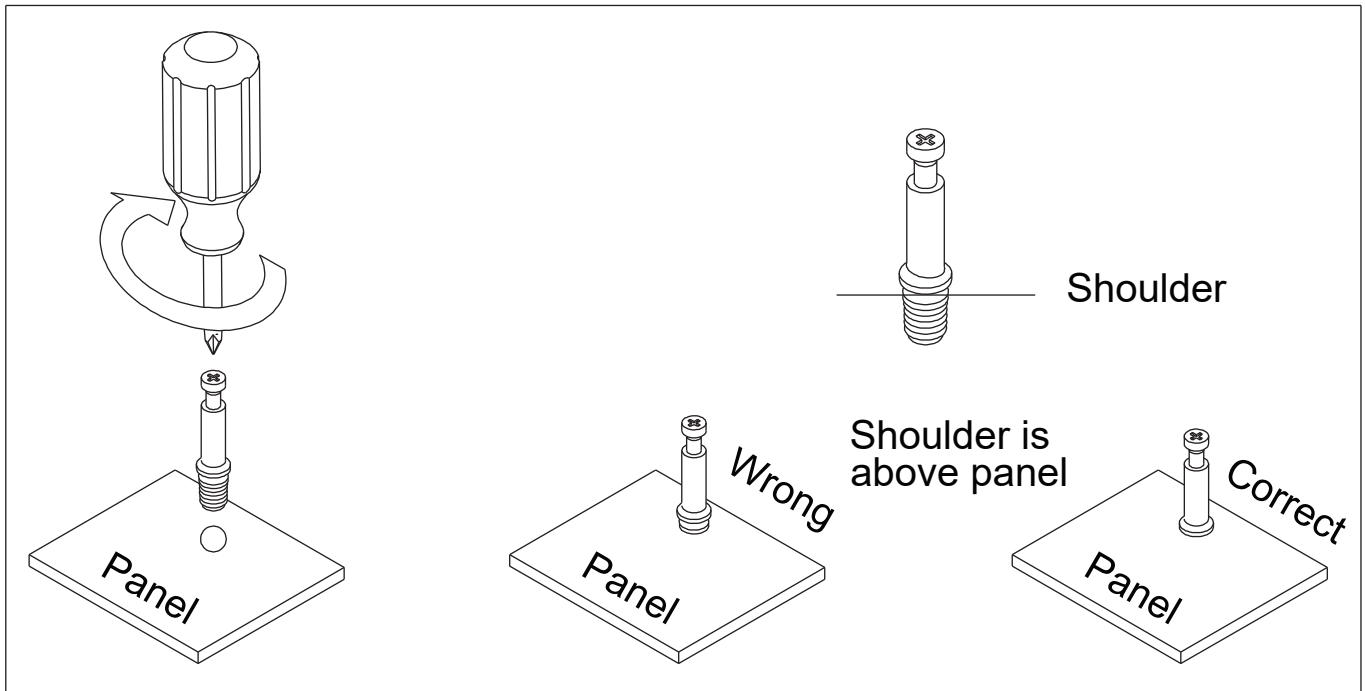
Instructions For Fastening CAM-BOLT AND CAM-LOCK



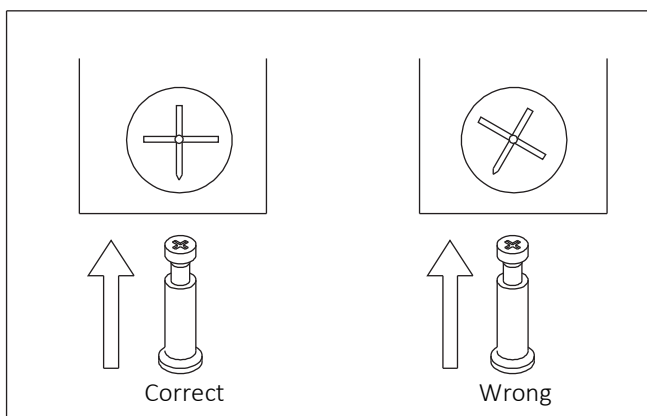Attach the Cam-bolt to the specific pre-drilled holes on the panel. Use a Phillips Screwdriver to tighten Cam-bolt vertically until shoulder is flush (on the same level) with panel. Do not over-tighten or under-tighten.



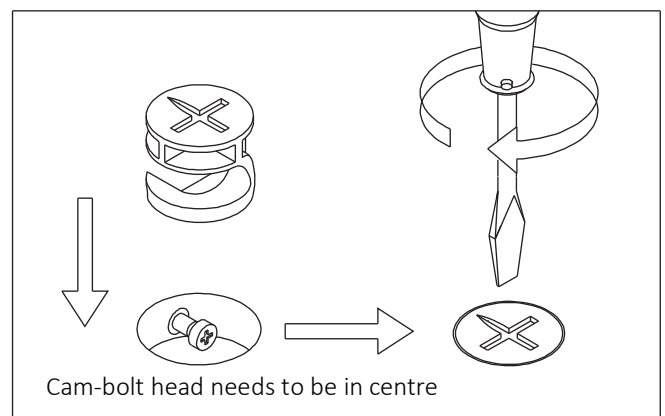Align the arrow of the Cam-lock to the Cam-bolt head and insert the Cam-lock.



Use a Flat Screwdriver or Phillips Screwdriver to turn the Cam-lock clockwise one half a turn so it locks onto the head of the Cam-lock. Turn only until it is snug. Over-tightening could damage Cam-lock or/and Cam-bolt.

KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

STEP 1

Fittings required

Dx2
Ex2
Hx16

STEP 2

Fittings required

Ax4
Bx4

STEP 3

Fittings required

Cx4


STEP 4

Fittings required

Ax4

KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

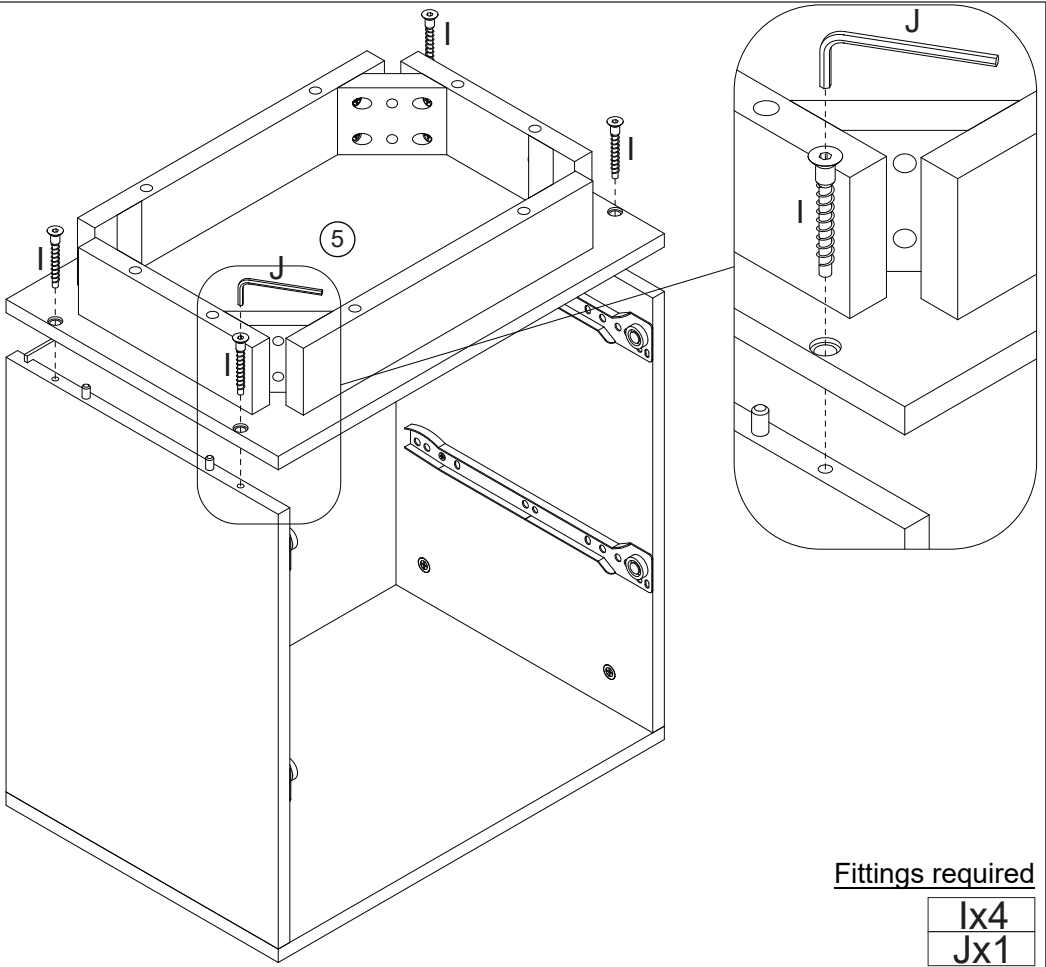
STEP 5



Fittings required

Ix4
Jx1

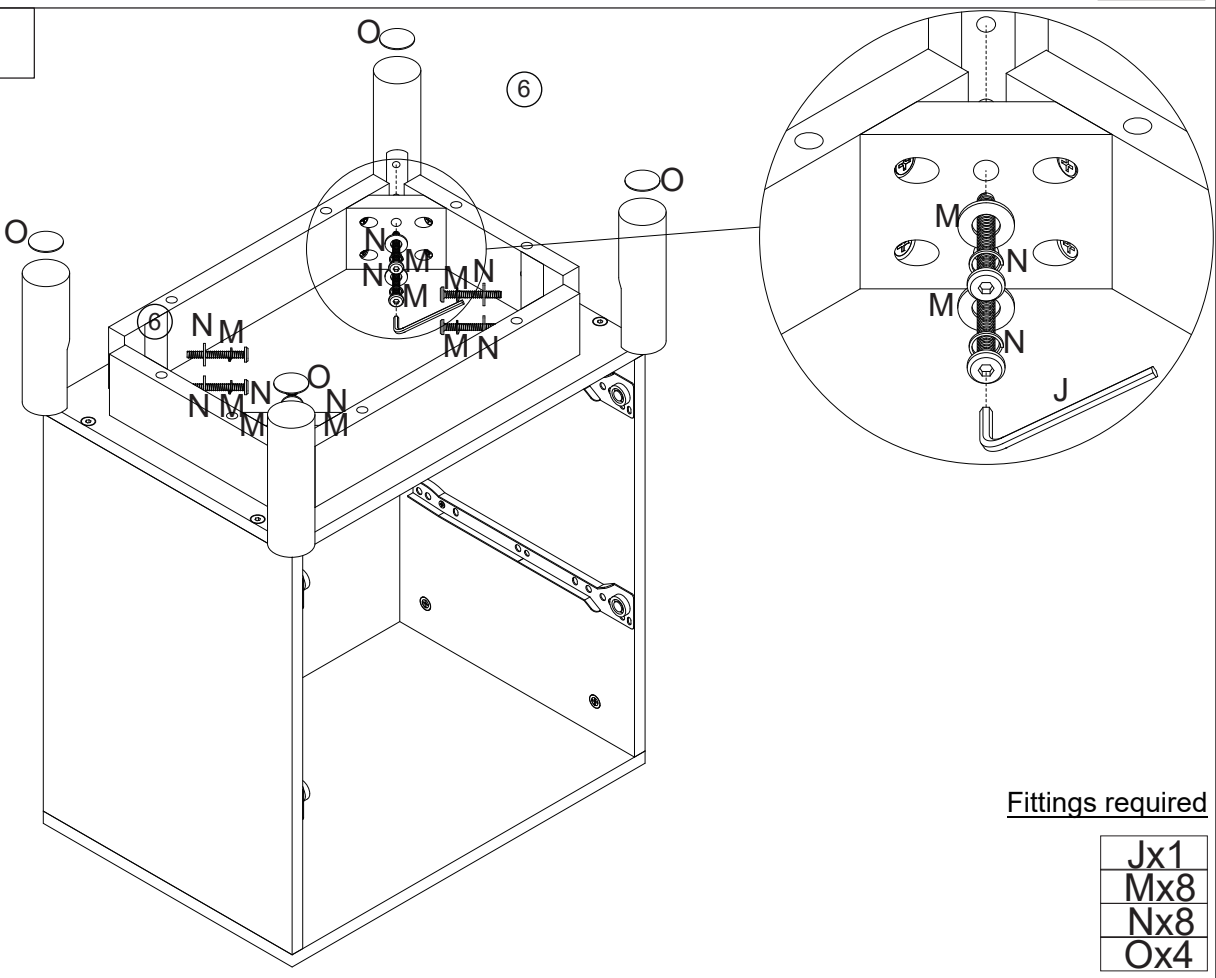STEP 6




Fittings required

Jx1
Mx8
Nx8
Ox4

KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

STEP 7

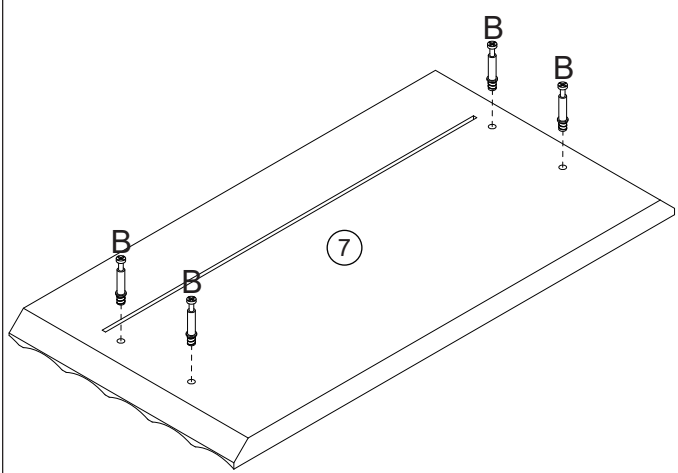x2




Fittings required

Bx8

STEP 8

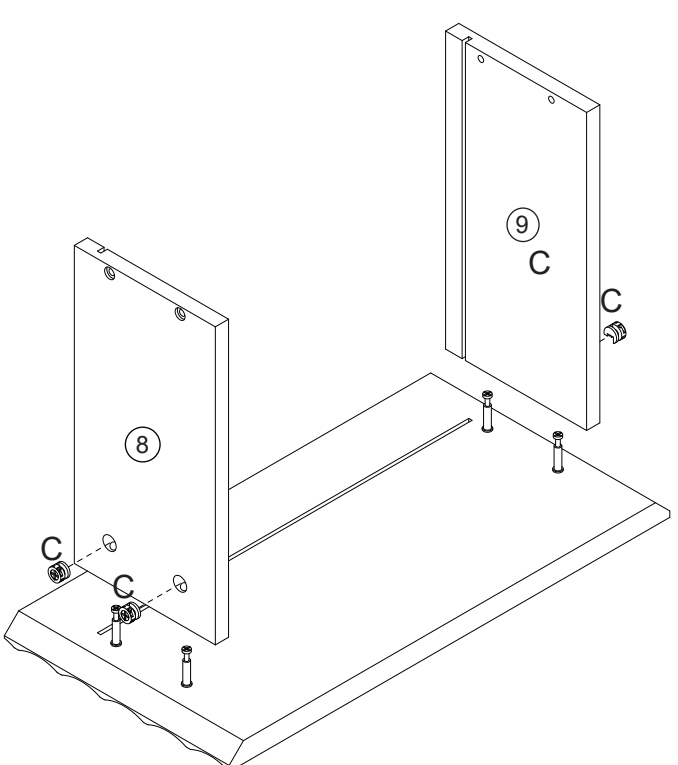x2




Fittings required

Cx8


STEP 9

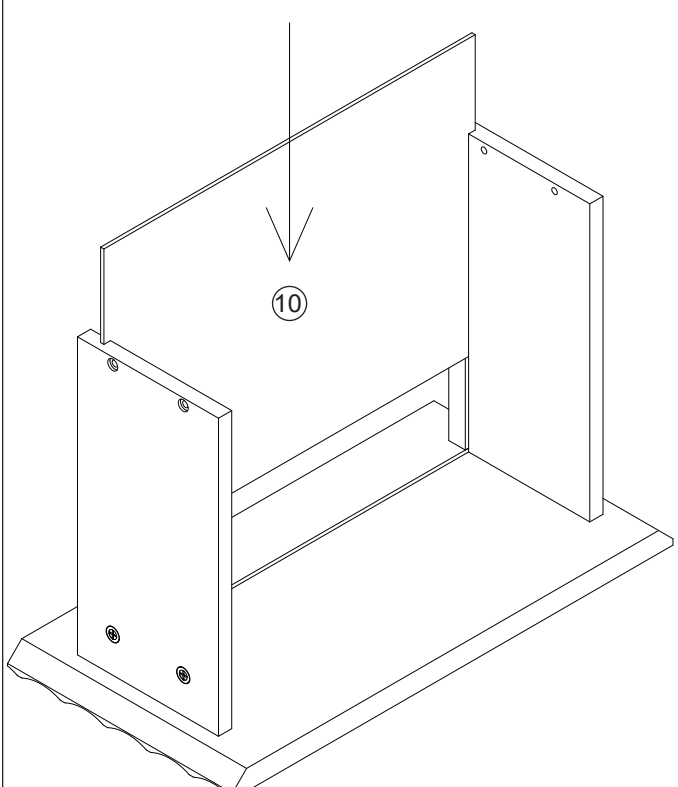x2



STEP 10


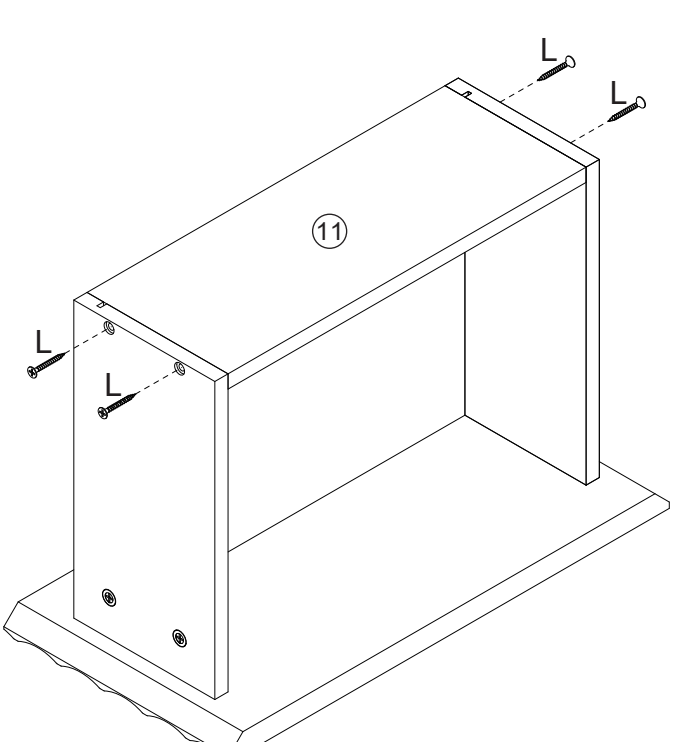
x2



Fittings required

Lx8

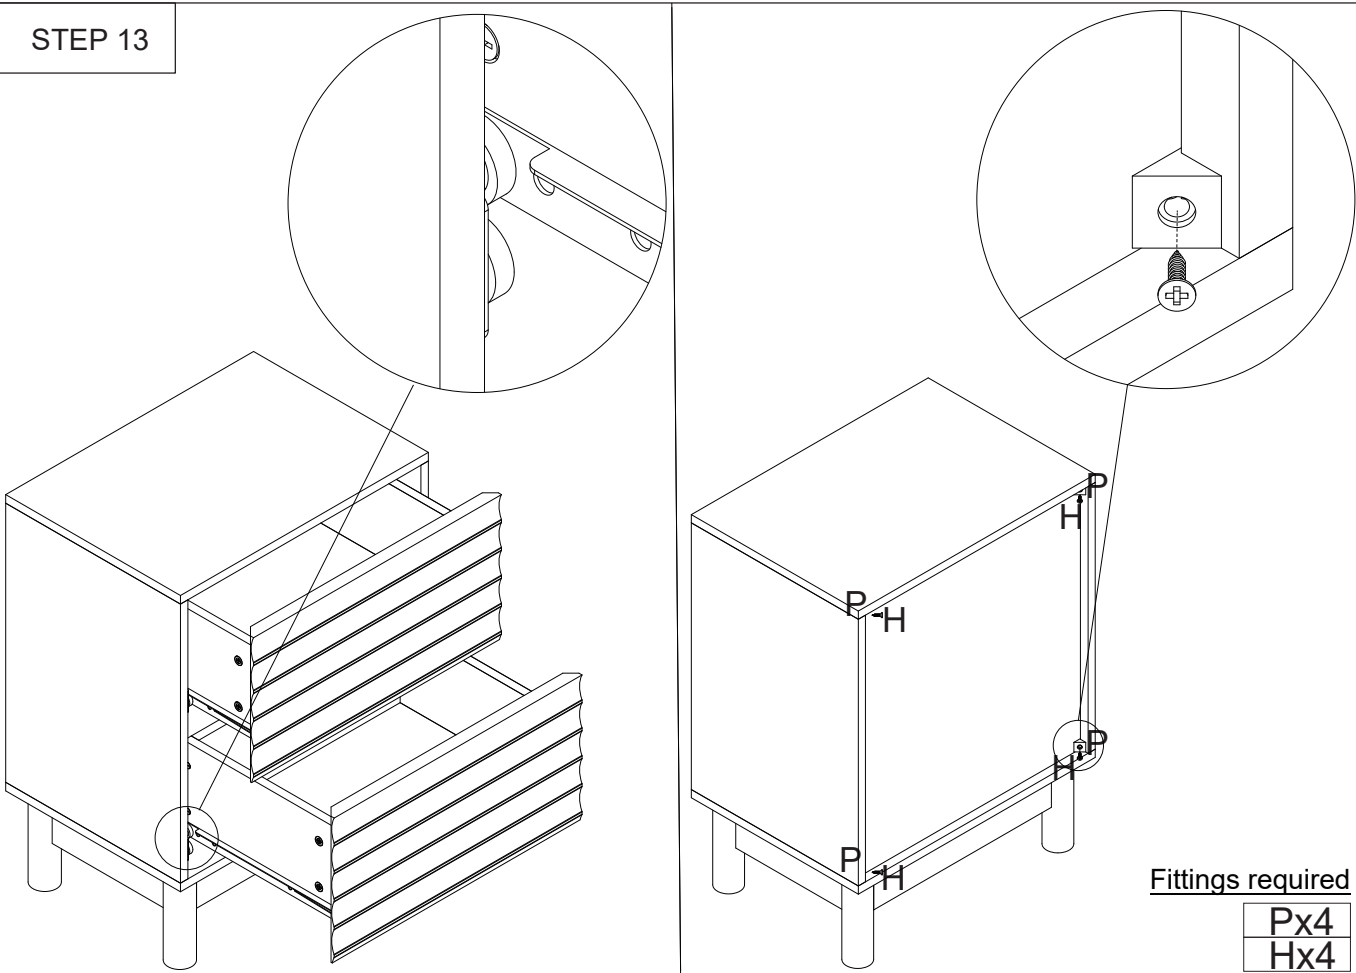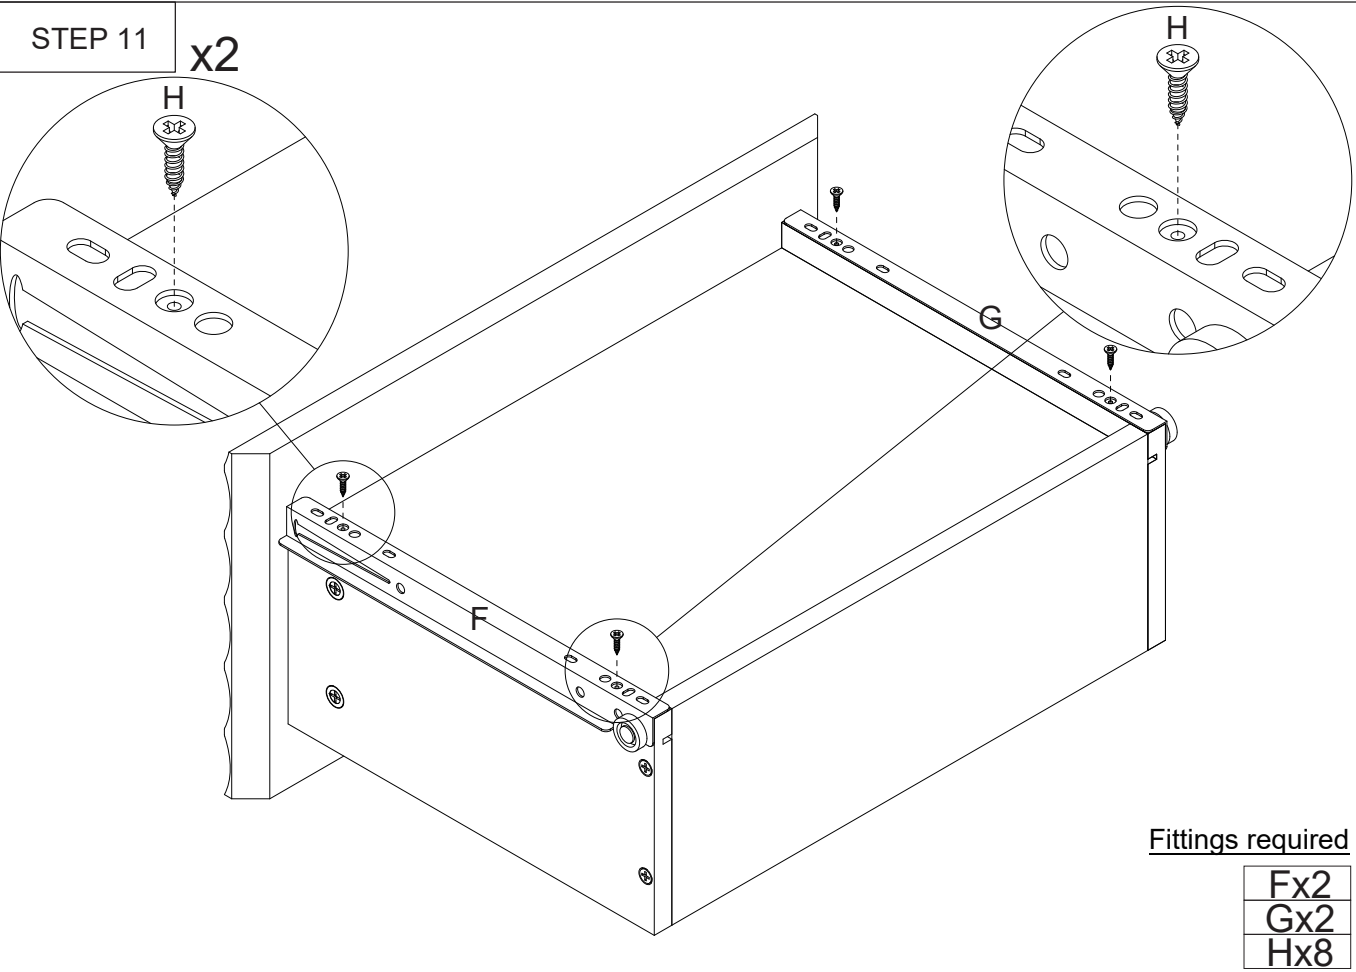
KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS




KARLA RIBBED 2 DRAWER BEDSIDE ASSEMBLY INSTRUCTIONS

Complete Assembly

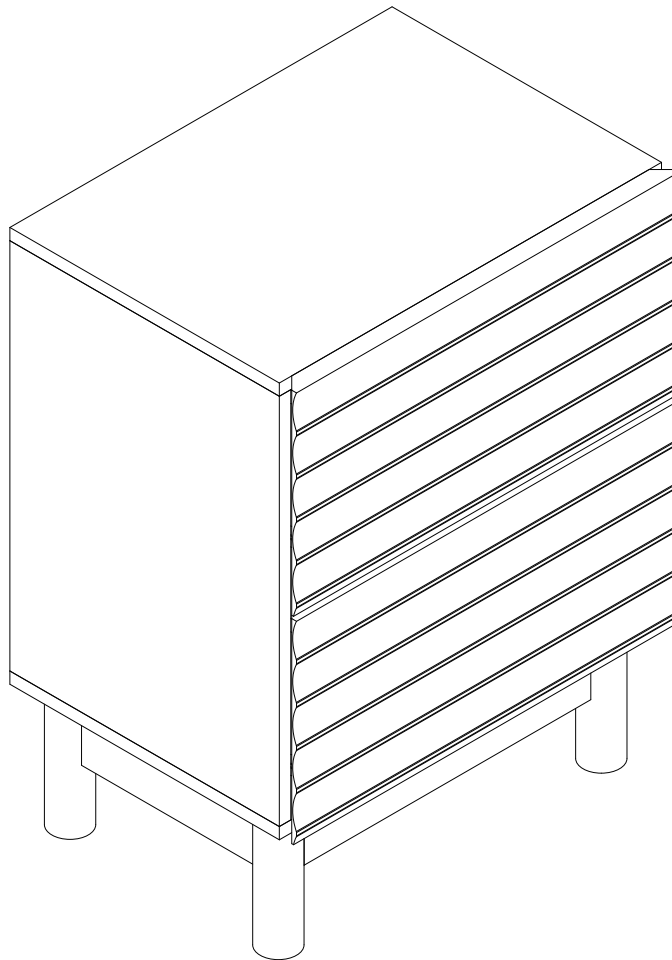Your KARLA RIBBED 2 DRAWER BEDSIDE is now completely assembled.
Periodically check to ensure that the components are in their proper position and free from damage.
Also, make sure the connectors are tight and secure.



Keep instructions for future reference.

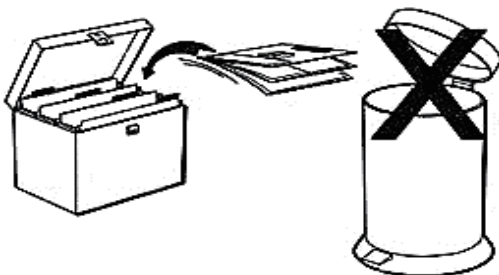

Supplied by : GFW THE FURNITURE
WAREHOUSE
Waterside Distribution Centre
Waterside Business Park
Johnson Road
Lancashire
BB3 3RT
www.gfwlimited.co.uk