

OLIVIA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

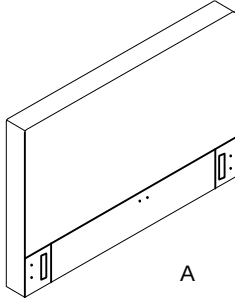



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	PLASTIC WASHER		2 PCS
2	ALLEN BOLT (6 x 45mm)		4 PCS
3	FLAT WASHER (6 x 16mm)		8 PCS
4	LOCK WASHER (6 x 16mm)		8 PCS
5	ALLEN KEY (6mm)		1 PC
6	HEX NUT (6mm)		4 PCS
7	WRENCH		1 PC

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG

1 PC
1 SET
2 PCS
2 PCS

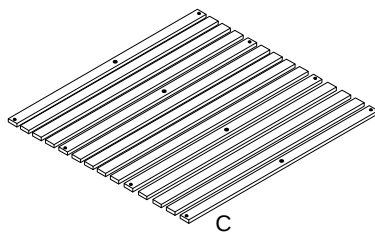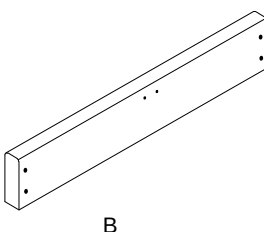




HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
8	PLASTIC WASHER		2 PCS
9	THREADED BOLT (8 x 90mm)		8 PCS
10	ALLEN BOLT (6 x 50mm)		4 PCS
11	ALLEN BOLT (6 x 30mm)		4 PCS
12	FLAT WASHER (8 x 22mm)		8 PCS
13	FLAT WASHER (6 x 16mm)		8 PCS
14	LOCK WASHER (8 x 22mm)		8 PCS
15	LOCK WASHER (6 x 16mm)		8 PCS
16	HEX NUT (8mm)		8 PCS
17	PHILLIPS SCREW (7 x 35mm)		10 PCS
18	ALLEN KEY (6mm)		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS



BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
1 PC
4 PCS

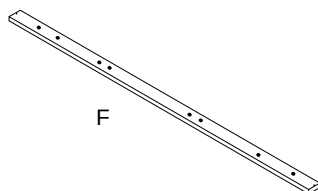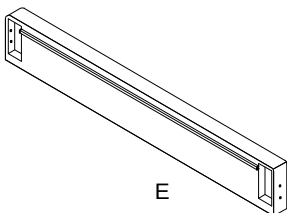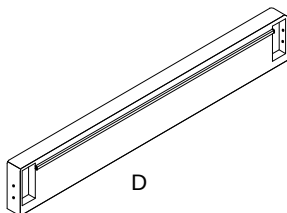

FULLY ASSEMBLED

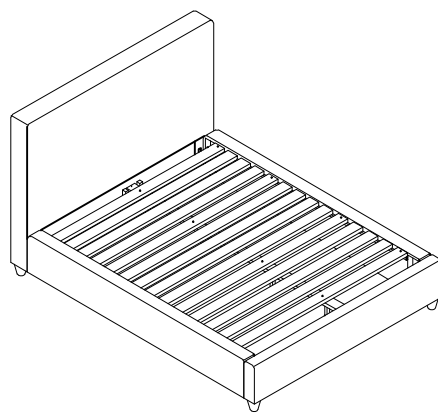


OLIVIA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

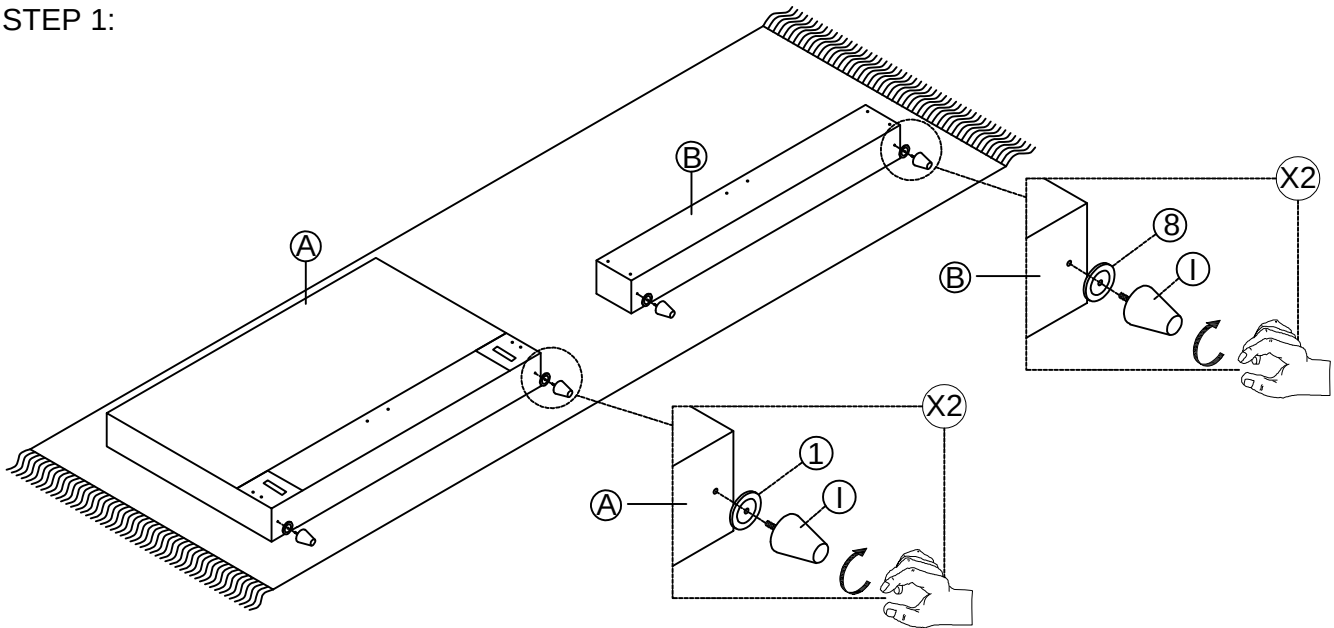

STEP 2:

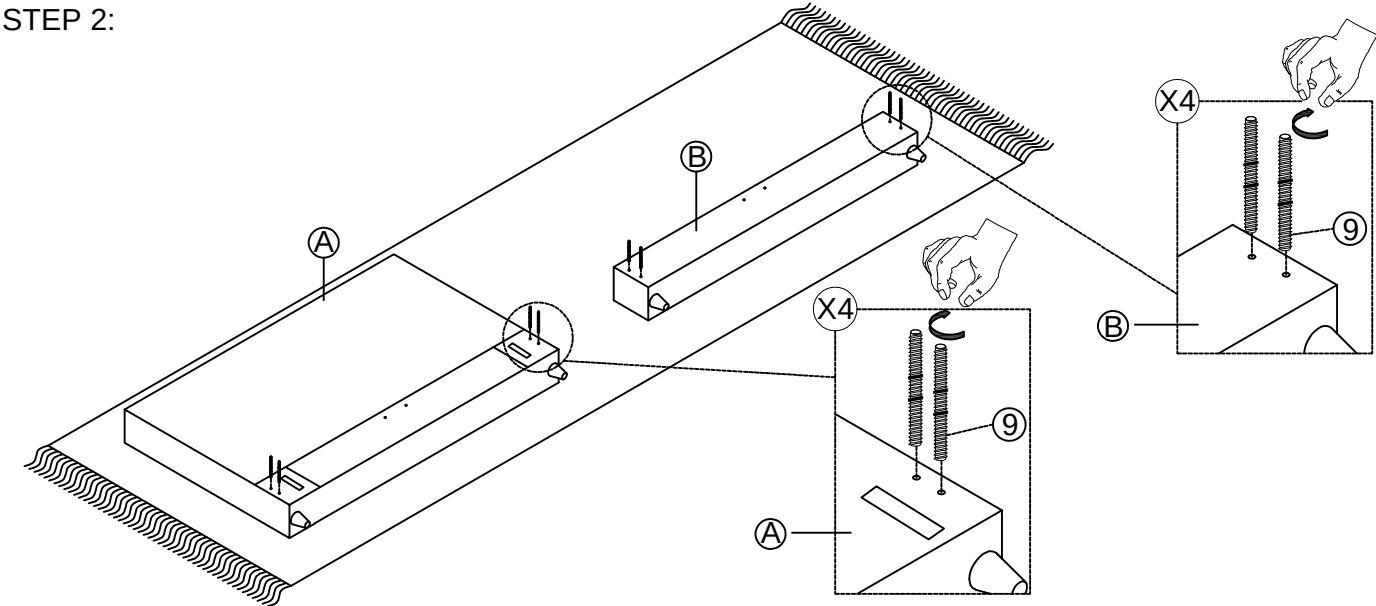

STEP 3:

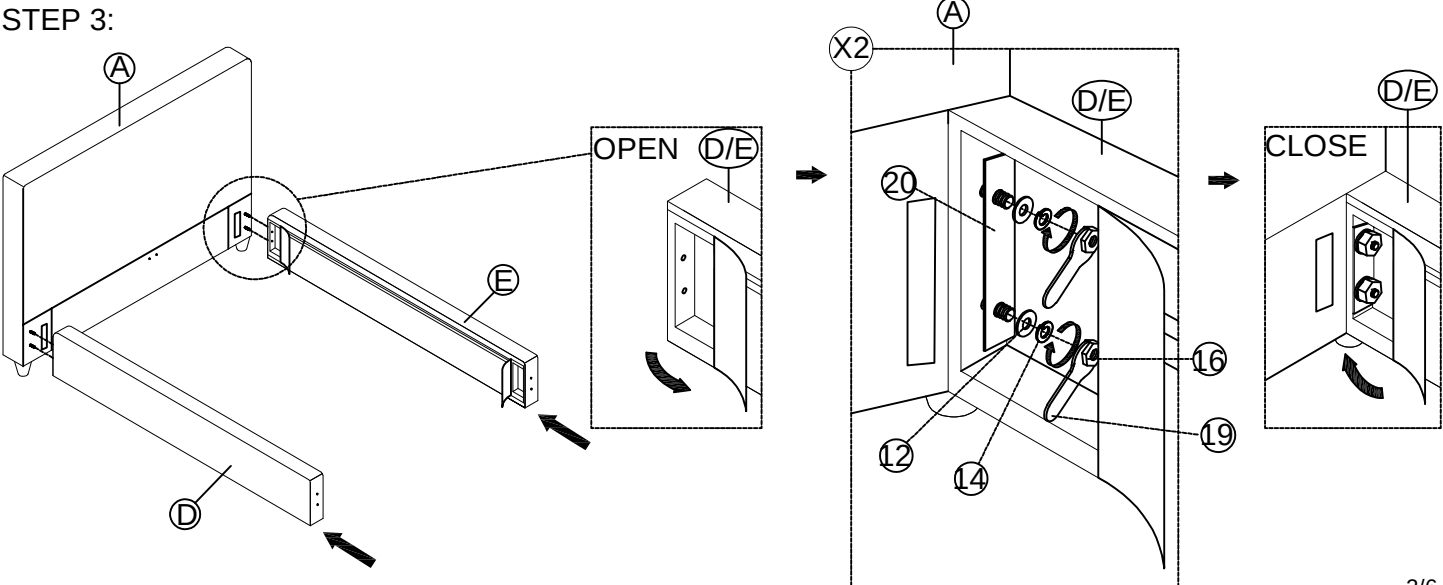


OLIVIA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS




STEP 4:

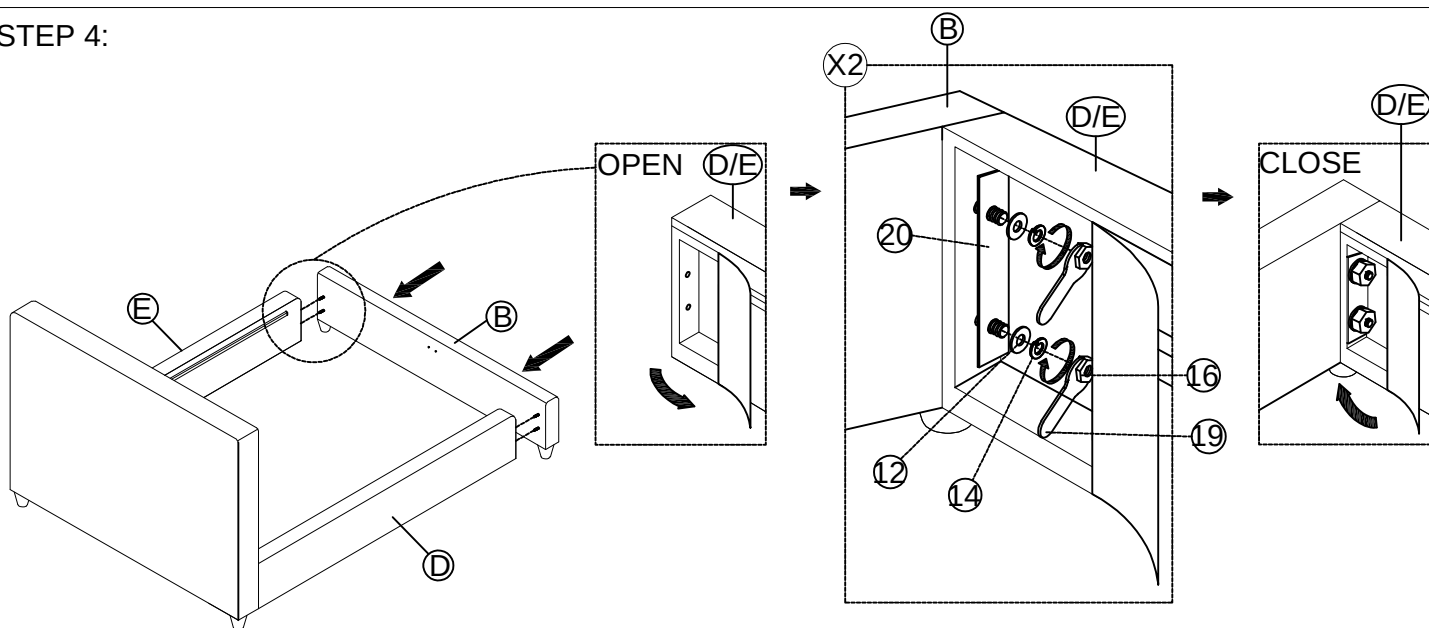


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

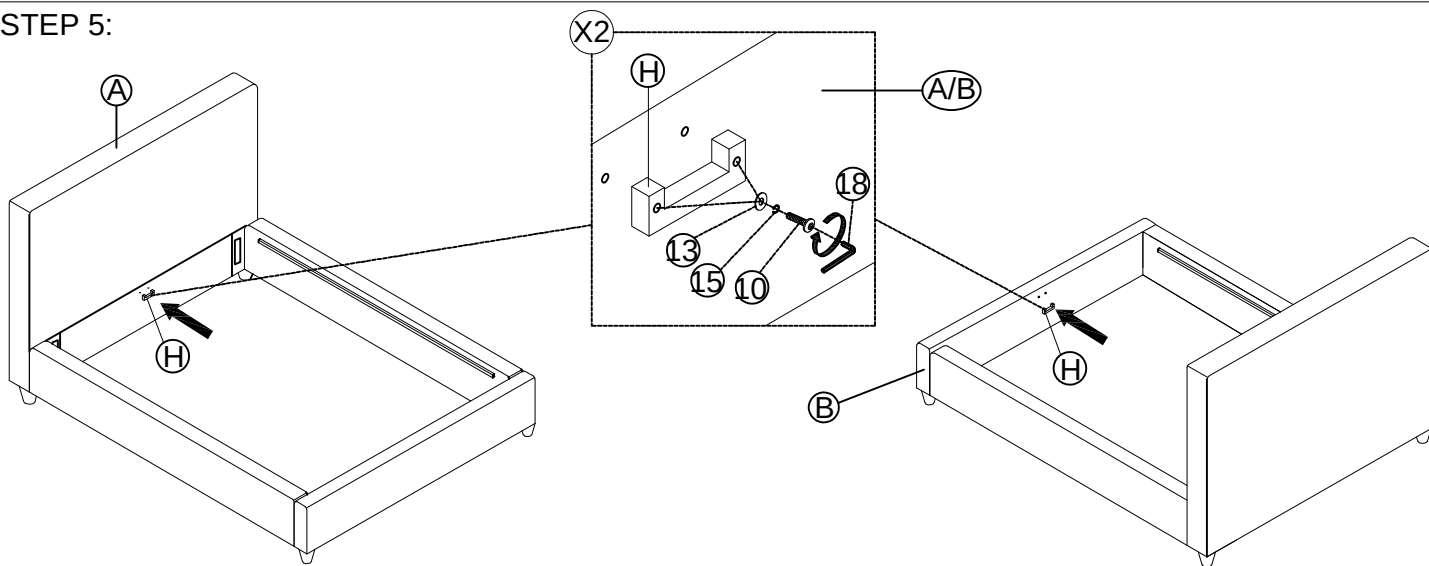

STEP 6:

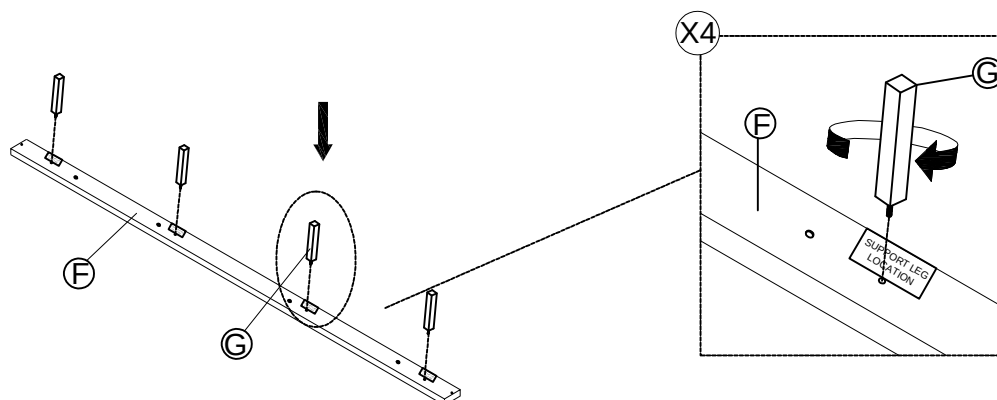


OLIVIA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 7:

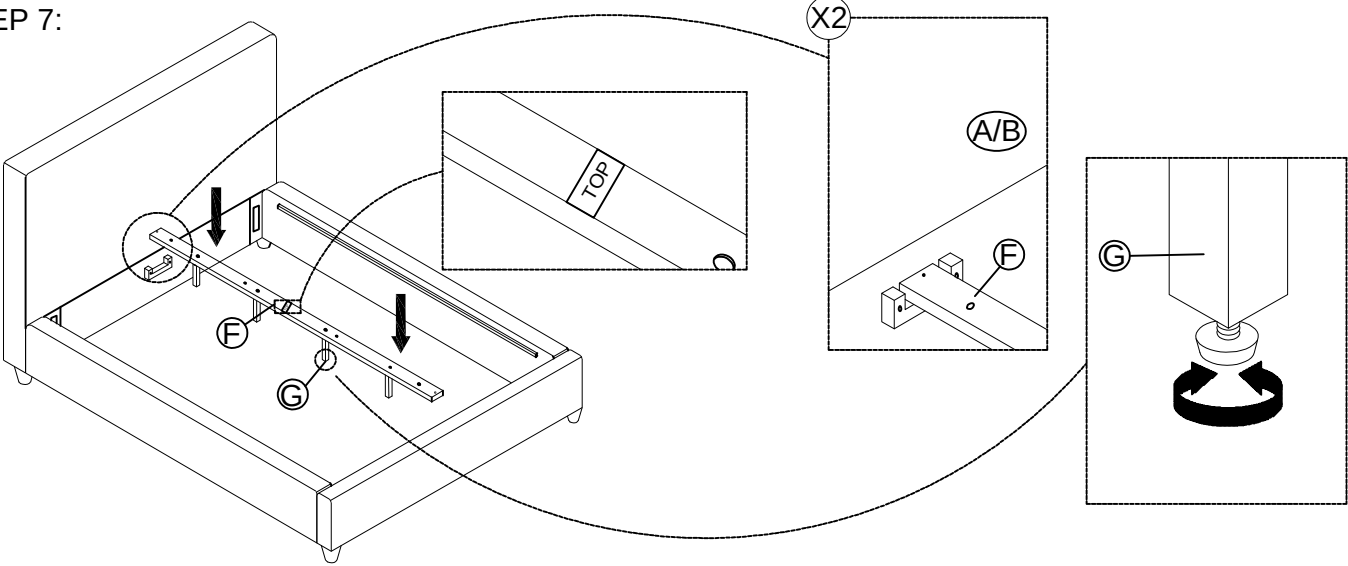

STEP 8:

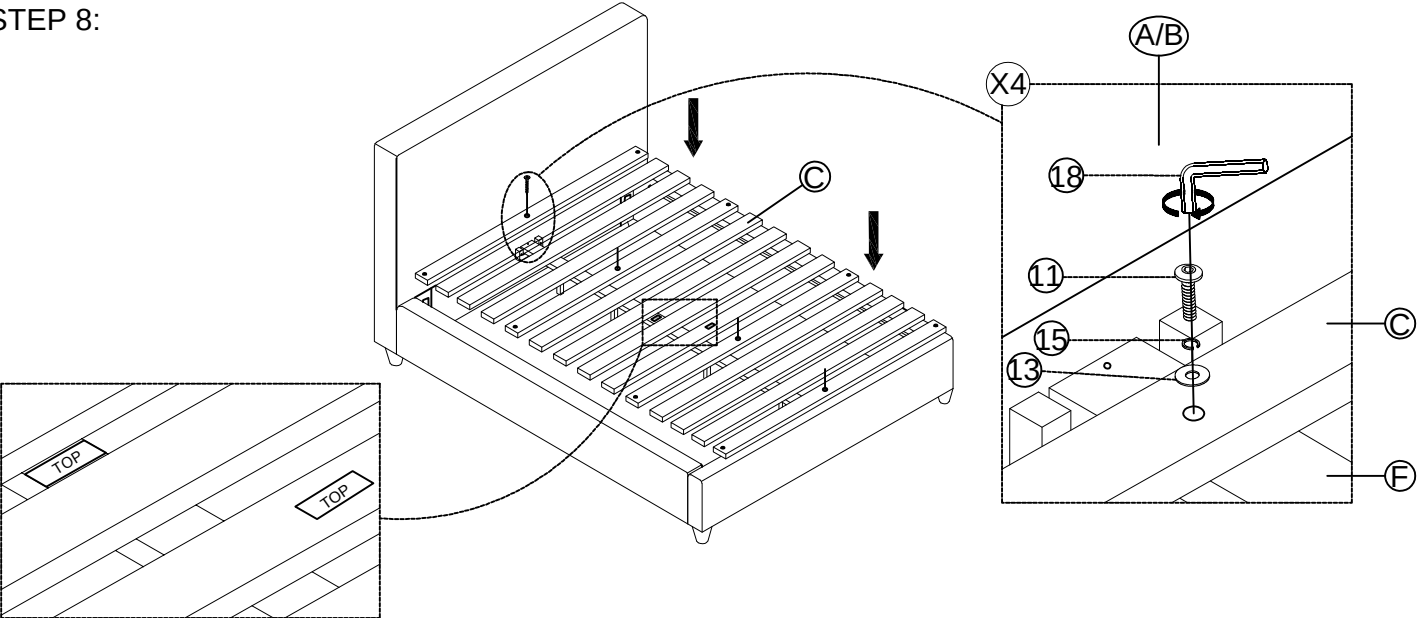


STEP 9:

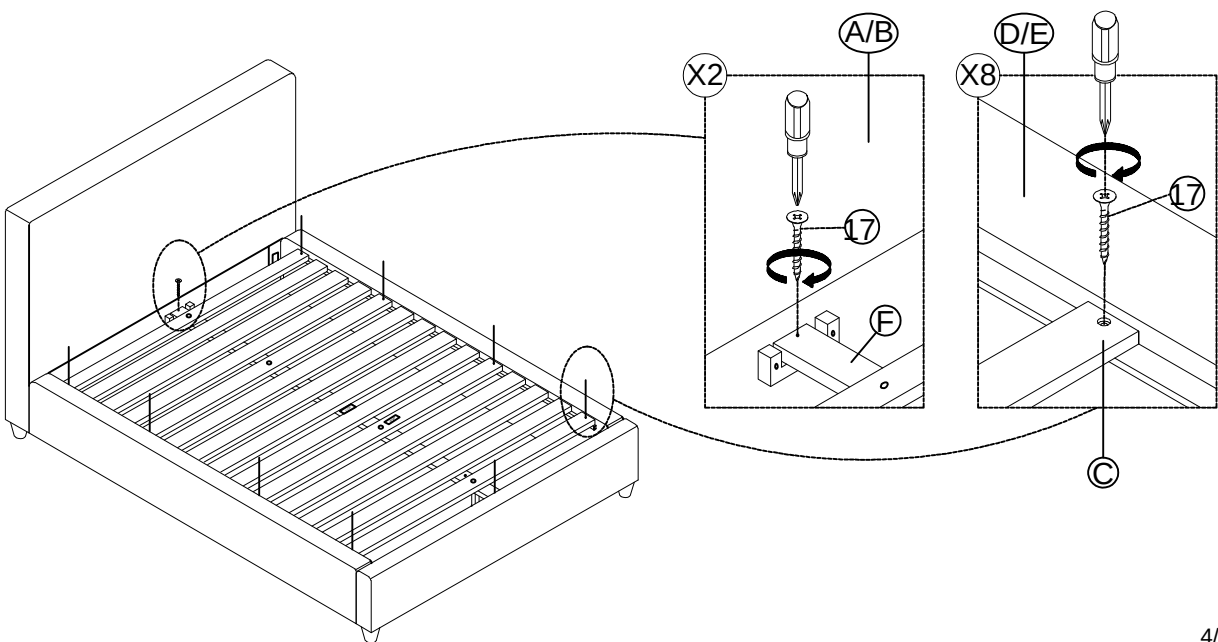

OLIVIA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

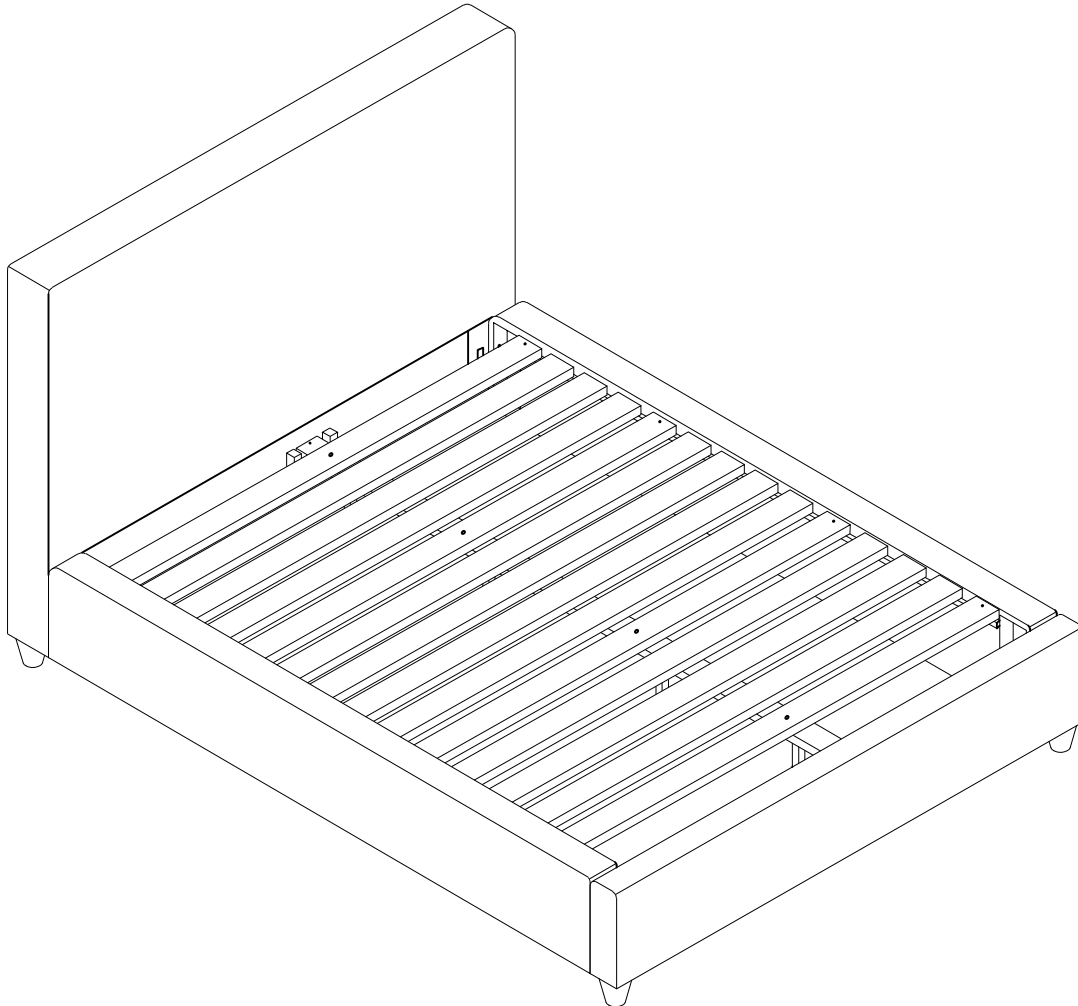


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

OLIVIA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

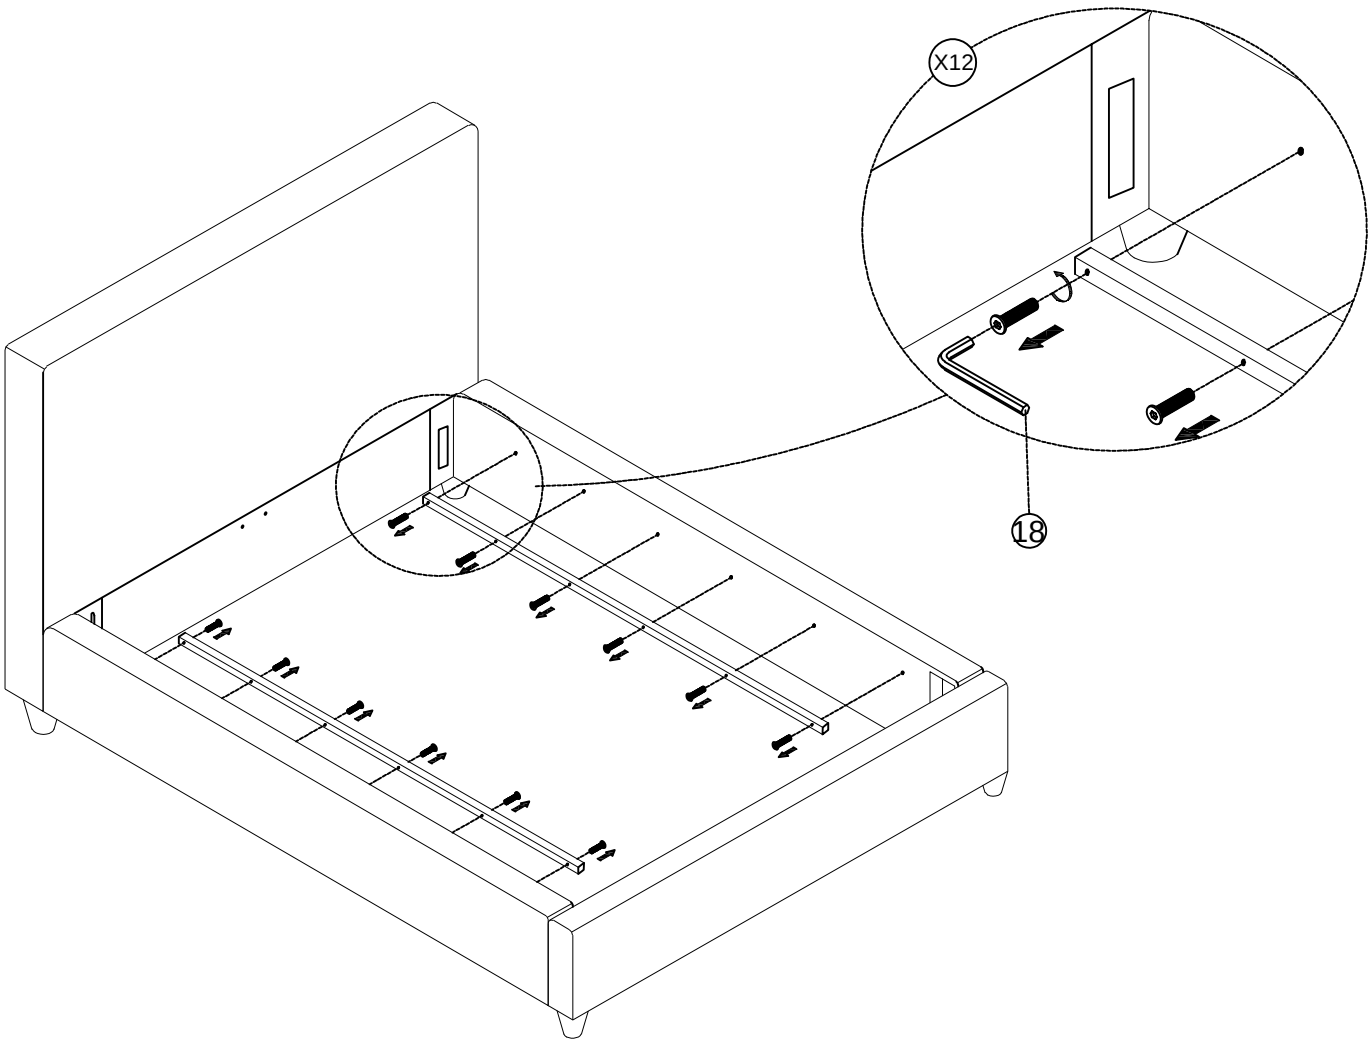

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

OLIVIA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

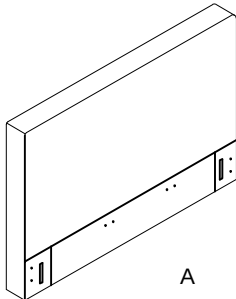



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	PLASTIC WASHER		2 PCS
2	ALLEN BOLT (6 x 45mm)		4 PCS
3	FLAT WASHER (6 x 16mm)		8 PCS
4	LOCK WASHER (6 x 16mm)		8 PCS
5	ALLEN KEY (6mm)		1 PC
6	HEX NUT (6mm)		4 PCS
7	WRENCH		1 PC

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG

1 PC
1 SET
4 PCS
2 PCS

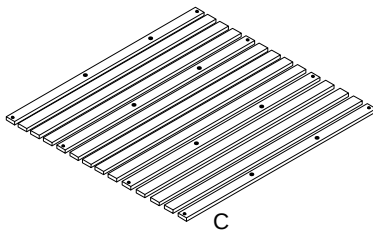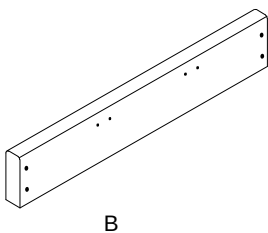



HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
8	PLASTIC WASHER		2 PCS
9	THREADED BOLT (8 x 90mm)		8 PCS
10	ALLEN BOLT (6 x 50mm)		8 PCS
11	ALLEN BOLT (6 x 30mm)		8 PCS
12	FLAT WASHER (8 x 22mm)		8 PCS
13	FLAT WASHER (6 x 16mm)		16 PCS
14	LOCK WASHER (8 x 22mm)		8 PCS
15	LOCK WASHER (6 x 16mm)		16 PCS
16	HEX NUT (8mm)		8 PCS
17	PHILLIPS SCREW (7 x 35mm)		12 PCS
18	ALLEN KEY (6mm)		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS



BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
2 PCS
8 PCS

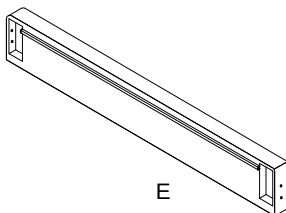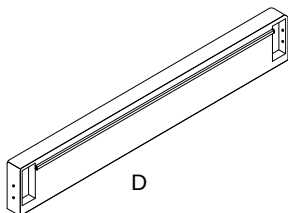

FULLY ASSEMBLED

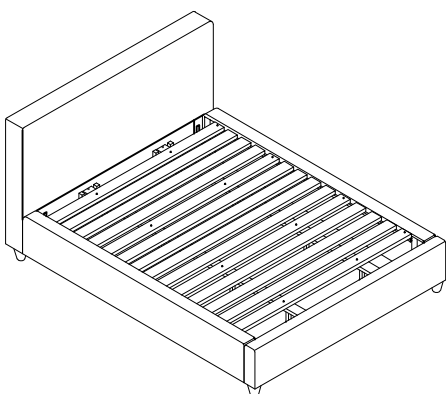


OLIVIA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

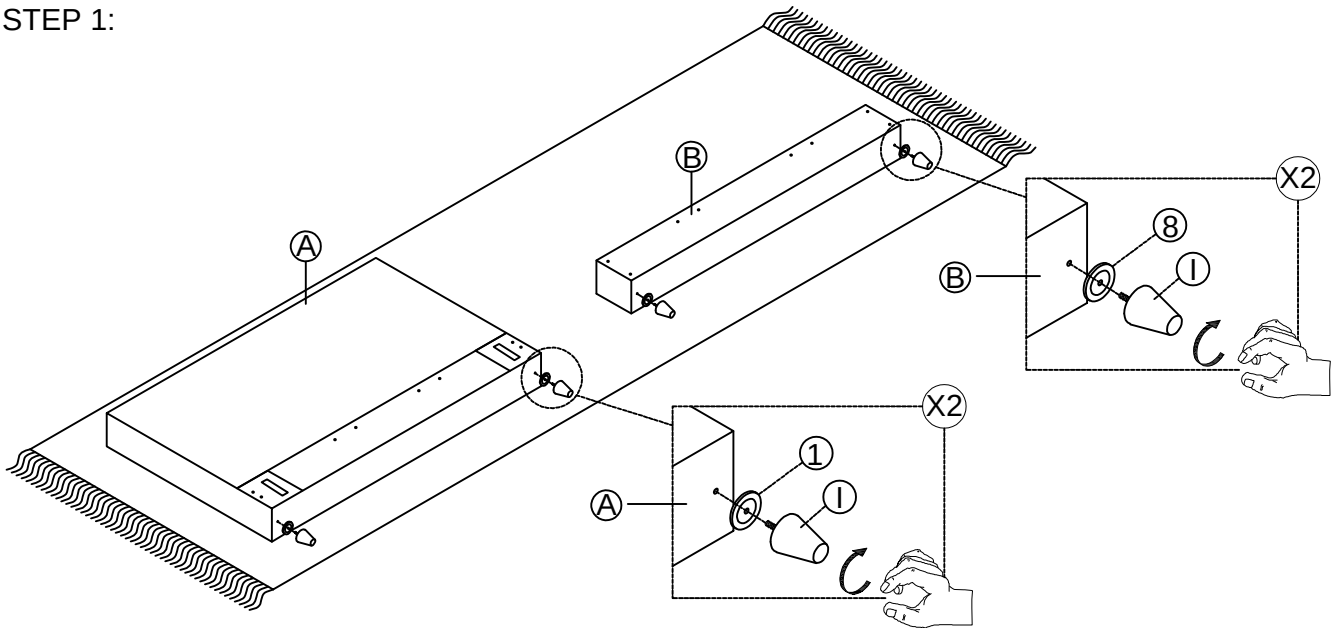

STEP 2:

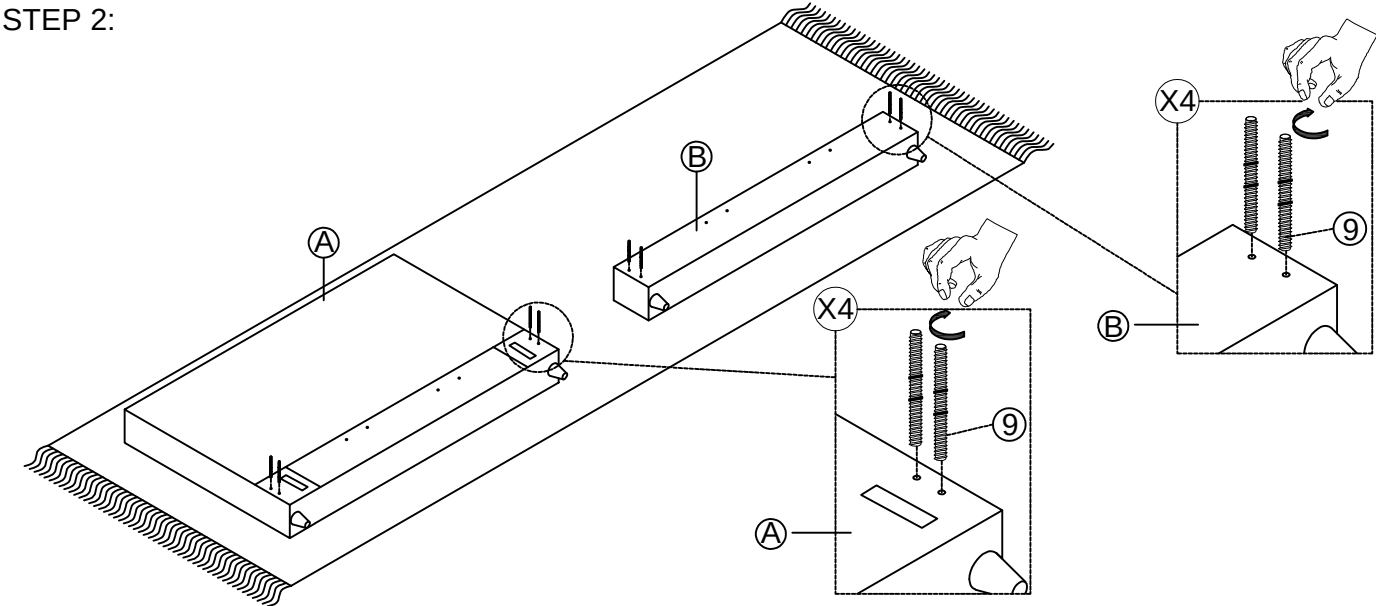


STEP 3:

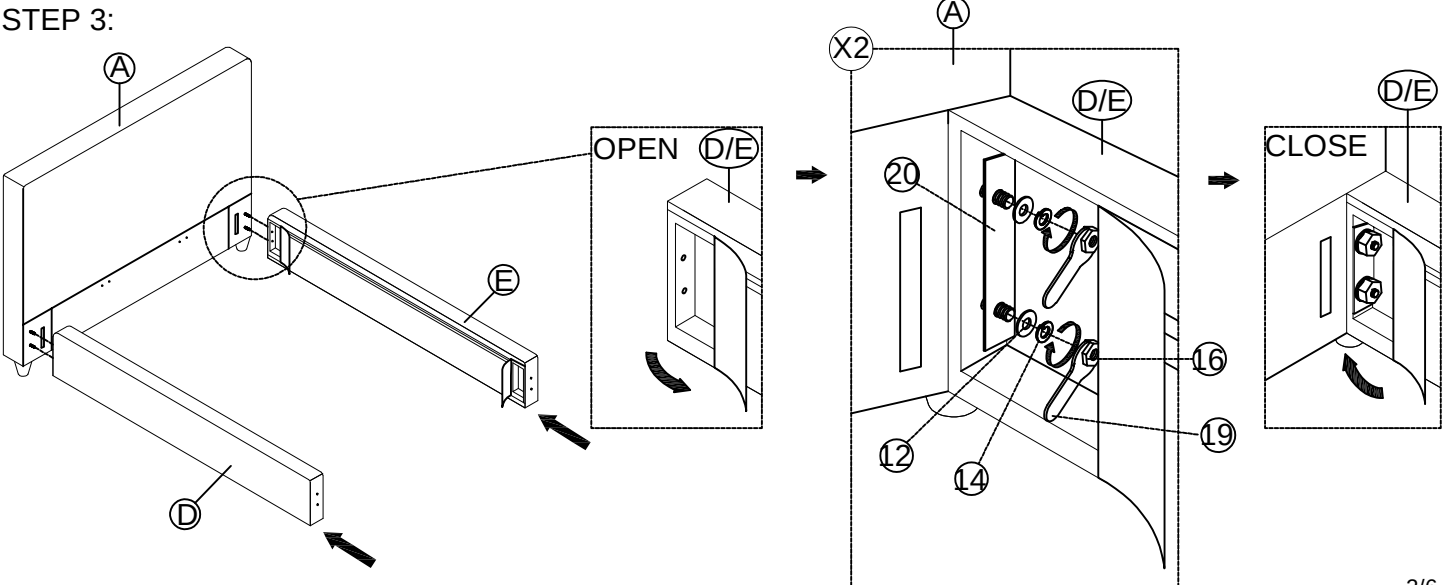

OLIVIA UPHOLSTERED KING BED ASSEMBLY INSTRUCTIONS




STEP 4:

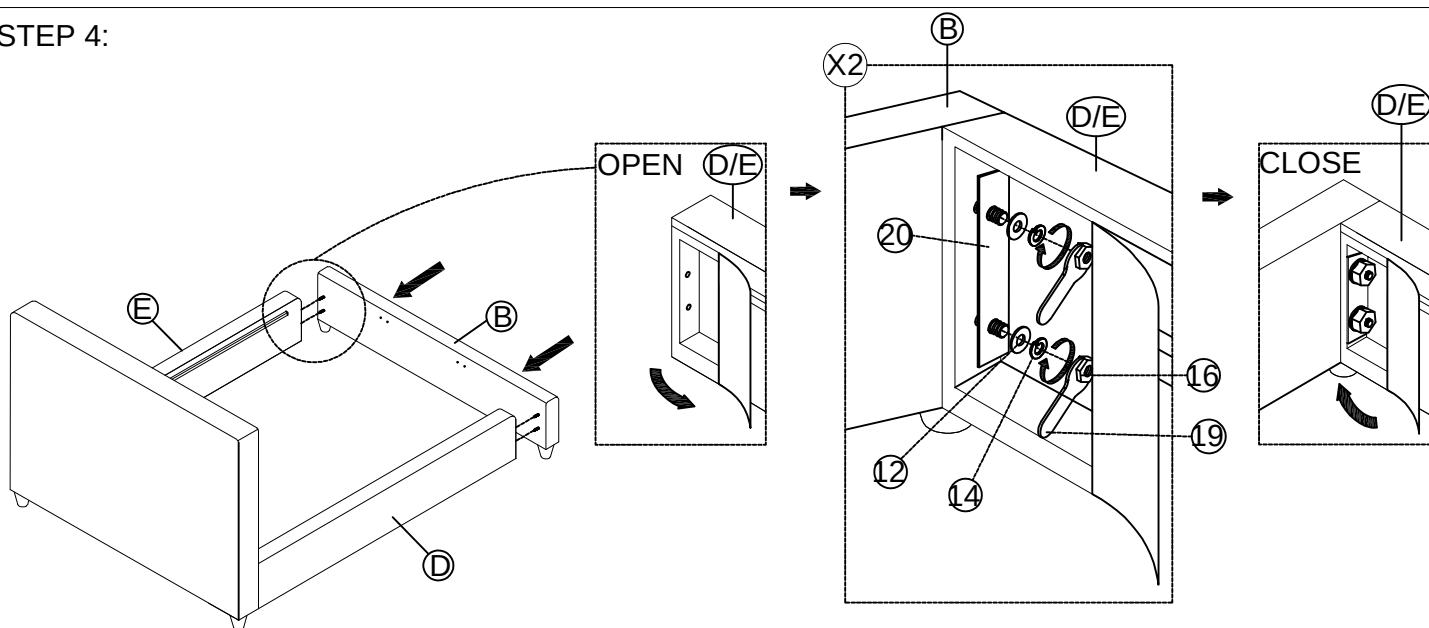


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

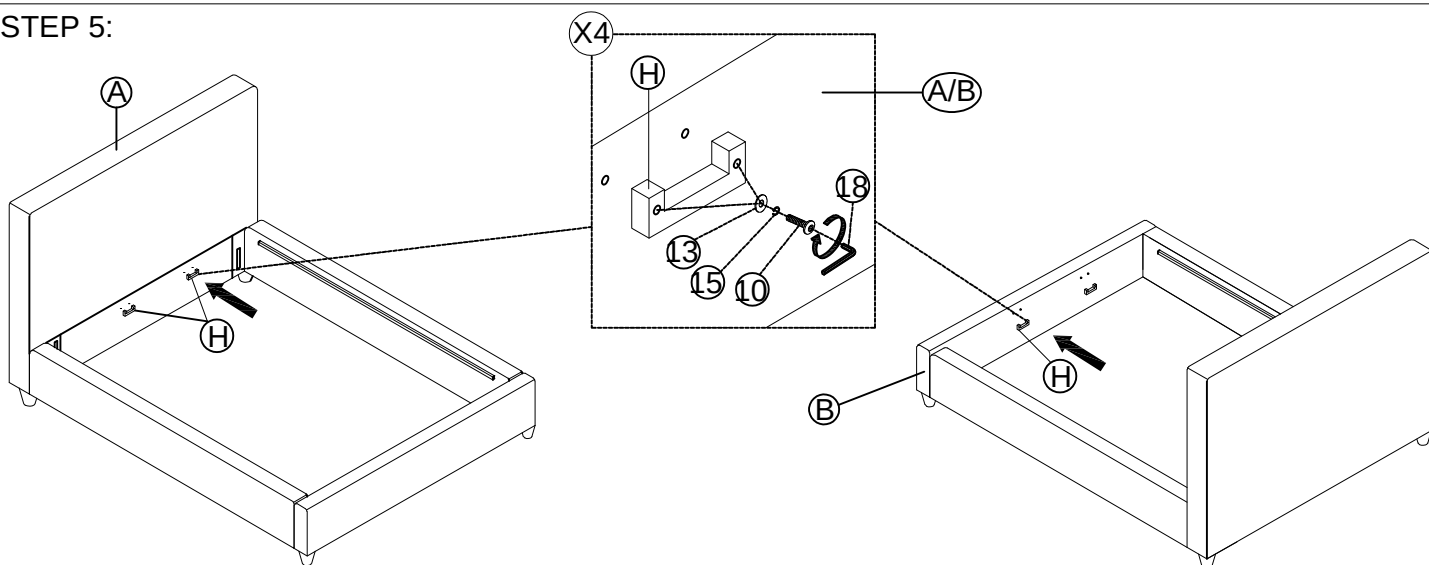

STEP 6:

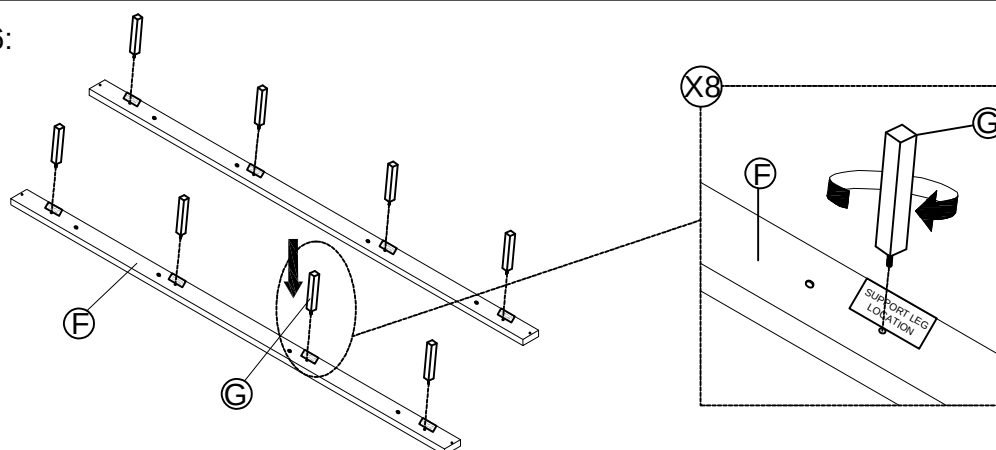


OLIVIA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 7:

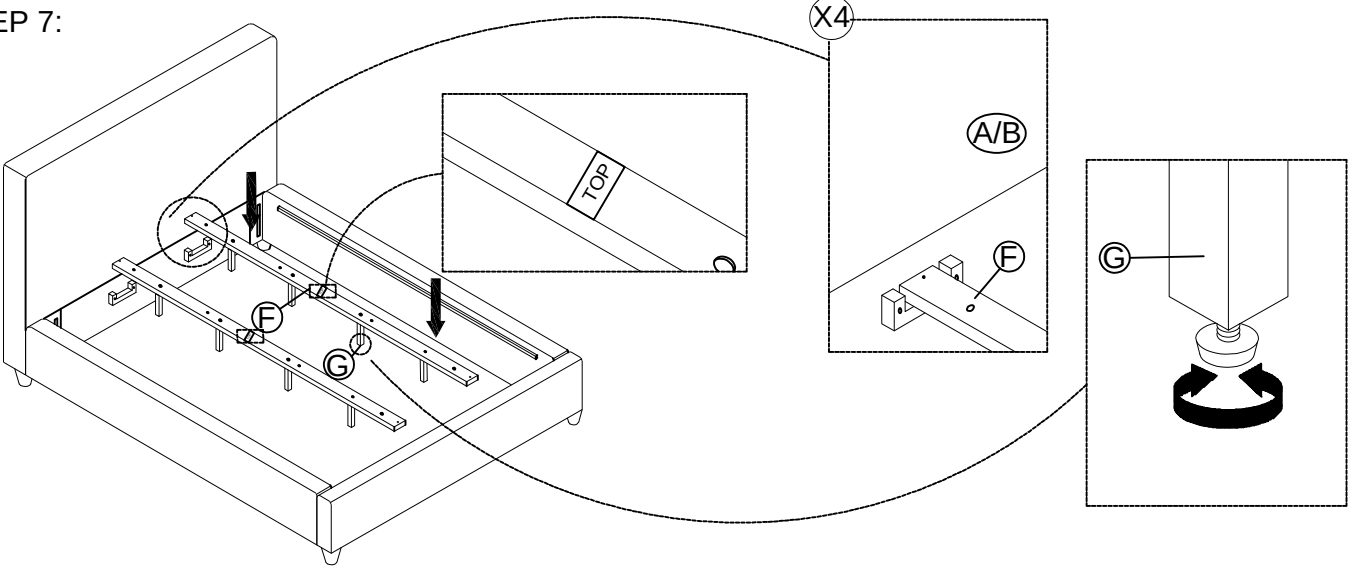

STEP 8:

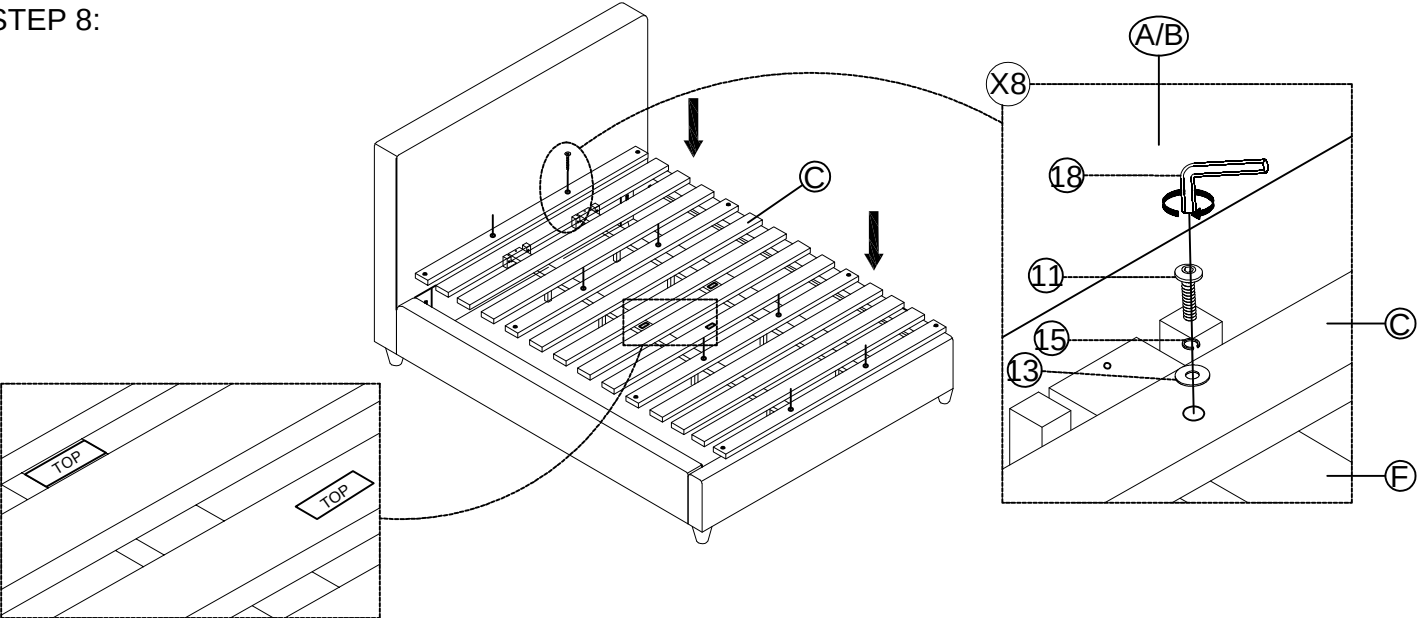


STEP 9:

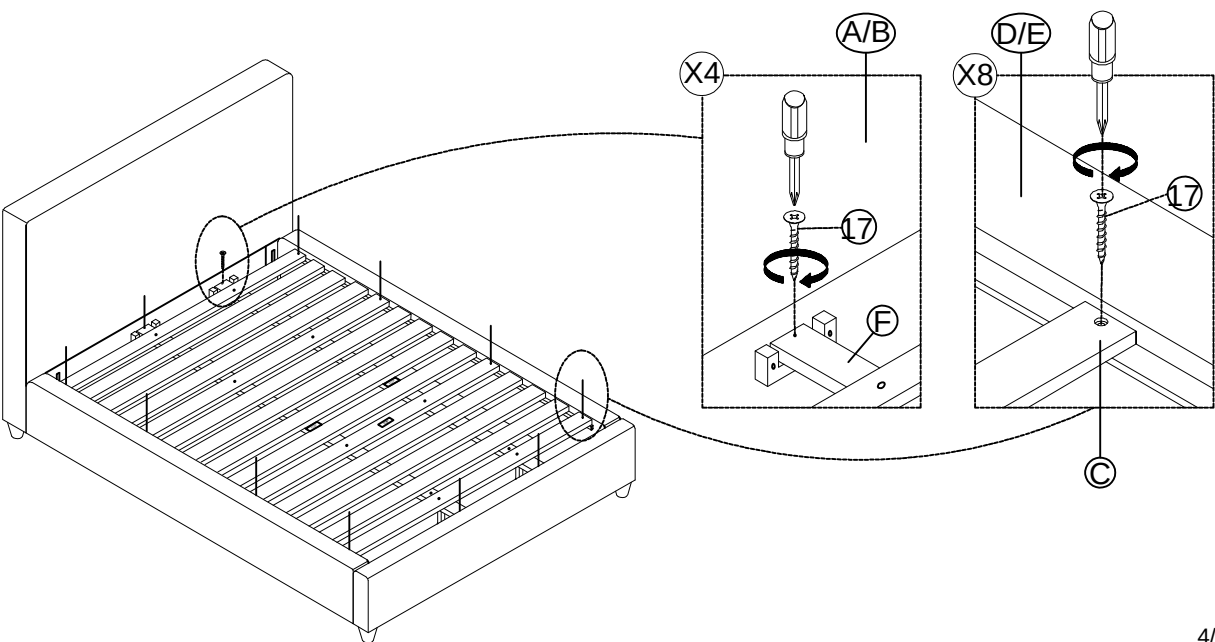

OLIVIA UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

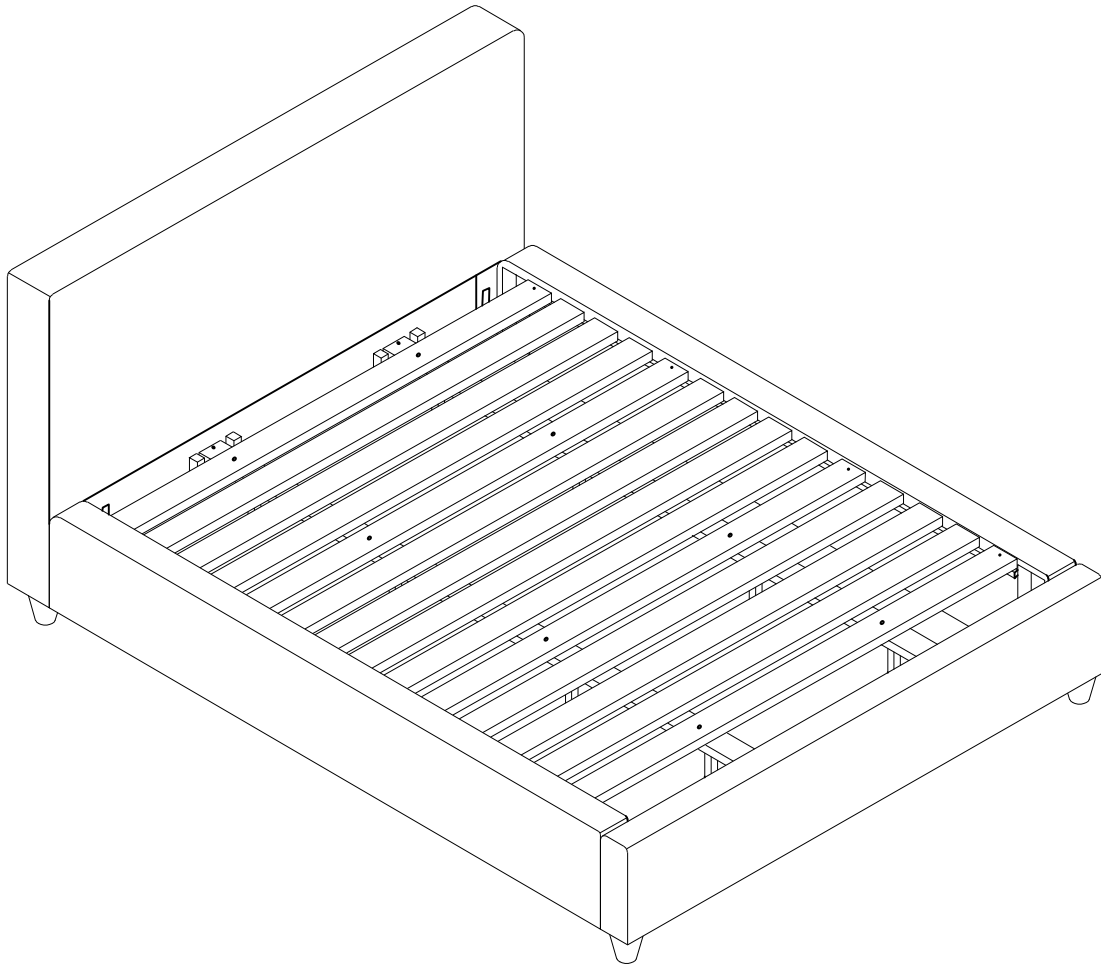


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

OLIVIA UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

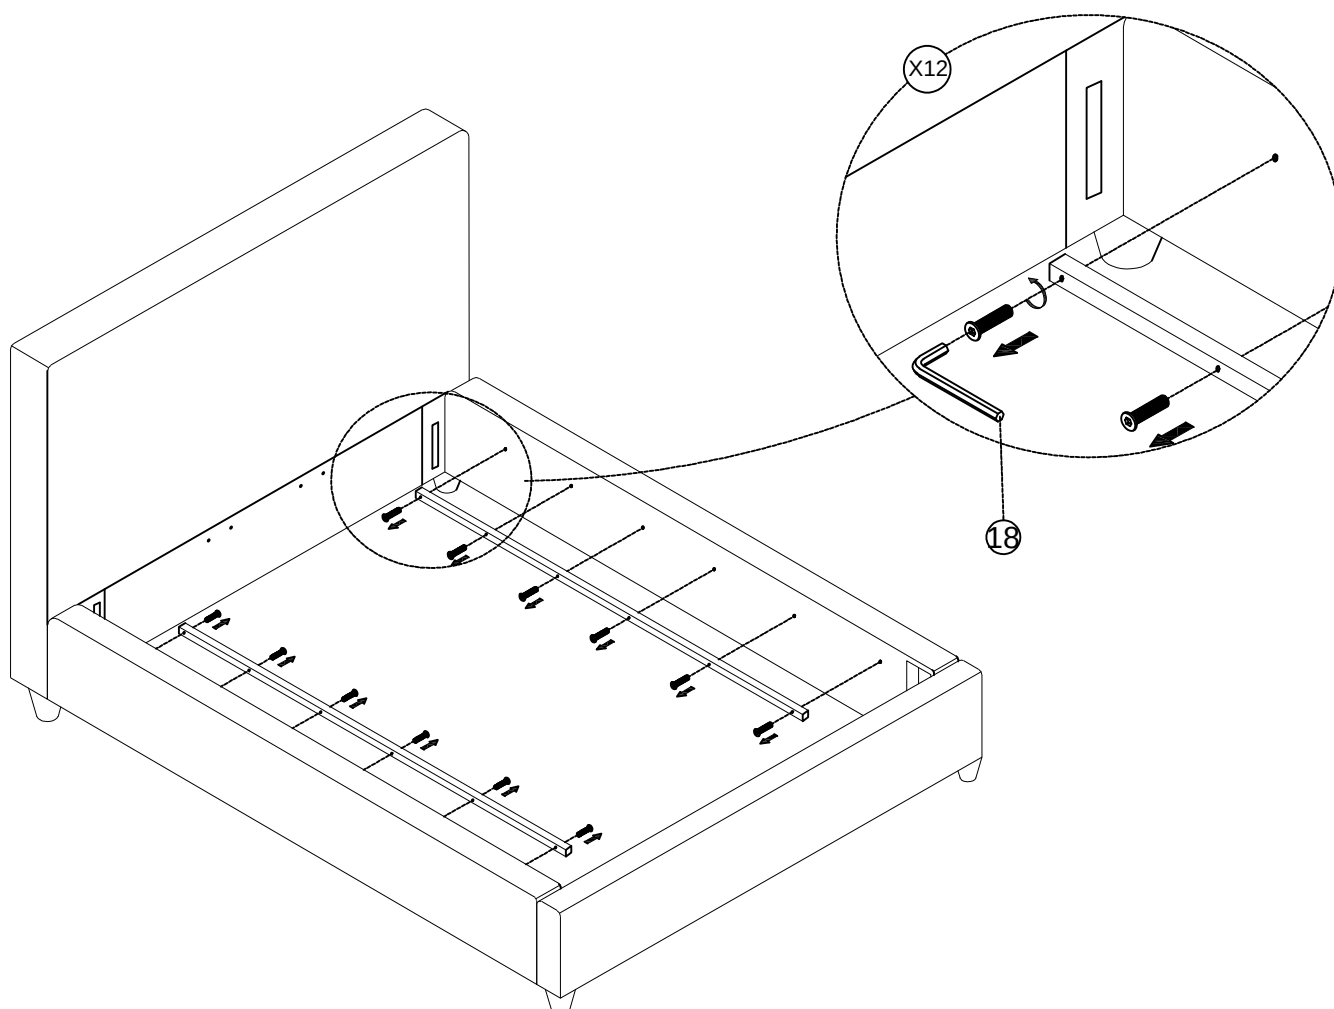

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

OLIVIA UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

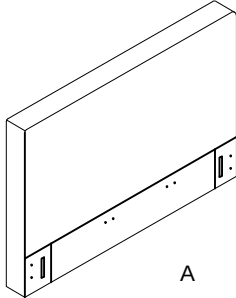


HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	PLASTIC WASHER		2 PCS
2	ALLEN BOLT (6 x 45mm)		4 PCS
3	FLAT WASHER (6 x 16mm)		8 PCS
4	LOCK WASHER (6 x 16mm)		8 PCS
5	ALLEN KEY (6mm)		1 PC
6	HEX NUT (6mm)		4 PCS
7	WRENCH		1 PC

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG

1 PC
1 SET
4 PCS
2 PCS

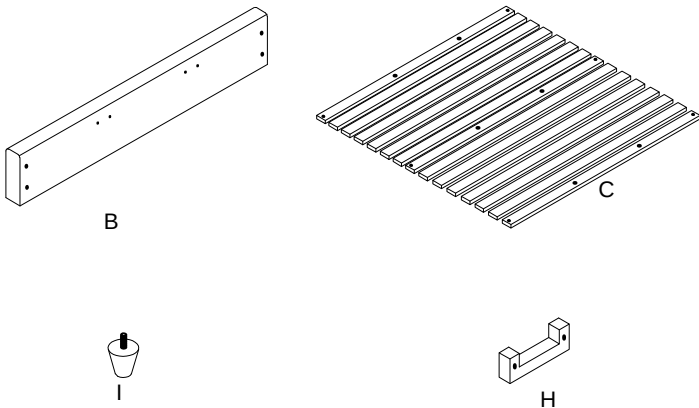


HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
8	PLASTIC WASHER		2 PCS
9	THREADED BOLT (8 x 90mm)		8 PCS
10	ALLEN BOLT (6 x 50mm)		8 PCS
11	ALLEN BOLT (6 x 30mm)		6 PCS
12	FLAT WASHER (8 x 22mm)		8 PCS
13	FLAT WASHER (6 x 16mm)		14 PCS
14	LOCK WASHER (8 x 22mm)		8 PCS
15	LOCK WASHER (6 x 16mm)		14 PCS
16	HEX NUT (8mm)		8 PCS
17	PHILLIPS SCREW (7 x 35mm)		10 PCS
18	ALLEN KEY (6mm)		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS



BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
2 PCS
8 PCS

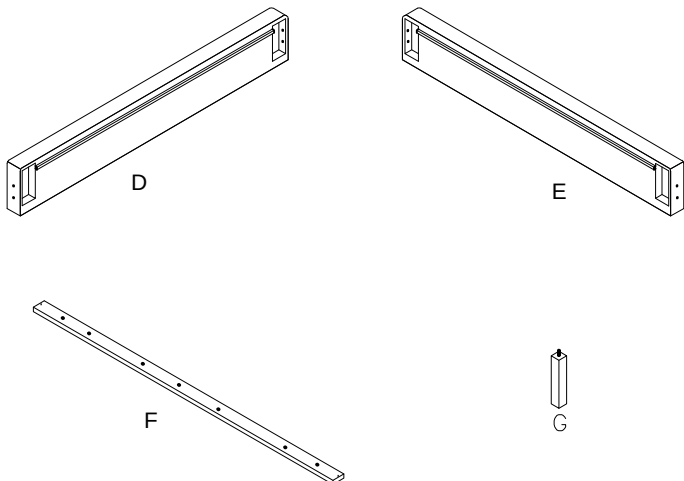

FULLY ASSEMBLED

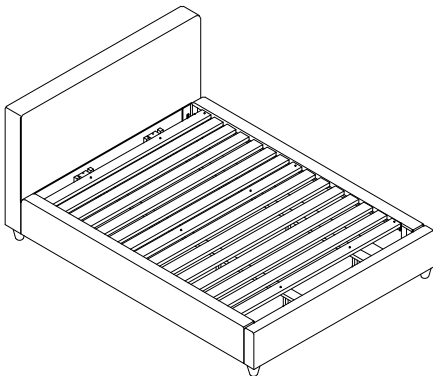


OLIVIA UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

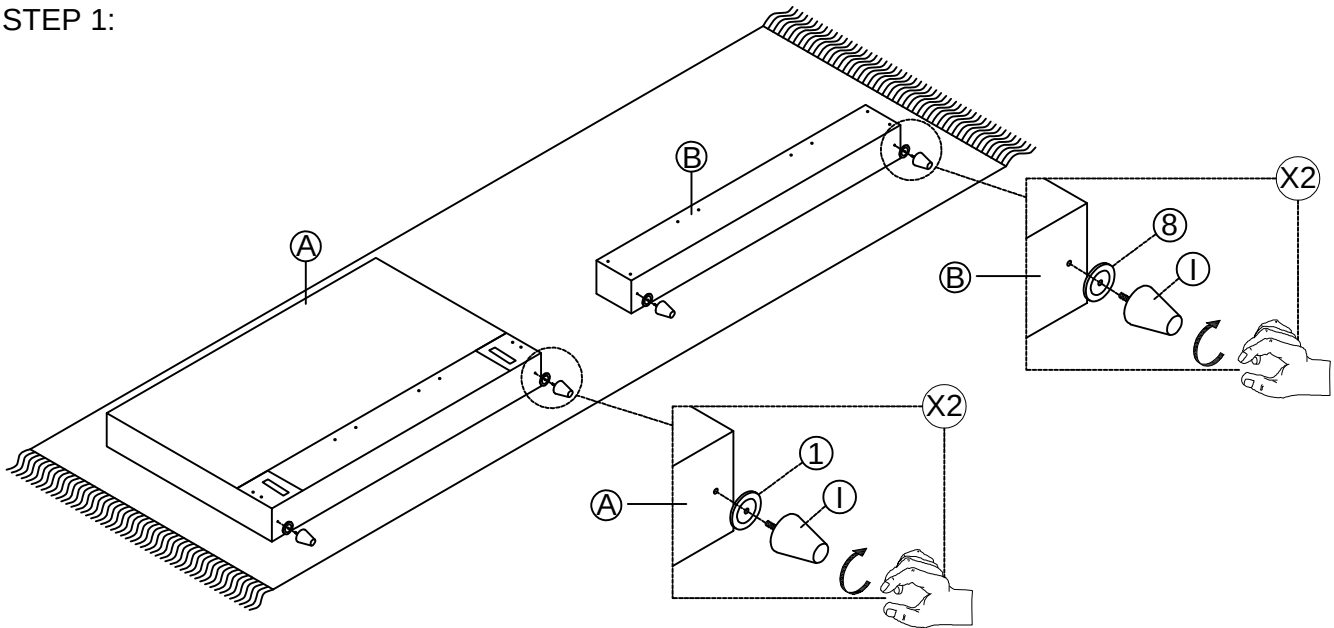

STEP 2:

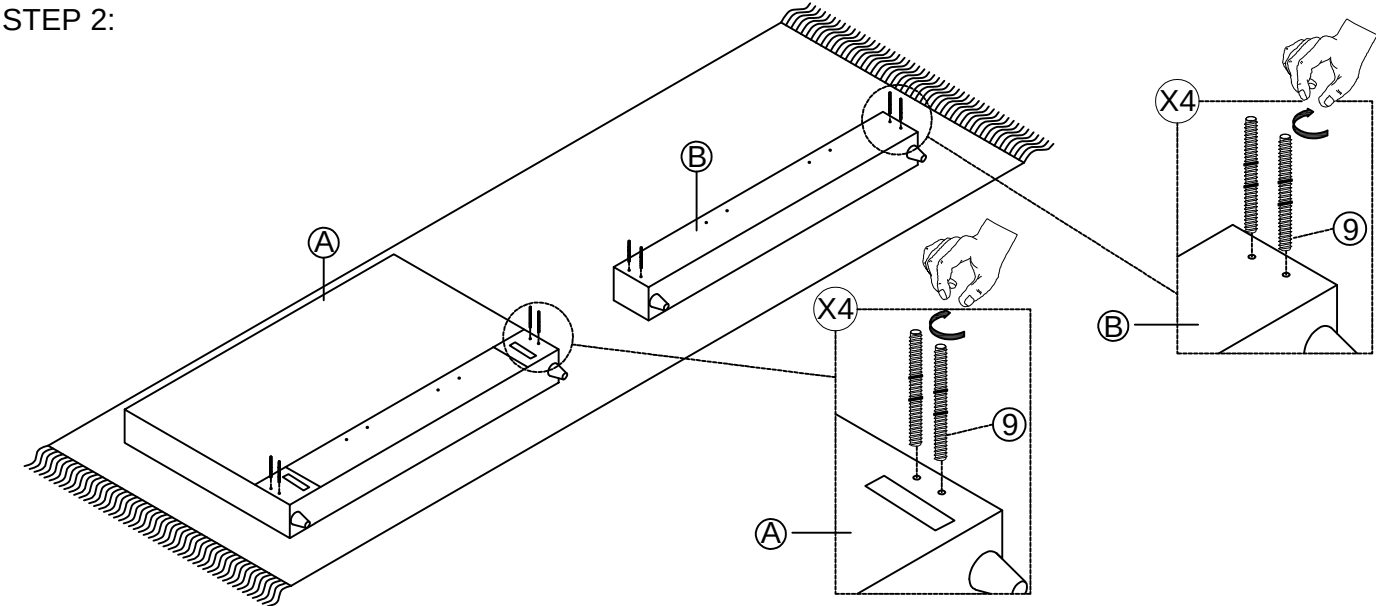

STEP 3:

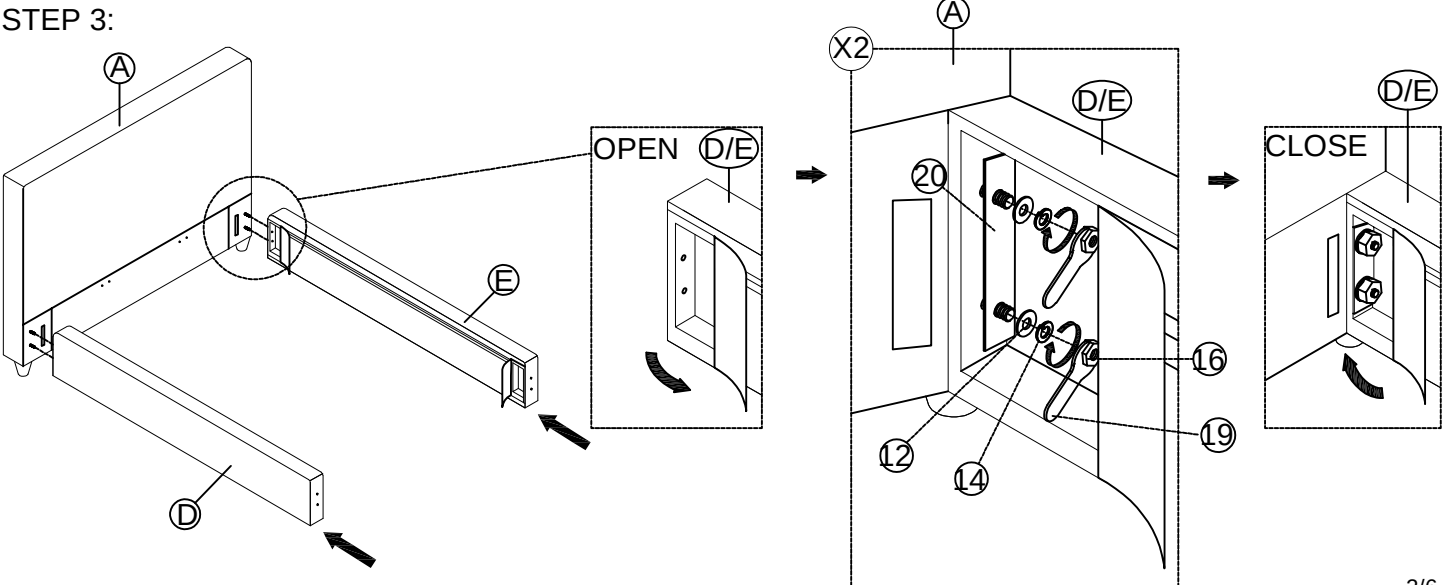


OLIVIA UPHOLSTERED C. KING BED

ASSEMBLY INSTRUCTIONS




STEP 4:

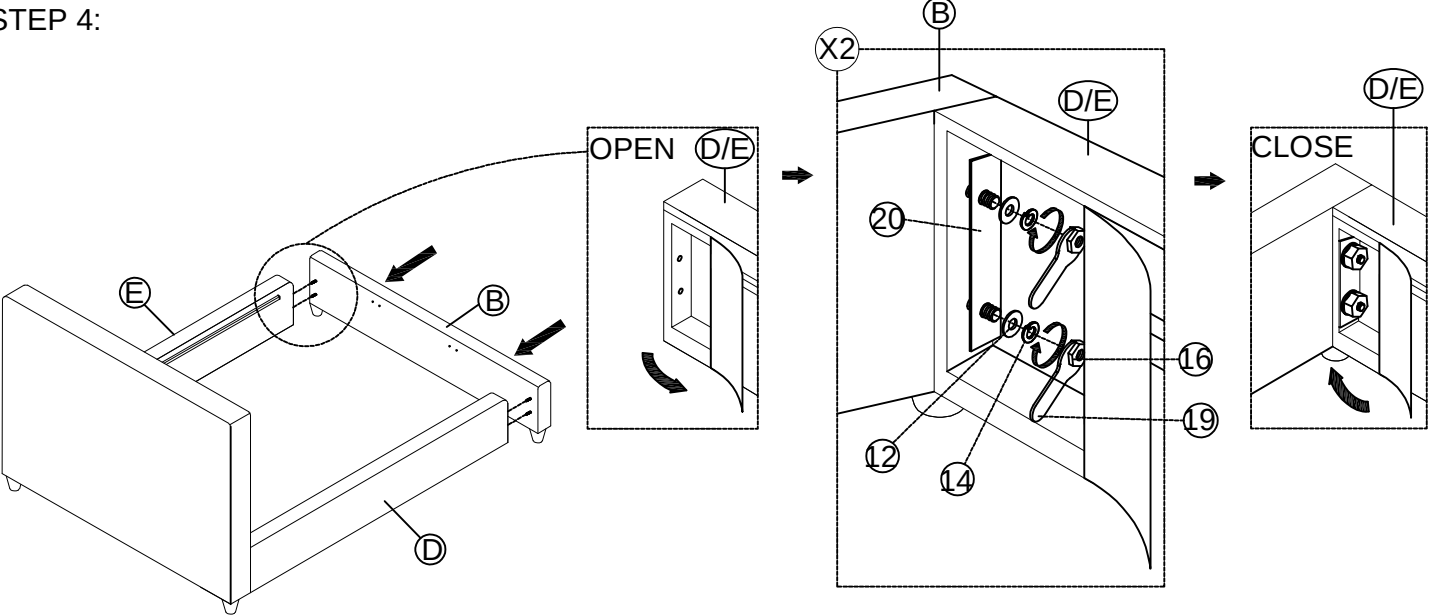


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

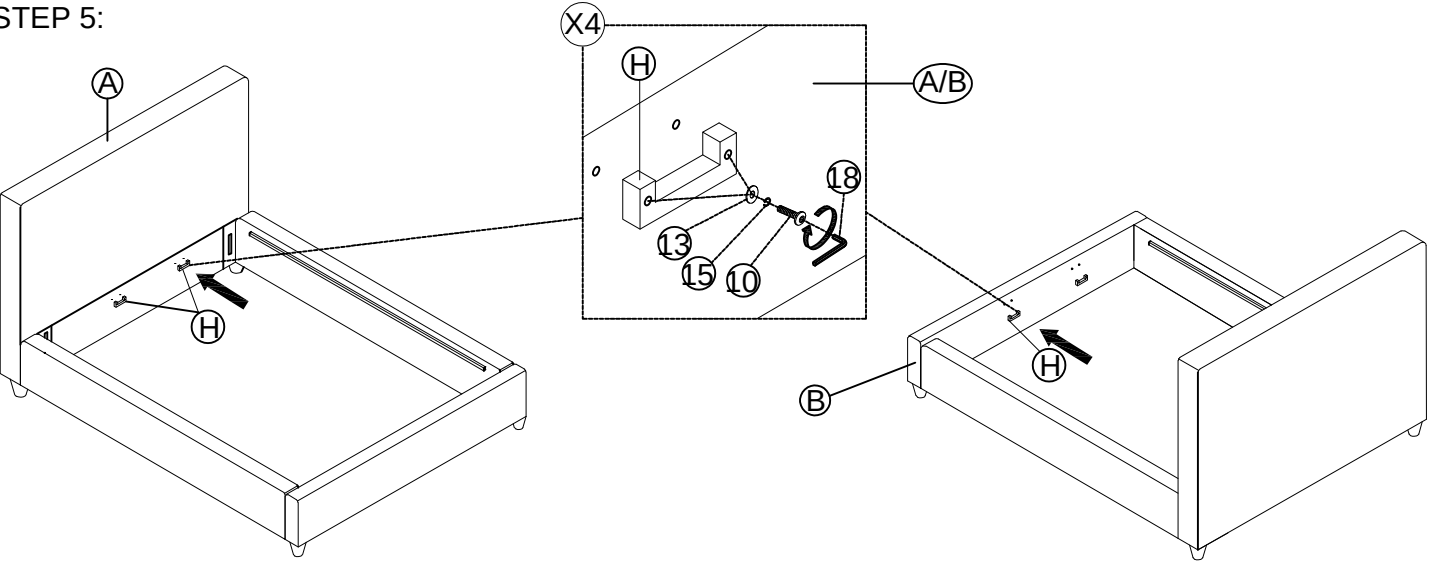

STEP 6:

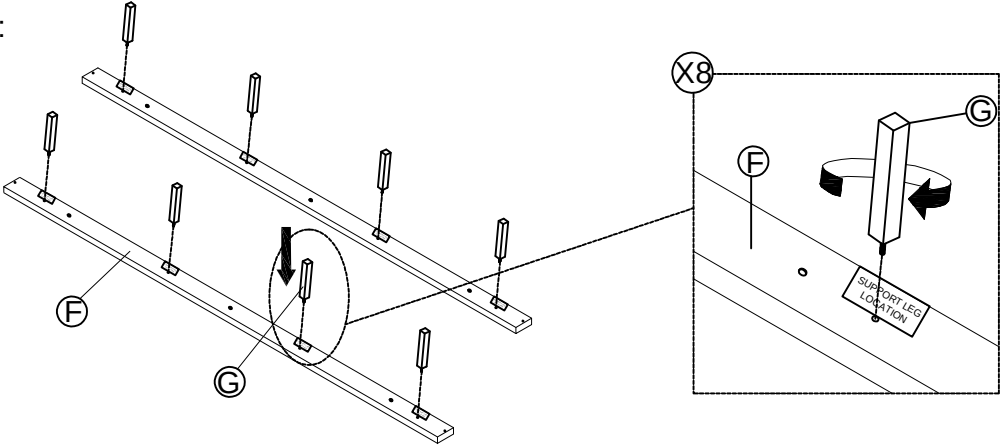


OLIVIA UPHOLSTERED C. KING BED


ASSEMBLY INSTRUCTIONS




STEP 7:

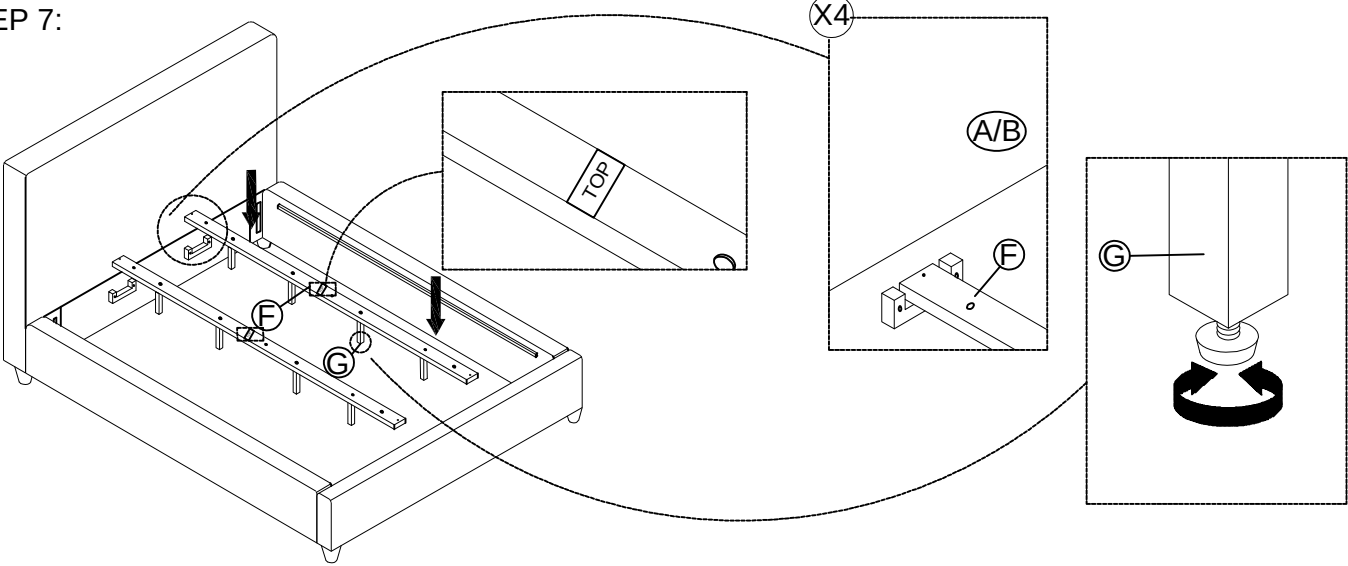

STEP 8:

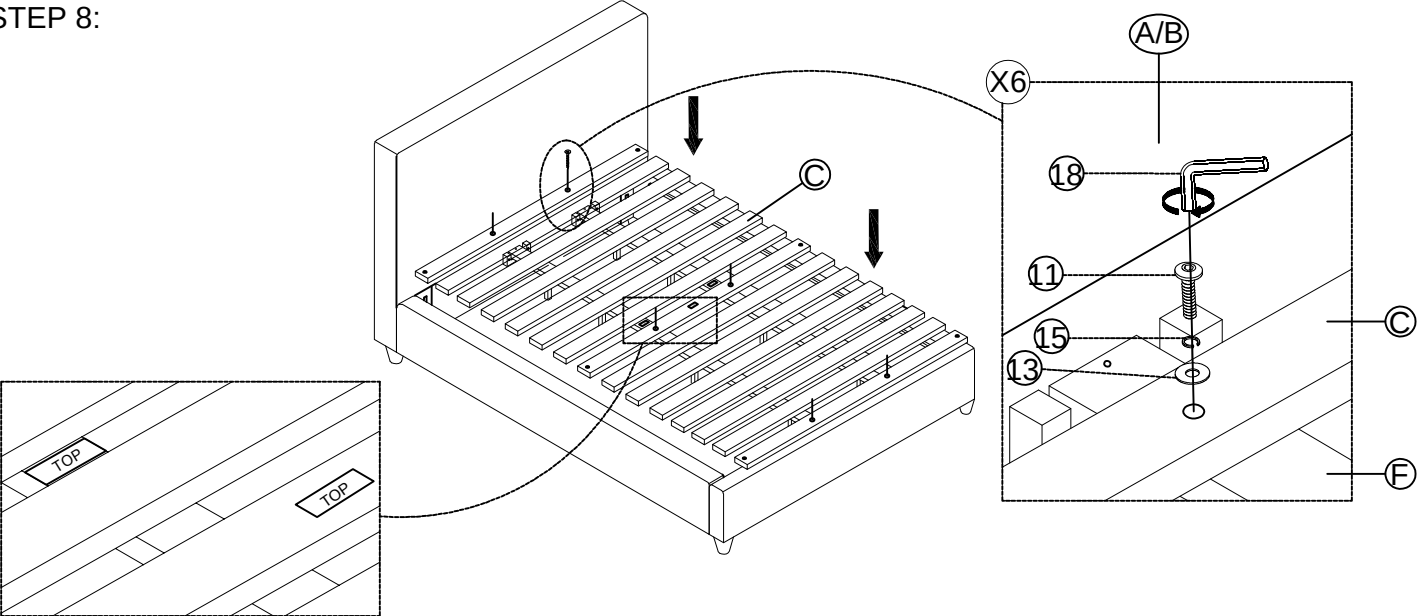


STEP 9:

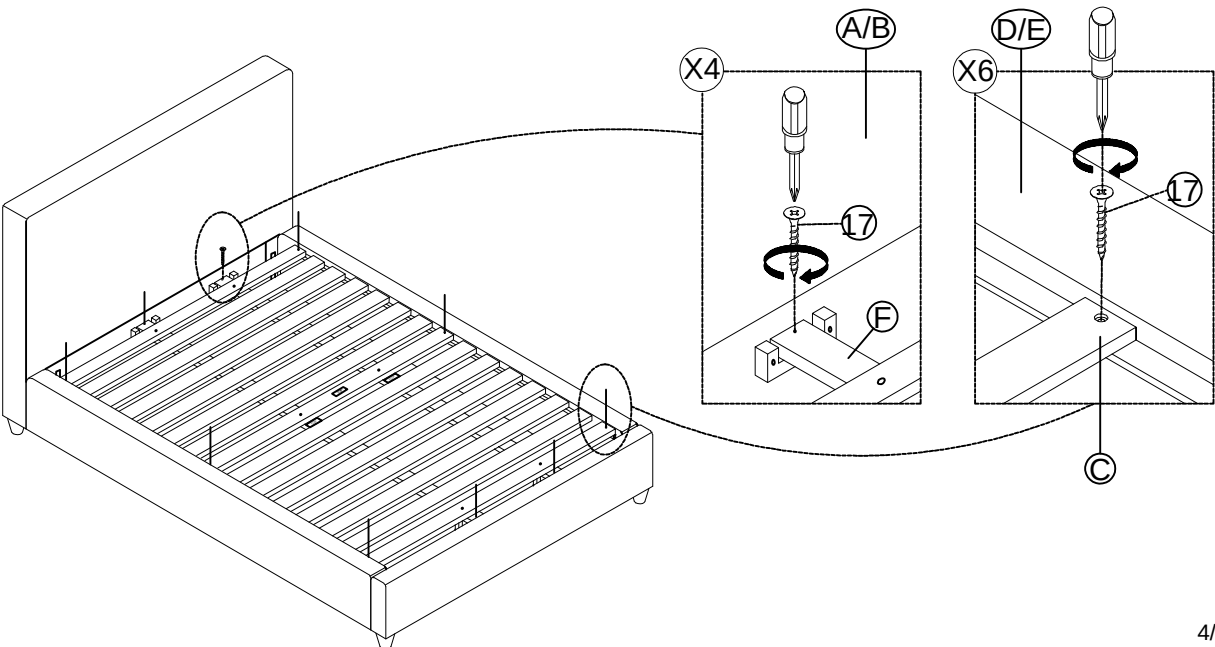

OLIVIA UPHOLSTERED C. KING BED

ASSEMBLY INSTRUCTIONS

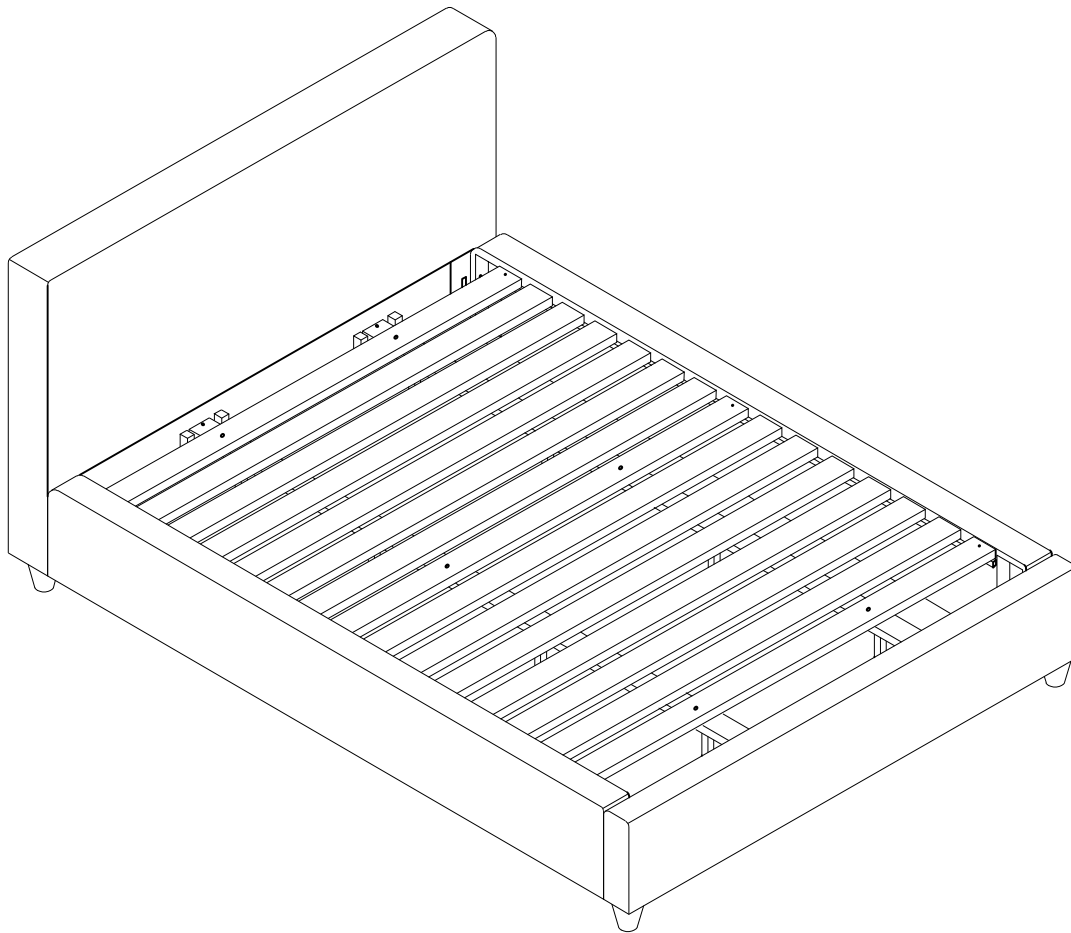


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

OLIVIA UPHOLSTERED C. KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G. SUPPORT LEG	8 PCS
H. CENTER SLAT SUPPORT CLEAT	4 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

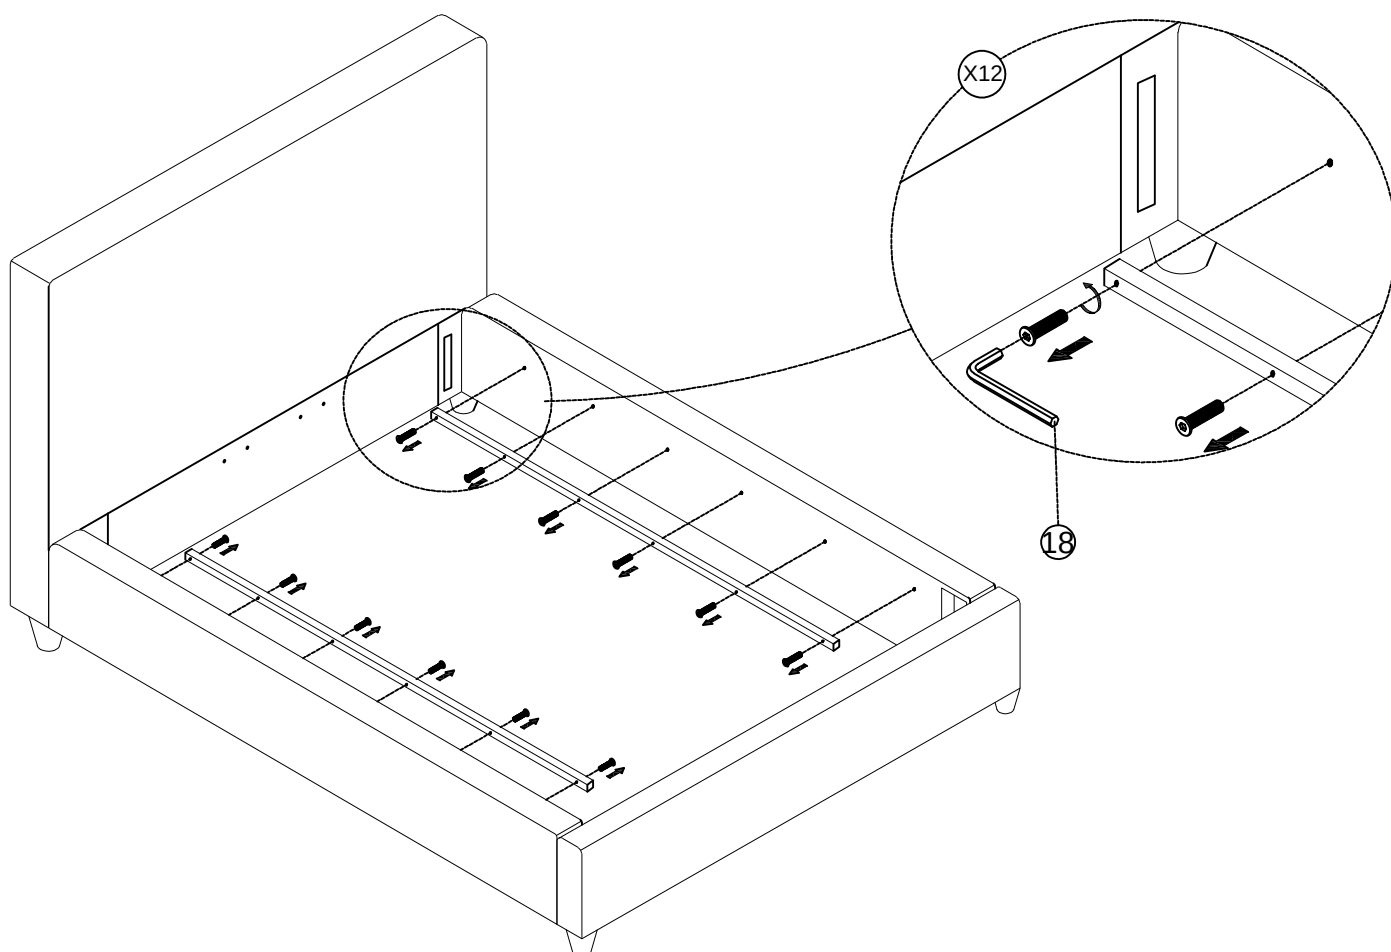

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

OLIVIA UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD
I. LEG

1 PC
2 PCS

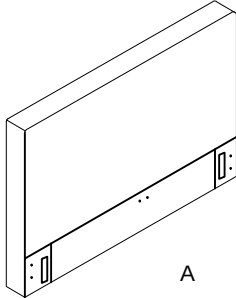



HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	PLASTIC WASHER		2 PCS
2	ALLEN BOLT (6 x 45mm)		4 PCS
3	FLAT WASHER (6 x 16mm)		8 PCS
4	LOCK WASHER (6 x 16mm)		8 PCS
5	ALLEN KEY (6mm)		1 PC
6	HEX NUT (6mm)		4 PCS
7	WRENCH		1 PC

BOX#2

B. FOOTBOARD
C. SLAT ROLL
H. CENTER SLAT SUPPORT CLEAT
I. LEG

1 PC
1 SET
2 PCS
2 PCS

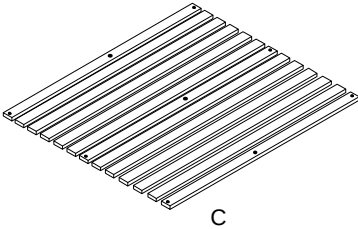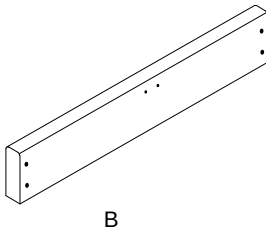



HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
8	PLASTIC WASHER		2 PCS
9	THREADED BOLT (8 x 90mm)		8 PCS
10	ALLEN BOLT (6 x 50mm)		4 PCS
11	ALLEN BOLT (6 x 30mm)		3 PCS
12	FLAT WASHER (8 x 22mm)		8 PCS
13	FLAT WASHER (6 x 16mm)		7 PCS
14	LOCK WASHER (8 x 22mm)		8 PCS
15	LOCK WASHER (6 x 16mm)		7 PCS
16	HEX NUT (8mm)		8 PCS
17	PHILLIPS SCREW (7 x 35mm)		8 PCS
18	ALLEN KEY (6mm)		1 PC
19	WRENCH		1 PC
20	CONNECTING BRACKET		4 PCS




BOX#3

D. LEFT SIDE RAIL
E. RIGHT SIDE RAIL
F. CENTER SLAT SUPPORT
G. SUPPORT LEG

1 PC
1 PC
1 PC
4 PCS

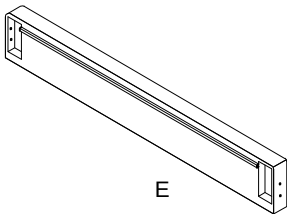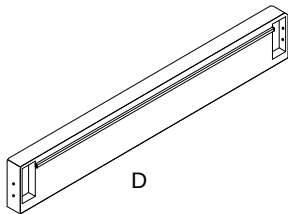

FULLY ASSEMBLED

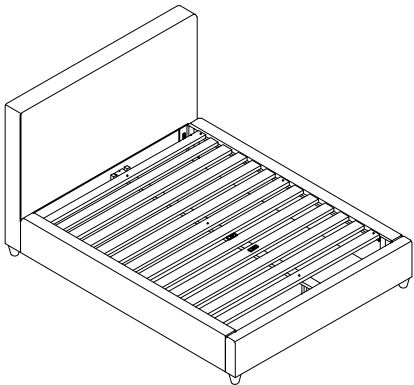


MODUS
FURNITURE

STEP 1:

Diagram illustrating Step 1: Attaching the front panel. The main diagram shows a rectangular front panel (A) being aligned with a base unit. Two circular callouts show the attachment of the panel to the base using screws (1) and washers (8). A hand is shown turning the screw clockwise. A 'X2' label indicates that there are two such attachment points on each side of the panel.

STEP 2:

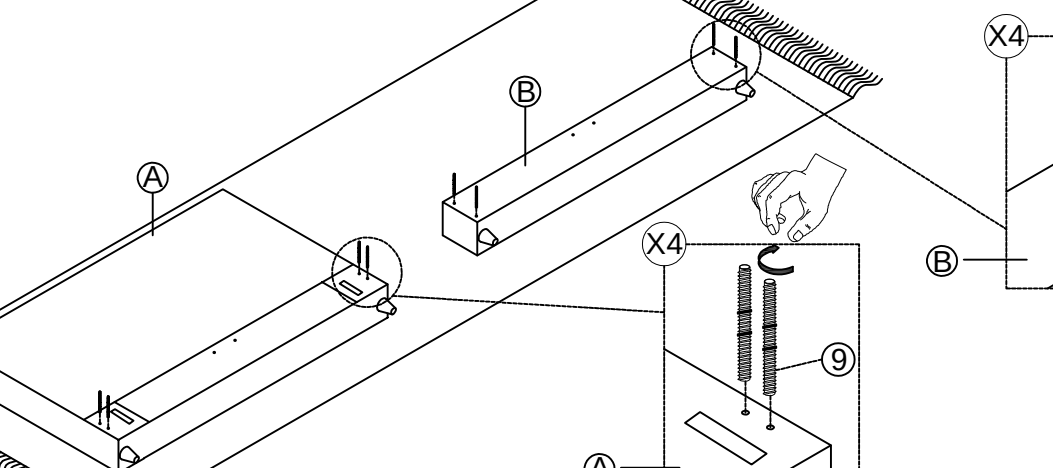

The diagram illustrates the process of attaching the backrest to the seat. The main view shows a seat frame with a backrest being attached. Callout A shows the backrest being slid into the seat frame. Callout B shows the backrest being secured with a screw. Callout X4 shows a close-up of the backrest being secured with a screw.

STEP 3:


The diagram illustrates the final assembly step. It shows a door (A) being mounted onto a frame (D) using hinges (E). An inset shows the door being opened (D/E). The second part of the diagram shows the door being closed (D/E) and the hinge being secured with screws (12, 14, 16, 19). A callout (X2) indicates the hinge is to be installed on both sides of the door.

OLIVIA UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS




STEP 4:

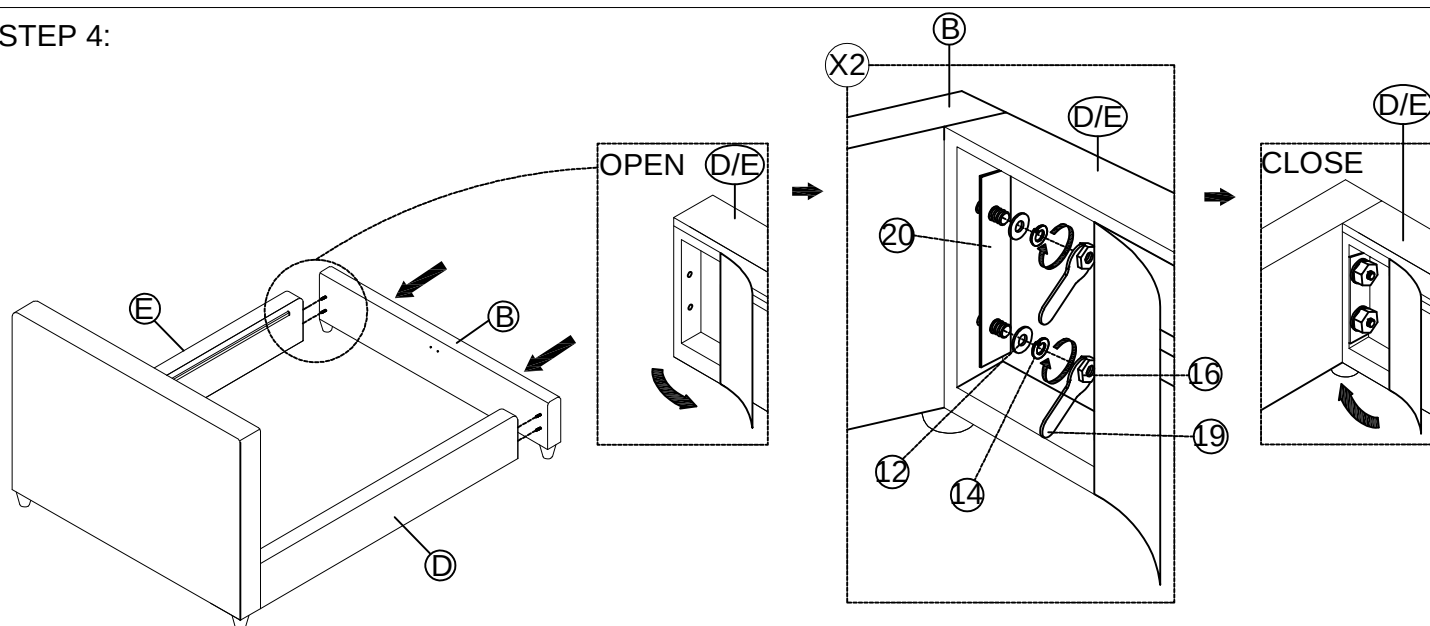


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 5~9 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 5.

STEP 5:

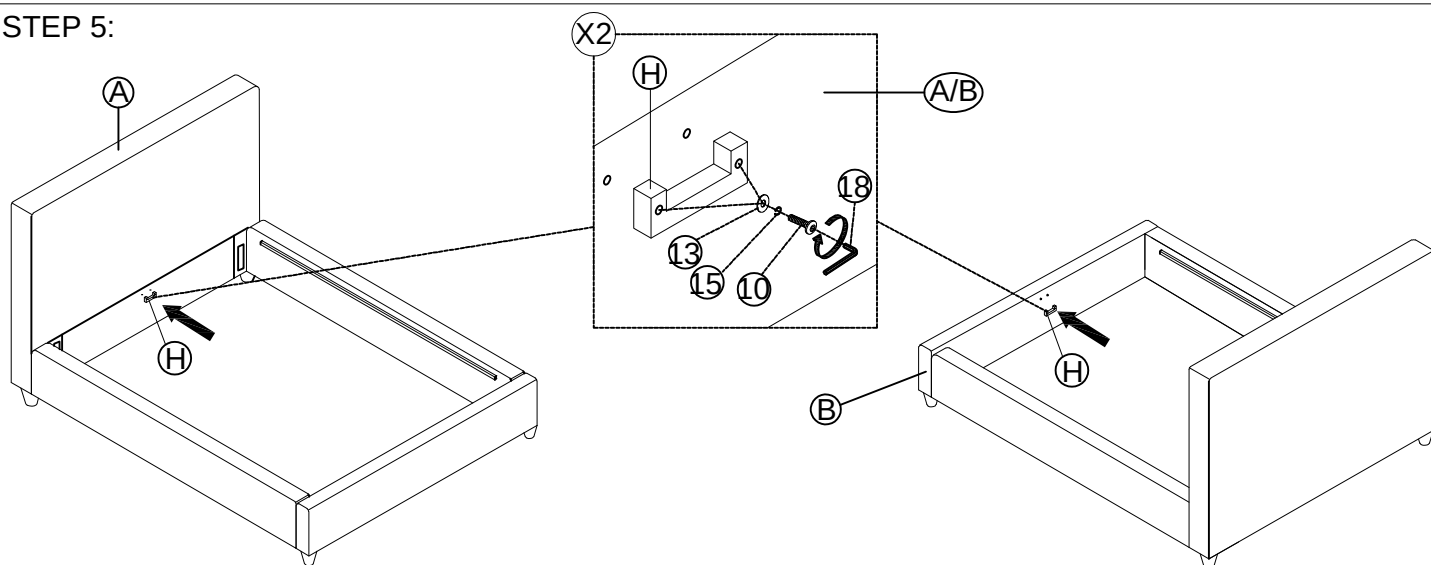

STEP 6:

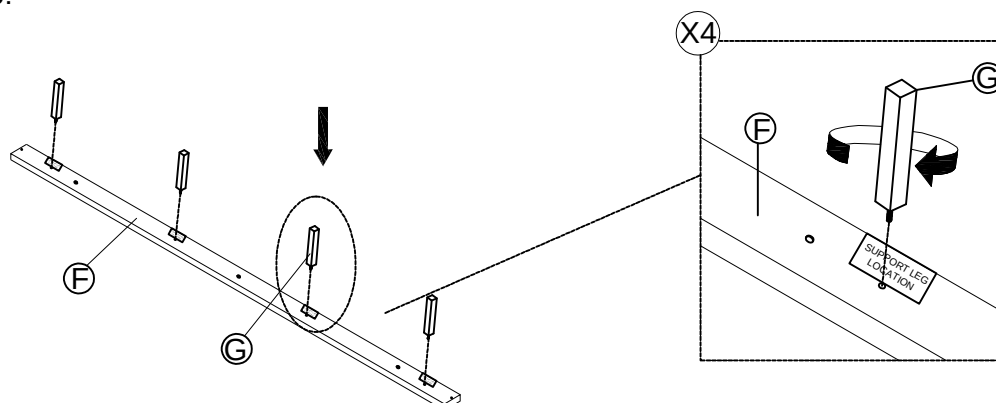


OLIVIA UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 7:

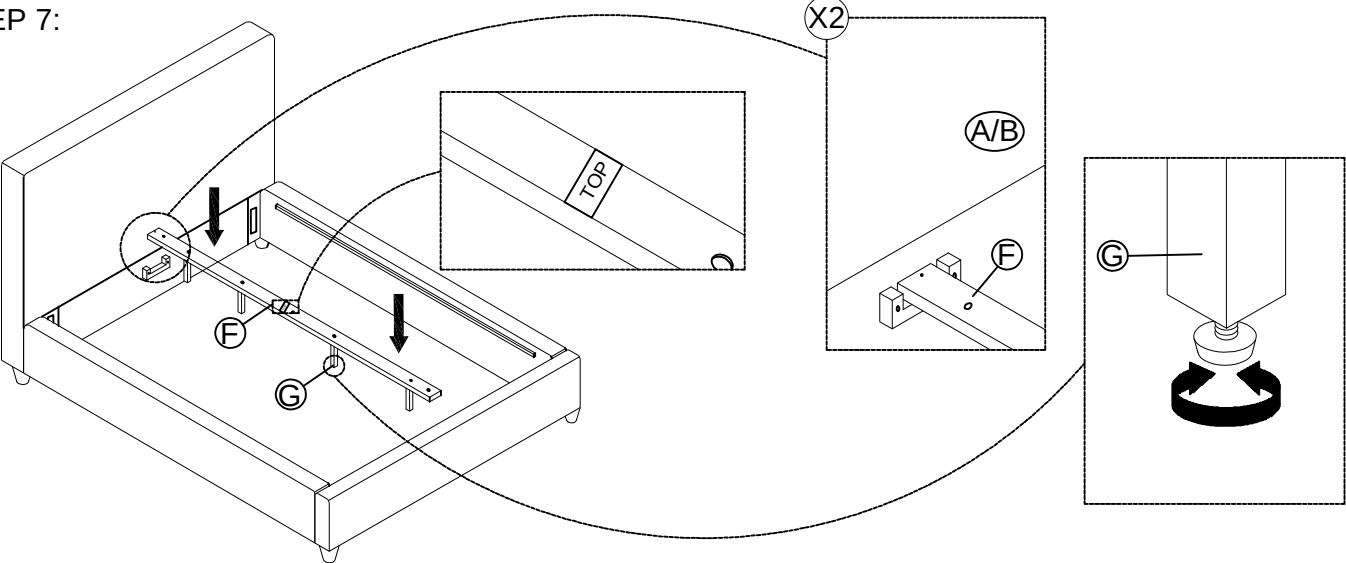

STEP 8:

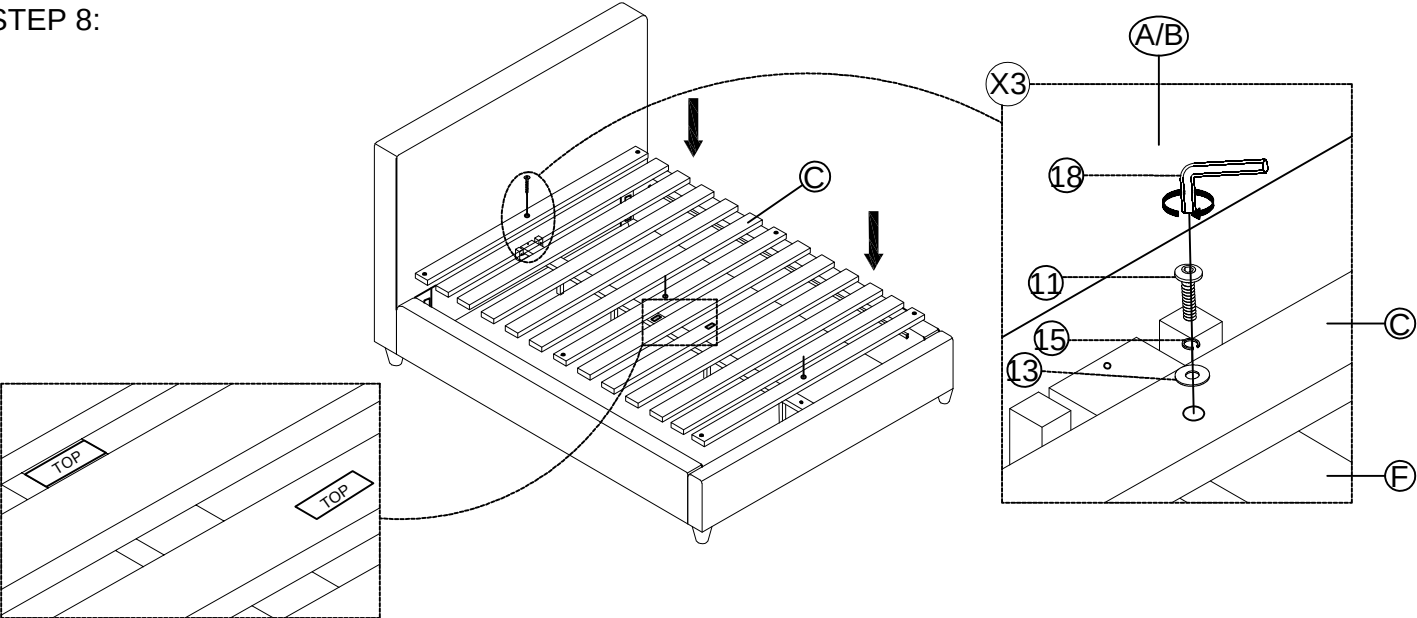


STEP 9:

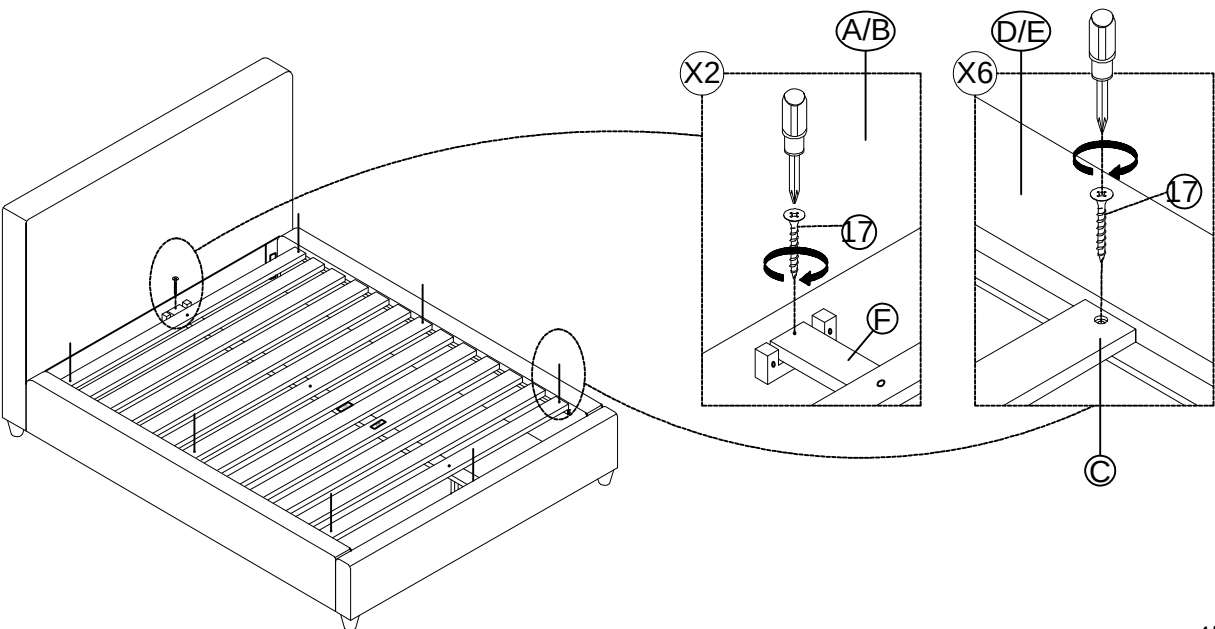

OLIVIA UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS

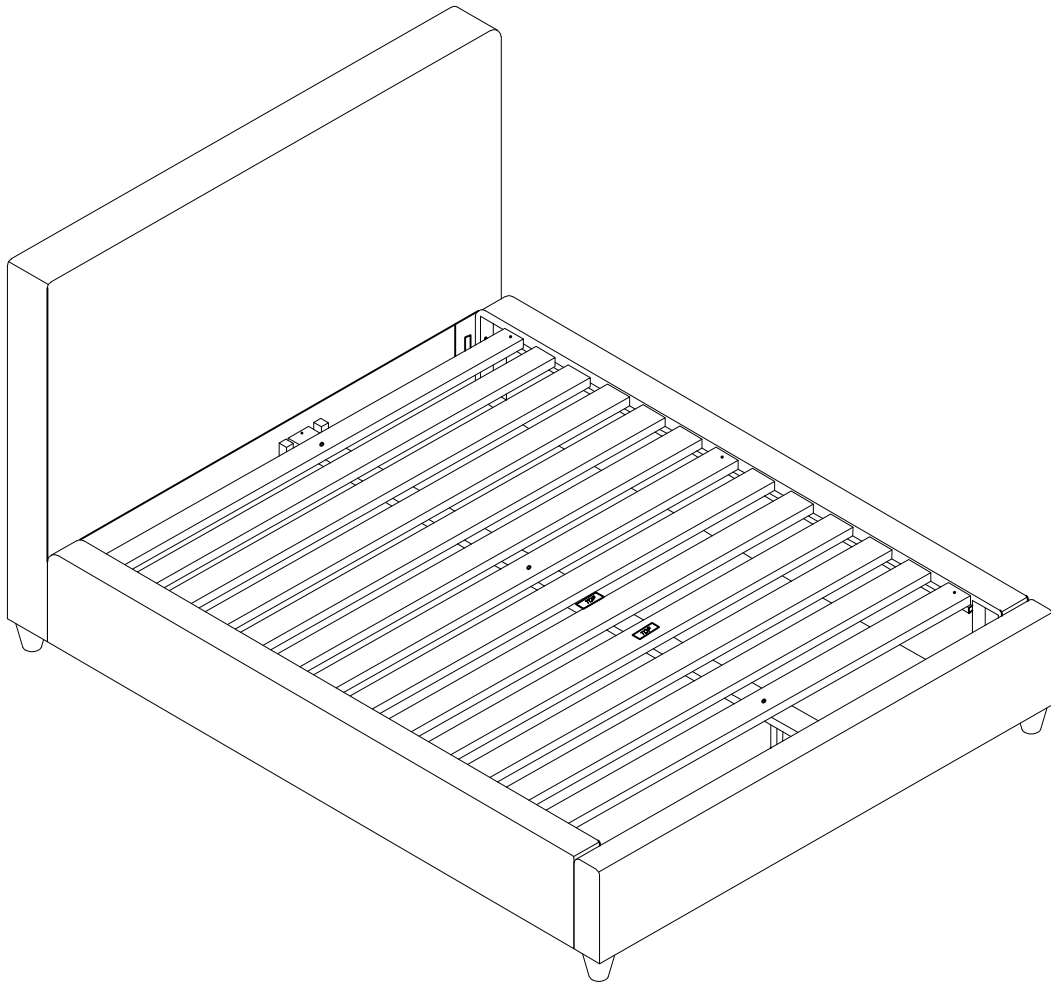


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

OLIVIA UPHOLSTERED FULL BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G. SUPPORT LEG	4 PCS
H. CENTER SLAT SUPPORT CLEAT	2 PCS

STEP 1:

USE ALLEN KEY (18) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

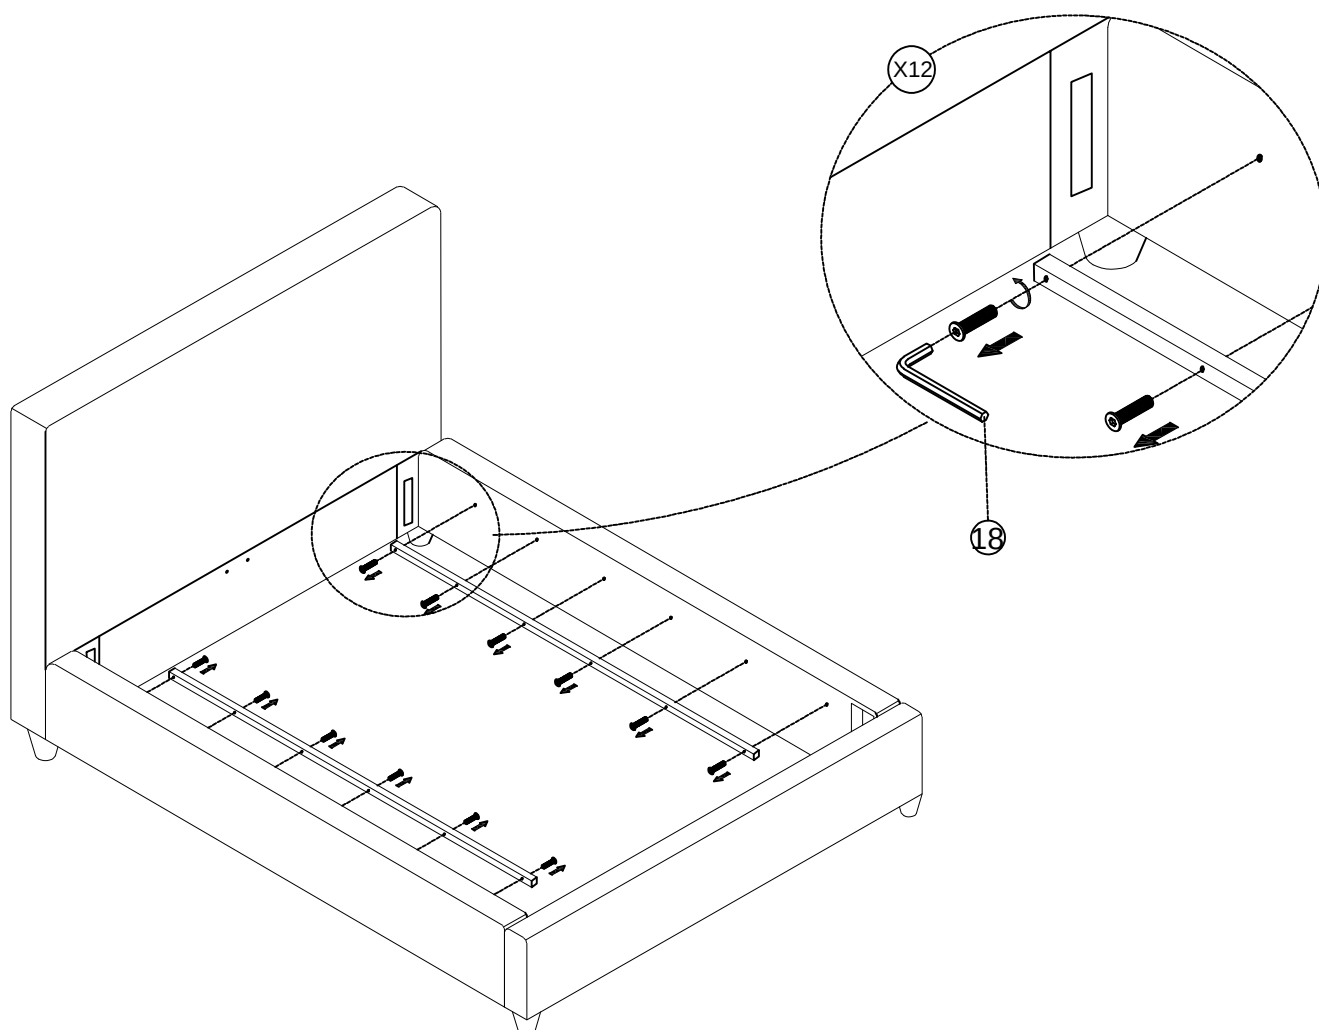

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION