INSTRUCTIONS D'INSTALLATION DU DÉFLECTEUR SECONDAIRE W535-0008 POUR LE NZ6000

Système de qualité certifié ISO 9001-2008
W415-0562 / B / 10.08.15


Cet ensemble comprend :

#	Nom	QTÉ
1	Déflecteur secondaire	1
2	Vis à métal	4
3	Écrous	4

1. Placez le déflecteur secondaire (face creuse orientée vers l'intérieur) derrière le déflecteur de fumée. Assurez-vous de poussez le déflecteur secondaire aussi haut que possible, bien serré contre l'arrière du déflecteur de fumée.

2. Utilisez les quatre vis et écrous fournis pour fixer le déflecteur secondaire au déflecteur de fumée.

.

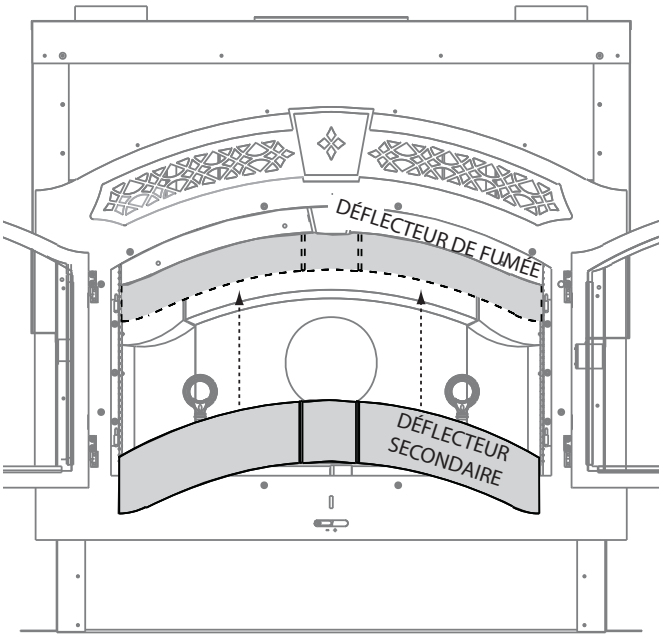

Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON L4M 0G8 Canada • (705)721-1212 • télécopieur(705)722-6031 • www.napoleonfoyers.com

W535-0008 NZ6000 SMOKE SHELF EXTENSION INSTALLATION INSTRUCTIONS


Quality System Certified To ISO 9001-2008
W415-0562 / B / 10.08.15

This kit includes:

#	Name	QTY.
1	Smoke Shelf Extension	1
2	Machine Screws	4
3	Nuts	4

1. Place the smoke shelf extension (indent facing to the inside) in behind the smoke shelf / air wash plate. Make sure the smoke shelf extension is pushed up as high as it will go, and tight against the back of the air wash plate.

2. Use the 4 screws and nuts provided to secure the smoke shelf extension in place.

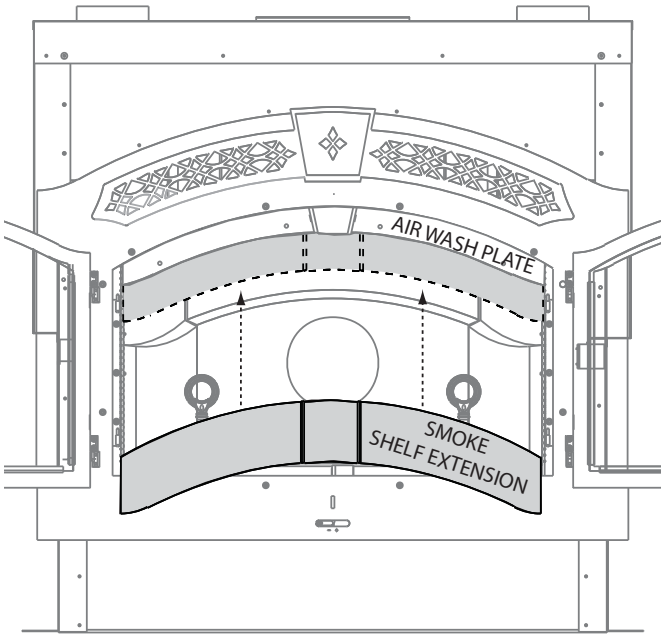

Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON L4M 0G8 Canada • (705)721-1212 • fax (705)722-6031 • www.napoleonfireplaces.com

W535-0008
NZ6000 SMOKE SHELF EXTENSION
INSTALLATION INSTRUCTIONS


Quality System Certified To ISO 9001-2008
W415-0562 / B / 10.08.15

This kit includes:

#	Name	QTY.
1	Smoke Shelf Extension	1
2	Machine Screws	4
3	Nuts	4

1. Place the smoke shelf extension (indent facing to the inside) in behind the smoke shelf / air wash plate. Make sure the smoke shelf extension is pushed up as high as it will go, and tight against the back of the air wash plate.

2. Use the 4 screws and nuts provided to secure the smoke shelf extension in place.

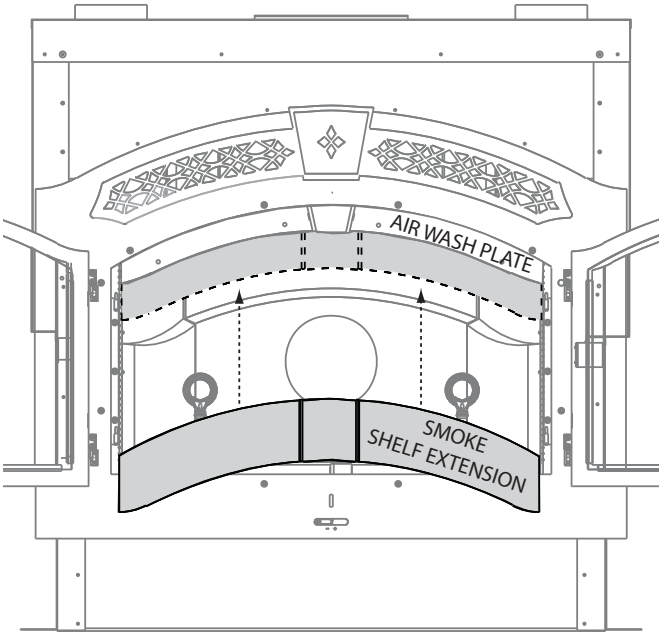

Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON L4M 0G8 Canada • (705)721-1212 • fax (705)722-6031 • www.napoleonfireplaces.com

INSTRUCTIONS D'INSTALLATION
DU DÉFLECTEUR SECONDAIRE
W535-0008 POUR LE NZ6000


Quality System Certified To ISO 9001-2008
W415-0562 / B / 10.08.15

Cet ensemble comprend :

#	Nom	QTÉ
1	Déflecteur secondaire	1
2	Vis à métal	4
3	Écrous	4

1. Placez le déflecteur secondaire (face creuse orientée vers l'intérieur) derrière le déflecteur de fumée. Assurez-vous de poussez le déflecteur secondaire aussi haut que possible, bien serré contre l'arrière du déflecteur de fumée.

2. Utilisez les quatre vis et écrous fournis pour fixer le déflecteur secondaire au déflecteur de fumée.

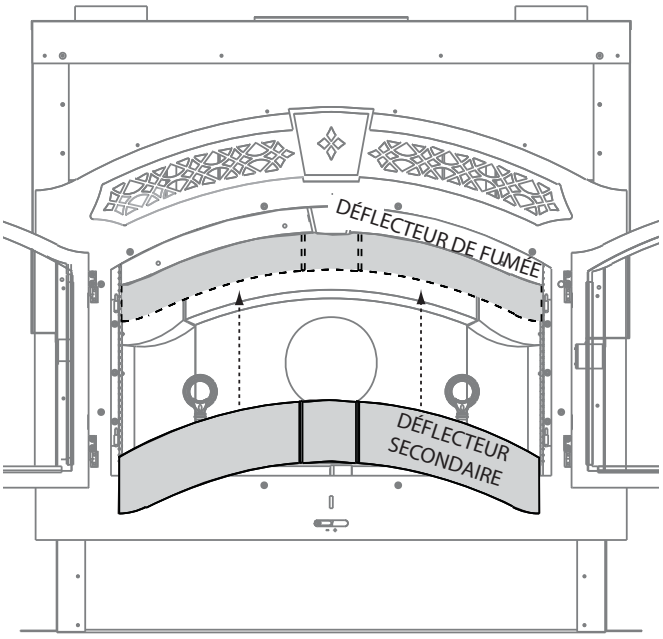

Wolf Steel Ltd., 24 Napoleon Rd., Barrie, ON L4M 0G8 Canada • (705)721-1212 • télécopieur(705)722-6031 • www.napoleonfoyers.com