










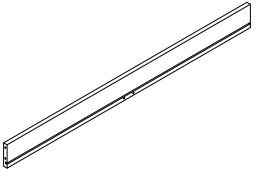

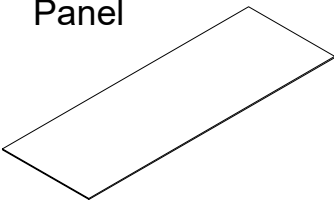




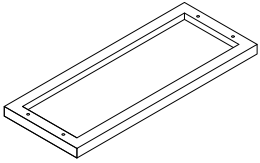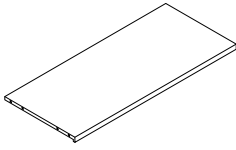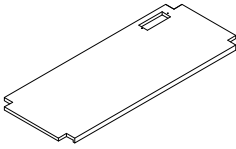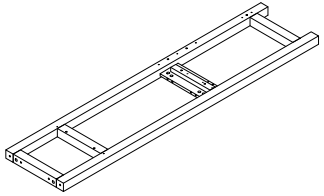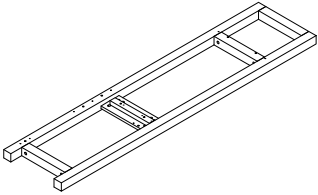
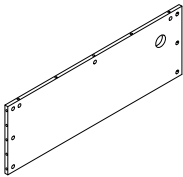
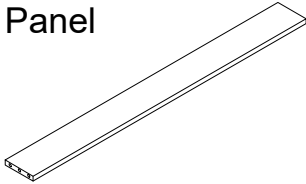
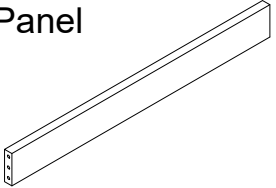
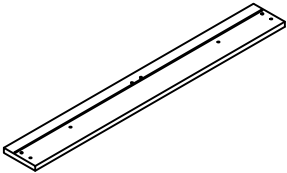









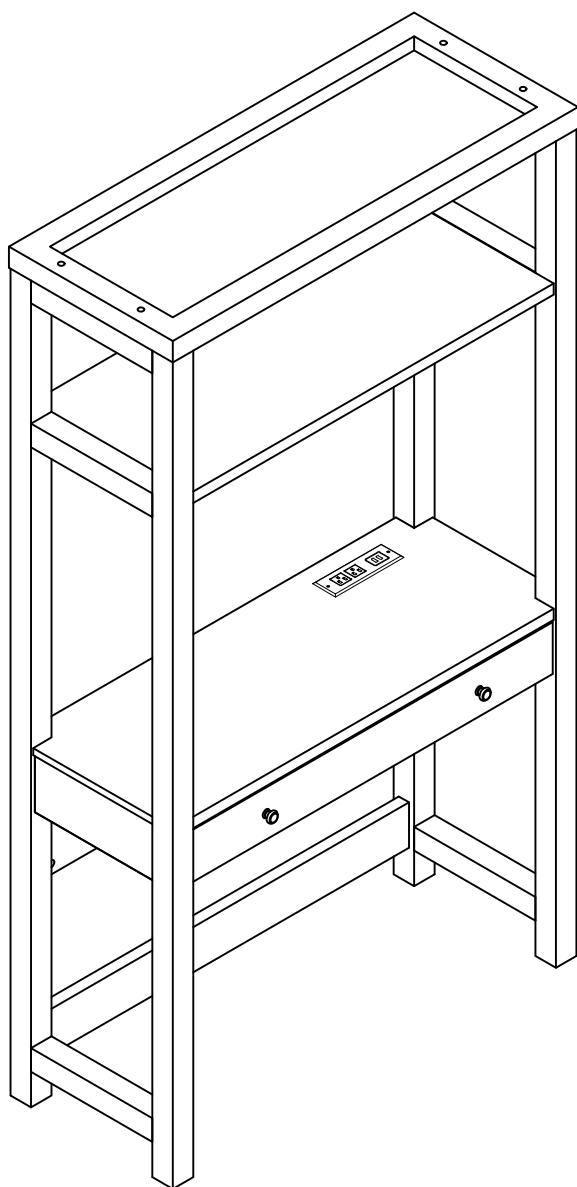


ASSEMBLY INSTRUCTION

WALL DESK WITH USB CHARGER & WIRE MANAGEMENT

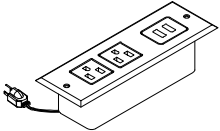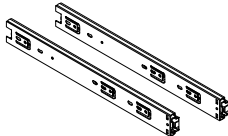A Top Panel  1pc	B Shelf Panel  1pc	C Desk Top Panel  1pc	D Left Side Frame  1pc
E Right Side Frame  1pc	F Back Panel  1pc	G Bottom Support Panel  1pc	H Back Bottom Panel  1pc
I Drawer Front Panel  1pc	J Drawer Side Panel - L  1pc	K Drawer Side Panel - R  1pc	L Drawer Back Panel  1pc
M Drawer Support Panel  1pc	N Drawer Bottom Panel  1pc	O Wood Dowel Ø8*30mm  22pcs	P Wood Dowel Ø6*30mm  3pcs
Q Nut Ø15*12mm  25pcs	R Nut Ø15*9mm  3pcs	S Bolt Ø5*25mm  28pcs	T Screw Ø6*50mm  4pcs
U Adaptor  1pc	V Screw Ø3*12mm  2pcs	W Slide Rail  1set	X Screw Ø3.5*12mm  12pcs

Y	Knob	Z	Bolt Ø4*22mm	AA	Screw Ø4*30mm	AB	Allen Key M4
							
	2pcs		2pcs		6pcs		1pc
AC	Anti-Tipping Kit	AD	Glue	AE	Grommet Ø50	AF	Screwdriver (Not Provided)
							
	2sets		1pc		1pc		1pc

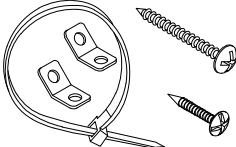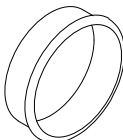


This first page and second page list all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


ASSEMBLY

Do not fully tighten all bolts until assembly is complete. This will help all parts to assemble properly.


- 1 Pull out Slide Rail (W) fully extended, a hold-in detent can be seen or touched on slide runners.

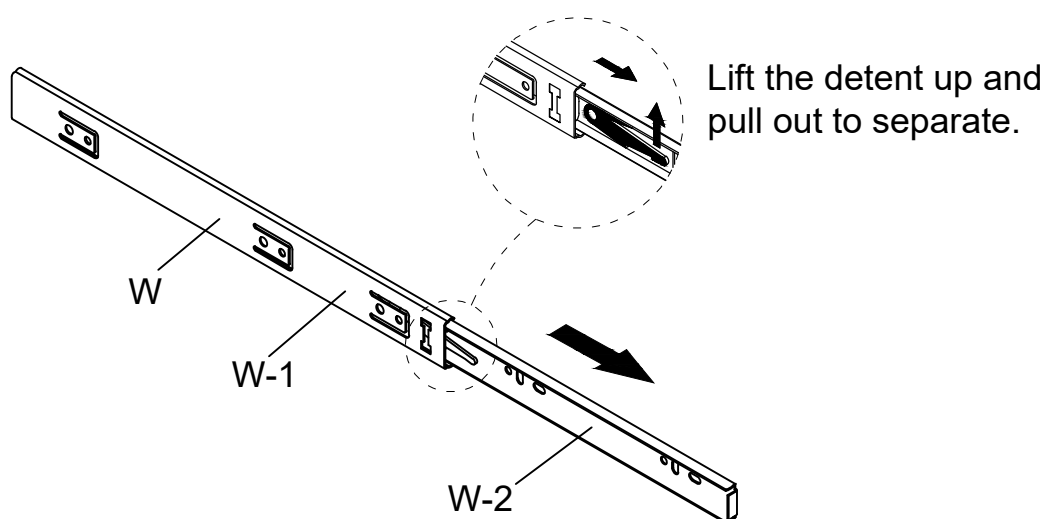


- 2 Insert Bolt (S) into Drawer Front Panel (I) and Desk Box Top (C) by Screwdriver (AF) as below shown.

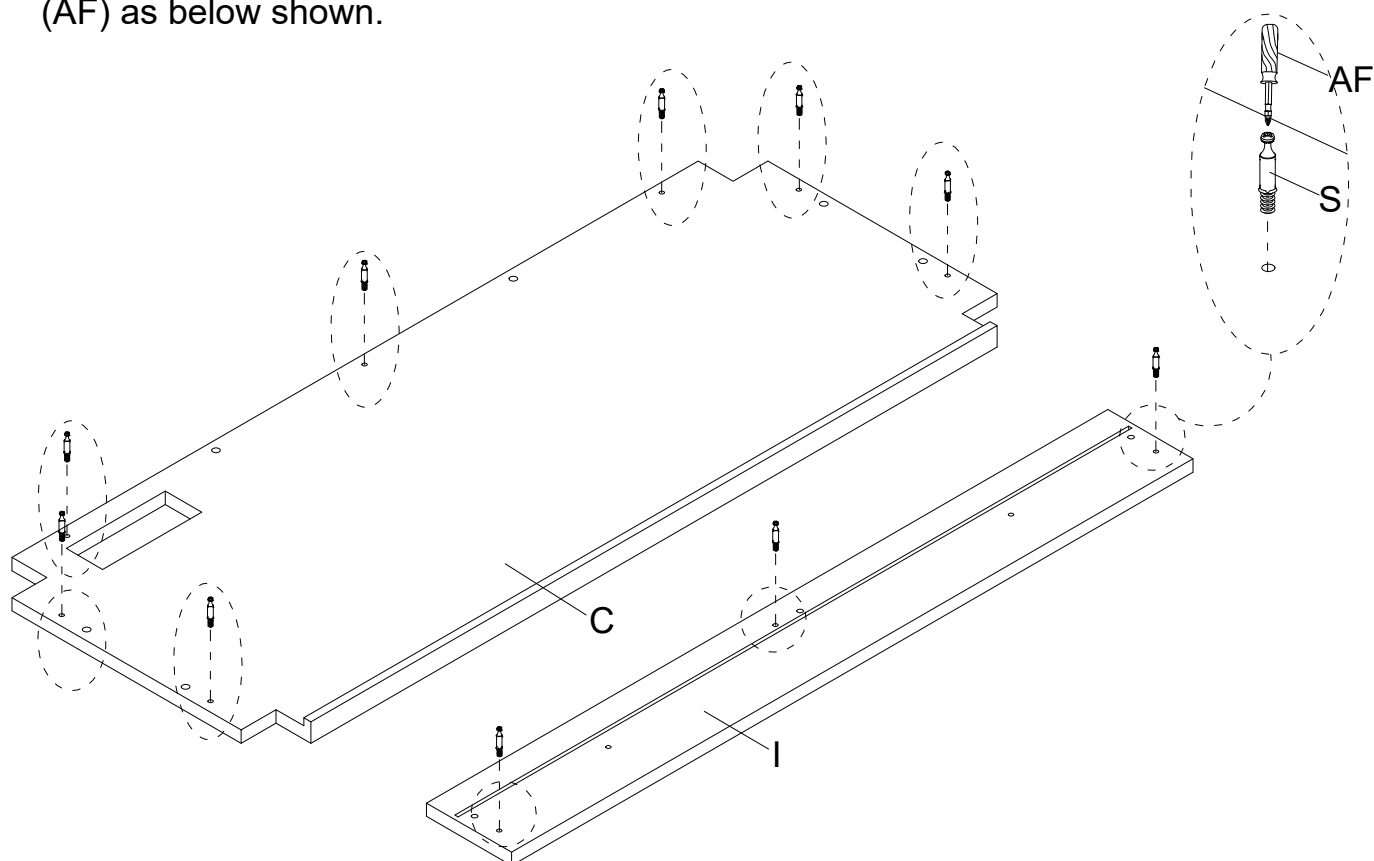


- 3** Assemble part one of Slide Rail (W-1) to Left Side Frame (D) and Right Side Frame (E) using Screw (X) by Screwdriver (AF) as below shown.

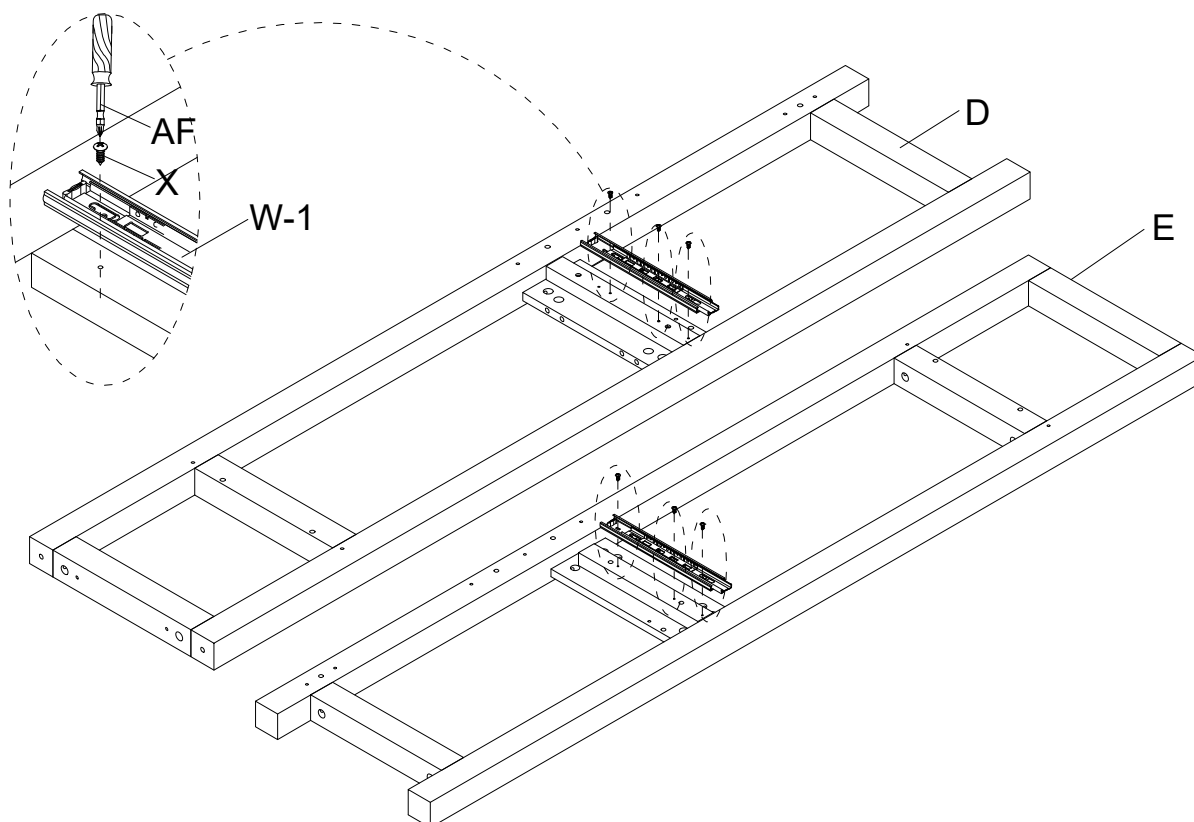


- 4** Insert Bolt (S) into Left Side Frame (D) and Right Side Frame (E) by Screwdriver (AF) as below shown.

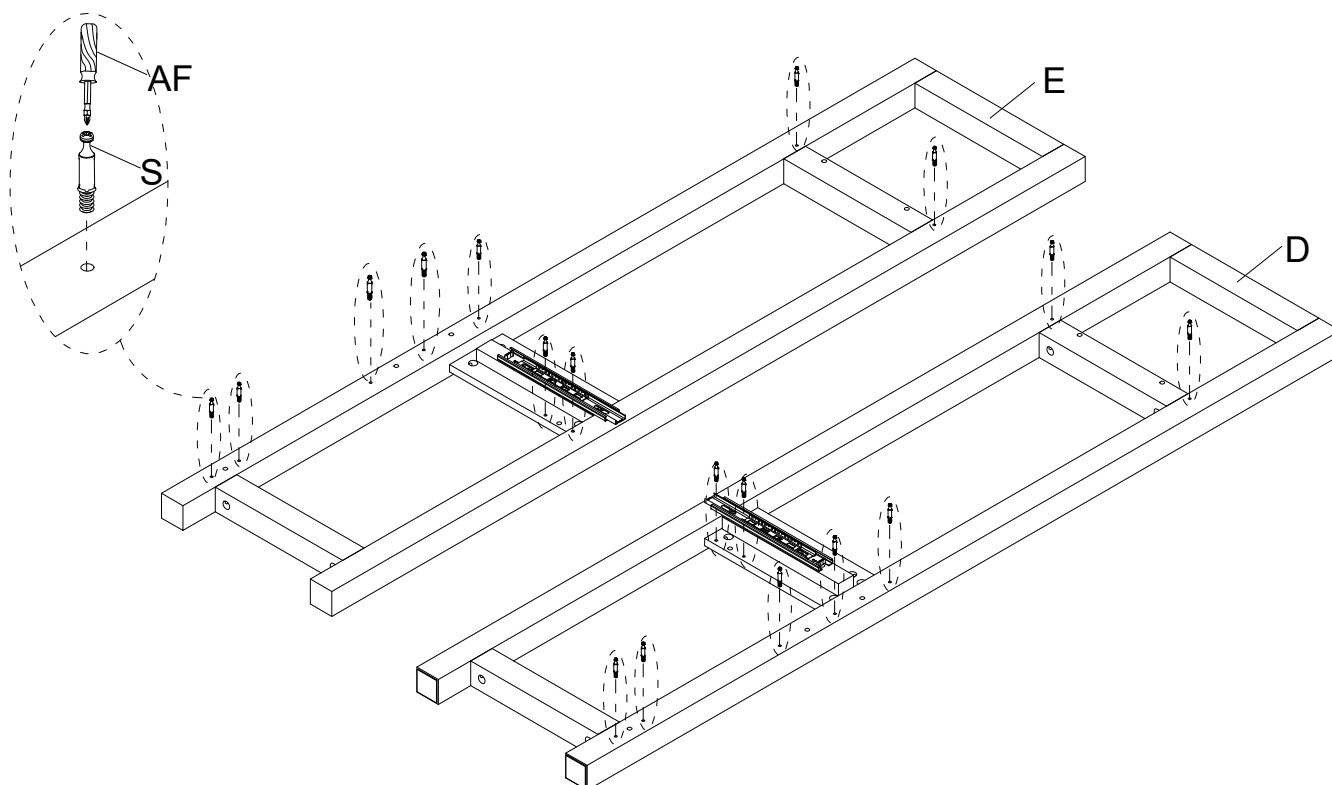


- 5** Assemble Back Panel (F) and Shelf Panel (B) to Right Side Frame(E), using Glue (AD) & Wood Dowel (O) first, then attach Nut (Q) to Bolt (S) by Screwdriver (AF), put Grommet (AE) to Back Panel (F) as below shown.

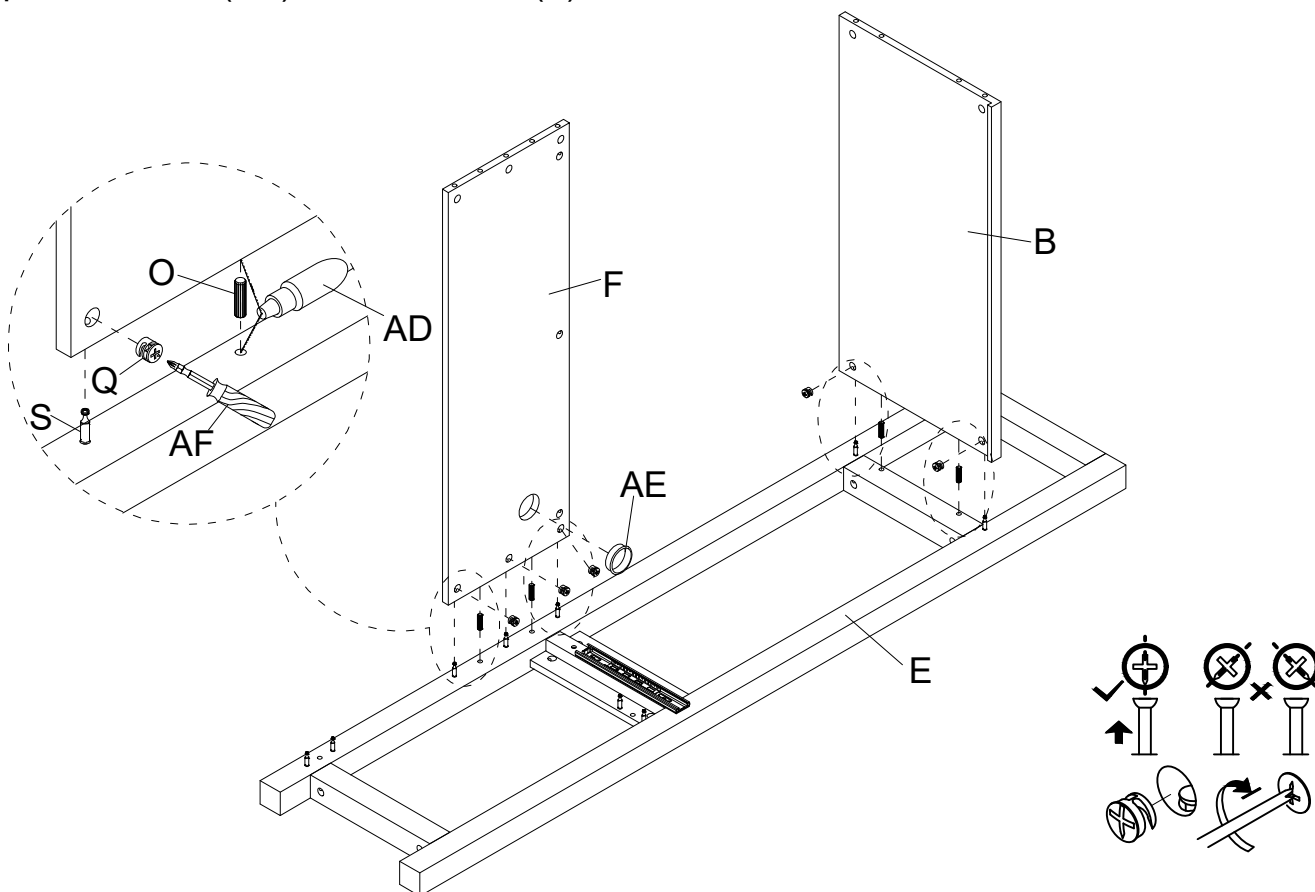


- 6** Assemble Bottom Support Panel (G) and Back Bottom Panel (H) to Right Side Frame(E), using Glue (AD) & Wood Dowel (O) first, then attach Nut (Q) to Bolt (S) by Screwdriver (AF) as below shown.

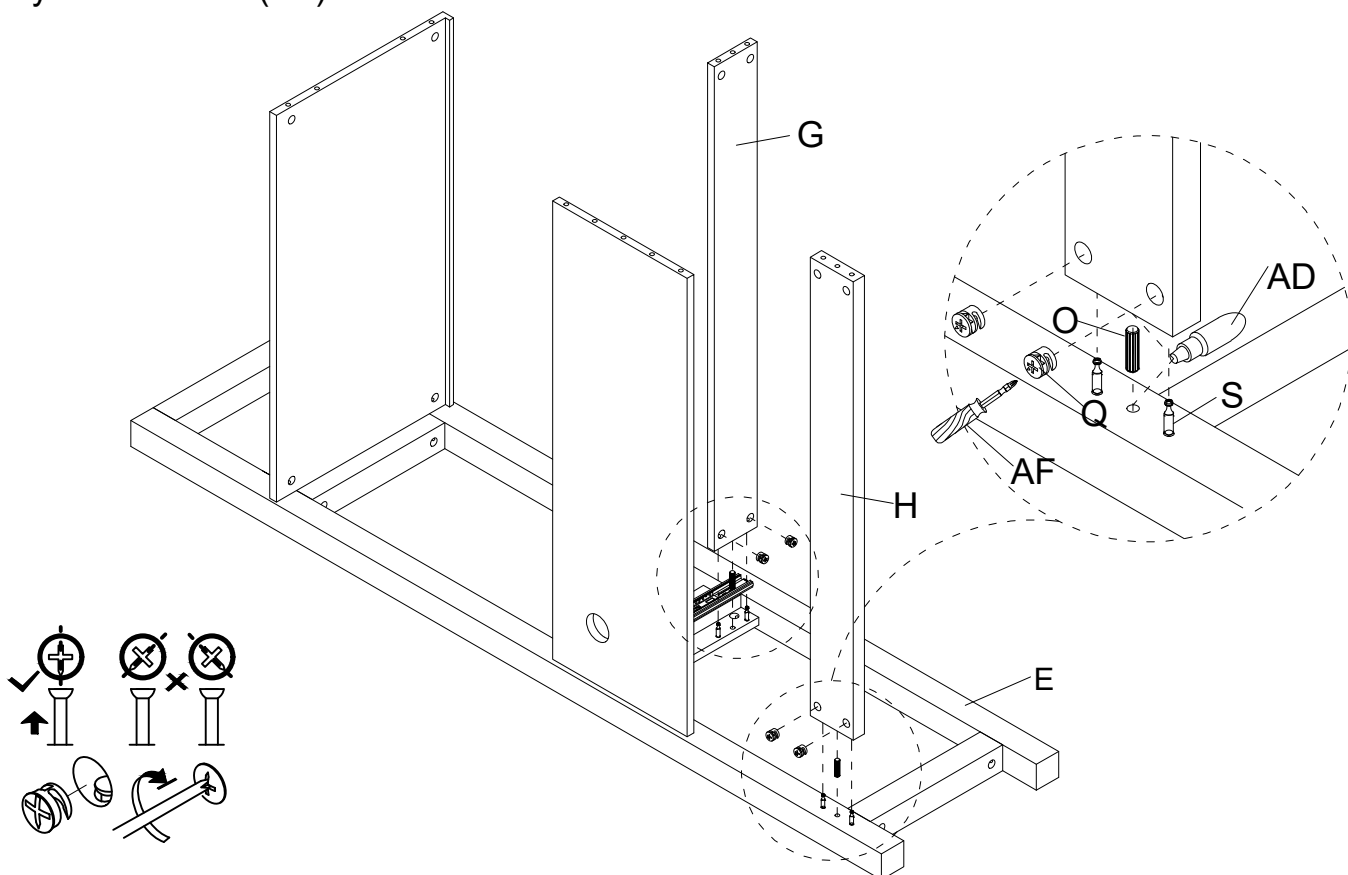


- 7** Assemble Left Side Frame (D) to pre-assembled Bottom Support Panel (G) and Back Bottom Panel (H), Back Panel (F) and Shelf Panel (B), using Glue (AD) & Wood Dowel (O) first, then attach Nut (Q) to Bolt (S) by Screwdriver (AF) as below shown.

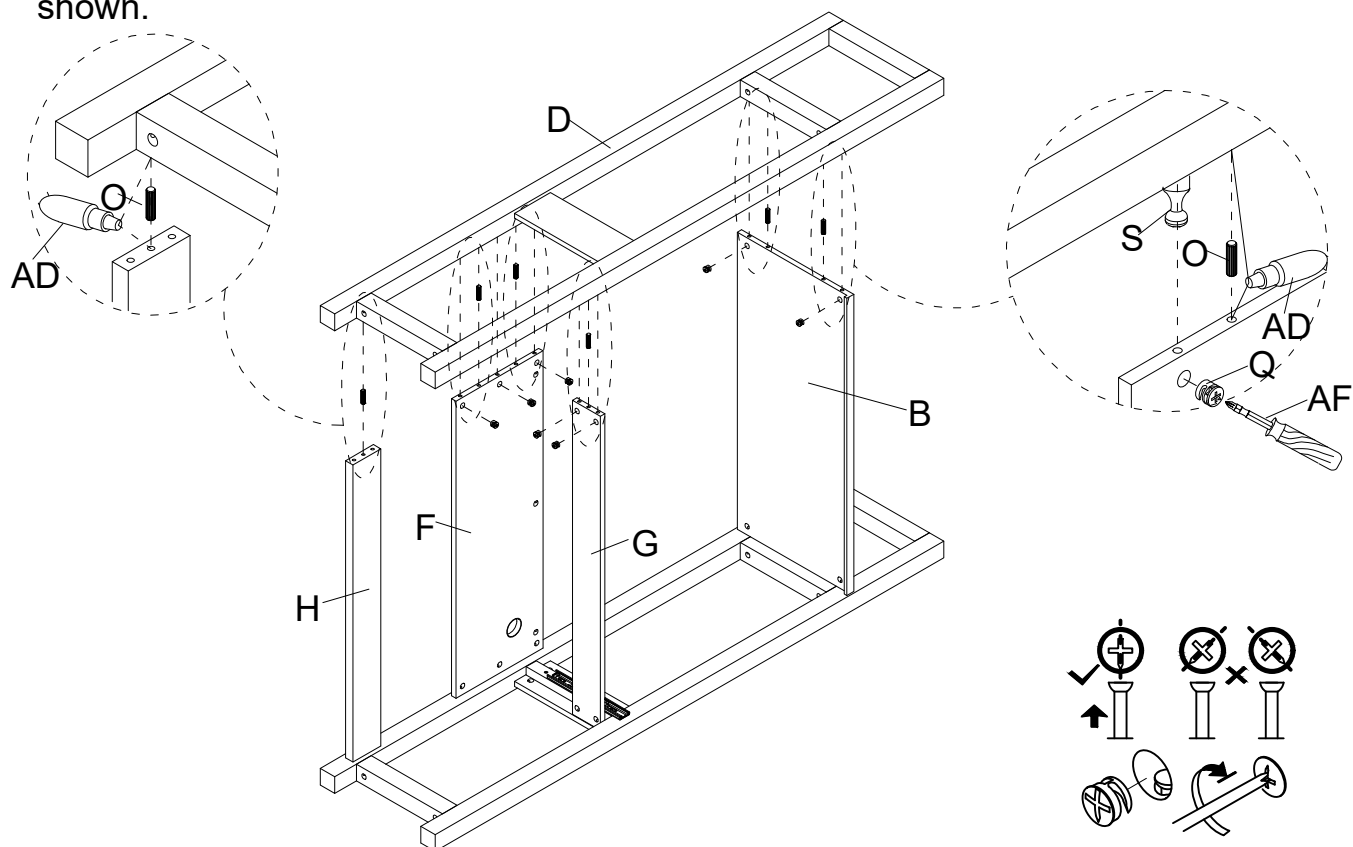


- 8** Assemble Back Bottom Panel (H) to Side Frame (D), using Nut (Q) by Screwdriver (AF) as below shown.

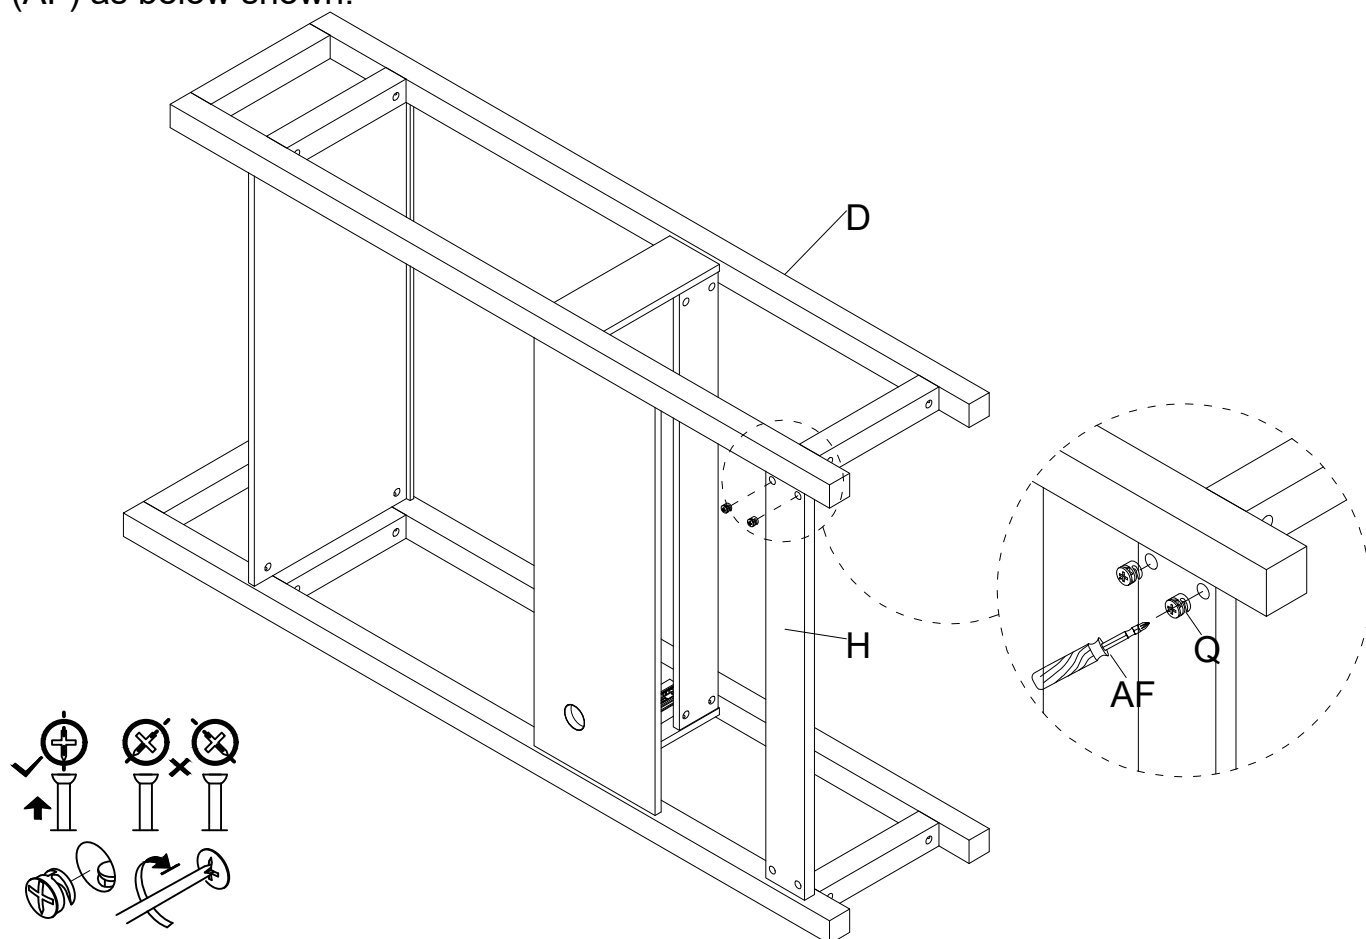


- 9** Assemble Top Frame (A) to Left Side frame (D) & Right Side Frame (E) using Wood Dowel (O) & Glue (AD) and Screw (T) by Allen Key (AB) as below shown.

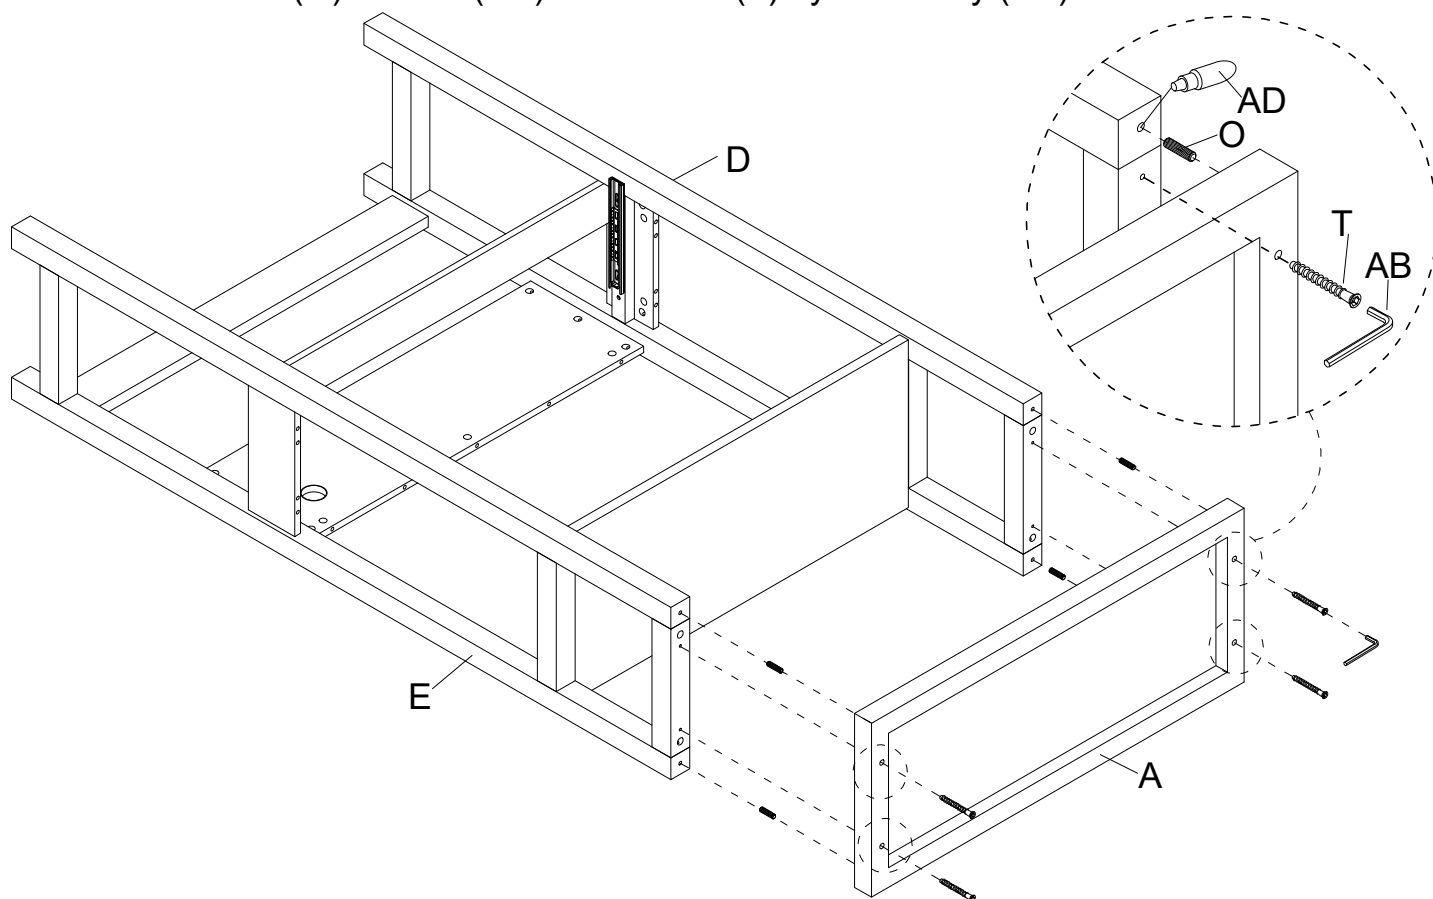


- 10** Insert Wood Dowel (O) to Left side frame (D), Right Side Frame (E) and Back Panel (F) with Glue (AD), Put Desk Box Top (C) slanted to space as below shown.

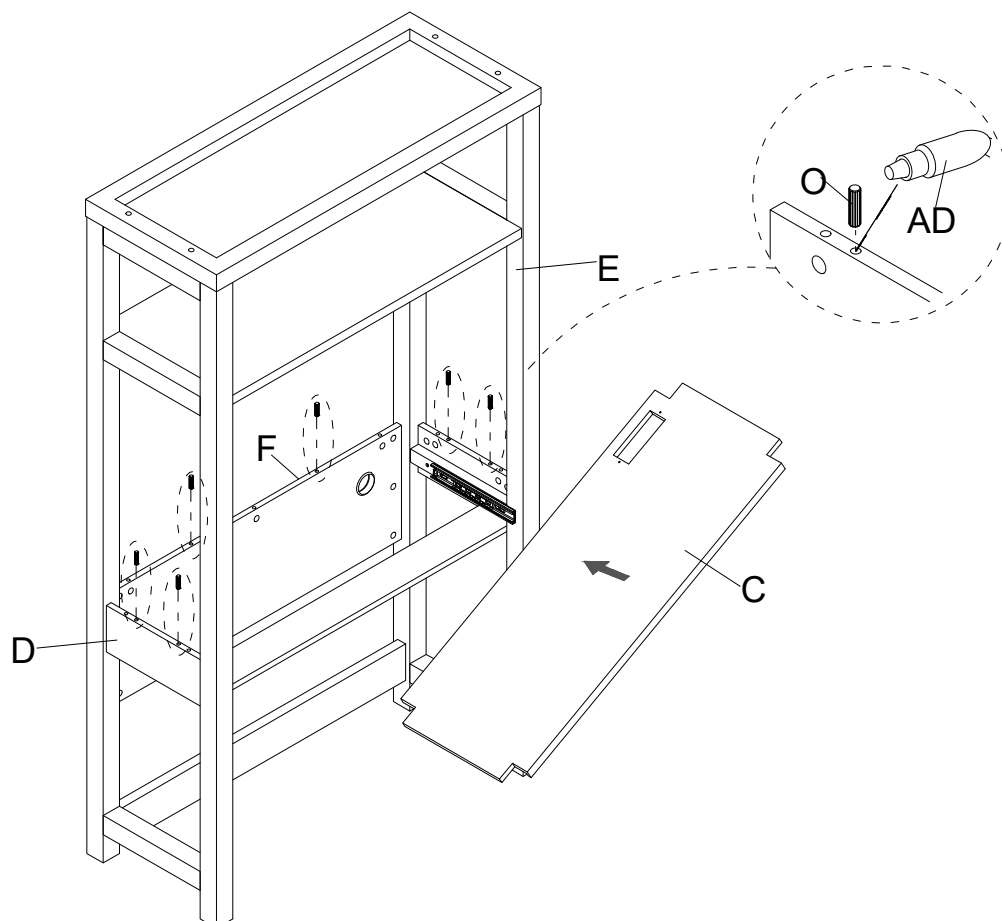


- 11** Put Desk Box Top (C) to the top of Back Panel (F), Left side frame (D) and Right Side Frame (E) using Nut (Q) by Screwdriver (AF) as below shown.

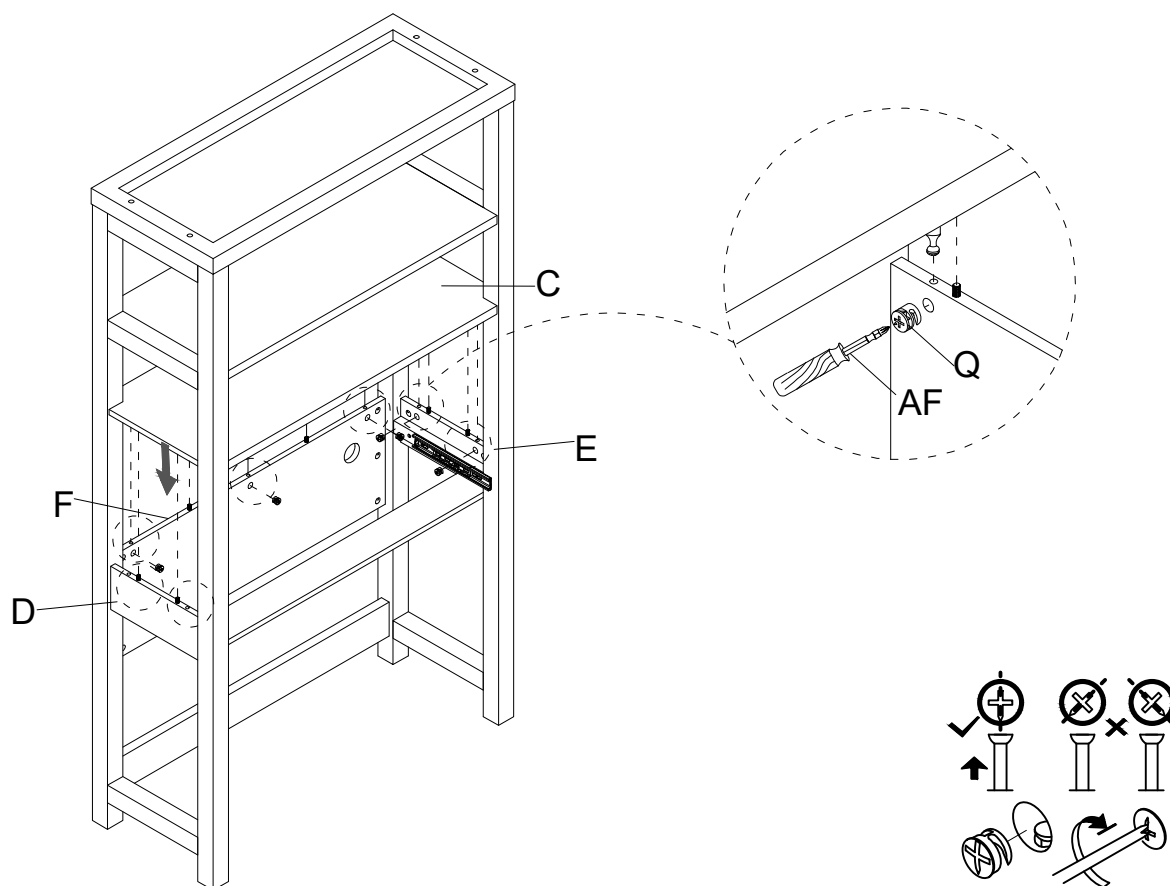


- 12** Attach Adaptor (U) to the hole of Desk Box Top (C), using Screw (V) by Screwdriver (AF) as below shown.

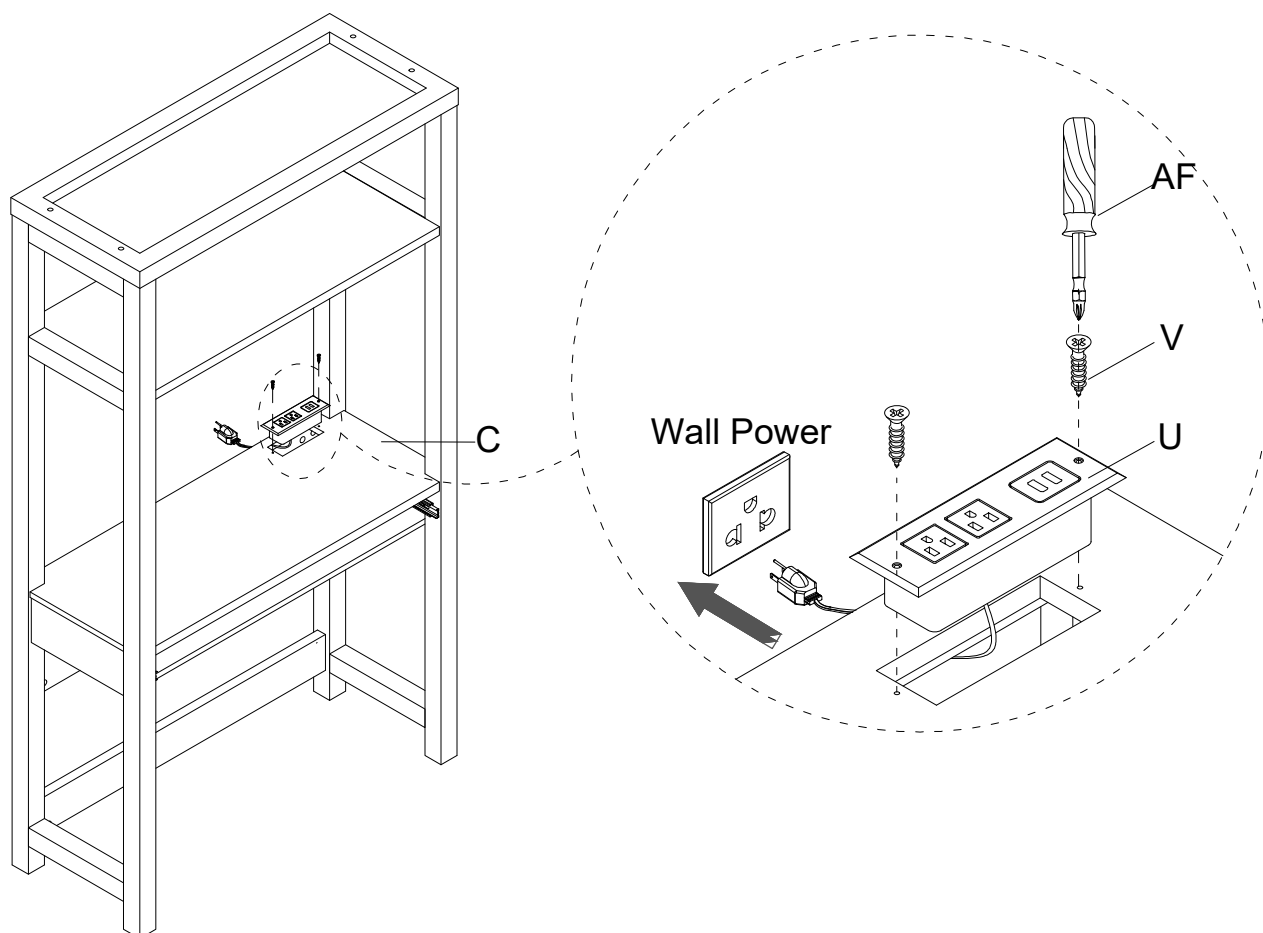


- 13** Assemble part 2 of Slide Rail (W-2) to Drawer Side Panel - L (J) and Drawer Side Panel - R (K), using Screw (X) to tighten by Screwdriver (AF). Insert Wood Dowel (P) to Drawer Side Panel - L (J) & Drawer Side Panel - R (K) as below shown.

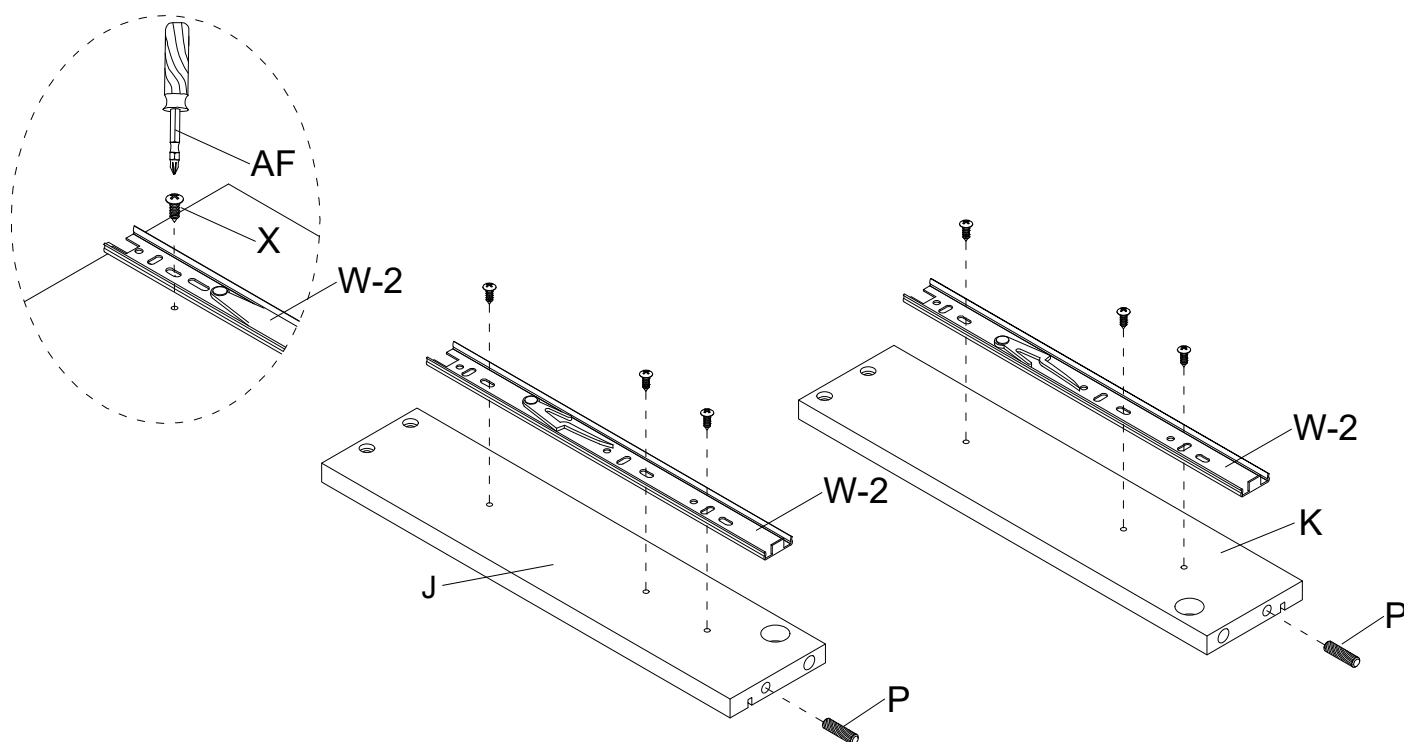


- 14** Insert Drawer Bottom Panel (N) into Drawer Side Panel - L (J), Drawer Side Panel - R (K) and Drawer Back Panel (L), then using Screw (AA) by Screwdriver (AF) to assemble Drawer Side Panel - L (J), Drawer Side Panel - R (K) with Drawer Back Panel (L) as below shown.

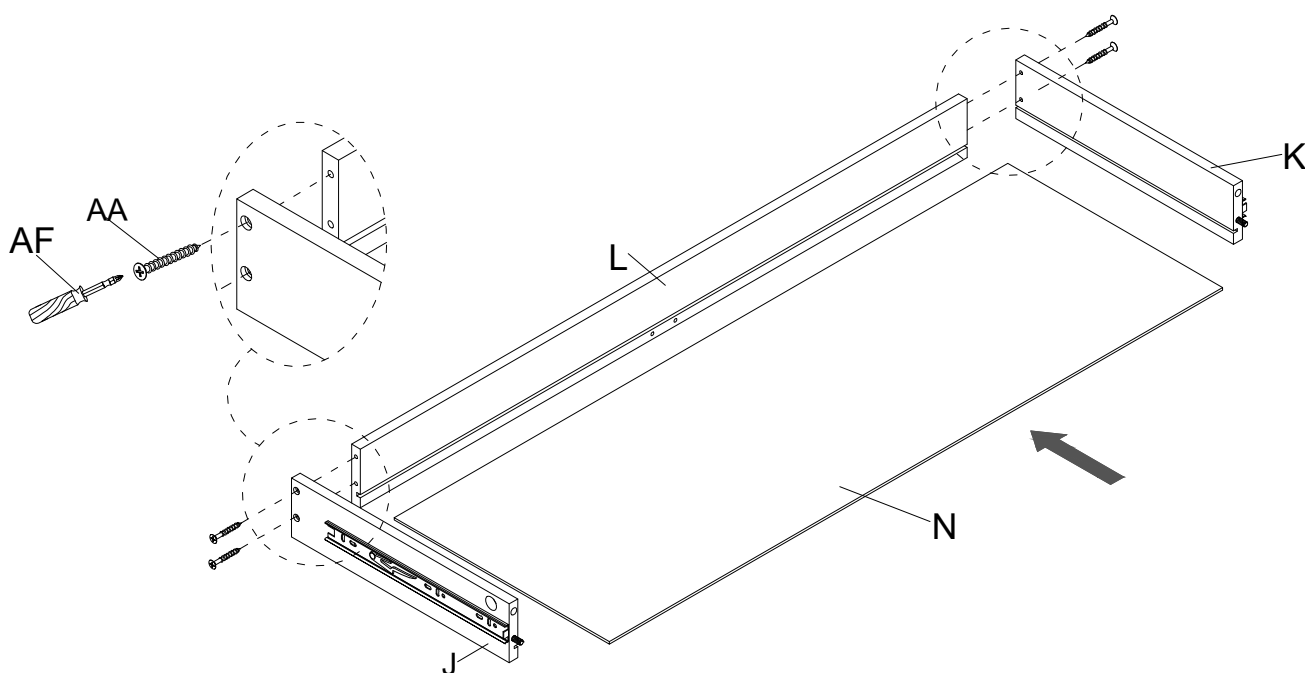


- 15** Insert Wood Dowel (P) to Drawer Support Panel (M) first, assemble Drawer Front Panel (I) to pre-assembled drawer box using Nut (R) to Bolt (S) by Screwdriver (AF), assemble Drawer Back Panel (L) to Drawer Support Panel (M) using Screw (AA) by Screwdriver (AF) as below shown.

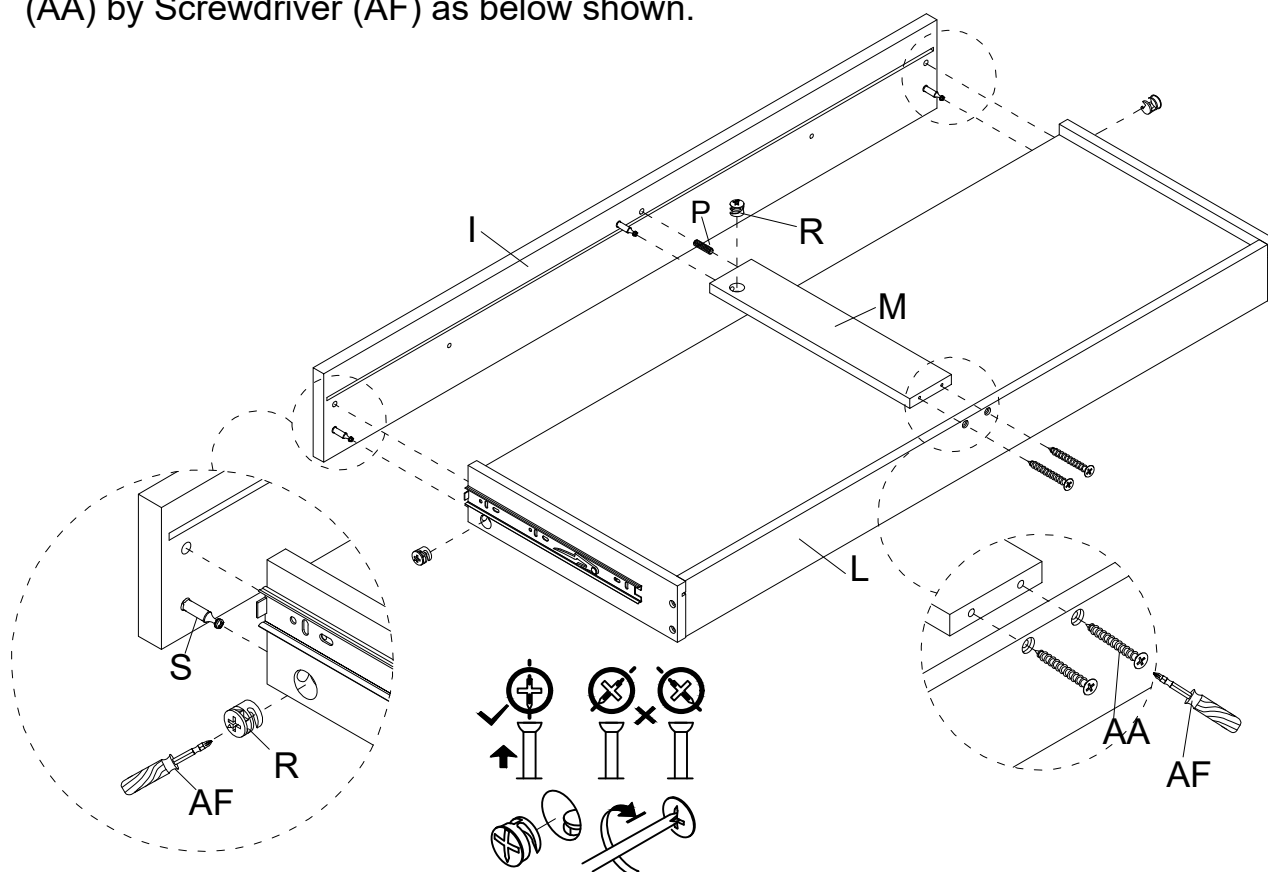


- 16** Attach Knob (Y) to Drawer Front Panel (I), using Bolt (Z) by Screwdriver (AF) as below shown.

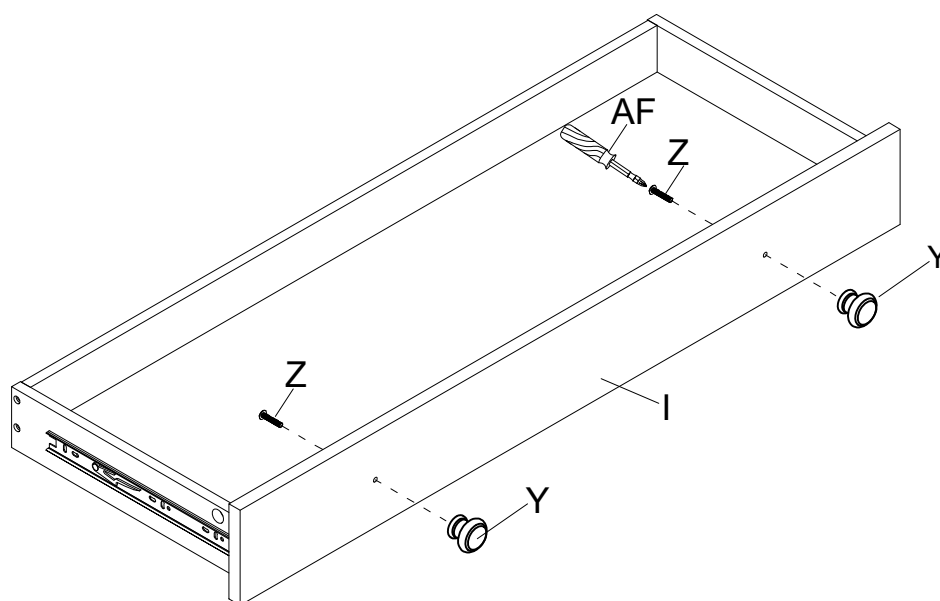

- 17** Attach the pre-assembled drawer by using Slide Rail (W) to the pre-assembled Wall Desk. Move slide ball spacers to front. Hold drawer horizontally, and slide runners into ball spacers.

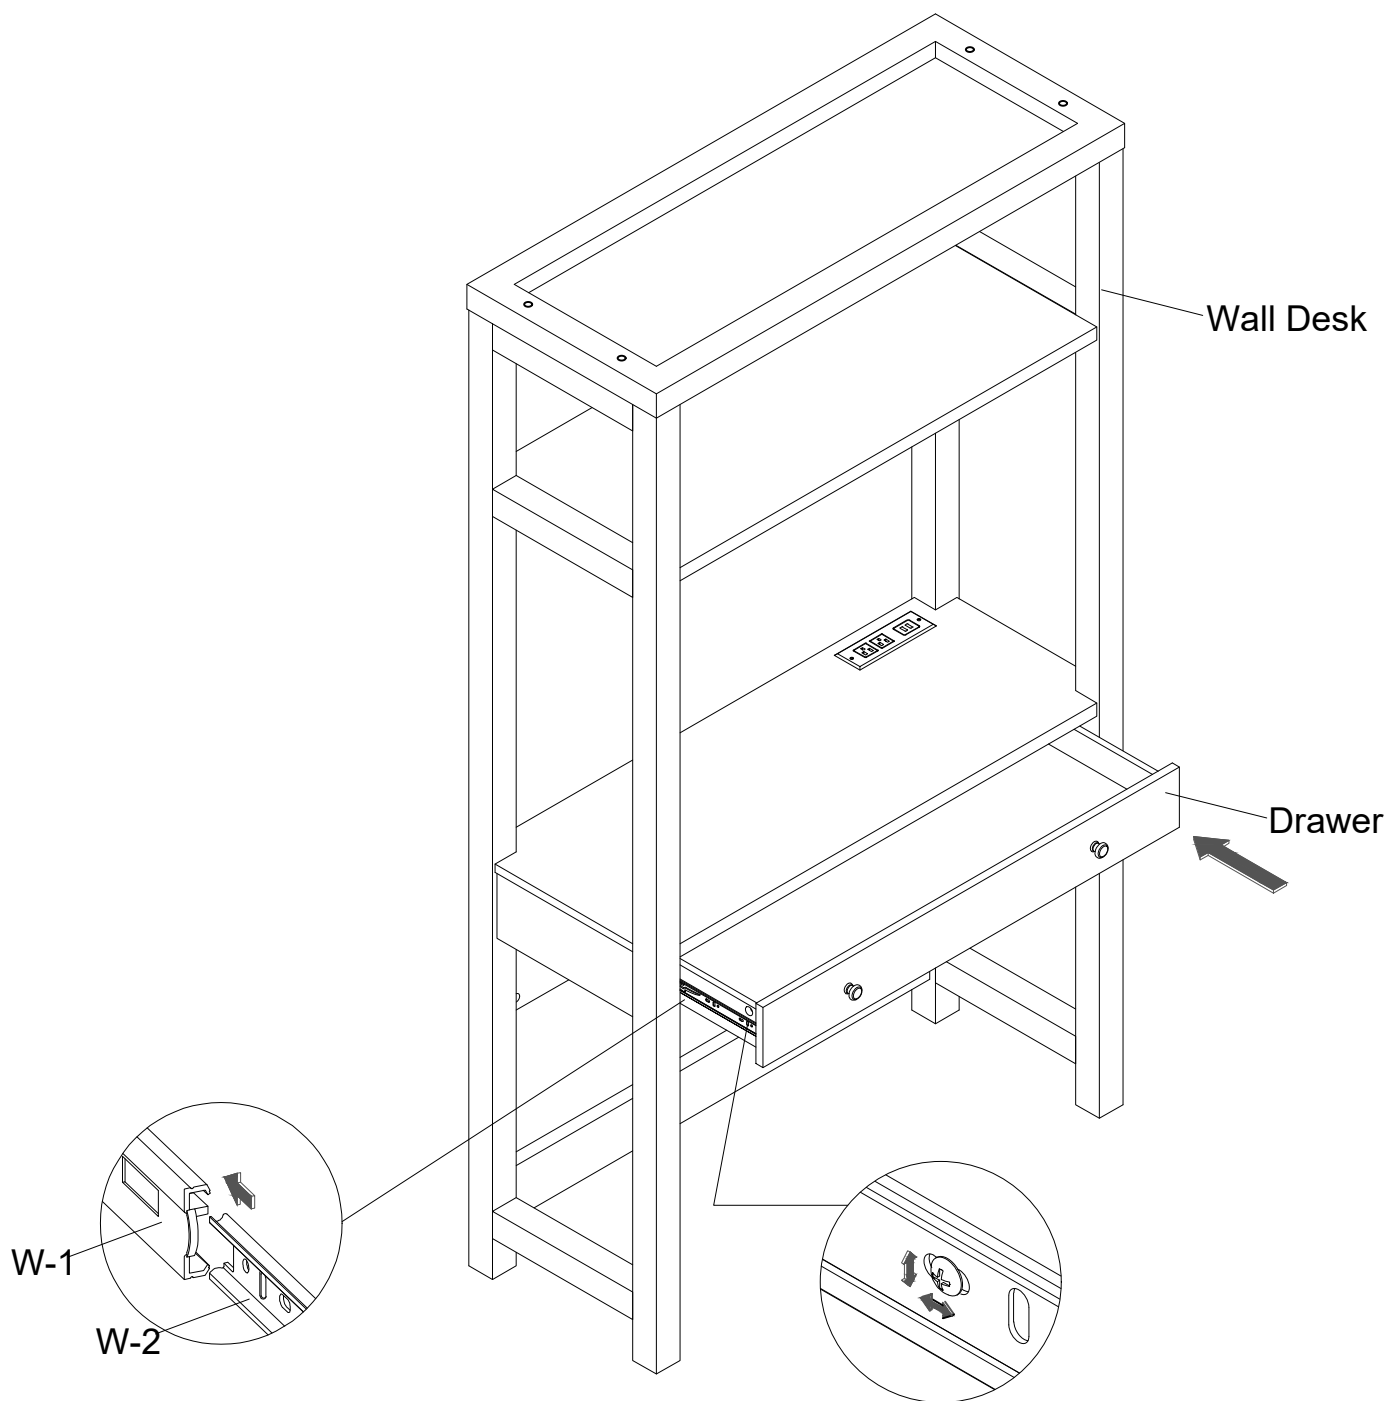

- 18** Remark: there is an Anti-Tipping Kit (AC) provided on the back of this product. Please read the instruction thoroughly and install immediately when placed in home. To prevent tip over, the product must be attached to wall.

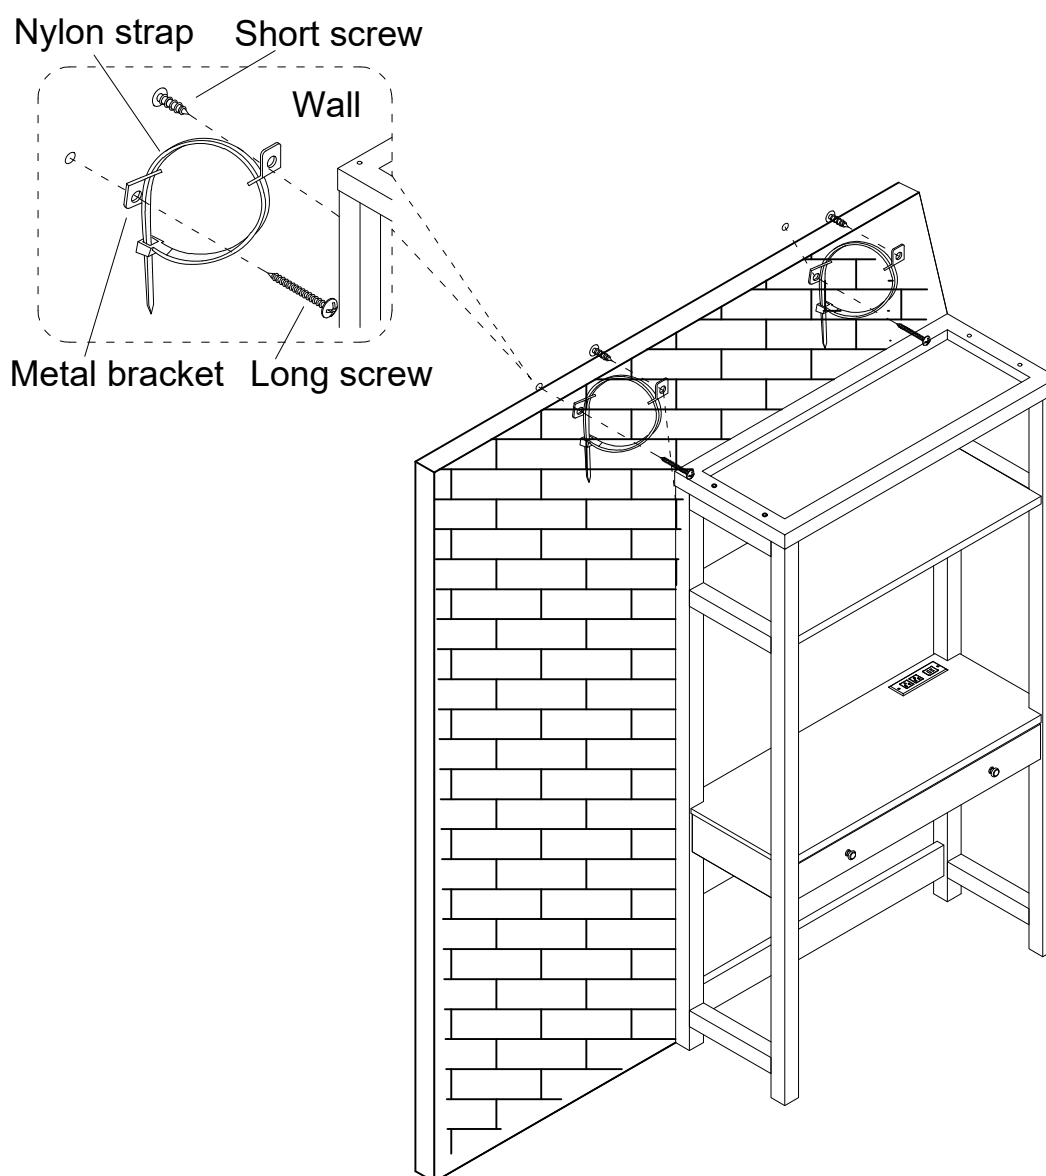

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.