


Item #: BRLAC4D

Assembly Instruction

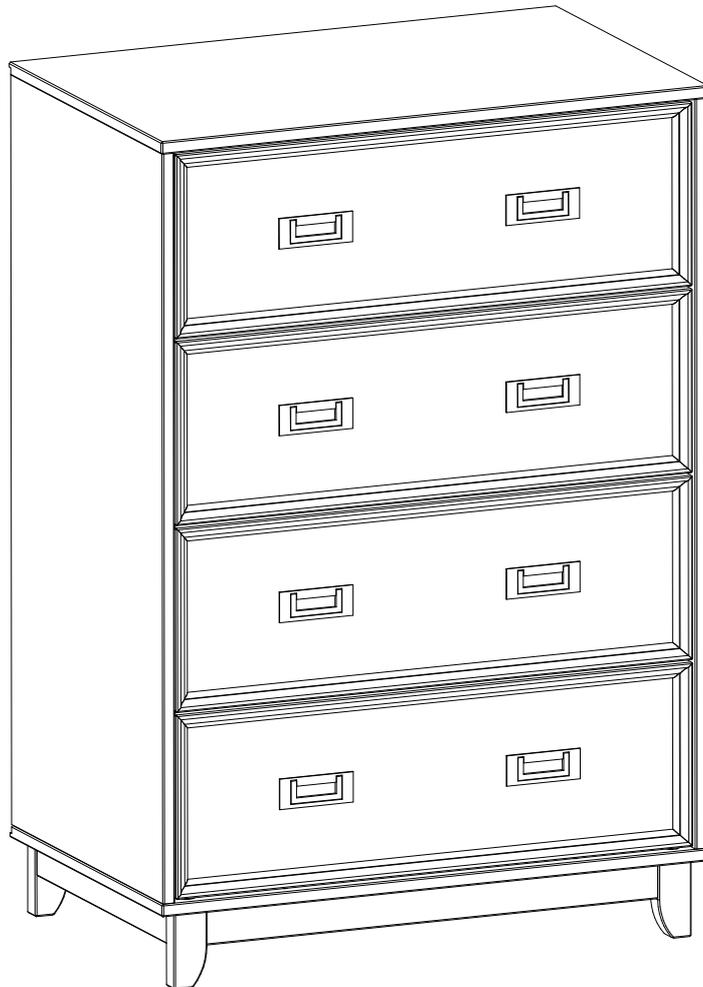


Please visit our website for the most current instructions, assembly tips, to report damage or request parts. www.walkeredison.com


Revised 05/2022 V1

General Assembly Guidelines

- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. A Phillips head screwdriver is required for the assembly of this product .

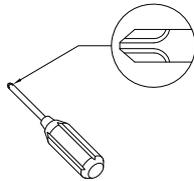

- VI. Power tools should not be used to assemble this product .





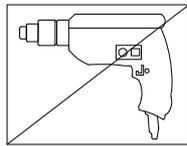



Maintenance Guide

To maintain long term performance and easy gliding of your solid wood drawers, we recommend applying wax to the wooden guide rails.



1. Bee's wax is recommended or Paraffin wax from a standard candle can be used.
2. Apply the wax by rubbing it on the wooden guide rails where there is wood-on-wood contact when opening and closing the drawer. (Wax should be room temperature, do not melt the wax onto the wood).
3. Wax should be applied every few months for the first year and then only when needed after that to keep the drawers sliding smoothly.

Hardware List

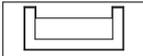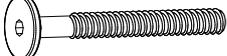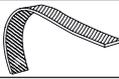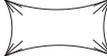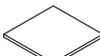A		Ø 8*20 mm	Wood dowel	16 pcs
B		Ø 8*30 mm	Wood dowel	72 pcs
C		Ø 4*25mm	Screw	24 pcs
D		Ø 3,5*30mm	Screw	62 pcs
F		Ø 3*10mm	Screw	16 pcs
G			Handles	08 pcs
H		Ø 4*40 mm	Screw	06 pcs
I		Ø 7*60 mm	Screw	04 pcs
J			Screw	01 pcs
K			Wall anchor	01 pcs
L			Hex Key	01 pcs
M		5g	Glue	01 pcs
N			Washer	02 pcs
O		20*20 mm	Felt	04 pcs

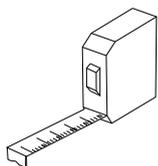

Tape measure and hammer recommended for assembly (not included)

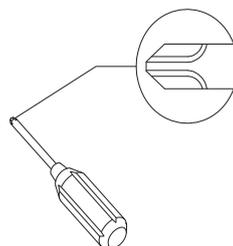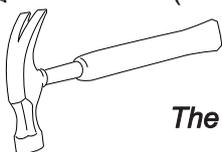

Philips head screwdriver required for assembly (not included)

*The hardware quantities listed above are required for proper assembly.
Some extra hardware may also have been included.*




Parts List



WARNING!
IN ORDER TO PREVENT OVER TURNING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICE PROVIDED
 Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent this item of furniture tipping over:
 * Use the wall attachment device provided.
 * Do not let children climb or hang on drawers, doors or shelves.
 * Place the heaviest items in the lower drawers or shelves.
 * Do not place TV's or other heavy objects on top of this product, unless it has specifically designed to support them.
 * Never open more than one drawer at a time.
 An attachment device is provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified trades person.
 Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

WARNING
Children have died from Furniture Tipover. To reduce the risk of furniture tipover:
 • ALWAYS install tipover restraint provided.
 • NEVER put a TV on this product.
 • NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
 • NEVER open more than one drawer at a time.
 • Place heaviest items in the lowest drawers.
This is a permanent label. Do not remove!

The side drawer with WARNING LABEL, should be mounted in highest drawer.

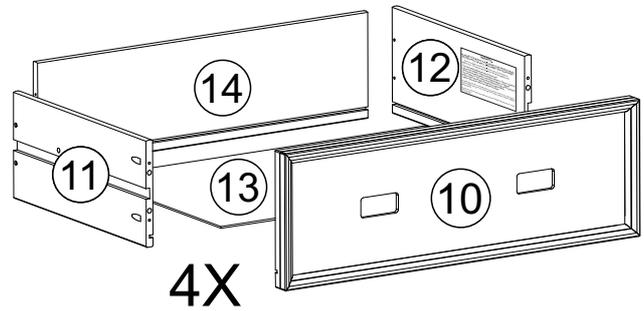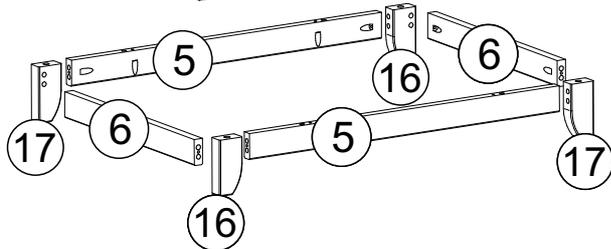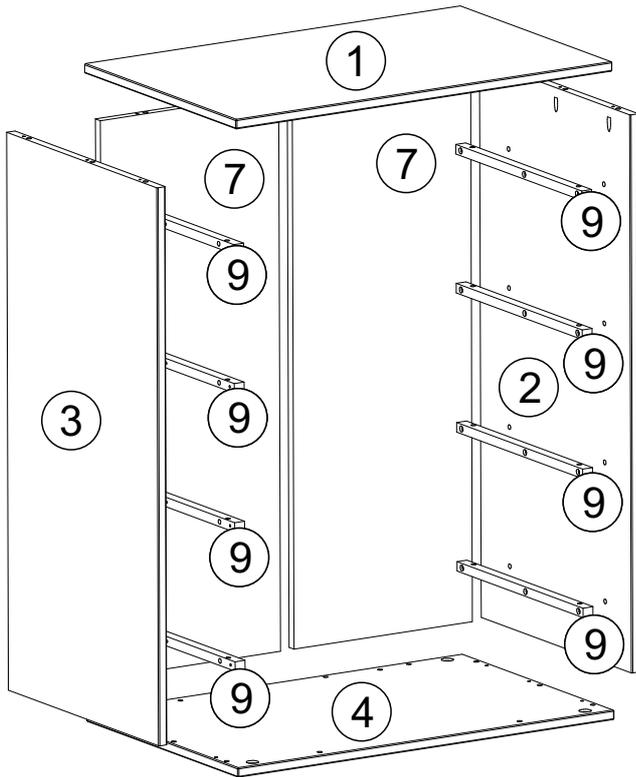

Part#	Description	Qty
1	Top panel	01 pcs
2	Right side panel	01 pcs
3	Left side panel	01 pcs
4	Bottom panel	01 pcs
5	Crossbeam of the foot	02 pcs
6	Side crossbeam of the foot	02 pcs
7	Back panel	02 pcs
9	Drawer slide	08 pcs






Part#	Description	Qty
10	Drawer front	04 pcs
11	Left drawer side	04 pcs
12	Right drawer side	04 pcs
13	Drawer bottom	04 pcs
14	Drawer back	04 pcs
16	Left foot	02 pcs
17	Right foot	02 pcs

Step 1

Insert wood dowel (A) into part (9).

Insert wood dowel (B) into part (2), (3), (5), (6), (7), (11) and (12).




Put the glue (M) in the holes of the pieces (5) and (6) before inserting the wood dowels.

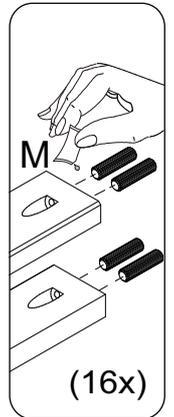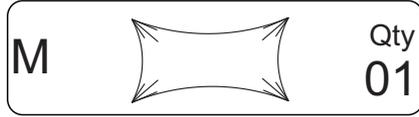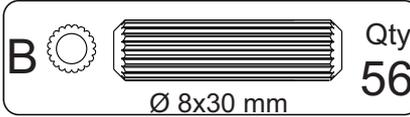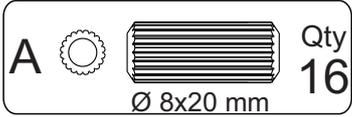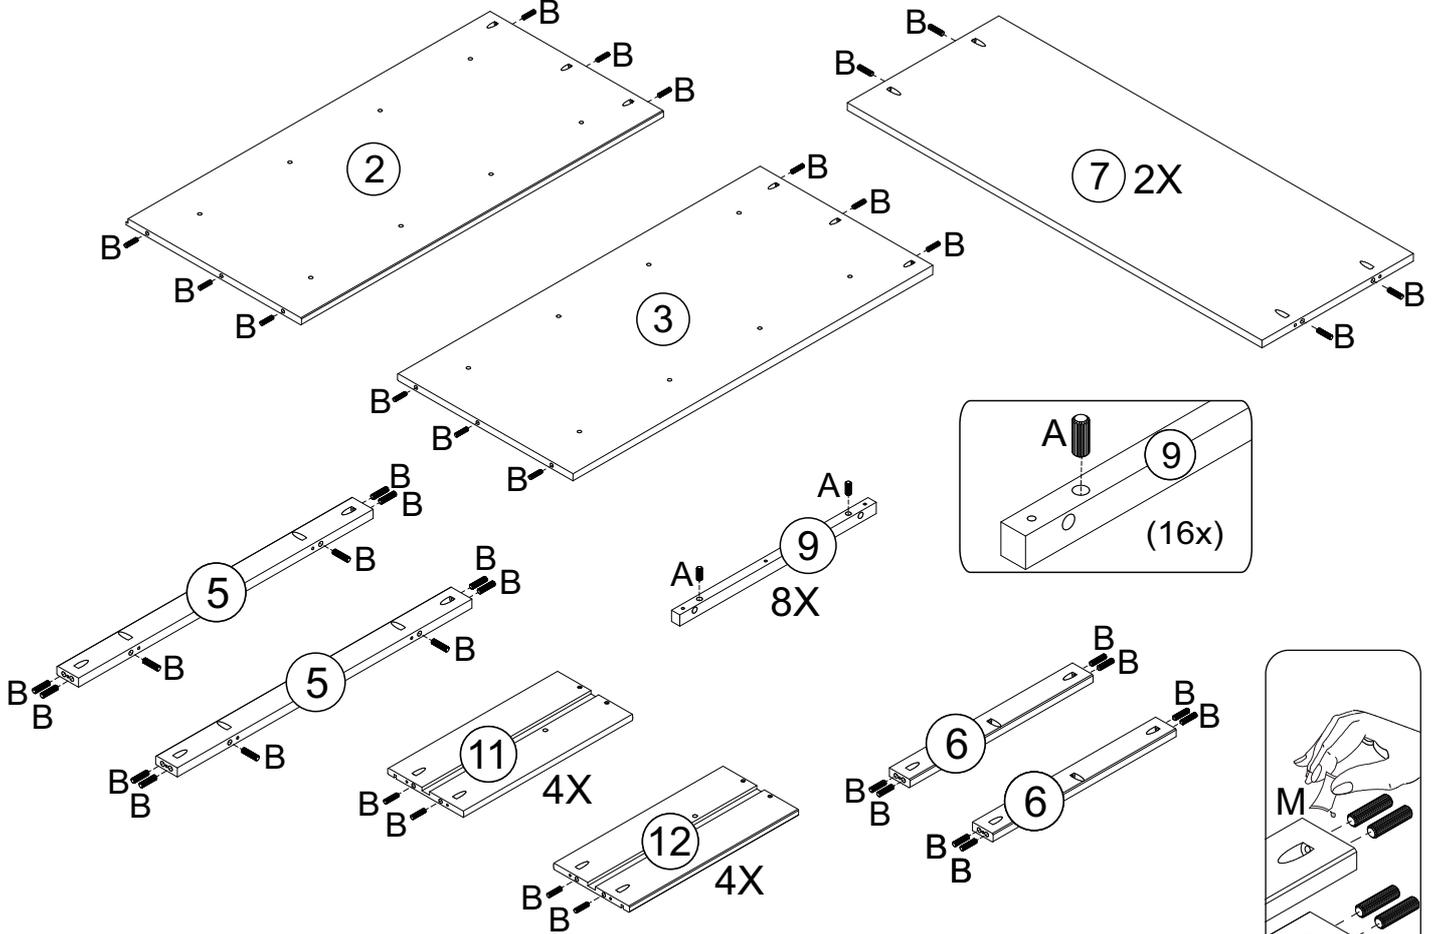








Step 2

Secure parts (2) and (3) to part (1) using screw (D).






!
Please assemble on a clean soft surface to avoid damage.

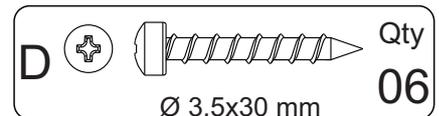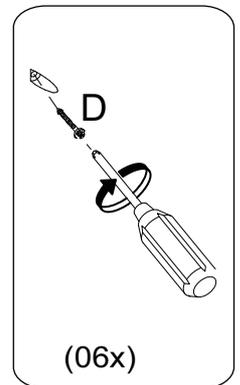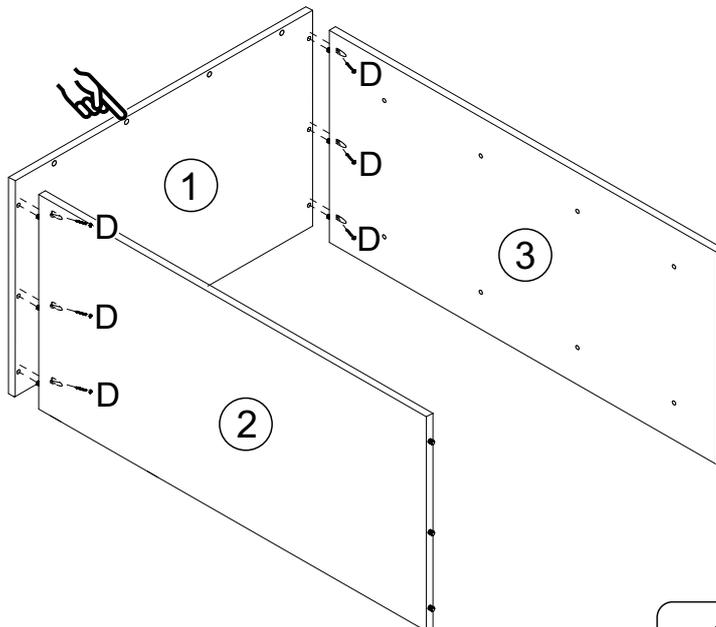






Step 3 Use screw (D) to attach part (16) and (17) to part (6), do this step twice. Place the glue (M) in the holes of the pieces (16) and (17), before fitting them to the piece (6).

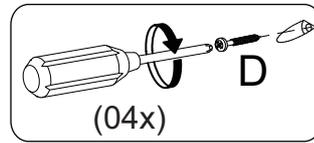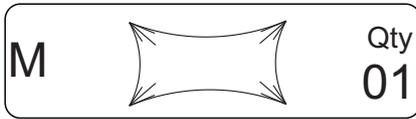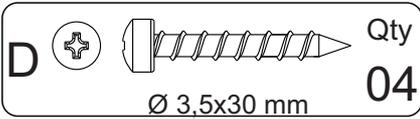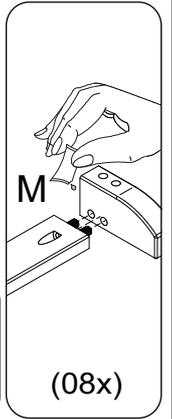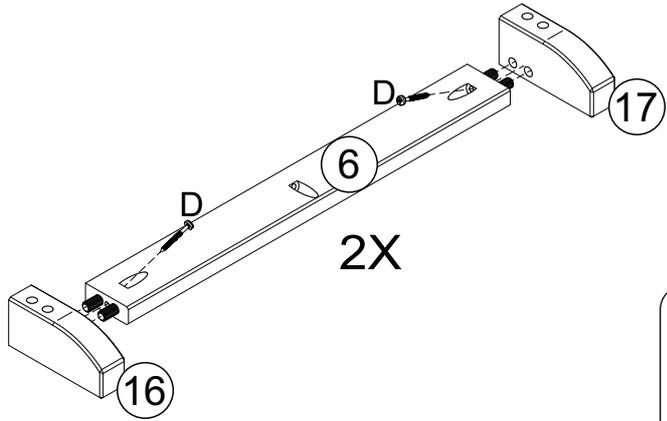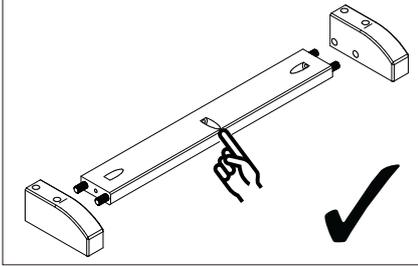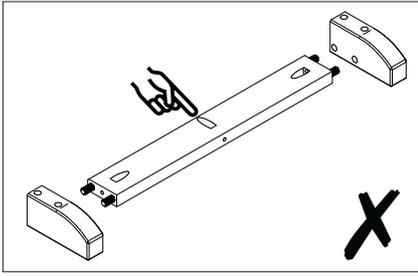





Step 4 Use screw (D) to attach parts (5) to parts (16) and (17). Put the glue (M) in the holes of the parts (16) and (17) before fitting the part (5).

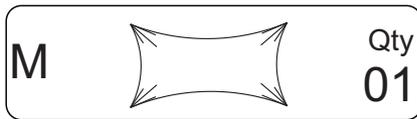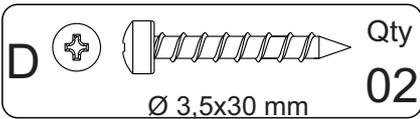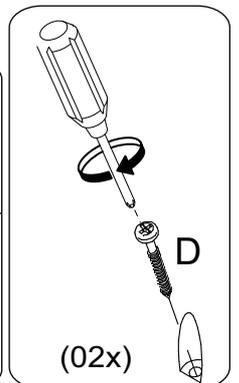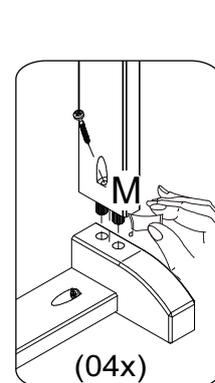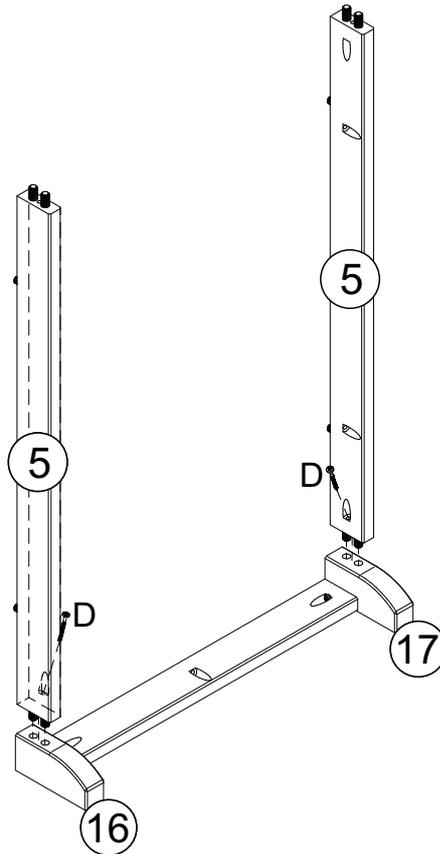






Step 5 Use screw (D) to attach parts (5) to parts (16) and (17).
Put the glue (M) in the holes of the parts (16) and (17) before fitting the part (5).

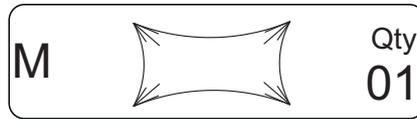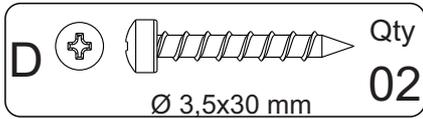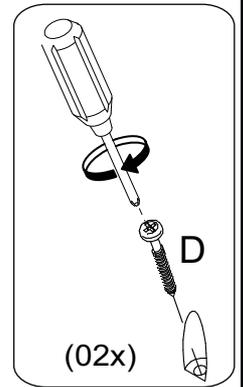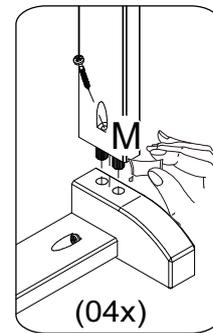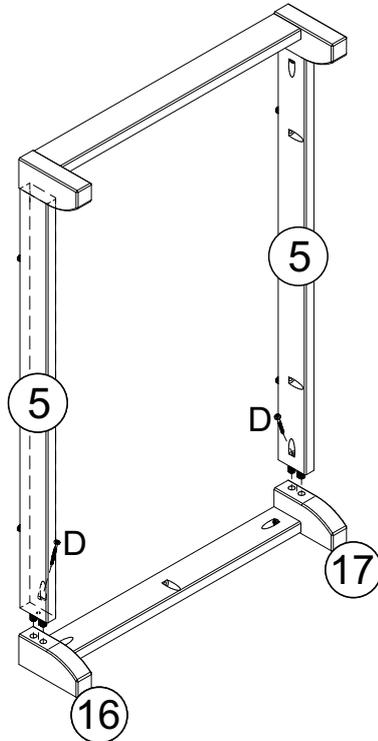


Step 6 Attach part (4) in the parts (16) and (17) as shown using screw (I).

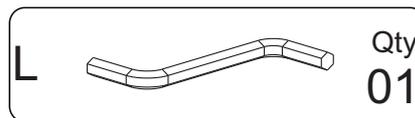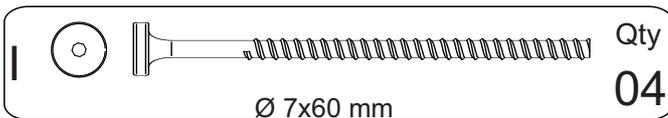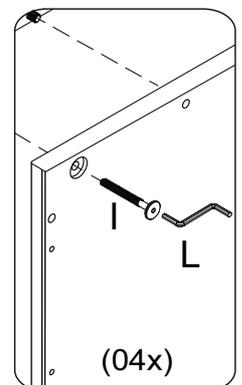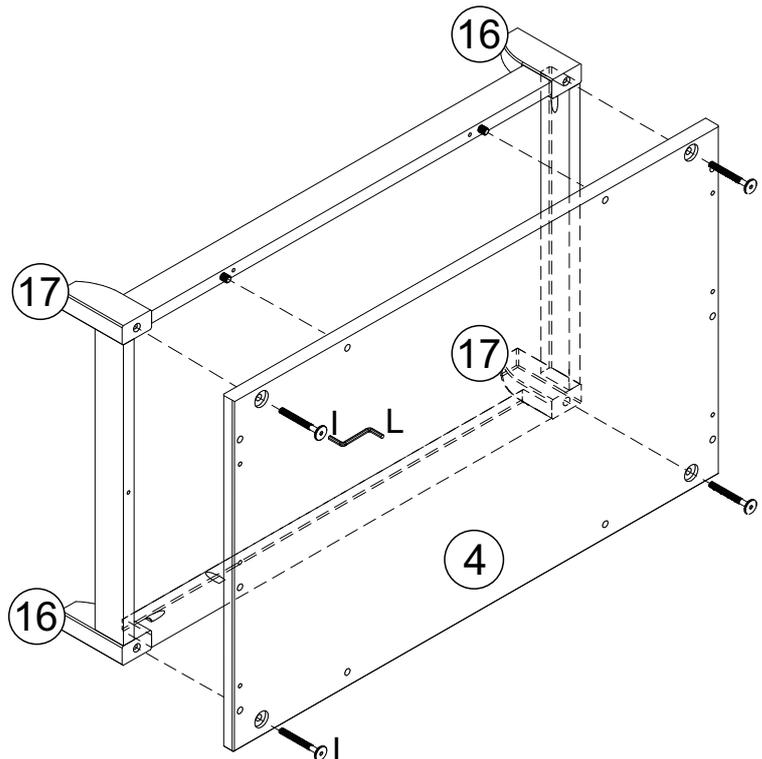

Step 7 Use screw (D) to finishes the attach on the part (4).
Insert felt (O) into parts (16) and (17).

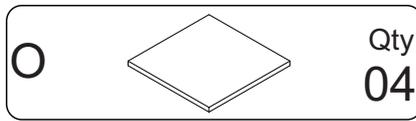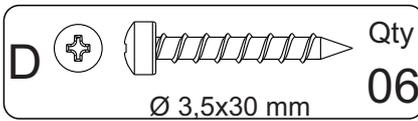
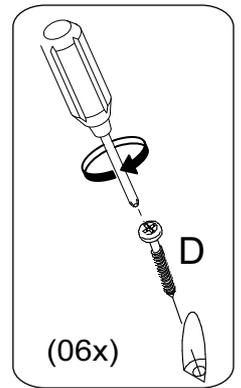
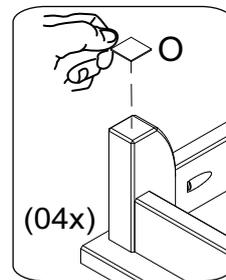
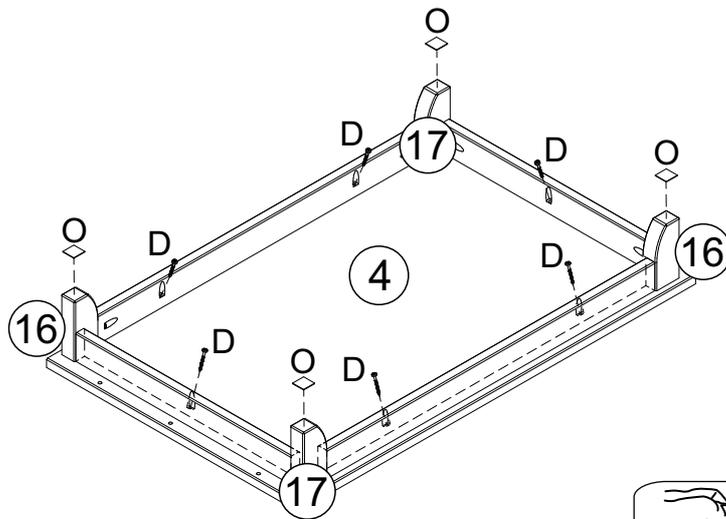


Step 8 Fit the parts (7) to the part (1).

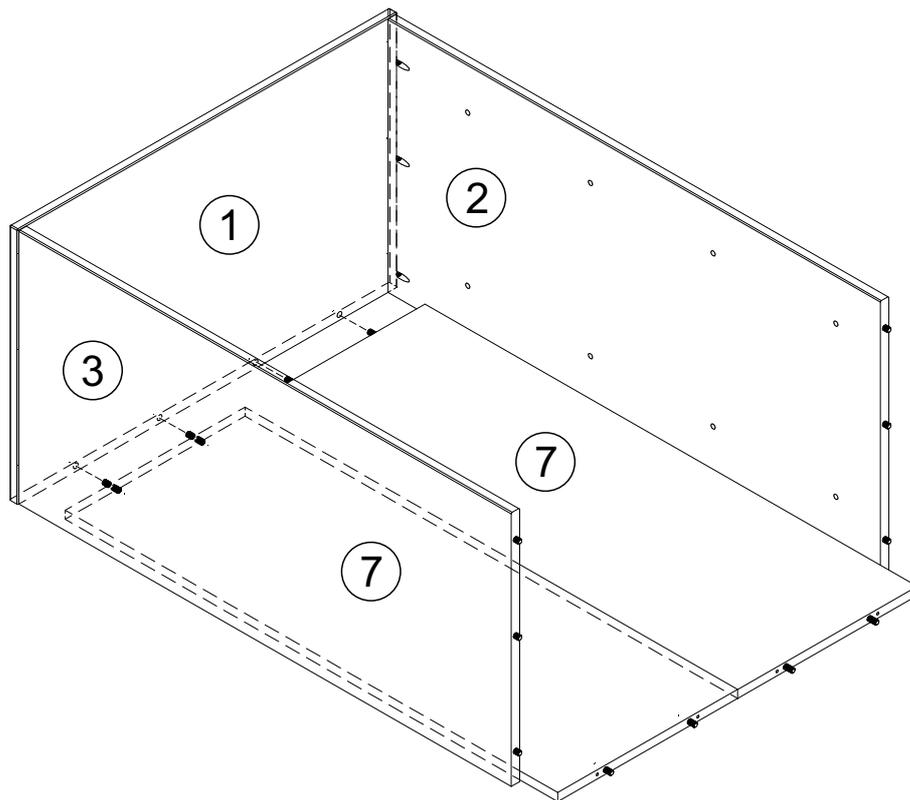

Step 9


Attach the part (4) to the parts (2), (3) and (7) using the screw (H).

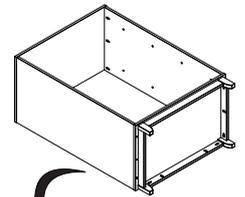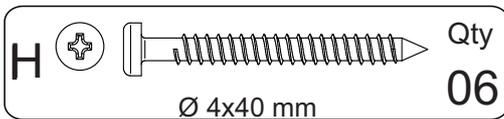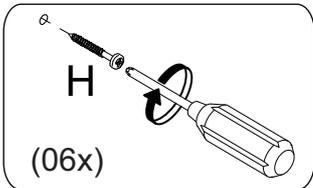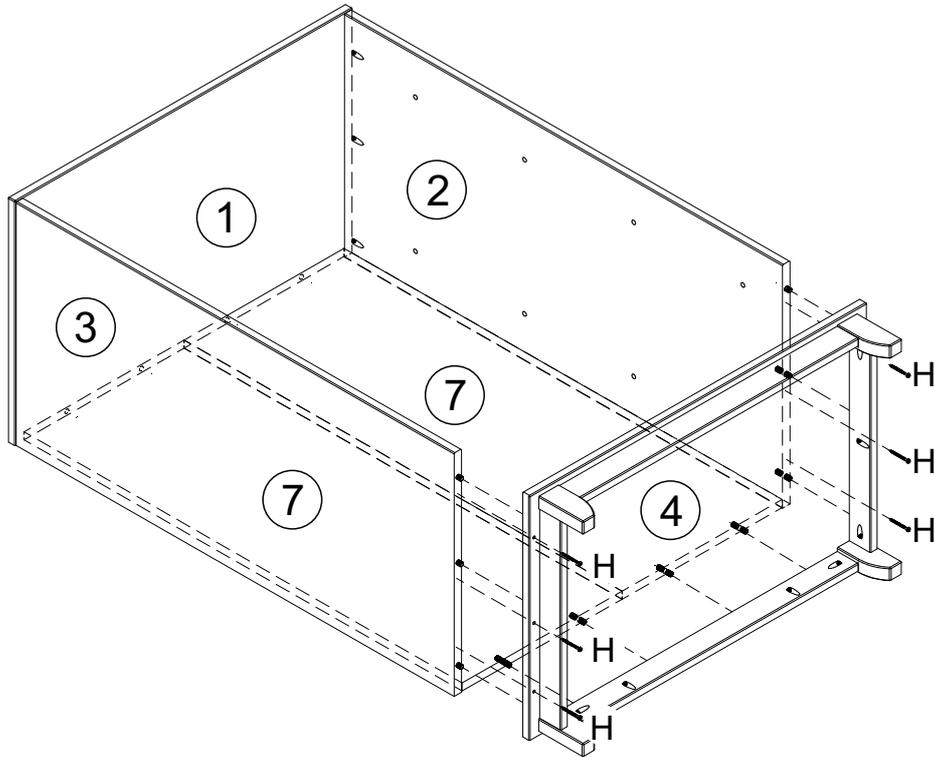



Step 10

Use screw (D) to finishes the attach on the part (7).

Name and address of the supplier and date of production.




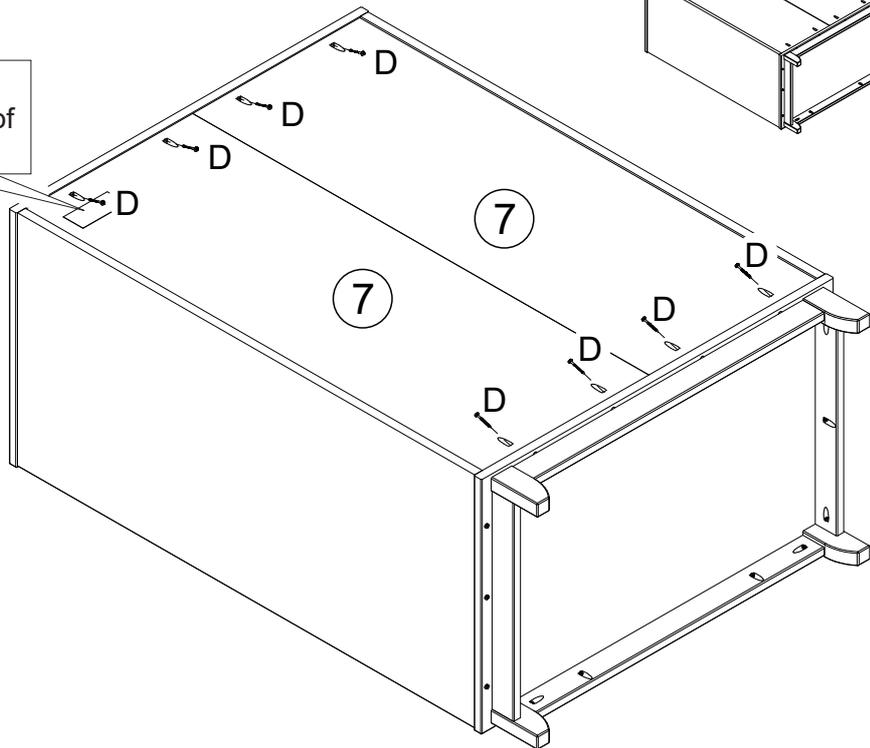


!
Please assemble on a clean soft surface to avoid damage.

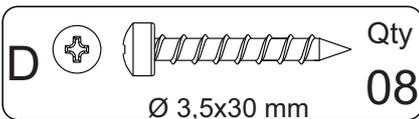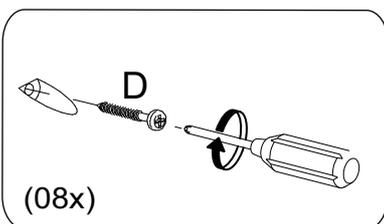




Step 11

Attach drawer slides (9) to parts (2) and (3) as shown using screw (C).

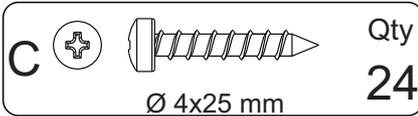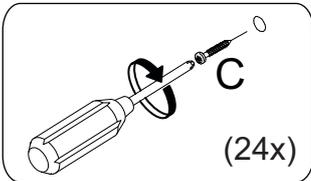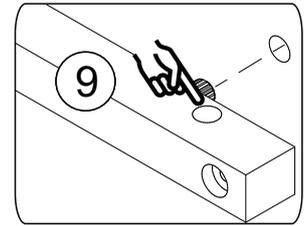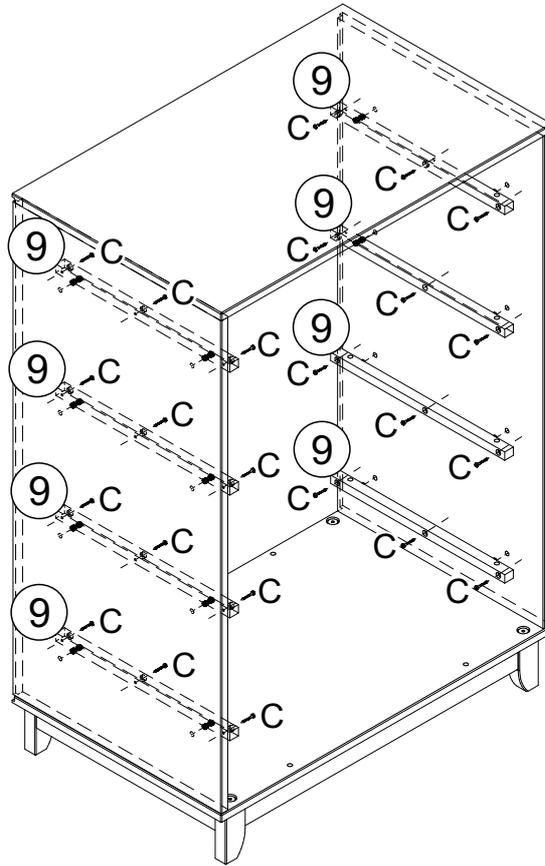



Step 12

Insert the wood dowel (B) into the drawer slides (8).


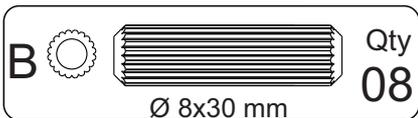
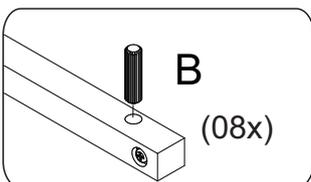
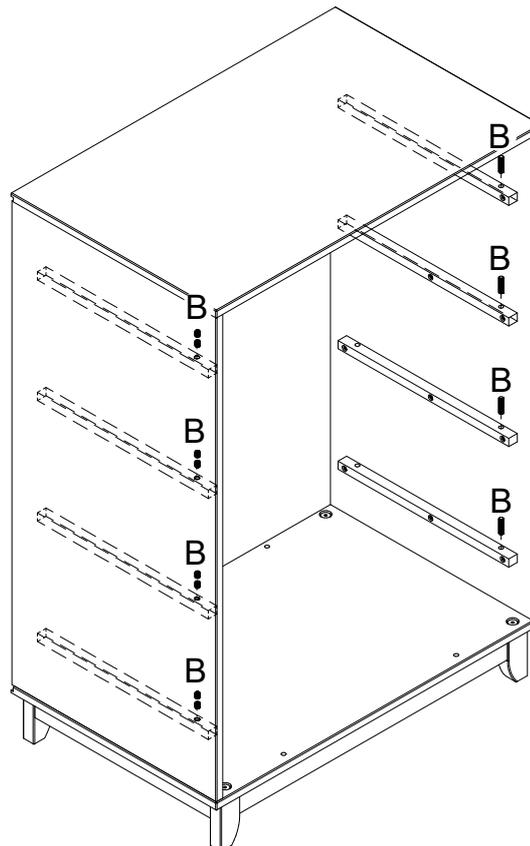


Step 13

Insert the handle (G) into the part (10) with the screw (F).
Secure parts (11) and (12) to part (10) using screw (D).


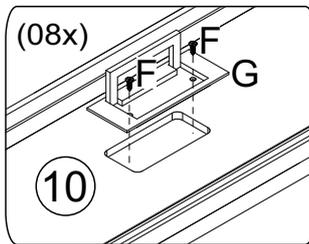
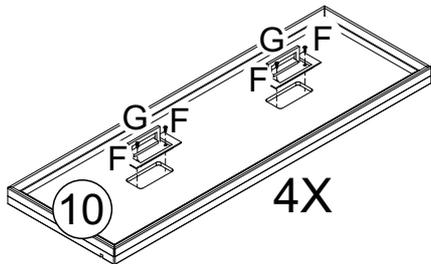


!
Please assemble on a clean soft surface to avoid damage.

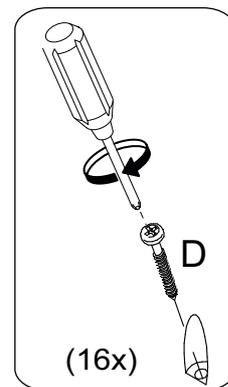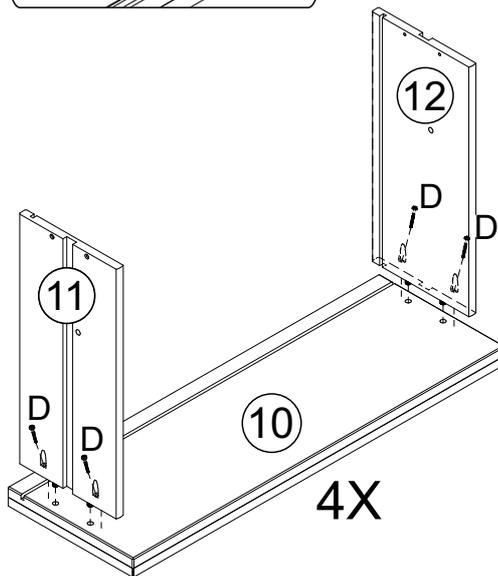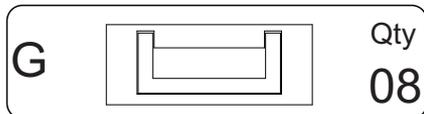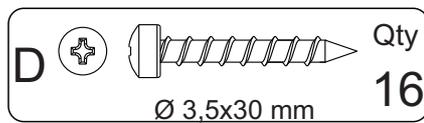




Step 14

Insert panel (13) into grooves and secure part (14) with screw (D).

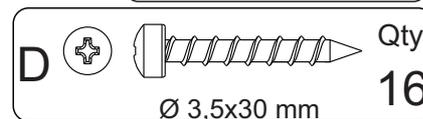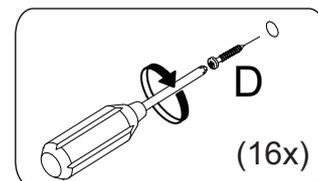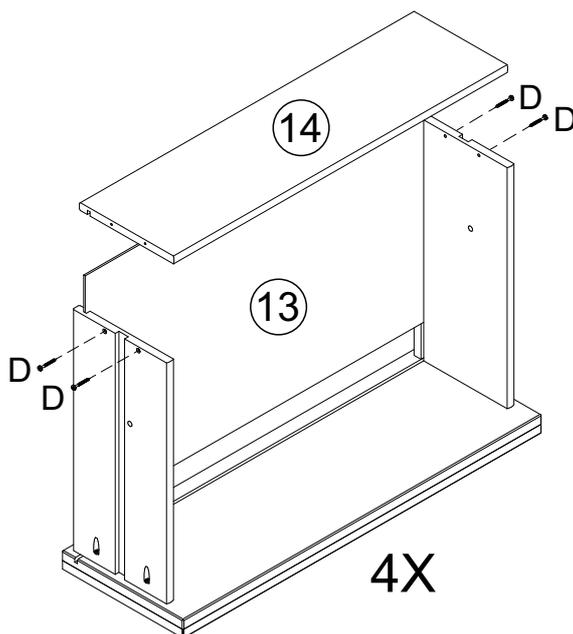


Step 15

Insert wood dowel (B) on the inside of all drawers while drawer is inside the unit.

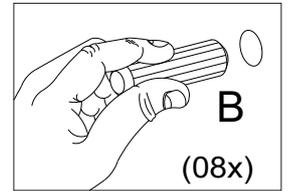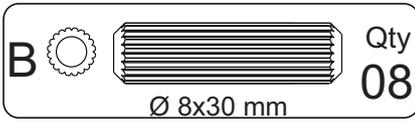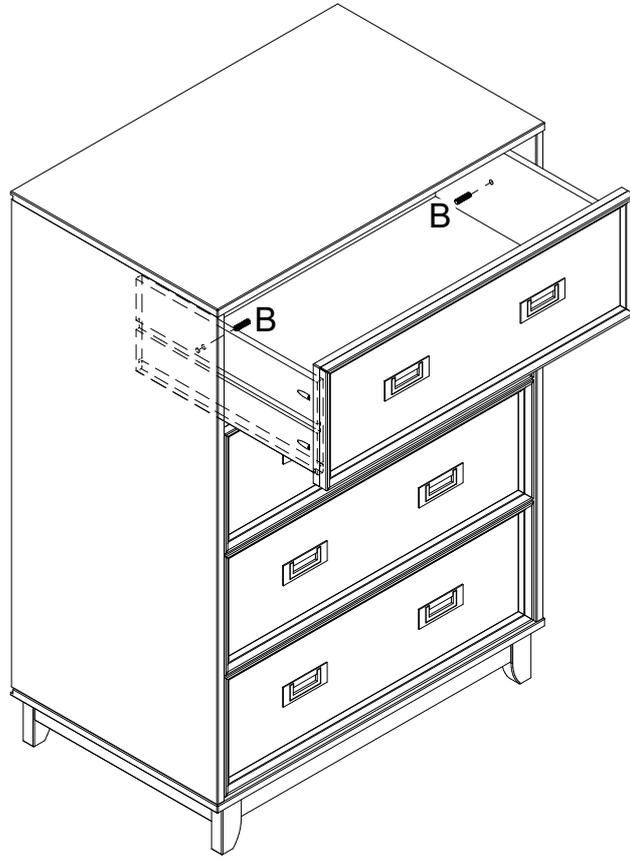

Step 16

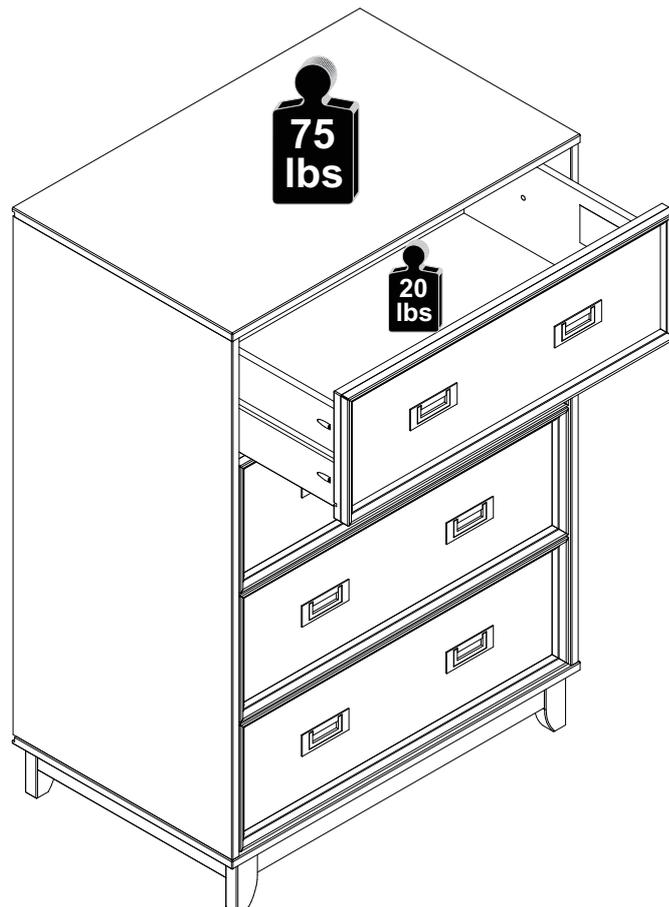

Step 17





WARNING

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall.

Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

Attach screw (D) into washer (N), securing wall anchor (K), in the frame of superior panel unit.

Drill your wall with a 6mm drill (not included) and insert hardware (J), securing wall anchor (K) with washer (N) and screw (D) in the wall.

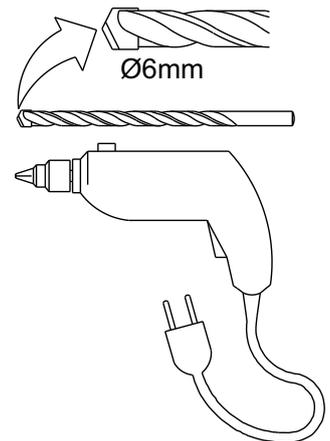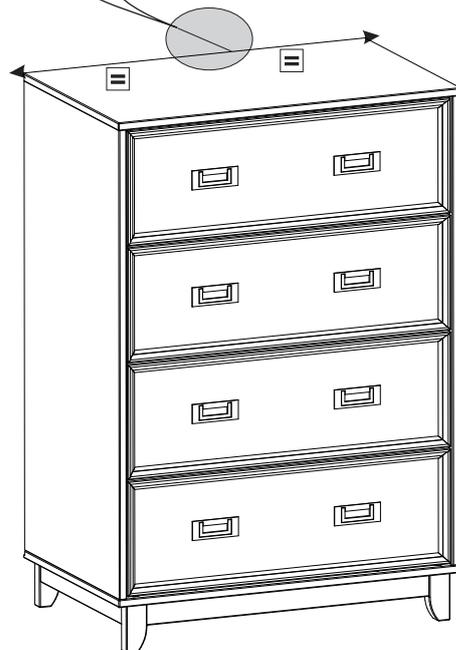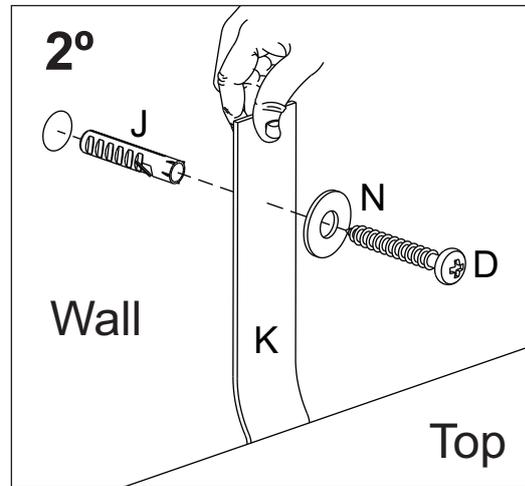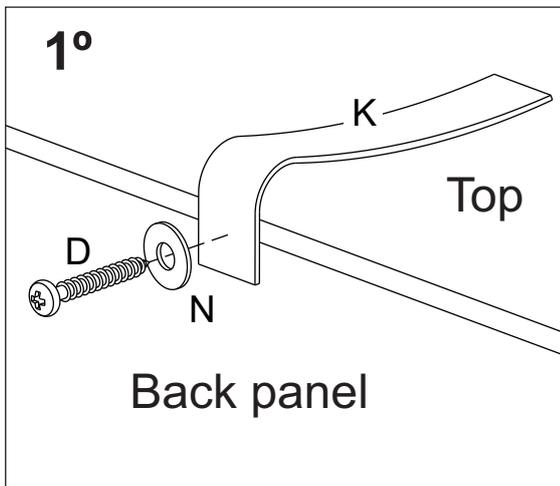

D		Qty 02
	Ø 3,5x30 mm	
K		01
J		01
N		02

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.