Black Illusion Glass Kit Installation (BIGGS50/62/74/ST)


⚠ WARNING

- Allow the appliance to cool completely before performing any maintenance as it will remain hot after it is no longer operating.
- To avoid danger of suffocation, keep the packaging bag away from babies and children. Do not use in cribs, beds, carriages, or play pens. This bag is not a toy. Knot before throwing away.


Included in this kit:	BIGGSS50		BIGGSS62		BIGGSS74		BIGGSST	
Description	**Part #**	**Qty.**	**Part #**	**Qty.**	**Part #**	**Qty.**	**Part #**	**Qty.**
Glass, Rear Panel	W475-10004570	1	W475-10003771	2	W475-10004614	2	N/A	0
Glass, Side Panel	W475-10003513	2	W475-10003513	2	W475-10003513	2	W475-10003513	2
Bracket, Bottom Black Glass Panel	W080-10005423	9	W080-10005423	9	W080-10005423	11	W080-10005423	4
Bracket, Top Black Glass Panel	W080-10005531	8	W080-10005531	8	W080-10005531	8	W080-10005531	4
Bracket, Top Middle Black Glass Panel	W080-10005545	1	W080-10005545	1	W080-10005545	1	N/A	0
Screw, Square Drive SS	W570-10001298	12	W570-10001298	12	W570-10001298	12	W570-10001298	6

note:

Remove the logs before installing the panels.

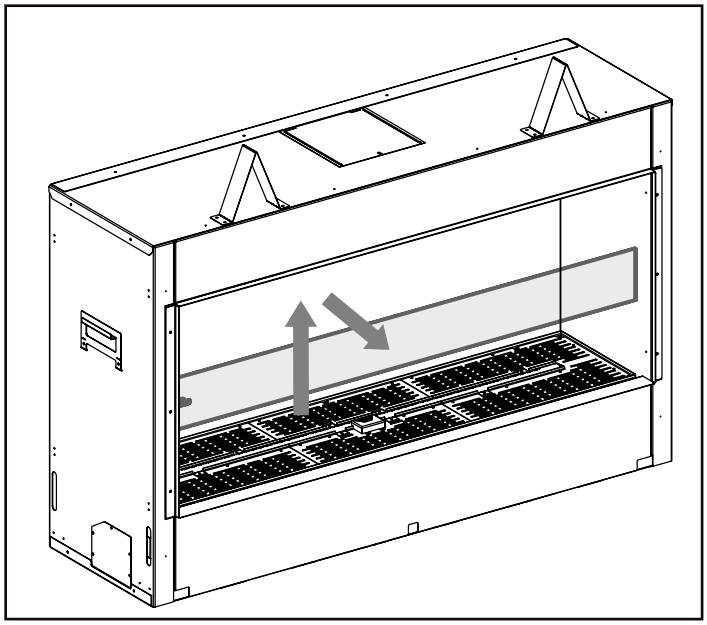


1. Remove the glass wind guard(s) by lifting it up and out of the appliance.

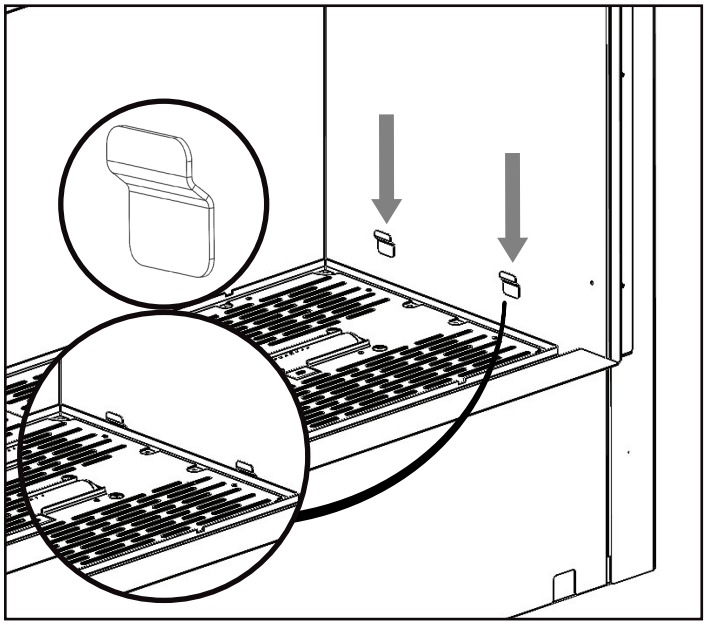


2. Apply gentle pressure to the inside firebox wall and slide the brackets in between the media tray and the firebox. Ensure that the long side of the bracket is pointing downward.


Quality System Certified To ISO 9001:2015
W415-10005905 / --0 / 01.20.25

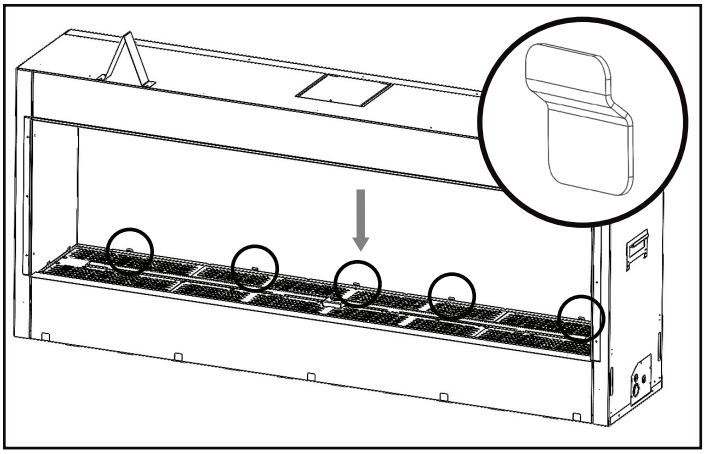


3. Repeat the process for the back of the firebox (not required for see-through models). Ensure there is a bracket in the middle and evenly space the rest of the brackets.

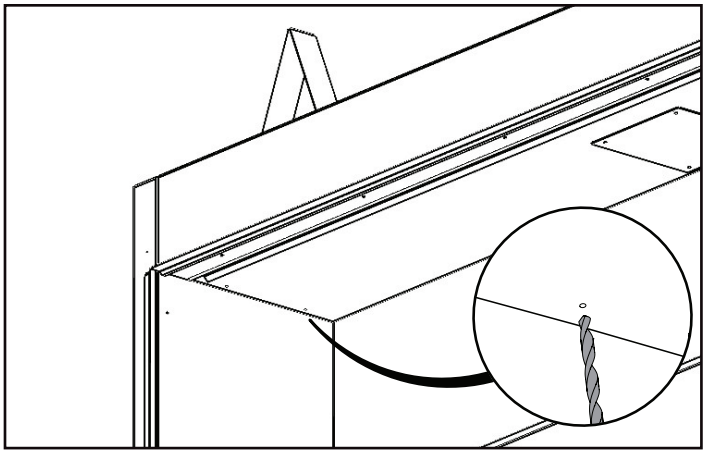


4. Pre-drill the dimples along the firebox top with a 1/8” bit for securing the brackets in a later step. Note that the number of dimples will vary for the different sized units.

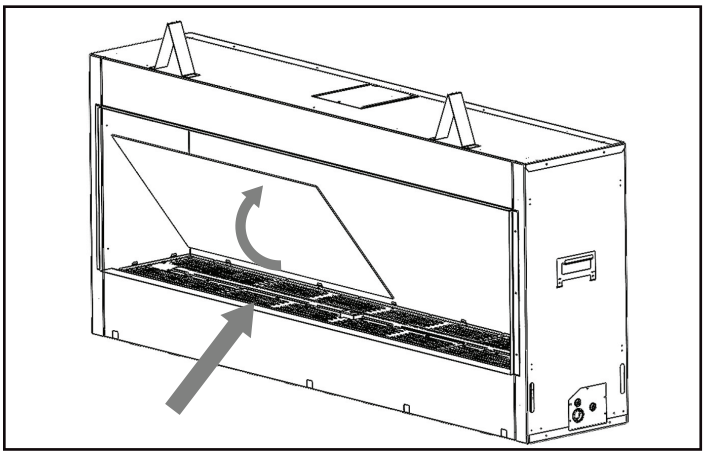


5. Start by installing the rear panel(s) (1 panel on GSS50, 2 panels on GSS62 & GSS74) by carefully placing the bottom edge of the panel behind the bottom brackets and gently pushing the top back.

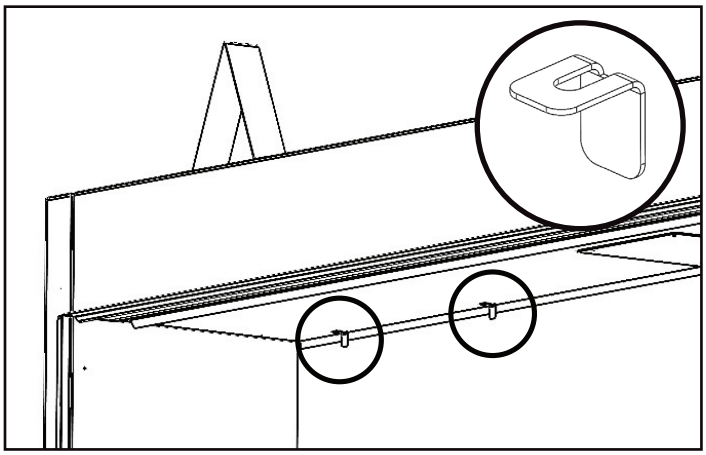

6. Secure the top brackets provided into the predrilled dimples with the screws provided. Repeat the process for the second panel on the GSS62/74 units.

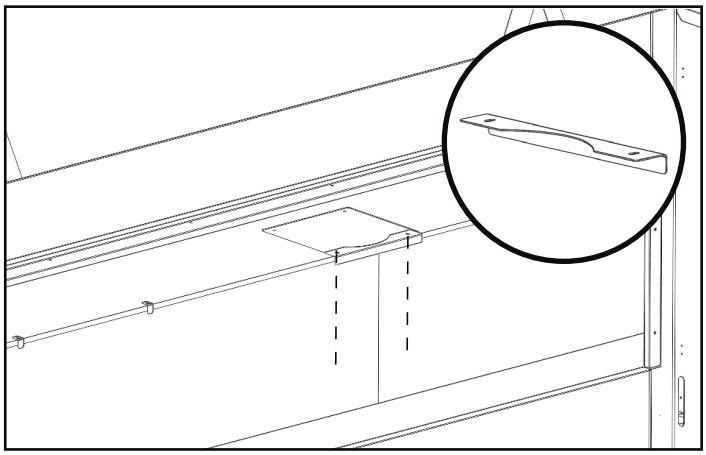

7. Remove the 2 back screws from the vent cover and secure the top middle bracket provided into those holes with the screws just removed.

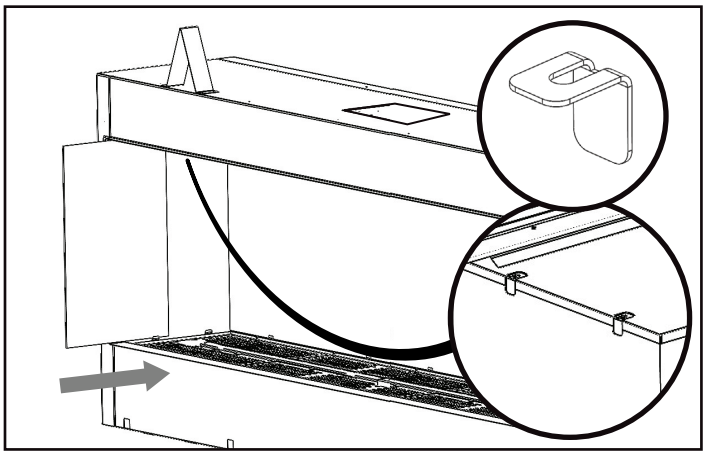

8. Carefully slide the side panel into place and secure it into the predrilled dimples with the brackets and screws provided. Repeat the process for the opposite side.

Installation du kit de verre à illusion noire (BIGGS50/62/74/ST)


⚠ AVERTISSEMENT

- Laissez l'appareil refroidir complètement avant d'effectuer toute opération d'entretien, car il restera chaud après avoir cessé de fonctionner.
- Afin d'éviter les risques de suffocation, gardez le sac d'emballage loin des bébés et des jeunes enfants. Ne le laissez pas traîner dans les berceaux, les lits, les poussettes ou les parcs de jeu. Ce sac n'est pas un jouet. Nouez-le avant de le jeter.


Inclus dans ce kit:	BIGGSS50		BIGGSS62		BIGGSS74		BIGGSST	
Description	**Pièce n°**	**Qty.**	**Part #**	**Qty.**	**Pièce n°**	**Qty.**	**Pièce n°**	**Qty.**
Verre, panneau arrière	W475-10004570	1	W475-10003771	2	W475-10004614	2	N/A	0
Verre, panneau latéral	W475-10003513	2	W475-10003513	2	W475-10003513	2	W475-10003513	2
Support, bas Panneau de verre noir	W080-10005423	9	W080-10005423	9	W080-10005423	11	W080-10005423	4
Support, panneau supérieur en verre noir	W080-10005531	8	W080-10005531	8	W080-10005531	8	W080-10005531	4
Support, panneau de verre noir en haut au milieu	W080-10005545	1	W080-10005545	1	W080-10005545	1	N/A	0
Vis à tête carrée en acier inoxydable	W570-10001298	12	W570-10001298	12	W570-10001298	12	W570-10001298	6

note:

Retirez les rondins avant d'installer les panneaux.

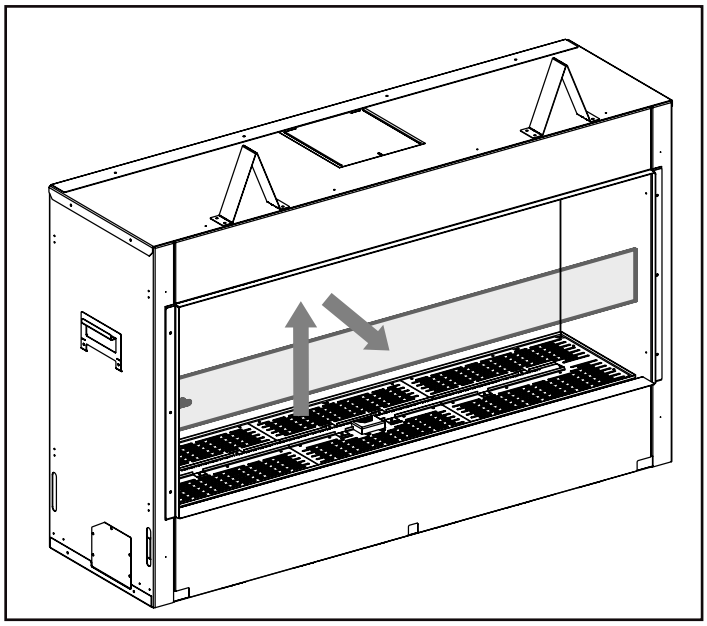


1. Retirez le(s) pare-vent en verre en le(s) soulevant et en le(s) sortant de l'appareil.

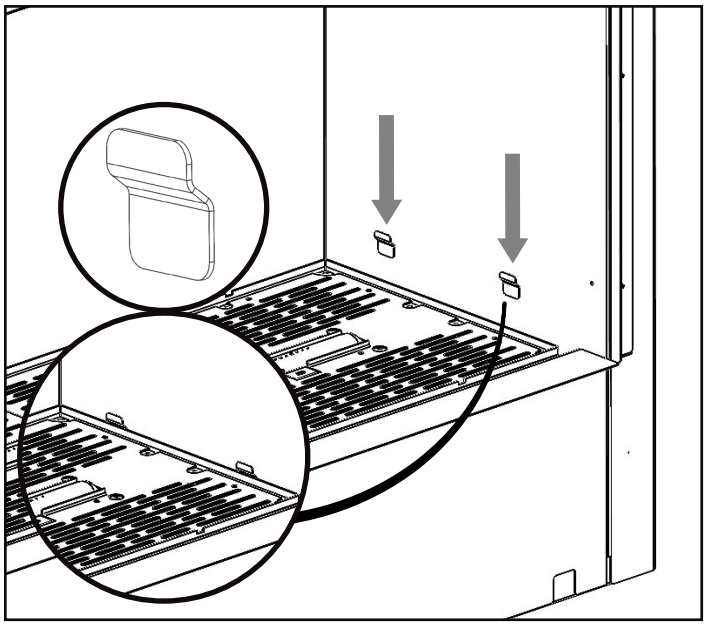


2. Appuyez légèrement sur la paroi intérieure du foyer et faites glisser les supports entre le plateau et le foyer. Veillez à ce que le côté long du support soit orienté vers le bas.


Système de qualité certifié ISO 9001:2015

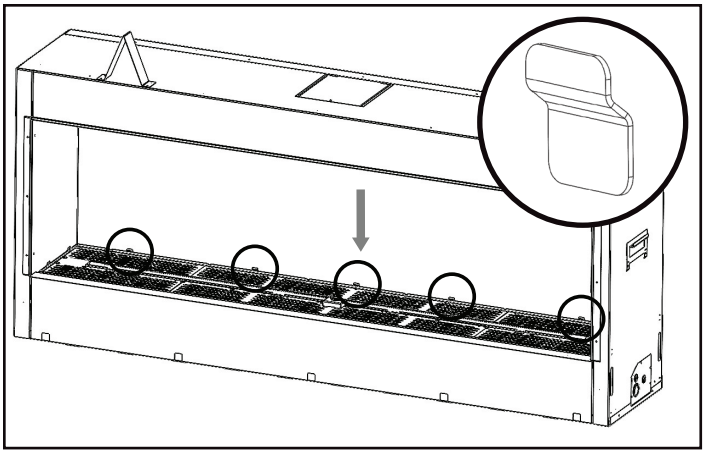


3. Répéter l'opération pour l'arrière de la chambre de combustion ((non requis pour les modèles transparents)). Veillez à ce qu'il y ait un support au milieu et espacez uniformément les autres supports.

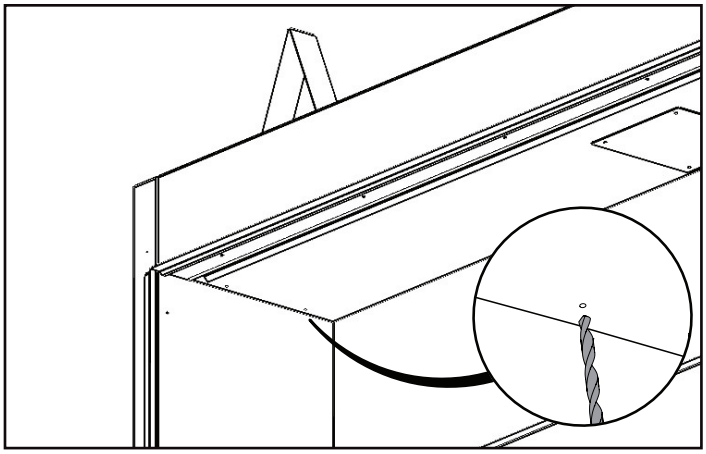


4. Pré-percez les alvéoles sur le dessus de la boîte à feu avec une mèche de 1/8" pour fixer les supports lors d'une étape ultérieure. Notez que le nombre d'alvéoles varie en fonction de la taille de l'appareil.

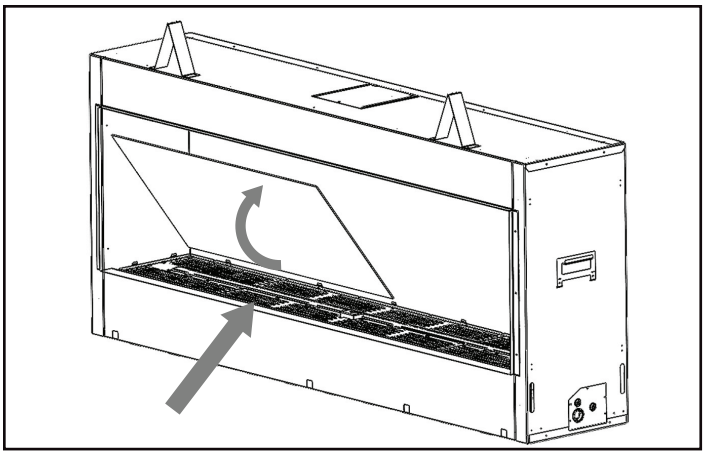


5. Commencez par installer le(s) panneau(x) arrière (1 panneau sur GSS50, 2 panneaux sur GSS62 & GSS74) en plaçant soigneusement le bord inférieur du panneau derrière les supports inférieurs et en poussant doucement le haut vers l'arrière.

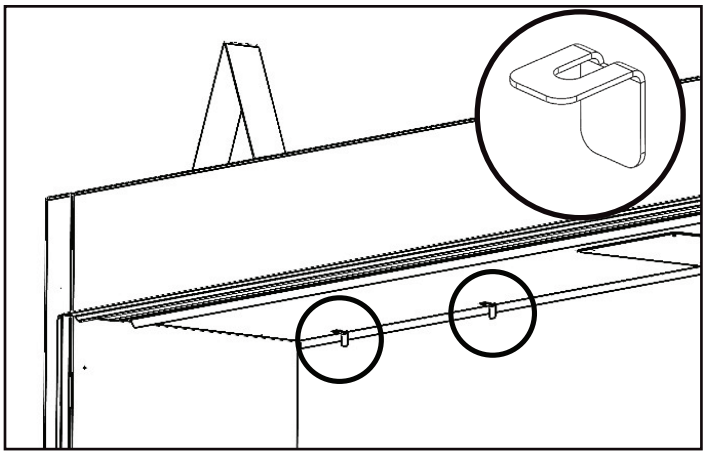

6. Fixez les supports supérieurs fournis dans les alvéoles pré-percées à l'aide des vis fournies. Répétez le processus pour le deuxième panneau des unités GSS62/74.

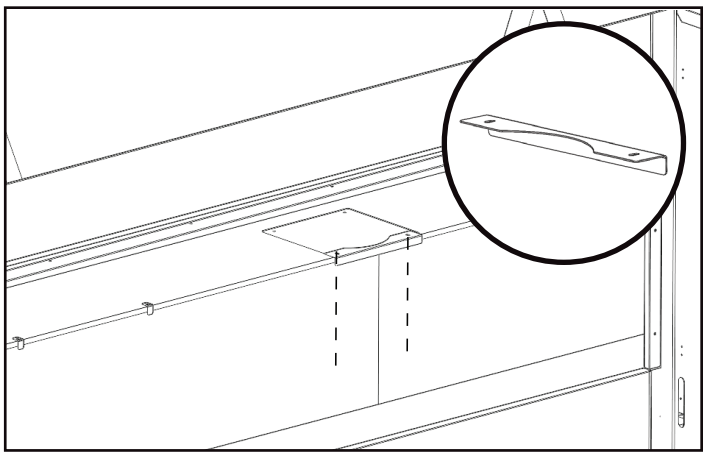

7. Retirez les deux vis arrière du couvercle de l'évent et fixez le support central supérieur fourni dans ces trous à l'aide des vis qui viennent d'être retirées.

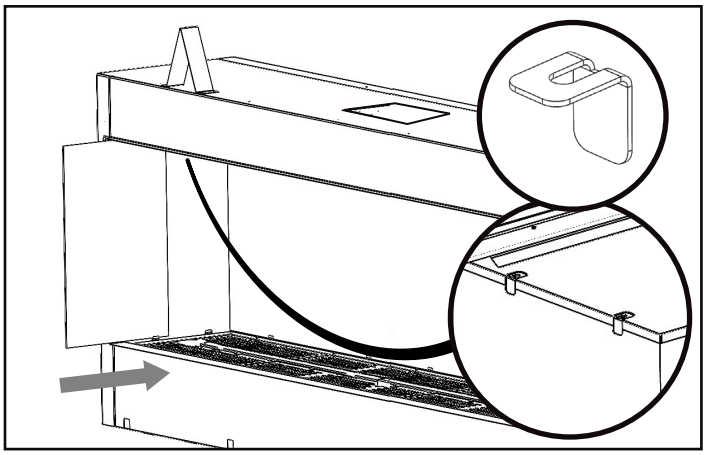

8. Faites glisser avec précaution le panneau latéral en place et fixez-le dans les alvéoles pré-percées à l'aide des supports et des vis fournis. Répétez l'opération pour le côté opposé.