



Installation Instructions for Choice Series Passage Leversets with a 60mm backset

Step 1. Door Preparation

- Fold template where indicated.
- Position template on door edge at desired latch height.
- Firmly hold template and mark latch height and handle fixing holes at required backset (refer template).
- Measure door thickness and mark centre.
- Drill 25mm latch hole.
- Note:** it is important to drill this hole squarely.
- Drill a 50mm hole through door face at 60mm backset as marked on template.
- Note:** Lever may be used on existing Ø54mm door prep.

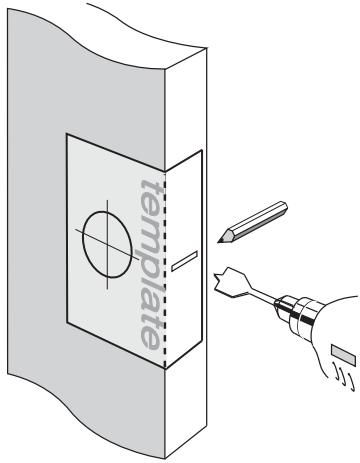


Step 2. Install Latch to Door

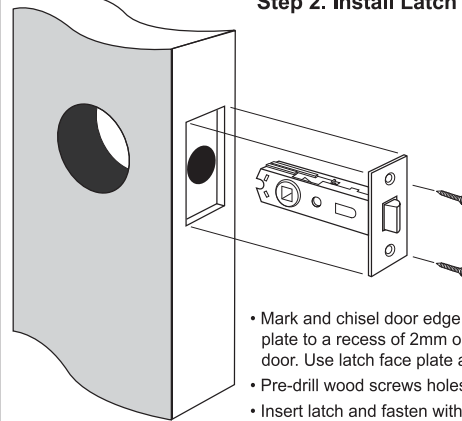

- Mark and chisel door edge for latch face plate to a recess of 2mm or until flush with door. Use latch face plate as a template.
- Pre-drill wood screws holes with suitable drill size
- Insert latch and fasten with wood screws provided.

Step 3. Install Lever Assemblies to Door

- Insert square drive spindle (1) through latch in door.
- Remove rosette covers (2) from both lever assemblies.
- Place one lever assembly (3) onto the square drive spindle.
- Place other lever assembly (4) into position, locating it onto the other end of spindle.
- Fasten both lever assemblies together with screws provided (5): Use long screws for thick doors and short screws for thin doors. Each under-rose features a countersunk hole and a threaded hole. Install one screw from either side, through the countersunk hole, into the threaded hole of the opposite under-rose. Then tighten the screw head on each side.
- Re-apply rosette covers (2) to both under-roses by pushing the covers over the rubber rings until flush with door.
- For Square rosette cover (6), tighten grub screw (7) using Allen Key (8), found on the underside of the rosette cover.

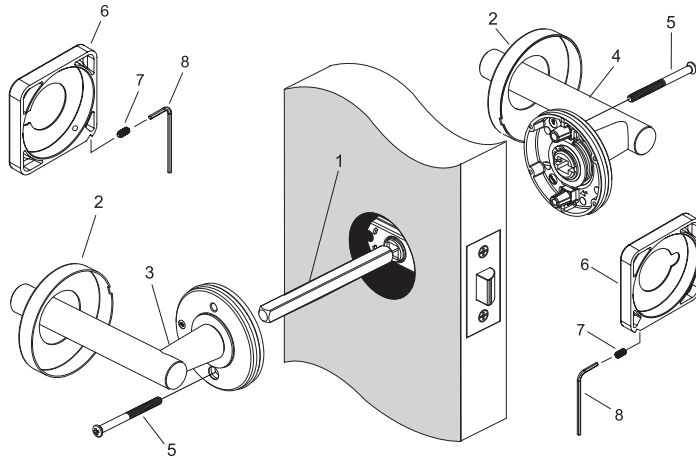

NOTE: Carefully follow these instructions when installing.
Screws to be tightened to a recommended 2.5Nm torque.



FOLD HERE

Mark centre-line
of latch hole

Mark centre-line
of latch hole

Fit here on door edge

Fit here on door edge

BACKSET 60mm

50mm hole
- refer Step 1.

Optional Hole Pattern
2 x 10mm hole

Optional Hole Pattern
25mm hole

Suits doors 32mm to 45mm thick.



ALLEGION

1800 098 094

info.au@allegion.com
gainsboroughhardware.com.au

PRINT TO SCALE

