
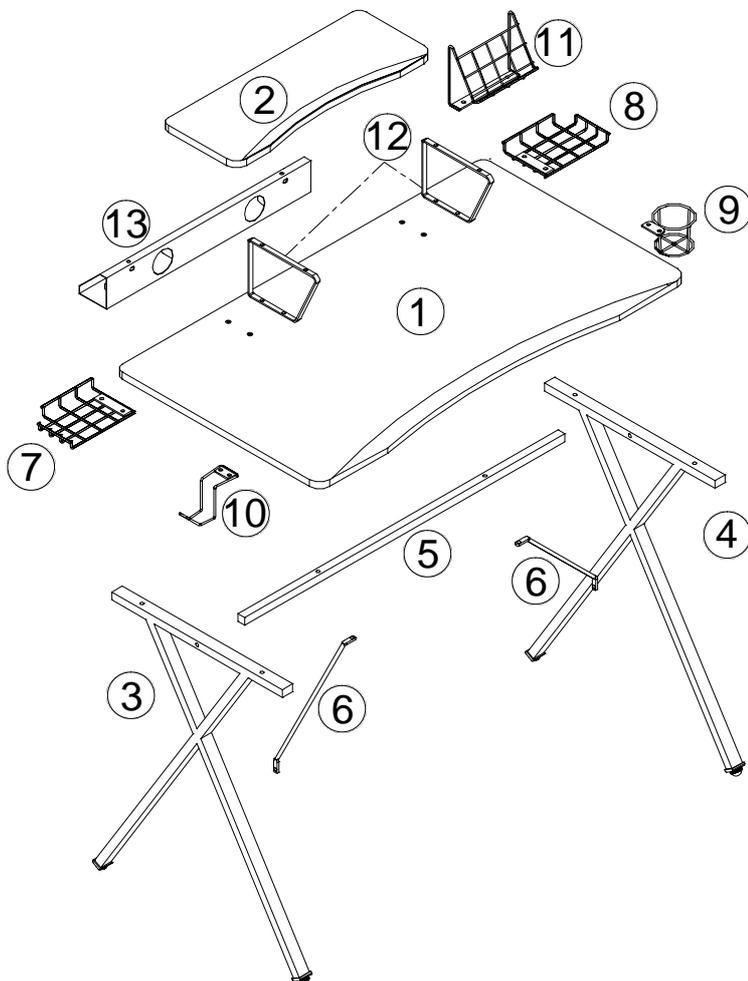


Assembly Instructions


ESS-1100

Attention: Do not tighten the screws until all of them are in right positions

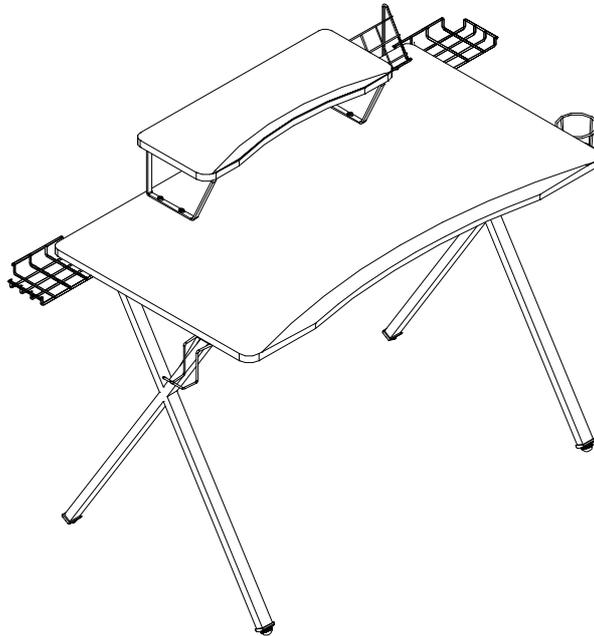

- | | | |
|-------|---------------------------------------------------------------------------------------|-------|
| A x2 |  | M6X12 |
| B x20 |  | M6X15 |
| C x4 |  | M6X30 |
| D x2 |  | M6X35 |
| E x2 |  | M6X45 |
| F x4 |  | |
| G x1 |  | |


1

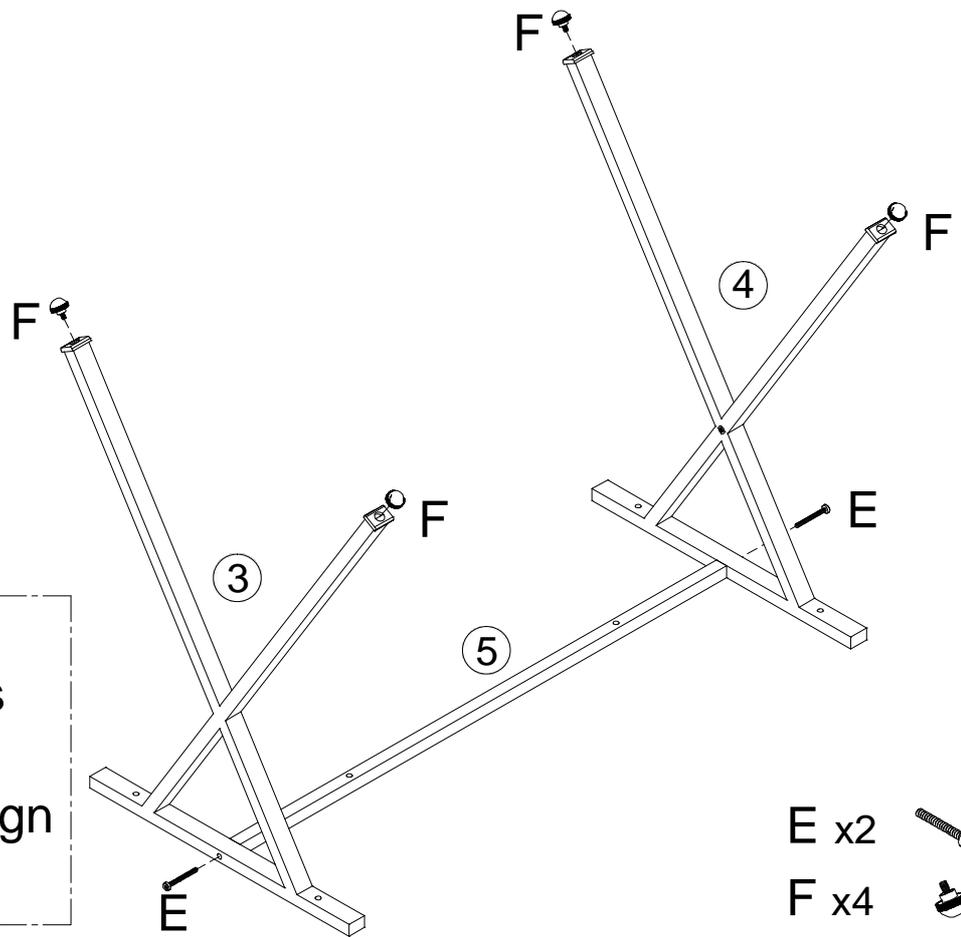

Note:
 Keep screws
 loose SO all
 holes can align
 in step 2

- E x2 
- F x4 

2

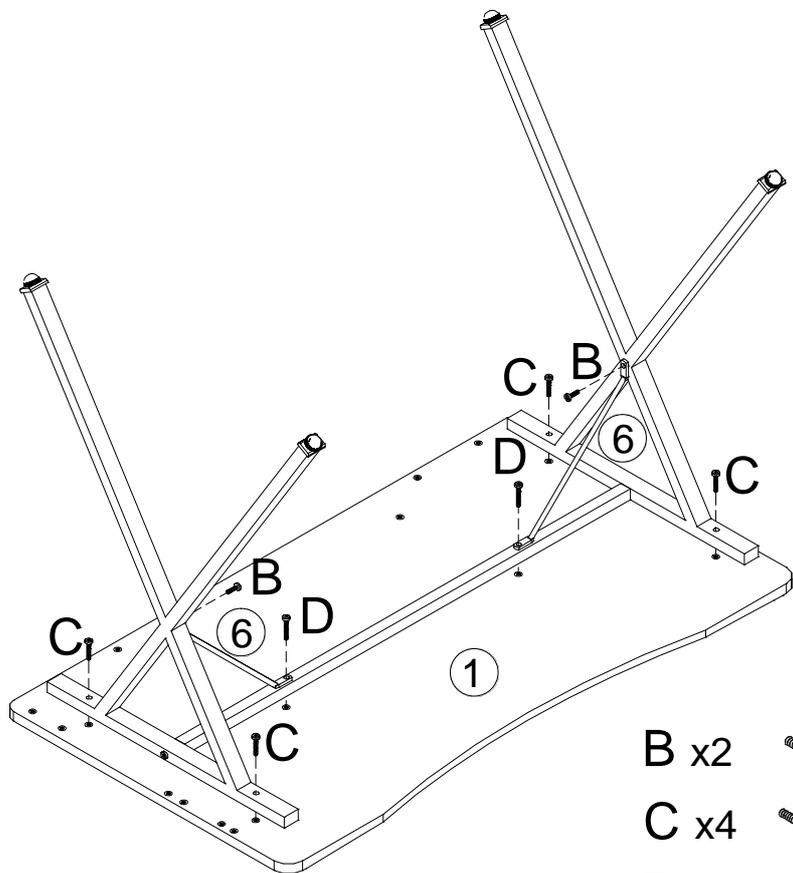


Note:
 Keep screws
 loose while you
 install B,C,D
 screws . Align
 all holes ,insert
 screws(B,C,D)
 then full tighten
 screws.

- B x2 
- C x4 
- D x2 

3


Note: Please keep the iron frame perpendicular to the back of the board

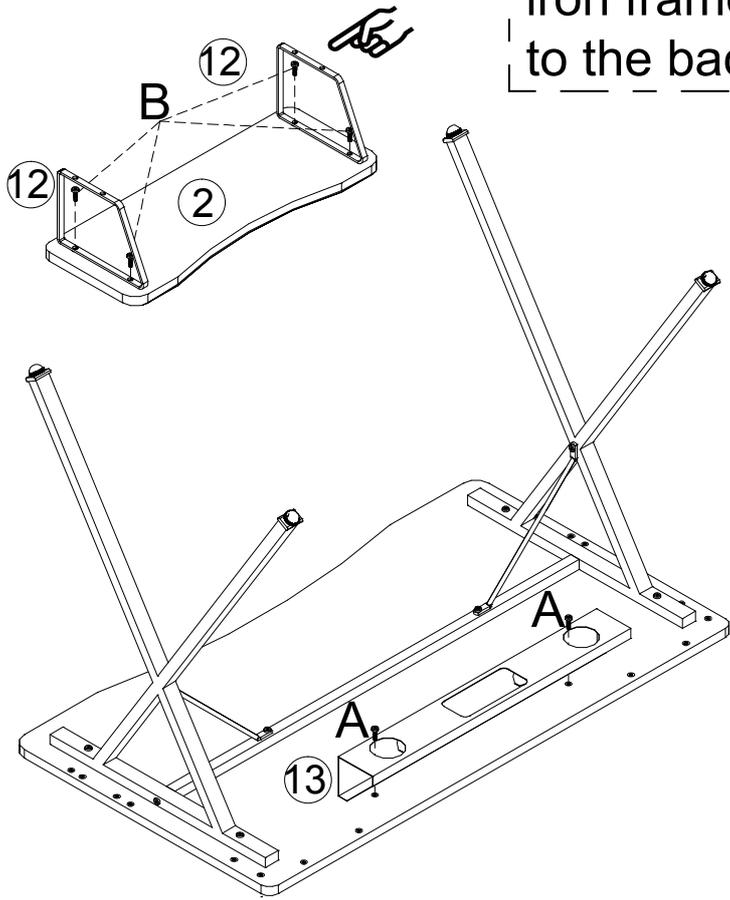

- A x2 
- B x4 


4

Note: These are extra holes to place headphone or drink holder where you would like.

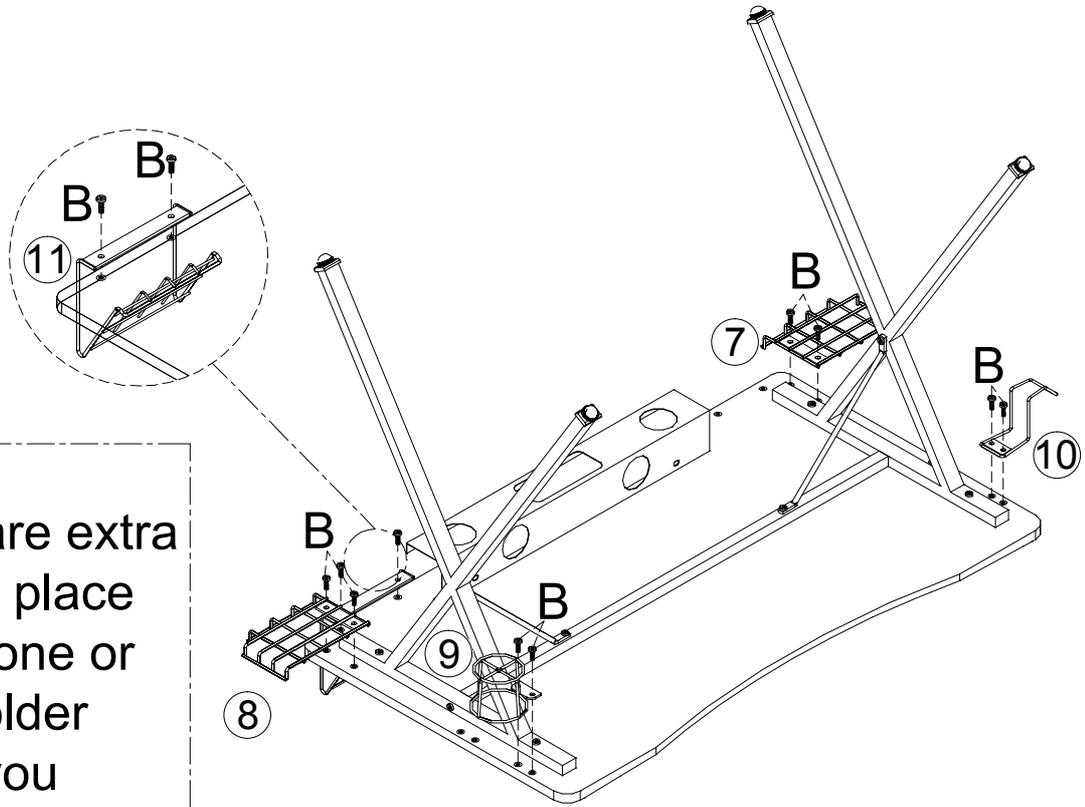

- B x10 

5

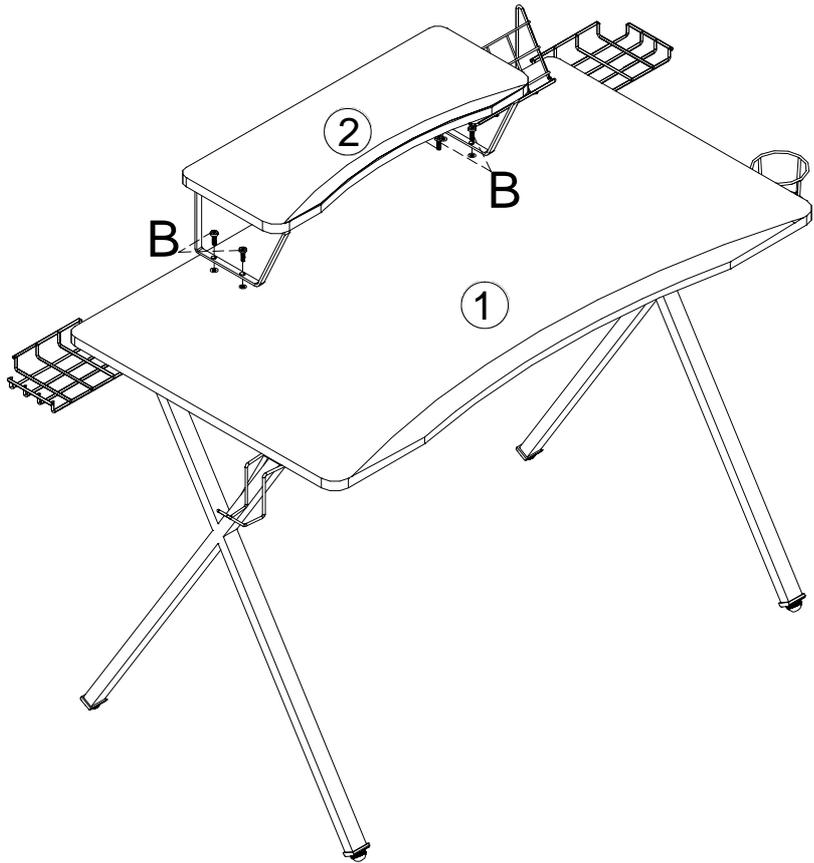

B x4 