


Installation Guide

Sink Strainer

K-8807

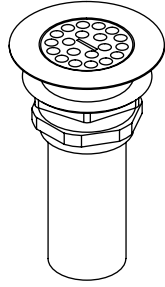

M product numbers are for Mexico (i.e. K-12345**M**)
Los números de productos seguidos de
M corresponden a México (Ej.
K-12345**M**)
Français, page "Français-1"
Español, página "Español-1"

THE BOLD LOOK
OF **KOHLER**®

112446-2-BD


Tools and Materials



Adjustable
Wrench




Plumbers
Putty



Various
Screwdrivers

Before You Begin

- Observe all local plumbing and building codes.
- Shut off the main water supply.
- Carefully inspect waste and supply tubing for any sign of damage.
- Replace waste or supply tubing if necessary.
- Install the faucet according to the instructions packed with the faucet.
- Kohler Co. reserves the right to make revisions in the design of products without notice, as specified within the Price Book.

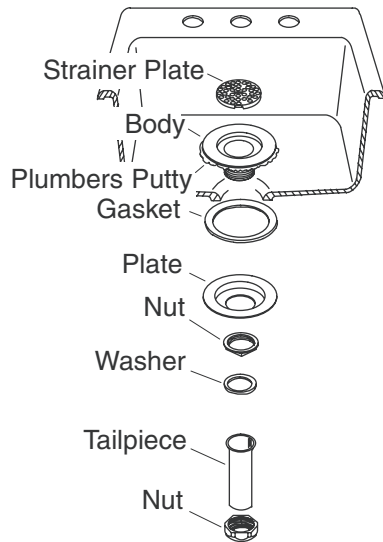

1. Install the Strainer

- Apply a ring of plumbers putty or other sealant to the underside edge of the drain body flange or strainer body flange.
- Insert the drain or strainer body in the sink.
- Assemble a gasket, plate, and nut to the drain body from under the sink.
- Wrench tighten.

NOTE: Do not reposition the drain after the locknut has been tightened.

- Align the wide end of the tailpiece with the drain or strainer body, slide the nut onto the tailpiece, and thread the nut to the drain or strainer body.
- Position the trap on the end of the tailpiece.
- If necessary, cut the tailpiece to ensure proper fit.
- Securely tighten the nut.
- Insert strainer plate into strainer.