

ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED



ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD
B. LEG





1 PC
2 PCS

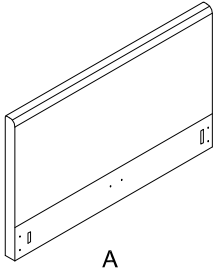

BOX#2

- C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. FOOT RAIL
G. CENTER SLAT SUPPORT CLEAT
H. SUPPORT LEG




1 PC
1 SET
2 PCS
1 PC
2 PCS
1 PC

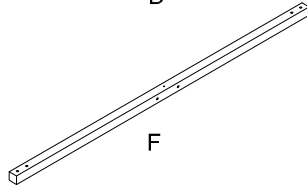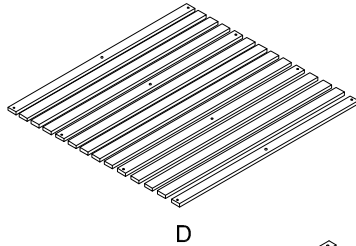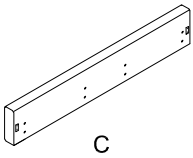

BOX#3

- I. LEFT SIDE RAIL
J. RIGHT SIDE RAIL
K. CENTER SLAT SUPPORT
L. SUPPORT LEG

1 PC
1 PC
1 PC
3 PCS

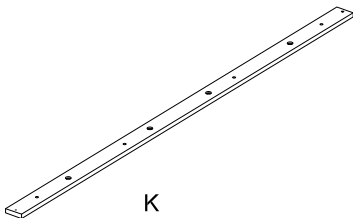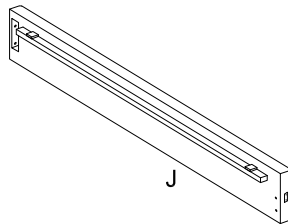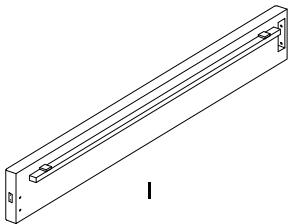

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC

HARDWARE KIT PACKED IN BOX #2


8	THREADED BOLT (5/16"x 3-1/2")		4 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		2 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
12	ALLEN BOLT (1/4"x 1")		8 PCS
13	FLAT WASHER (5/16")		10 PCS
14	FLAT WASHER (1/4")		12 PCS
15	LOCK WASHER (5/16")		10 PCS
16	LOCK WASHER (1/4")		12 PCS
17	HEX NUT (5/16")		4 PCS
18	PHILLIPS SCREW (M4 x 32mm)		10 PCS
19	ALLEN KEY (5/16")		1 PC
20	WRENCH		1 PC
21	CONNECTING BRACKET		2 PCS
22	L-BRACKET		2 PCS

ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED

ASSEMBLY INSTRUCTIONS






BOX# 4
M. DRAWER BOX 1 SET

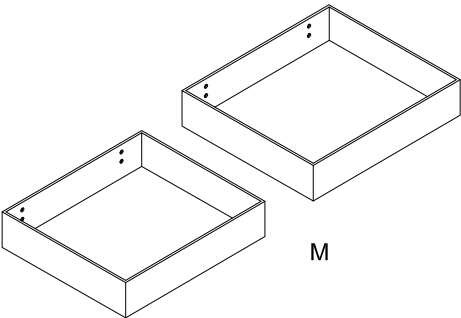

HARDWARE KIT PACKED IN BOX #4

23	ALLEN BOLT (1/4"x 3/4")		12 PCS
24	FLAT WASHER (1/4")		12 PCS
25	LOCK WASHER (1/4")		12 PCS
26	ALLEN KEY (5/16")		1 PC
27	CASTER		6 PCS
28	ALLEN BOLT (5/16"x 1-1/4")		8 PCS
29	FLAT WASHER (5/16")		8 PCS
30	LOCK WASHER (5/16")		8 PCS

FULLY ASSEMBLED

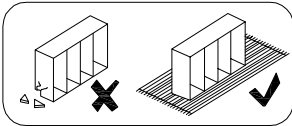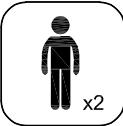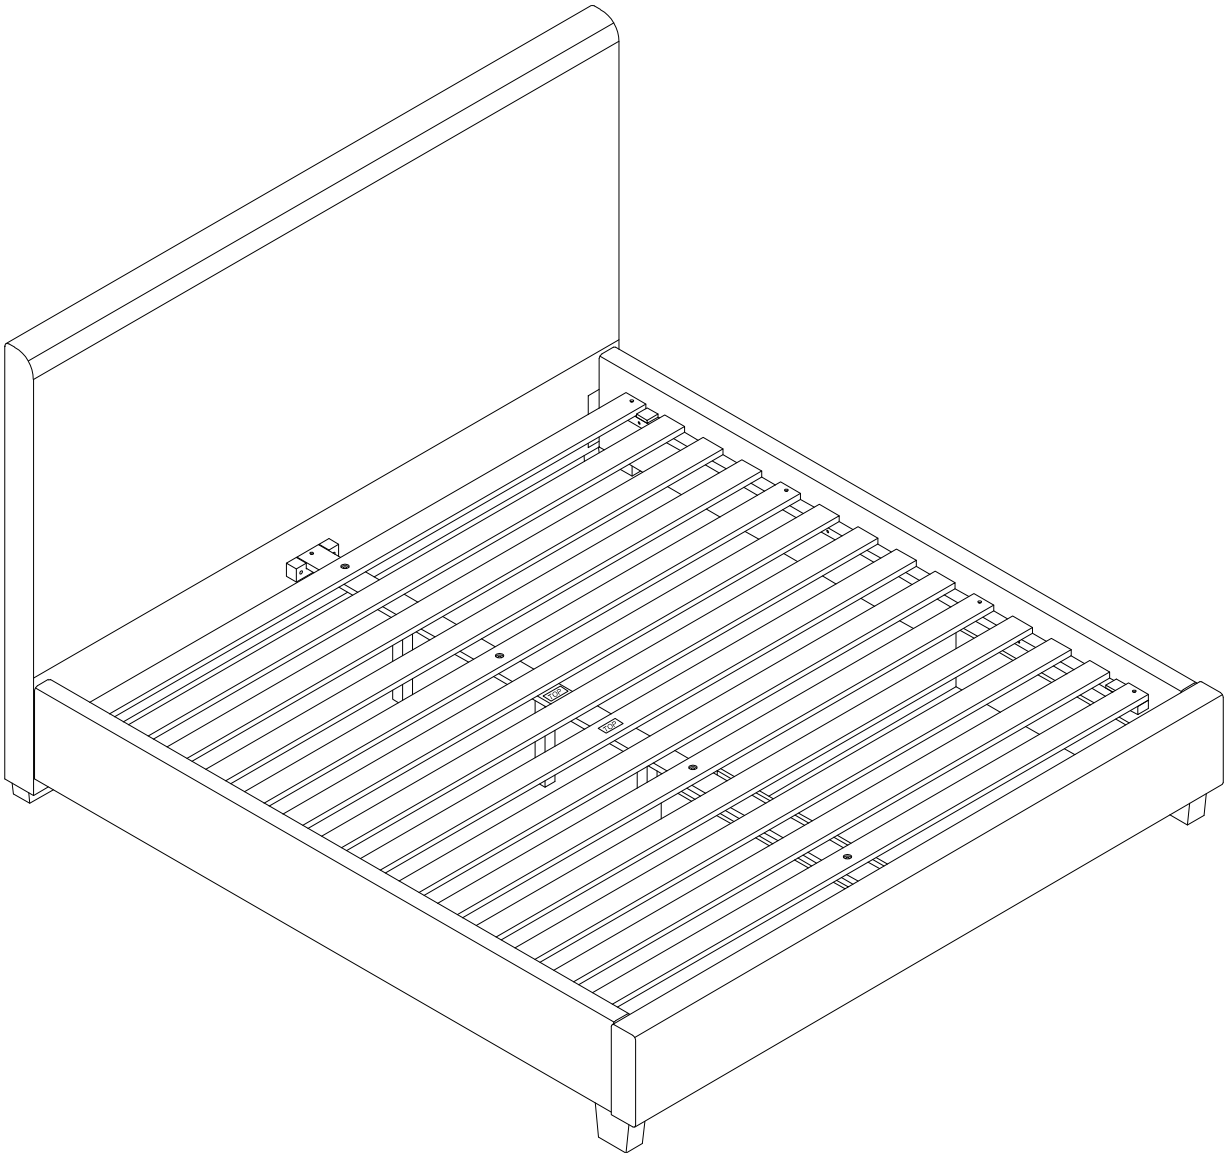


ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 1:

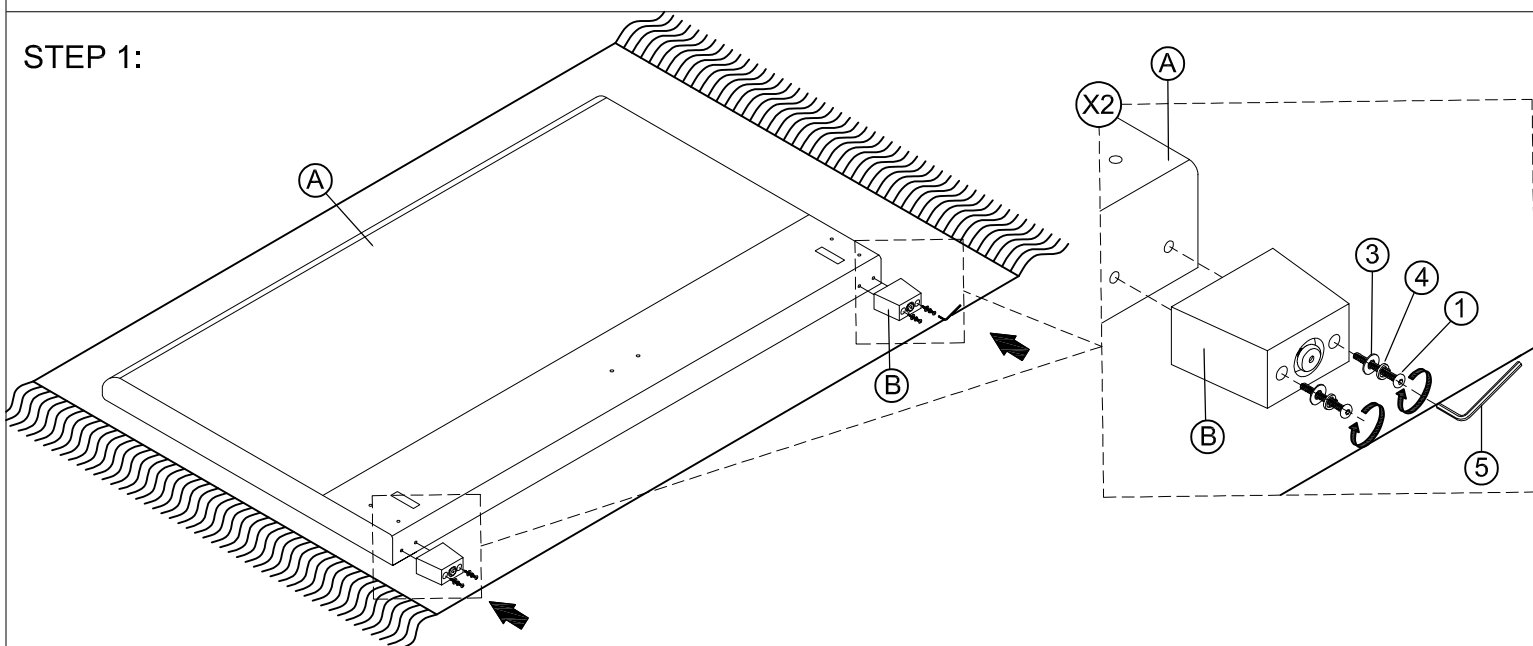

STEP 2:

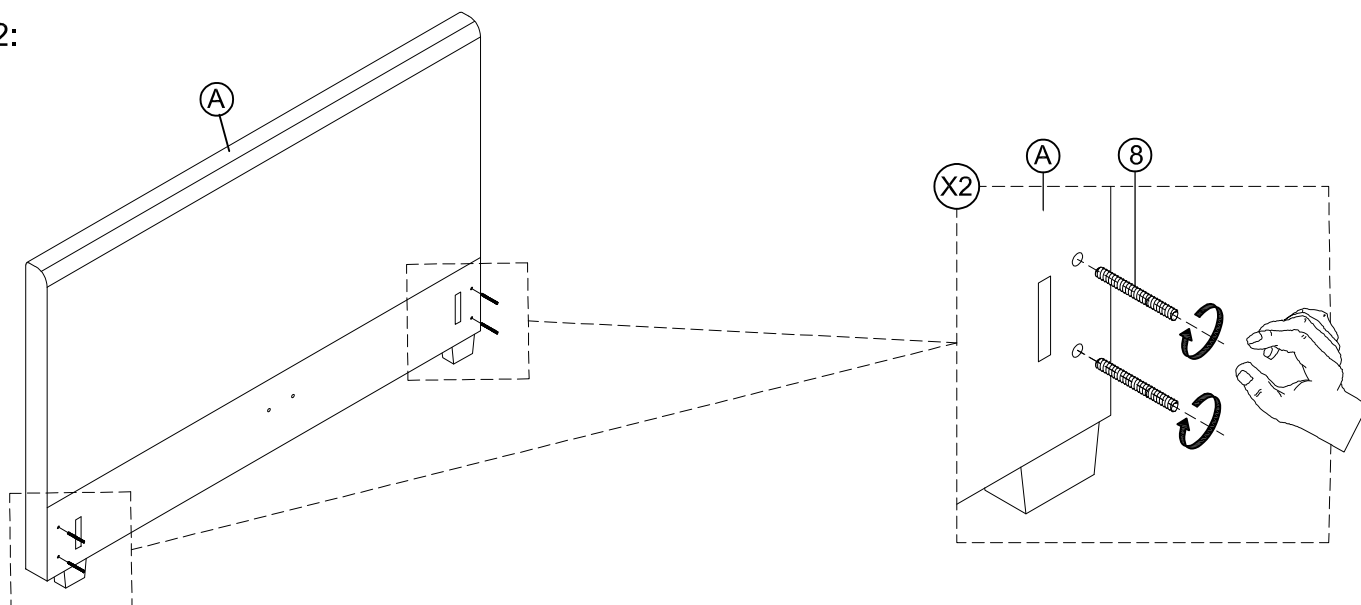

STEP 3:

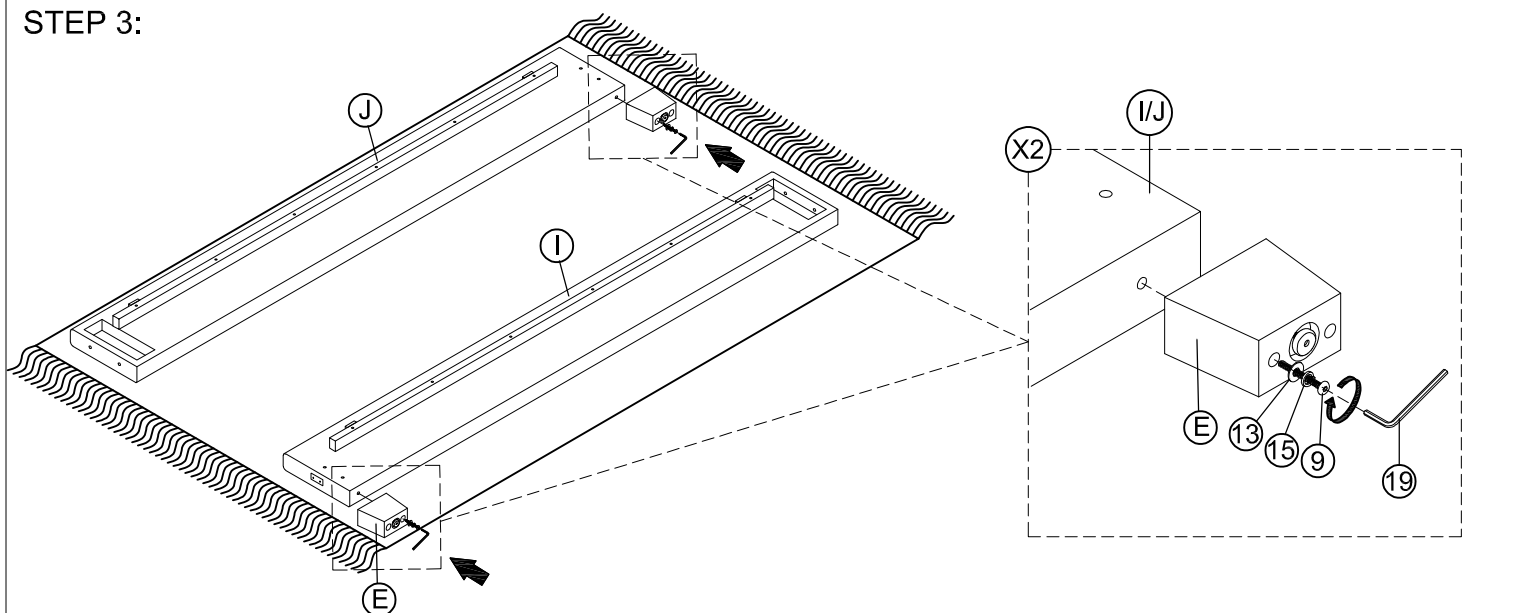


ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 4:

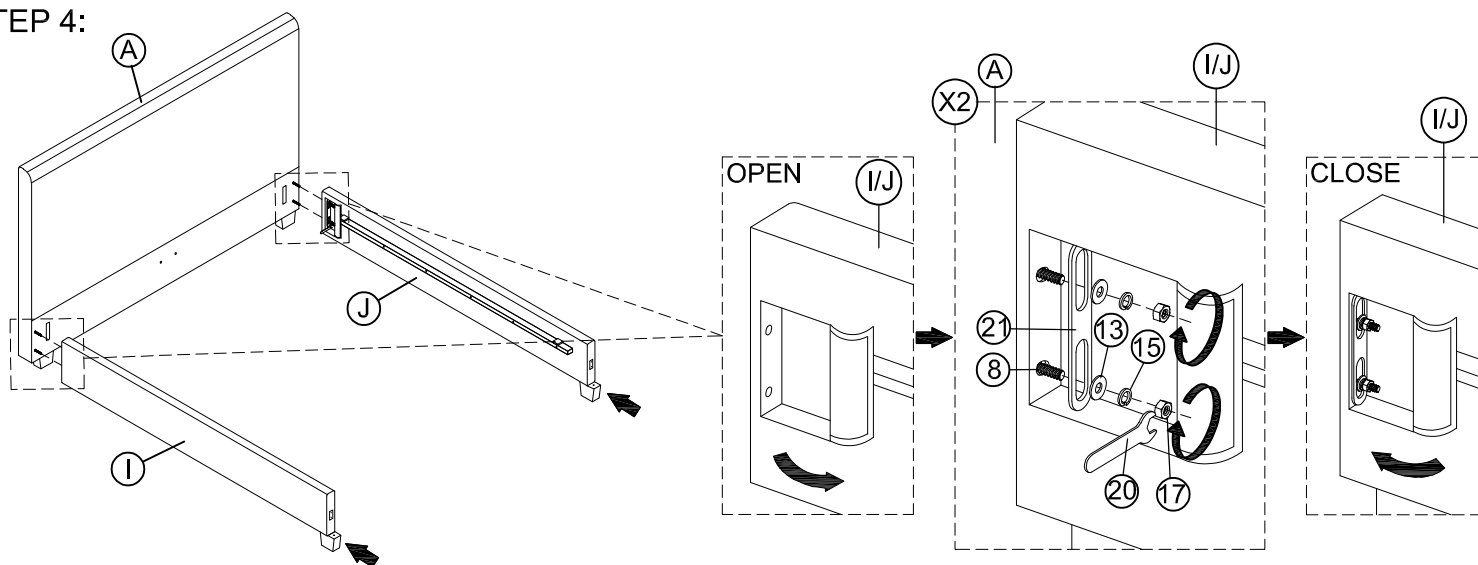

STEP 5:

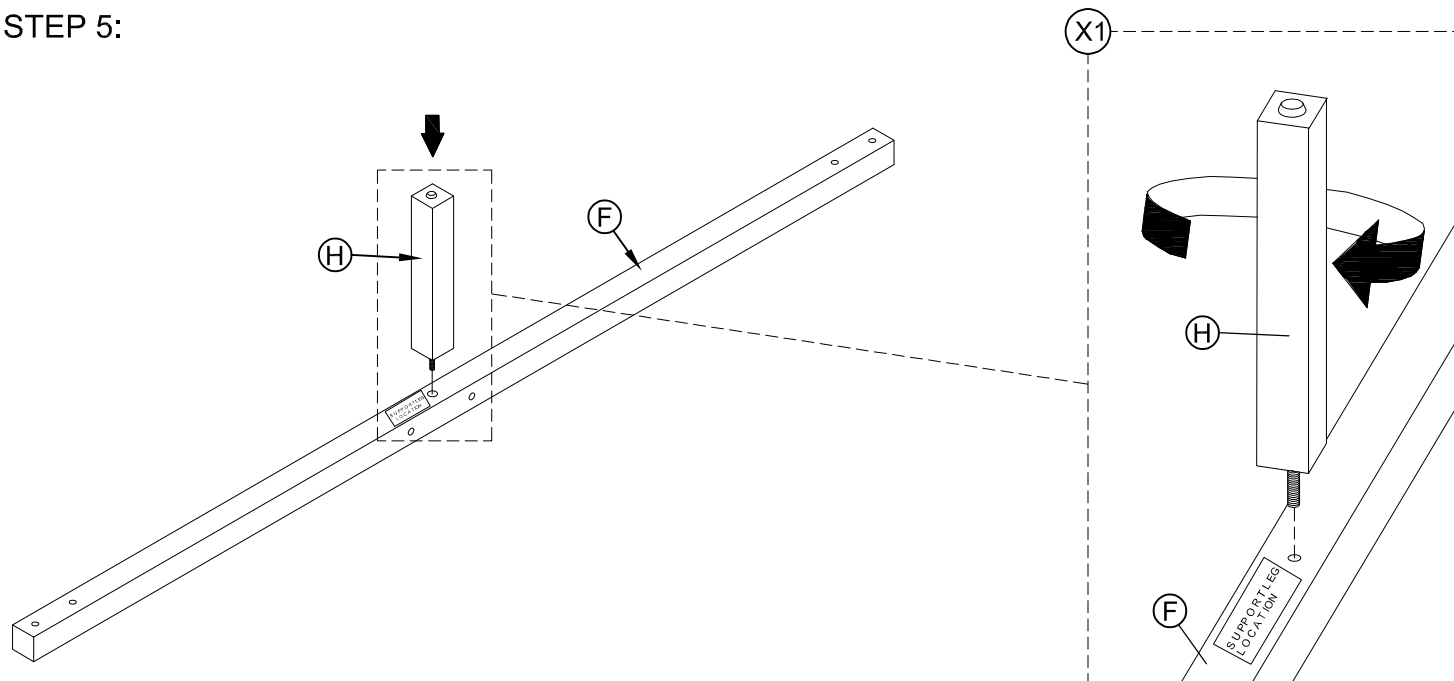

STEP 6:

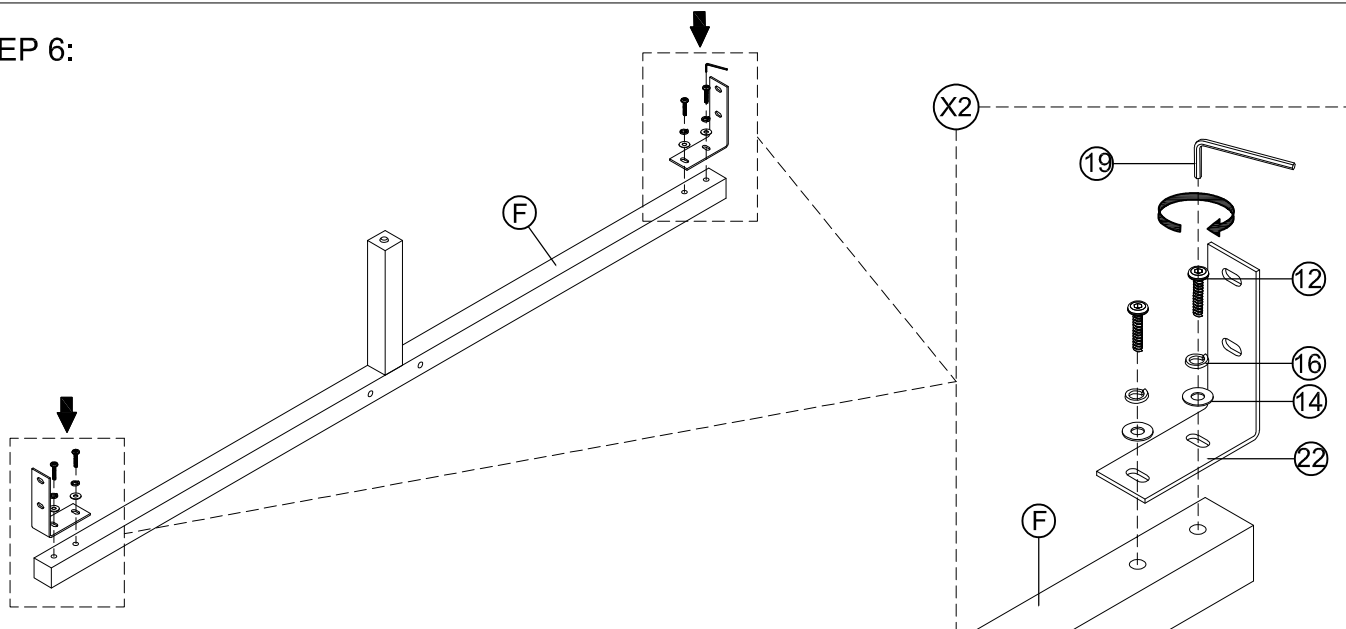


ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 7:

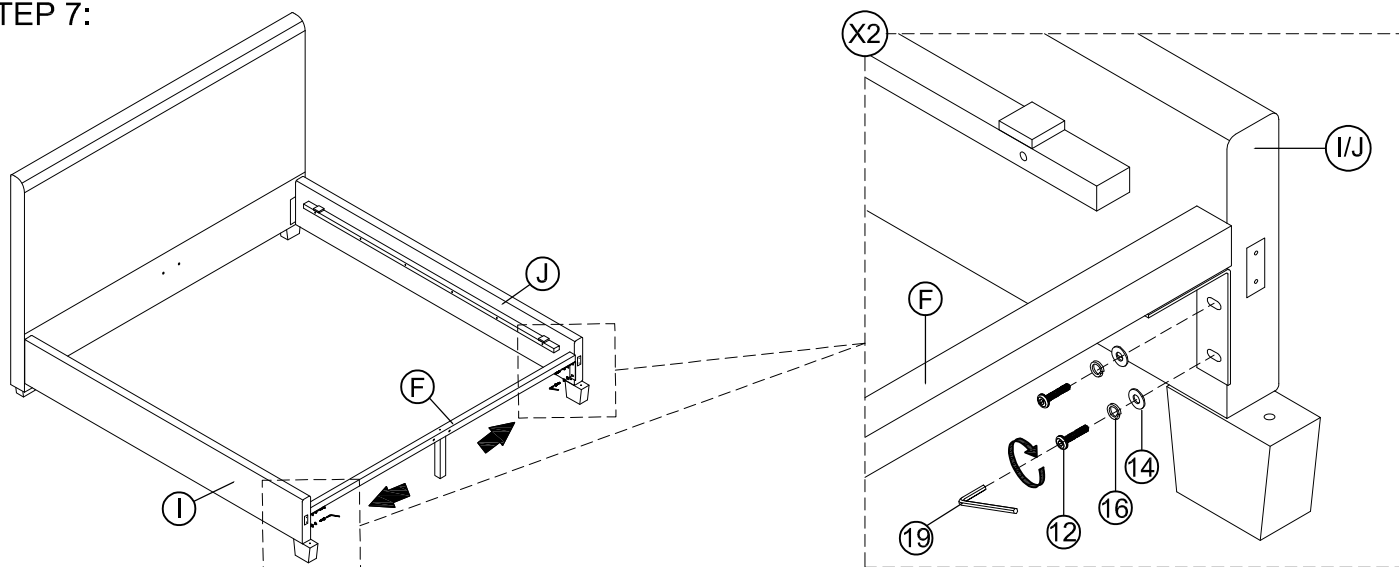

STEP 8:

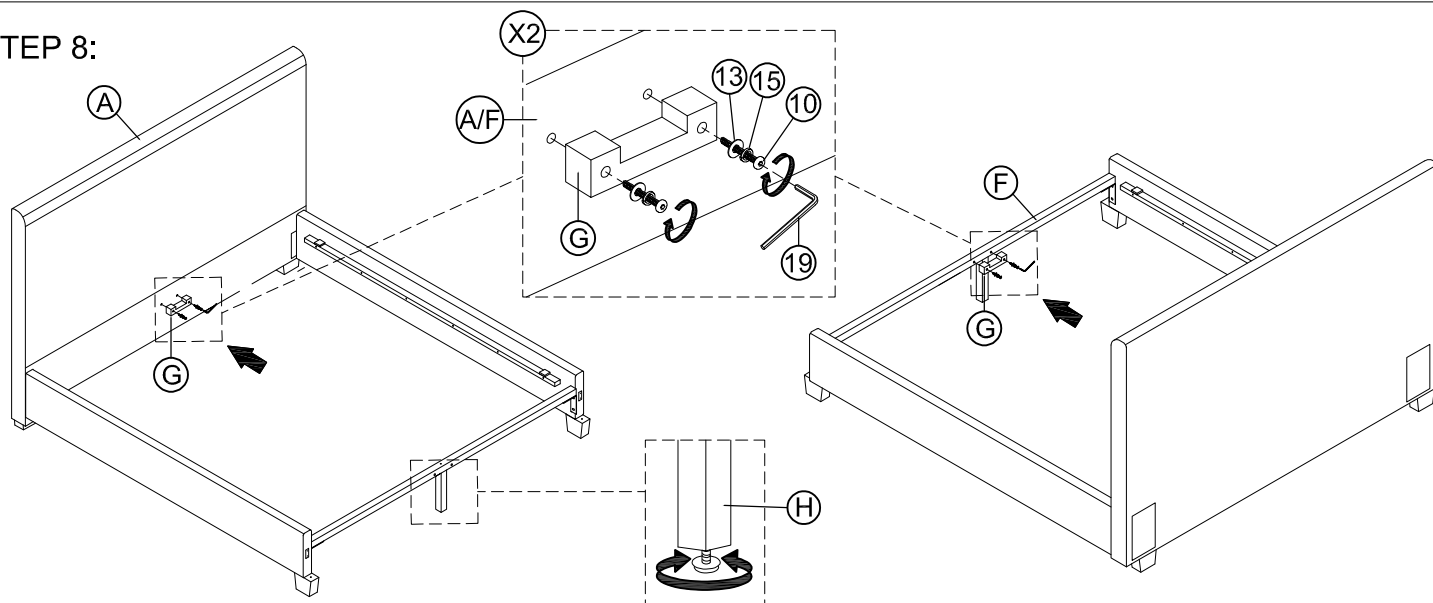

STEP 9:

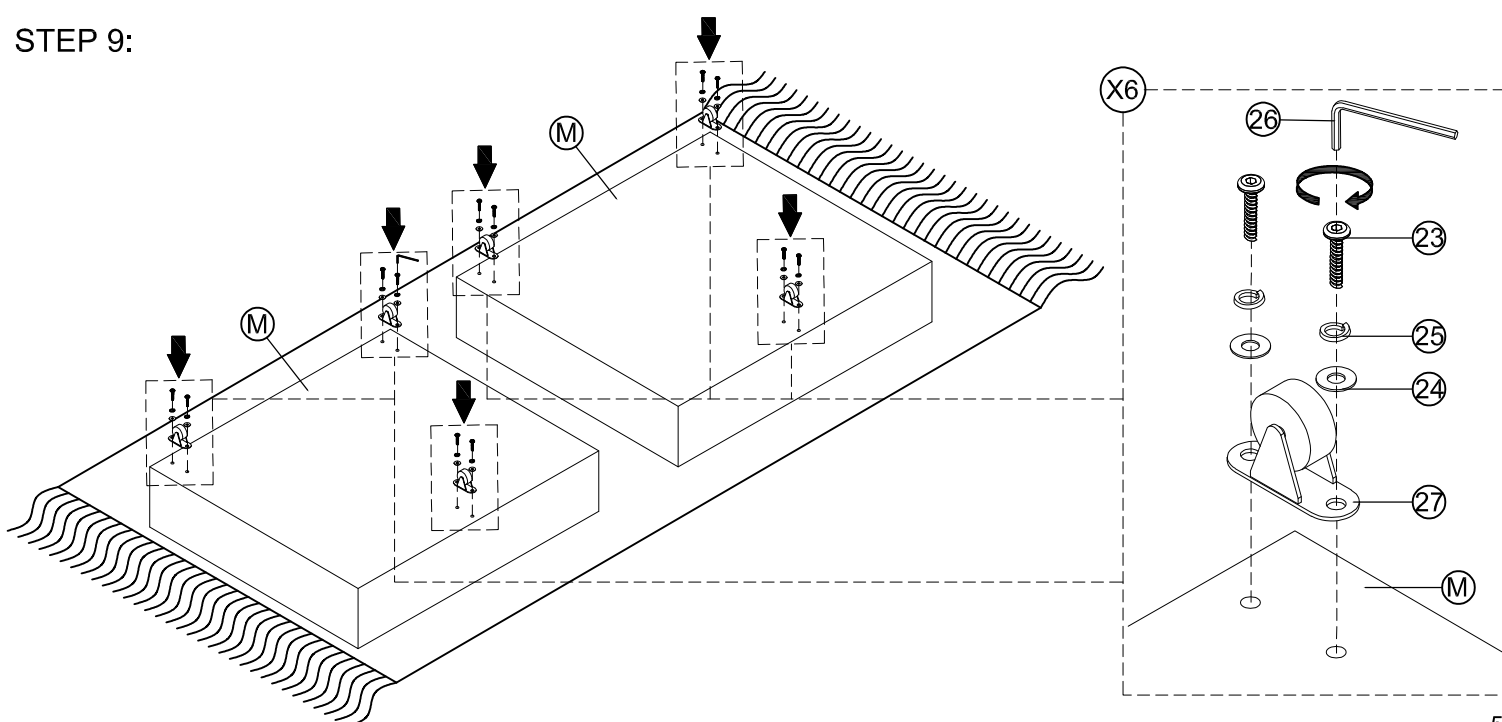


ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 10:

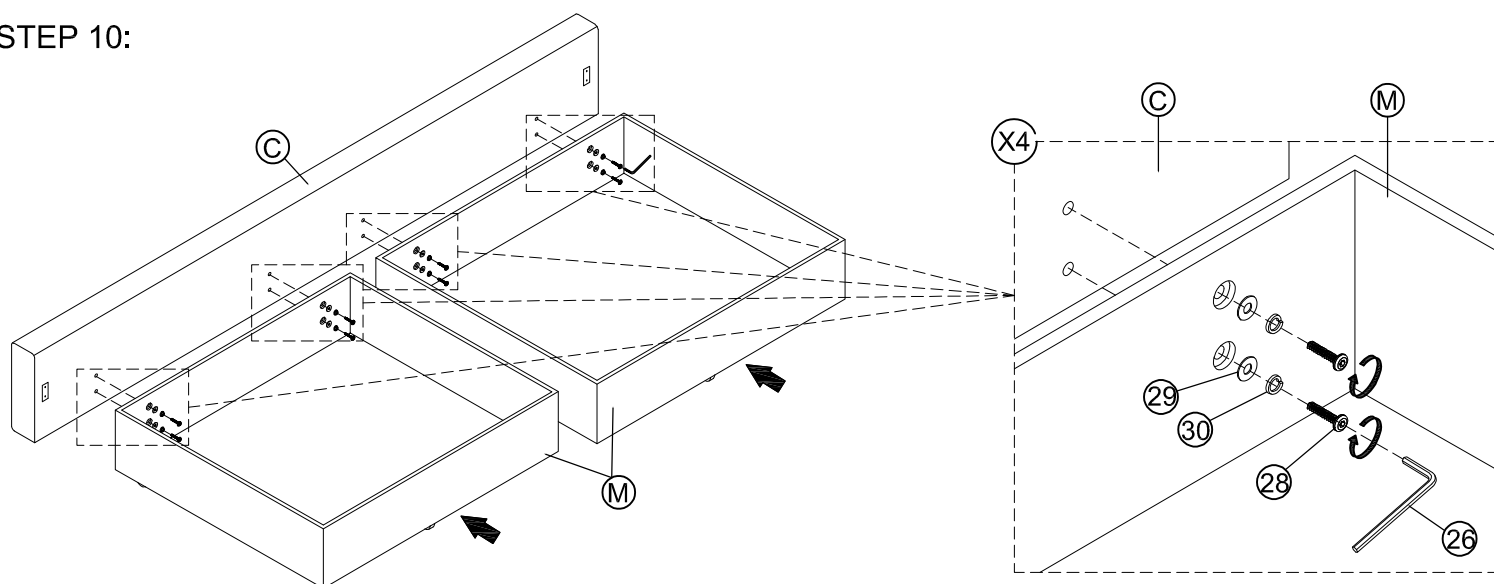

STEP 11:

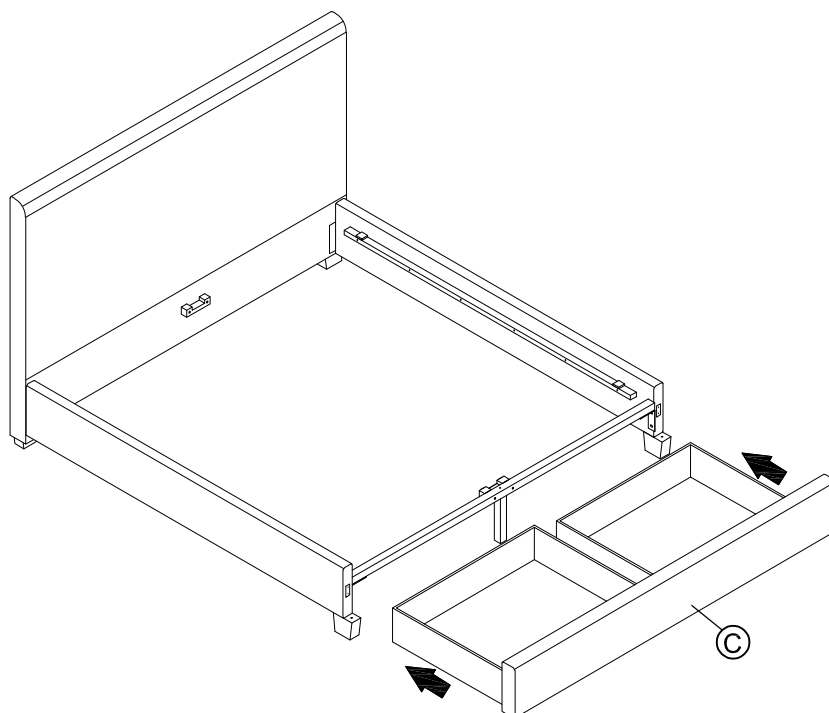

STEP 12:

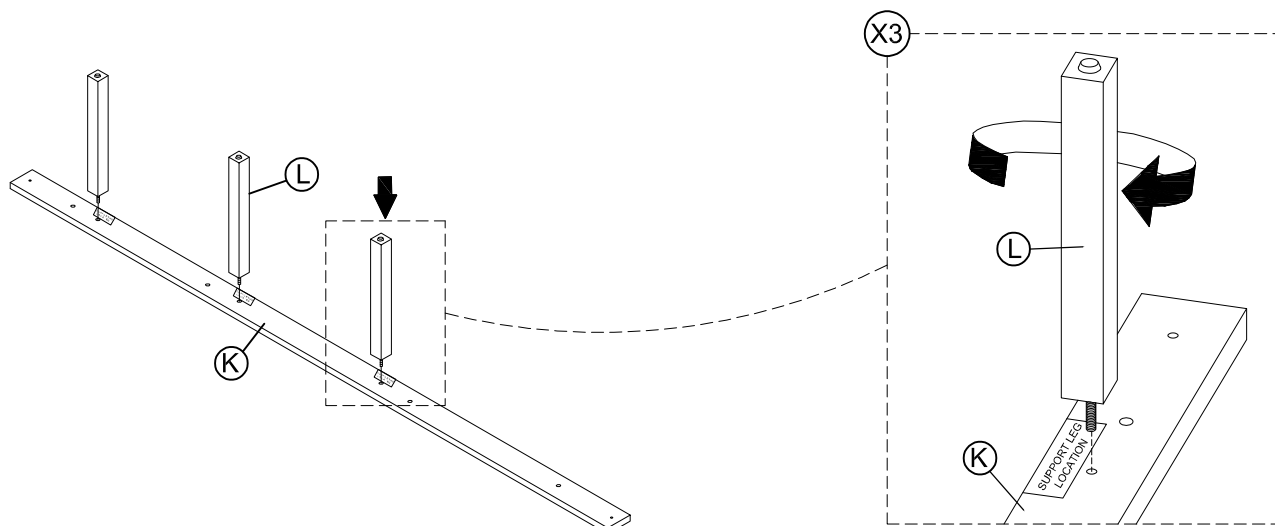


ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 13:

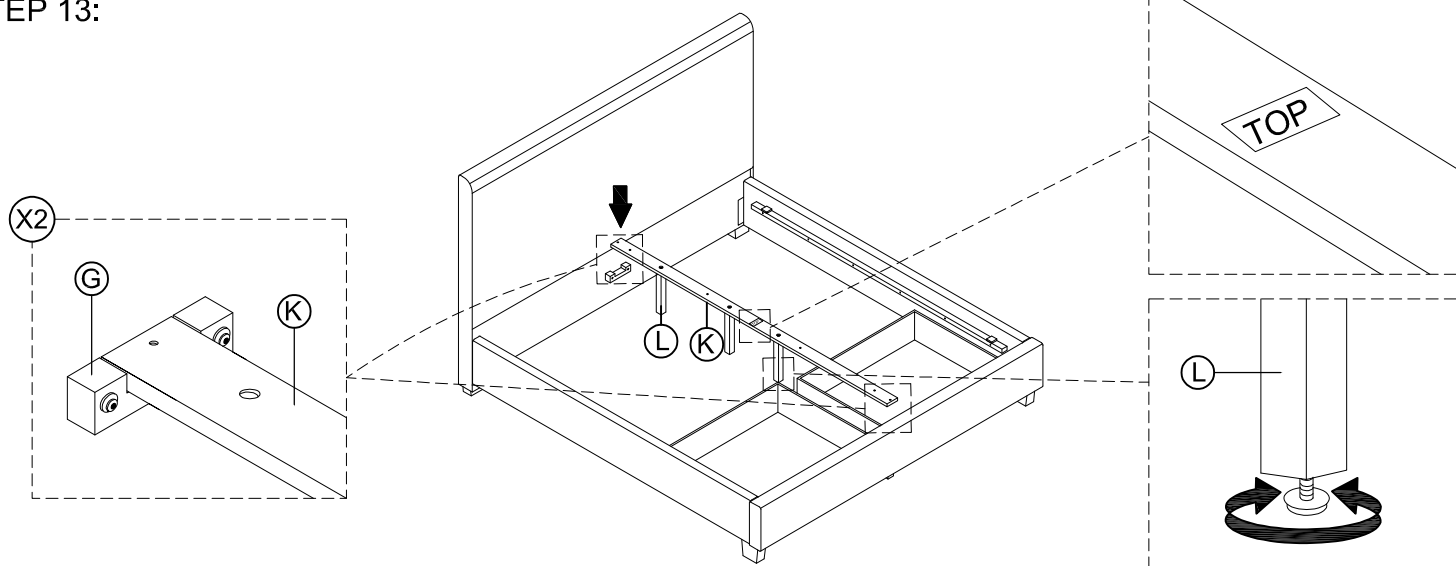

STEP 14:

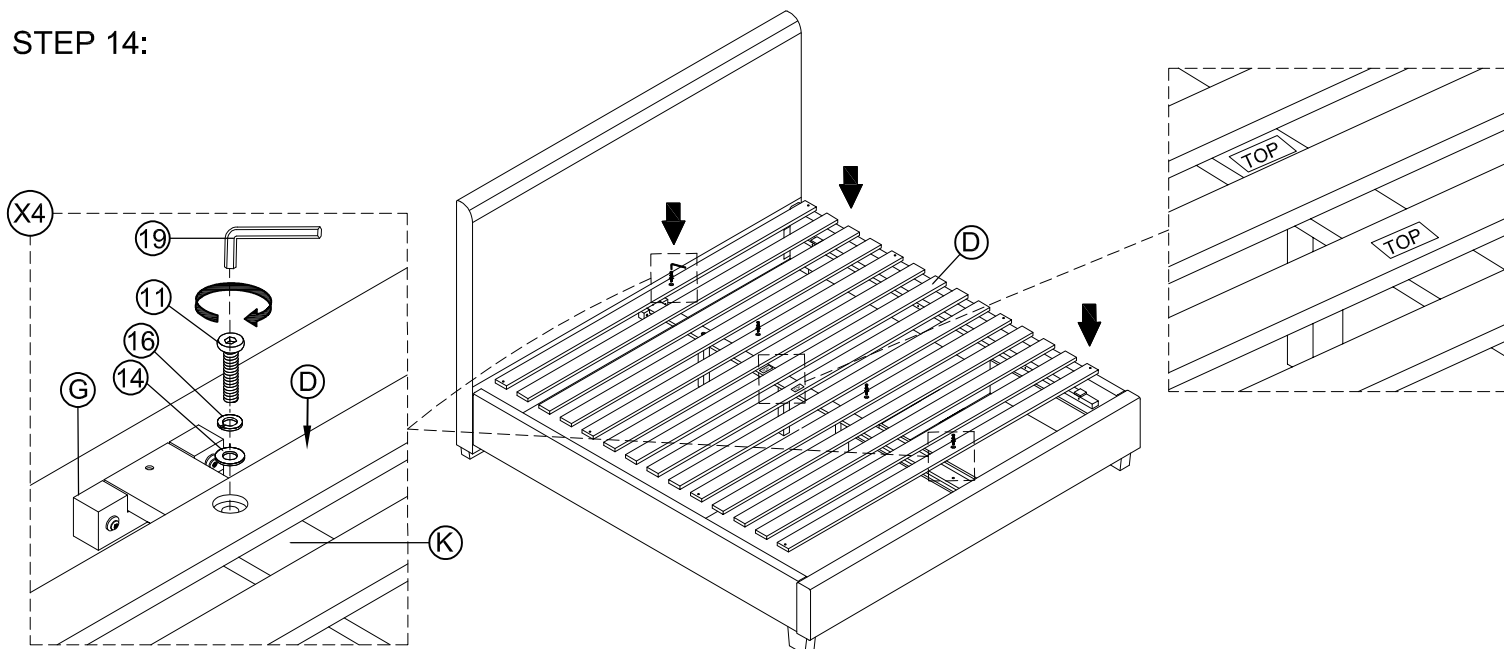


STEP 15:

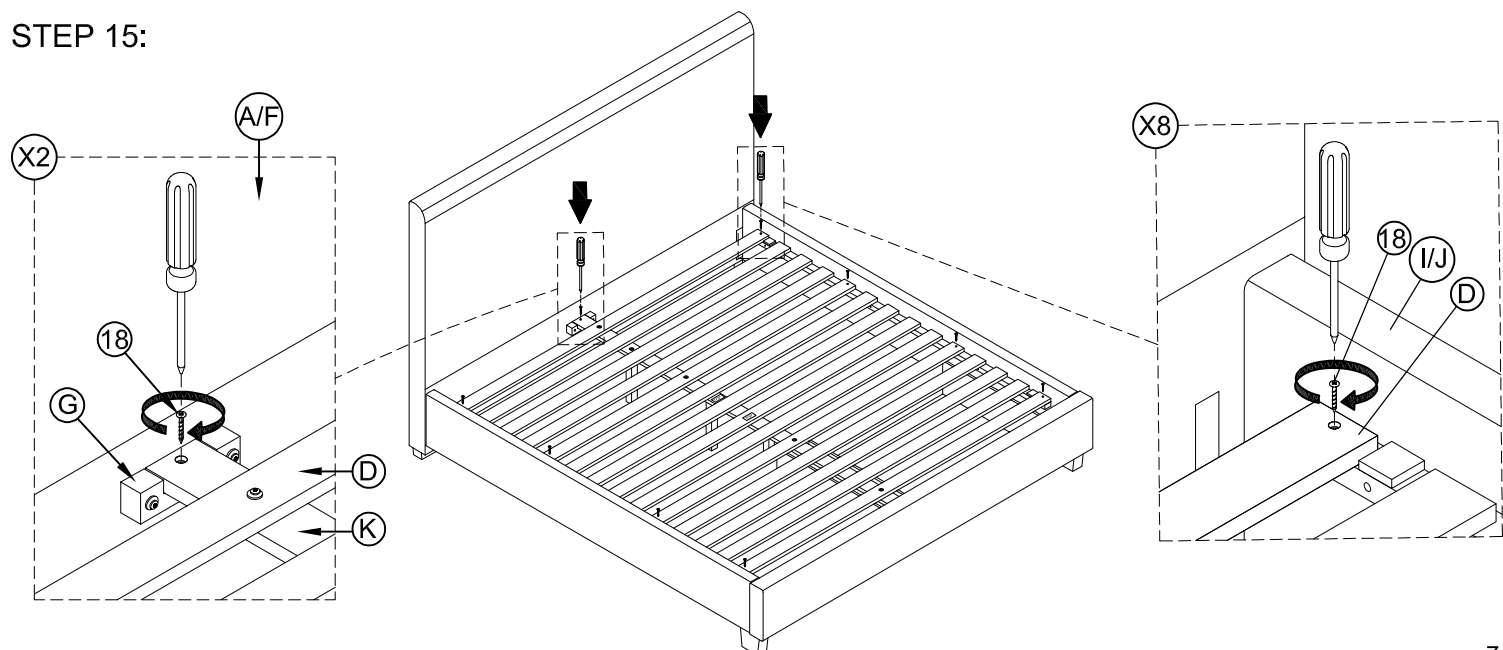

ADONA/MADELEINE/ROYAL UPH QUEEN STORAGE BED

ASSEMBLY INSTRUCTIONS

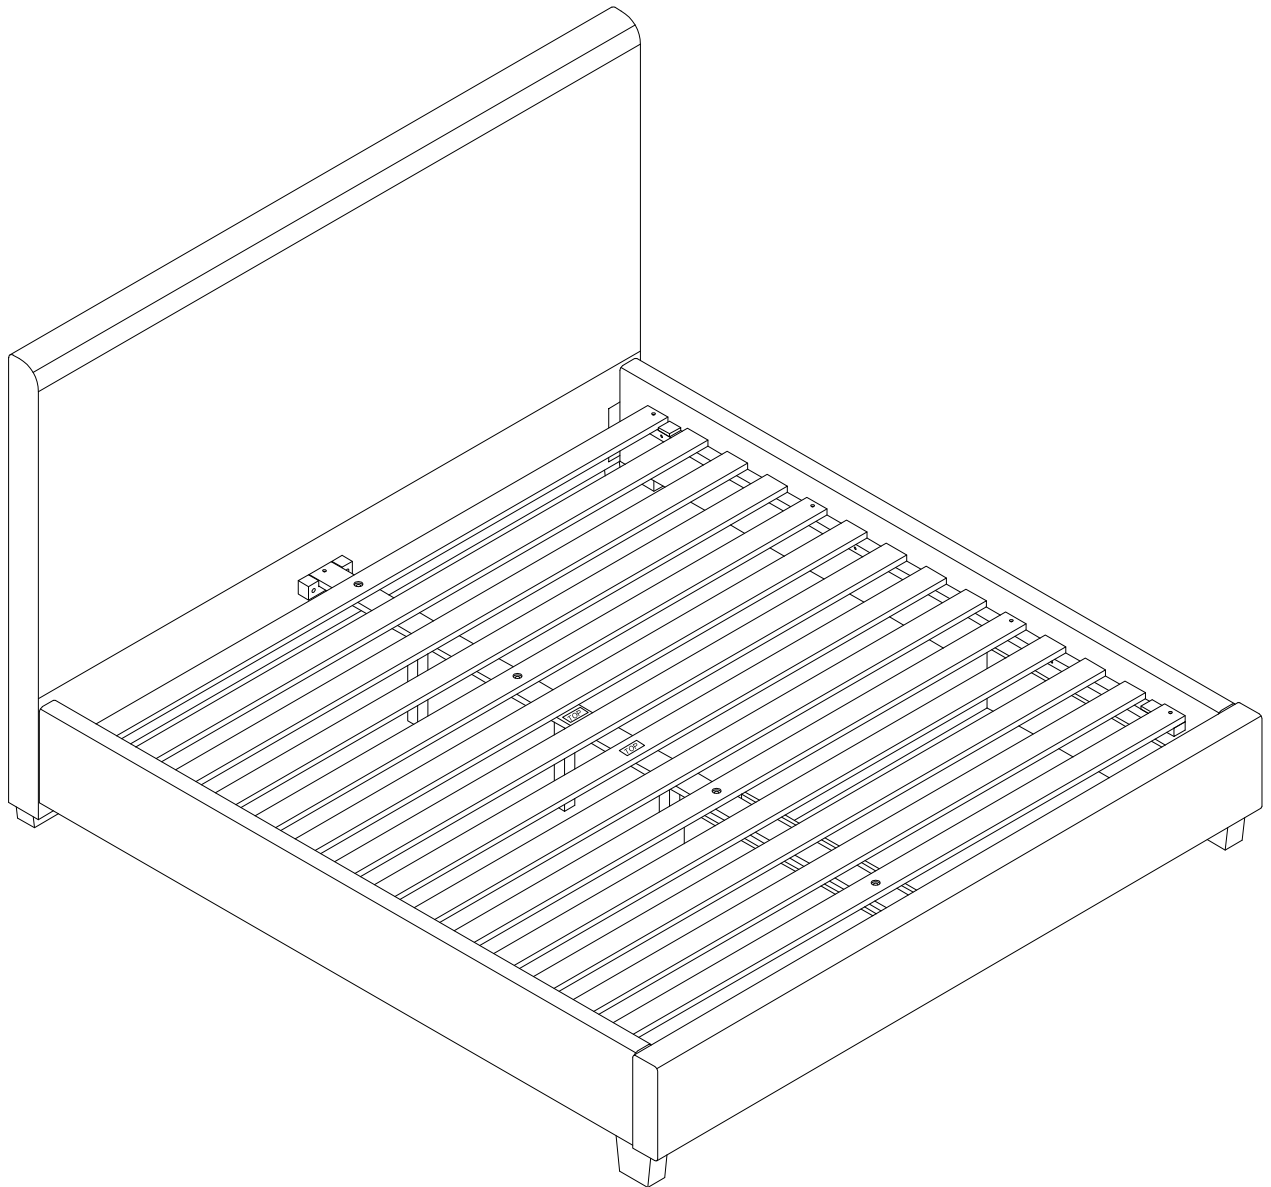


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

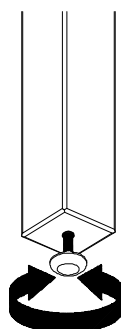

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPH KING STORAGE BED


ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD
B. LEG





1 PC
2 PCS

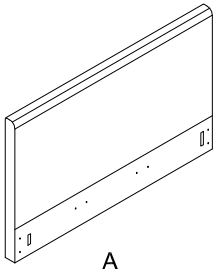

BOX#2

- C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. FOOT RAIL
G. CENTER SLAT SUPPORT CLEAT
H. SUPPORT LEG




1 PC
1 SET
2 PCS
1 PC
4 PCS
1 PC

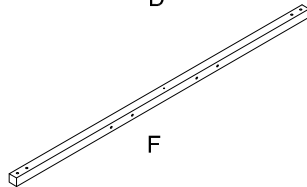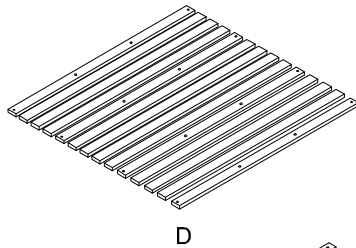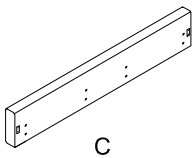

BOX#3

- I. LEFT SIDE RAIL
J. RIGHT SIDE RAIL
K. CENTER SLAT SUPPORT
L. SUPPORT LEG

1 PC
1 PC
2 PCS
6 PCS

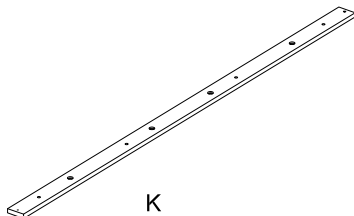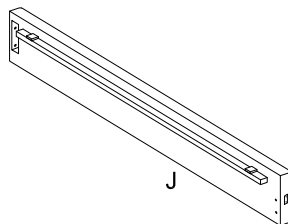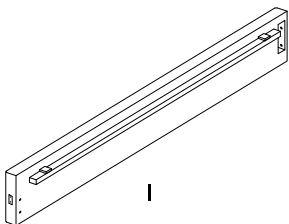

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC

HARDWARE KIT PACKED IN BOX #2


8	THREADED BOLT (5/16"x 3-1/2")		4 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		2 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
12	ALLEN BOLT (1/4"x 1")		8 PCS
13	FLAT WASHER (5/16")		14 PCS
14	FLAT WASHER (1/4")		16 PCS
15	LOCK WASHER (5/16")		14 PCS
16	LOCK WASHER (1/4")		16 PCS
17	HEX NUT (5/16")		4 PCS
18	PHILLIPS SCREW (M4 x 32mm)		12 PCS
19	ALLEN KEY (5/16")		1 PC
20	WRENCH		1 PC
21	CONNECTING BRACKET		2 PCS
22	L-BRACKET		2 PCS

ADONA/MADELEINE/ROYAL UPH KING STORAGE BED

ASSEMBLY INSTRUCTIONS






BOX# 4
M. DRAWER BOX 1 SET

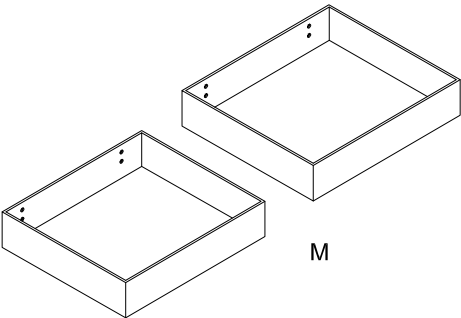

HARDWARE KIT PACKED IN BOX #4

23	ALLEN BOLT (1/4"x 3/4")		12 PCS
24	FLAT WASHER (1/4")		12 PCS
25	LOCK WASHER (1/4")		12 PCS
26	ALLEN KEY (5/16")		1 PC
27	CASTER		6 PCS
28	ALLEN BOLT (5/16"x 1-1/4")		8 PCS
29	FLAT WASHER (5/16")		8 PCS
30	LOCK WASHER (5/16")		8 PCS

FULLY ASSEMBLED

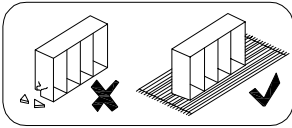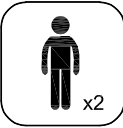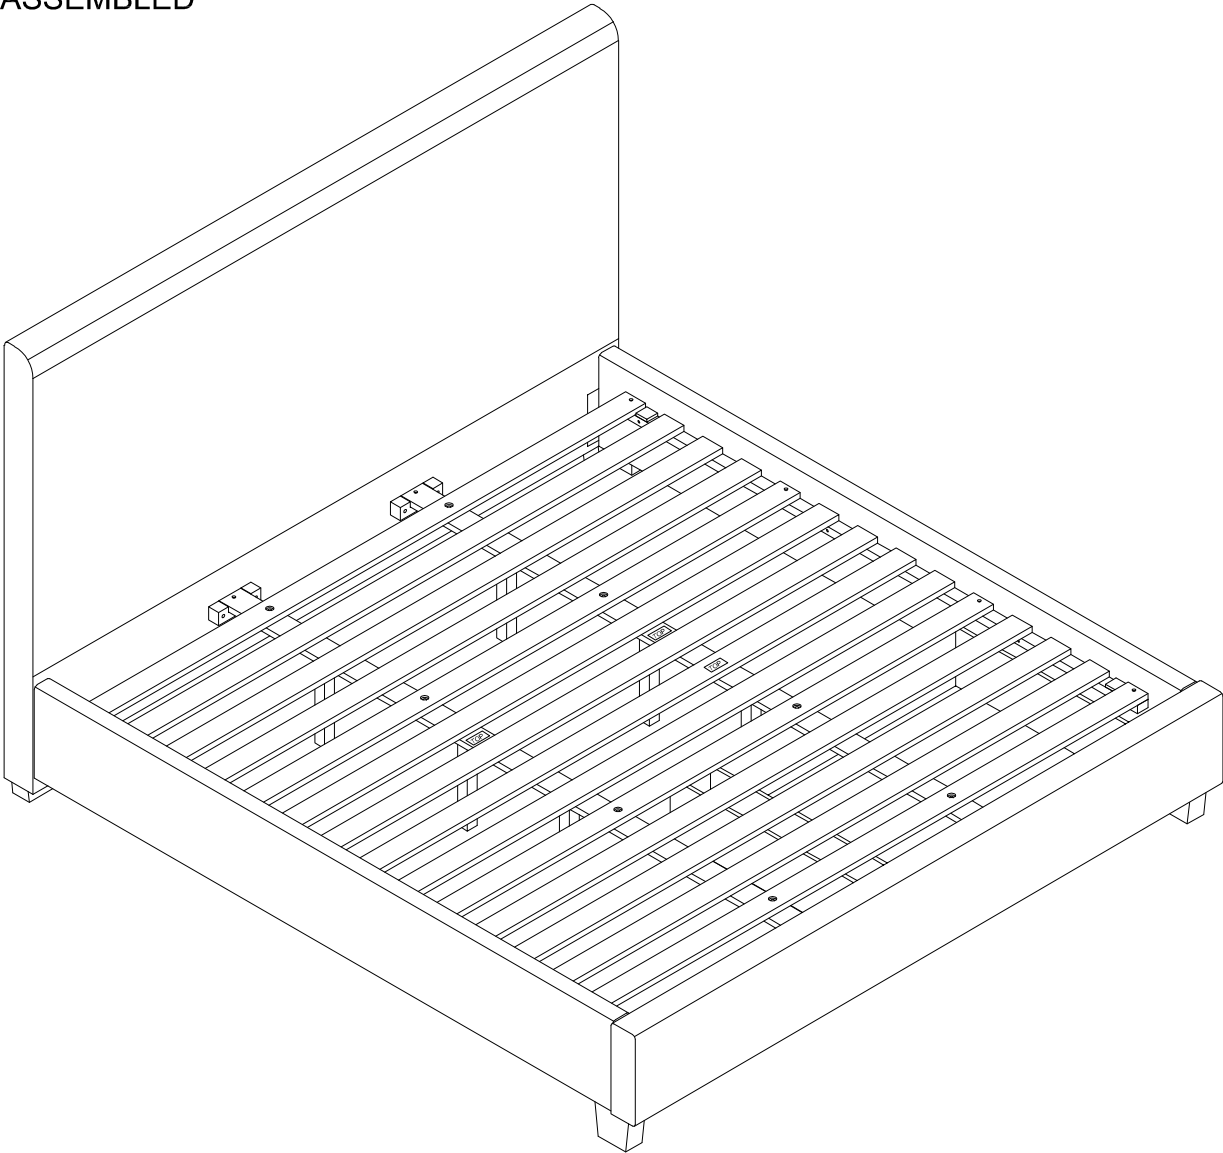


ADONA/MADELEINE/ROYAL UPH KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 1:

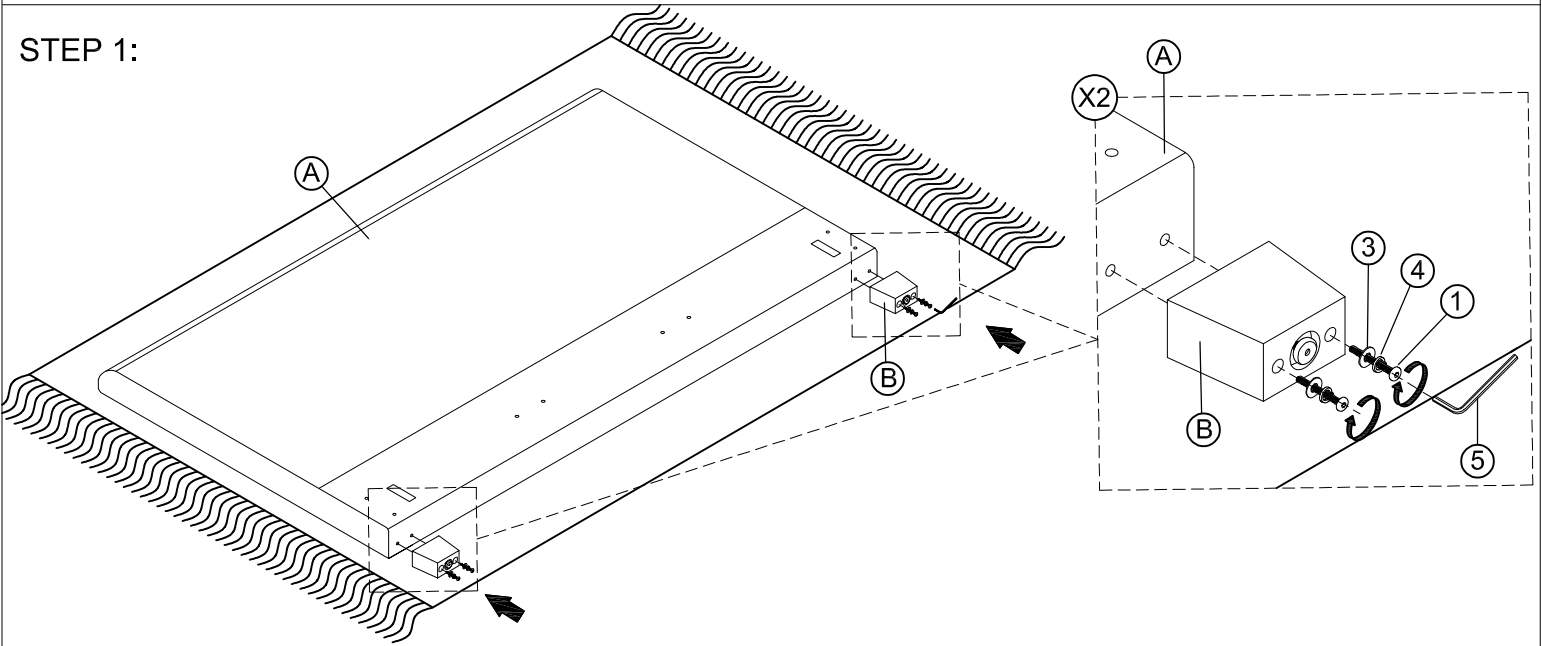

STEP 2:

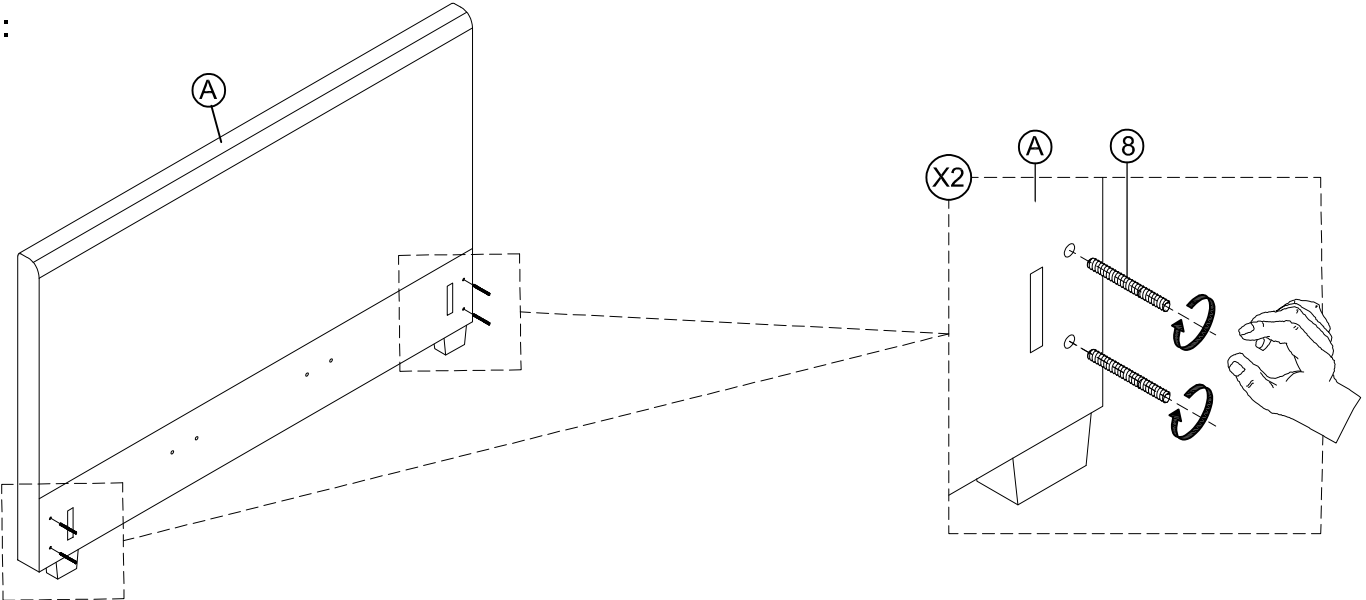

STEP 3:

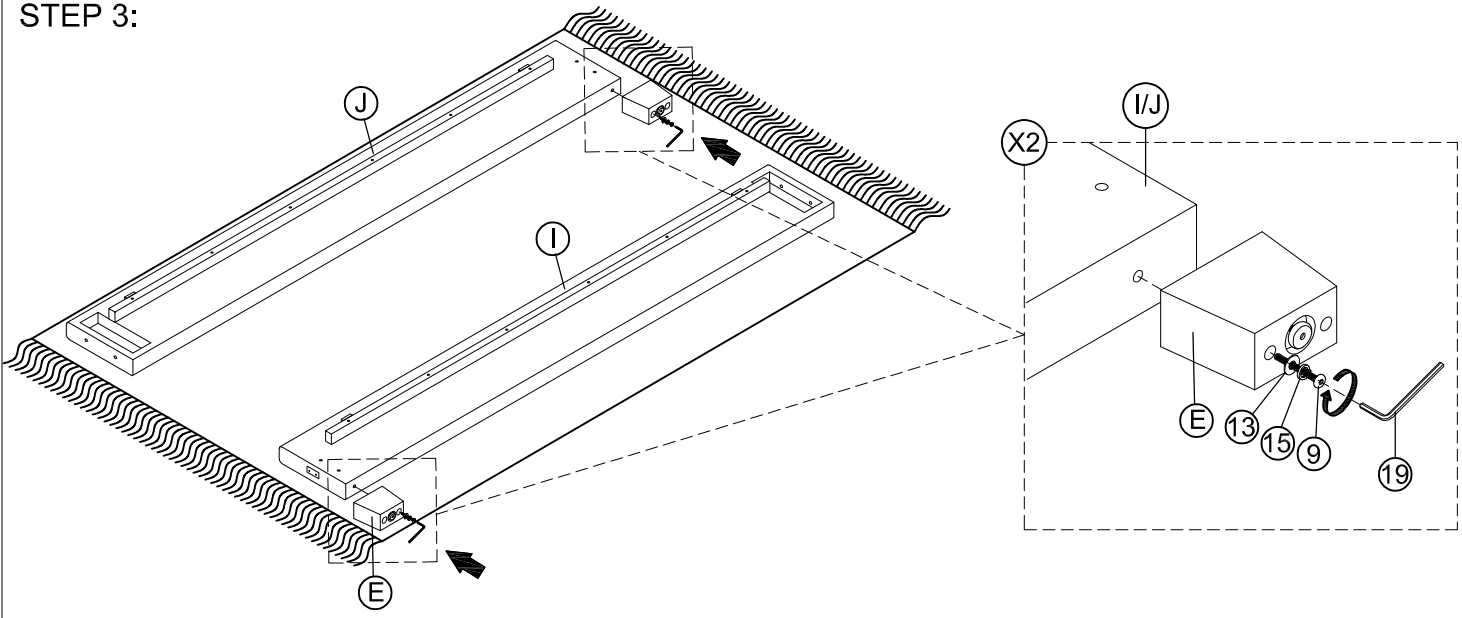


ADONA/MADELEINE/ROYAL UPH KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 4:

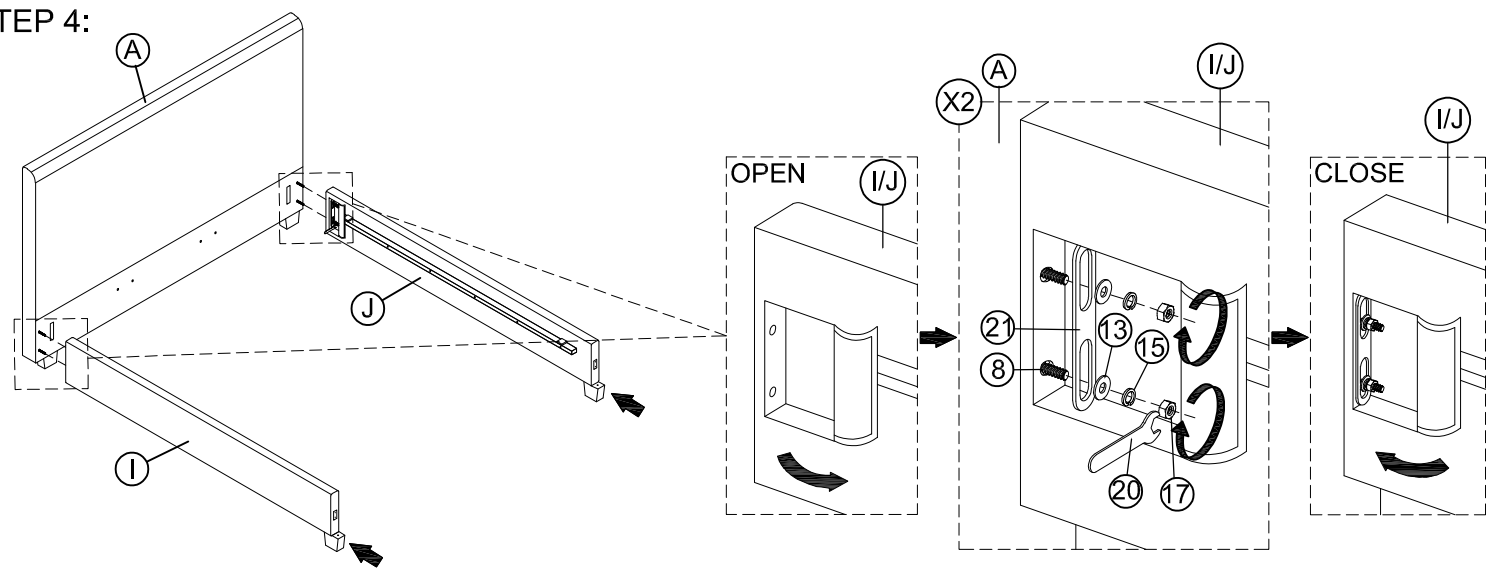

STEP 5:

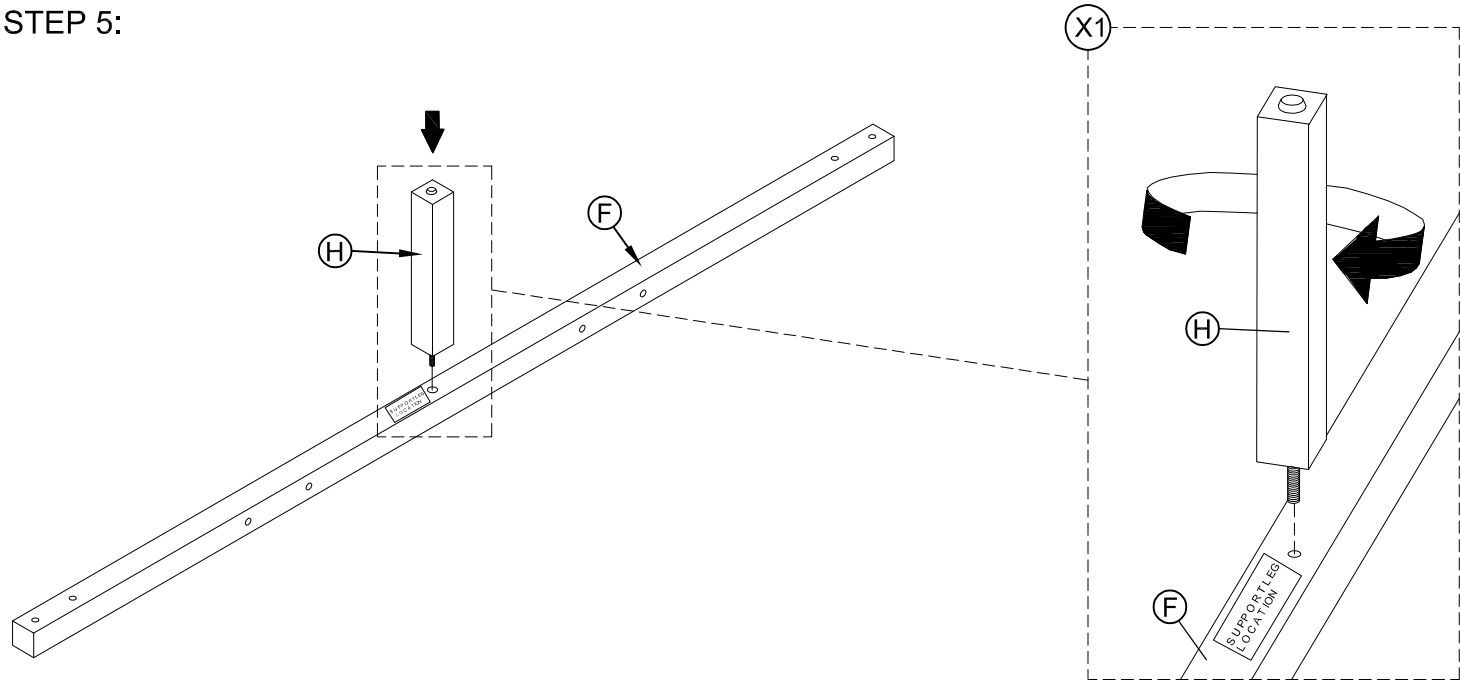

STEP 6:

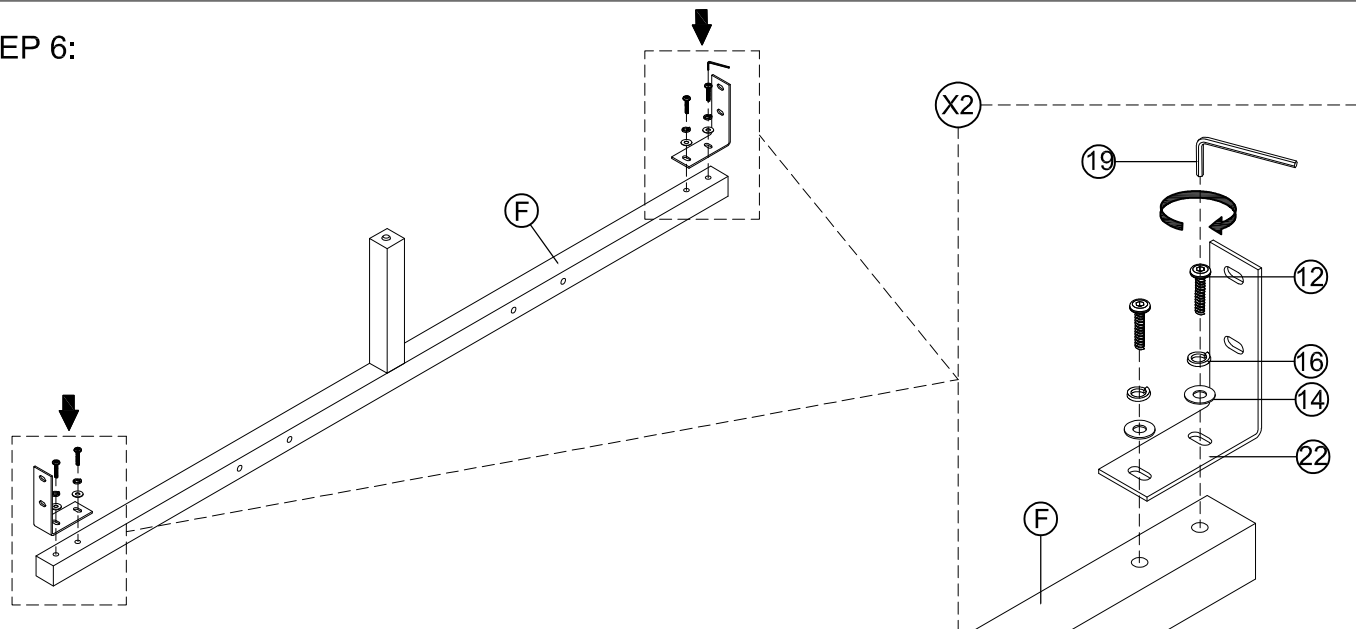


ADONA/MADELEINE/ROYAL UPH KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 7:

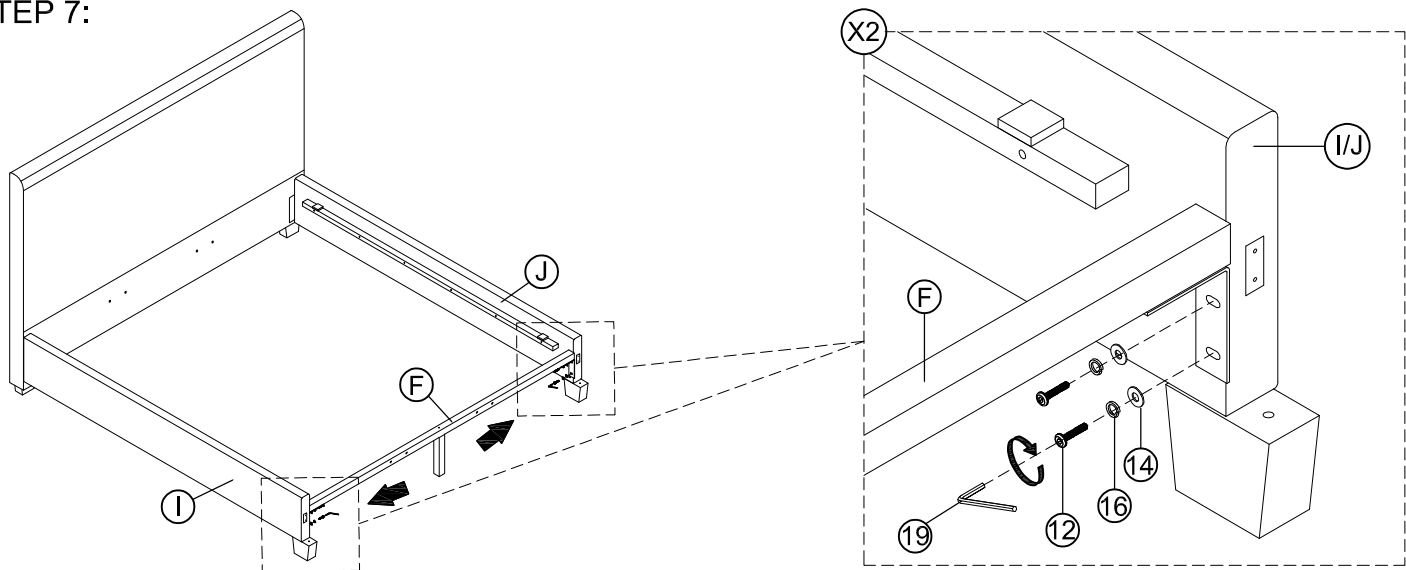

STEP 8:

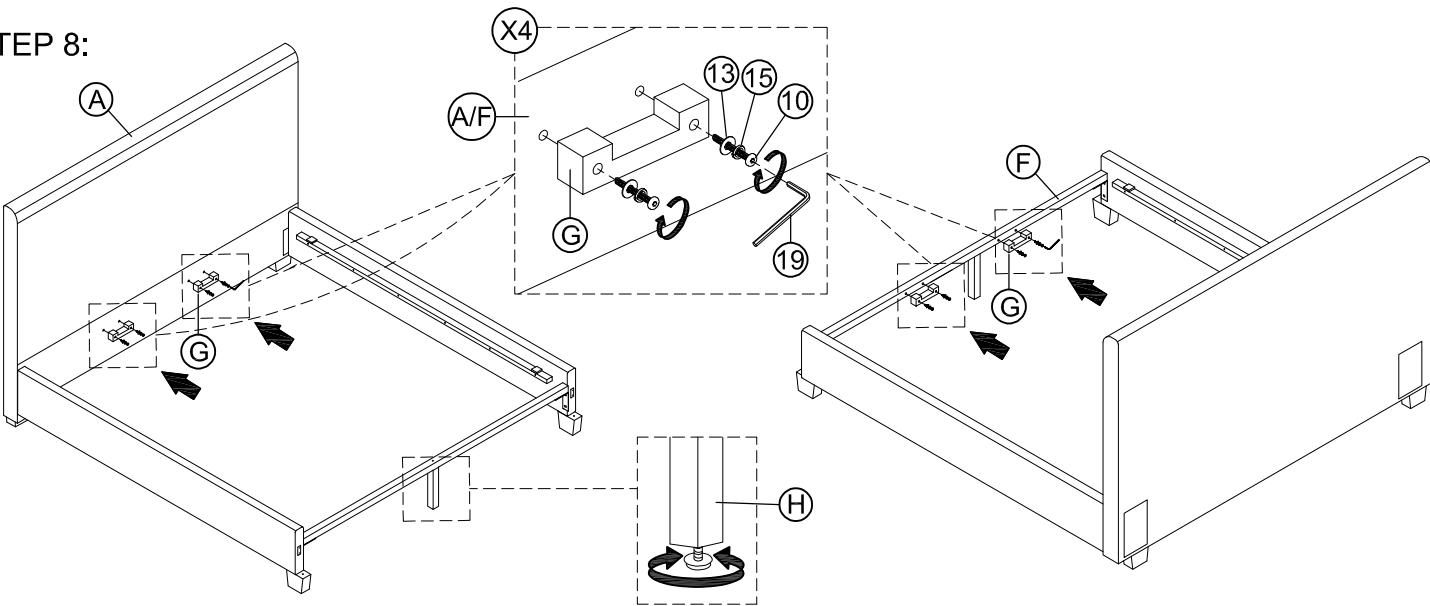

STEP 9:

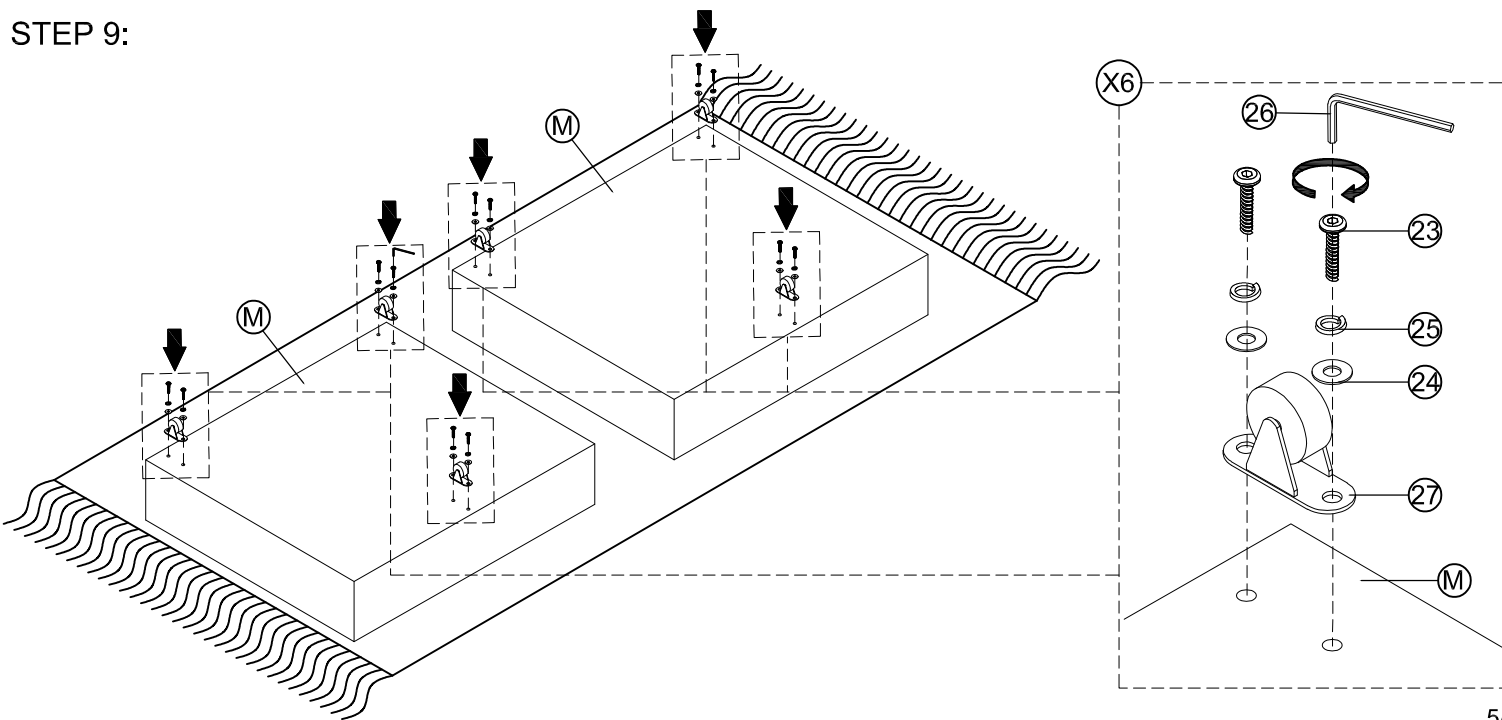


ADONA/MADELEINE/ROYAL UPH KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 10:

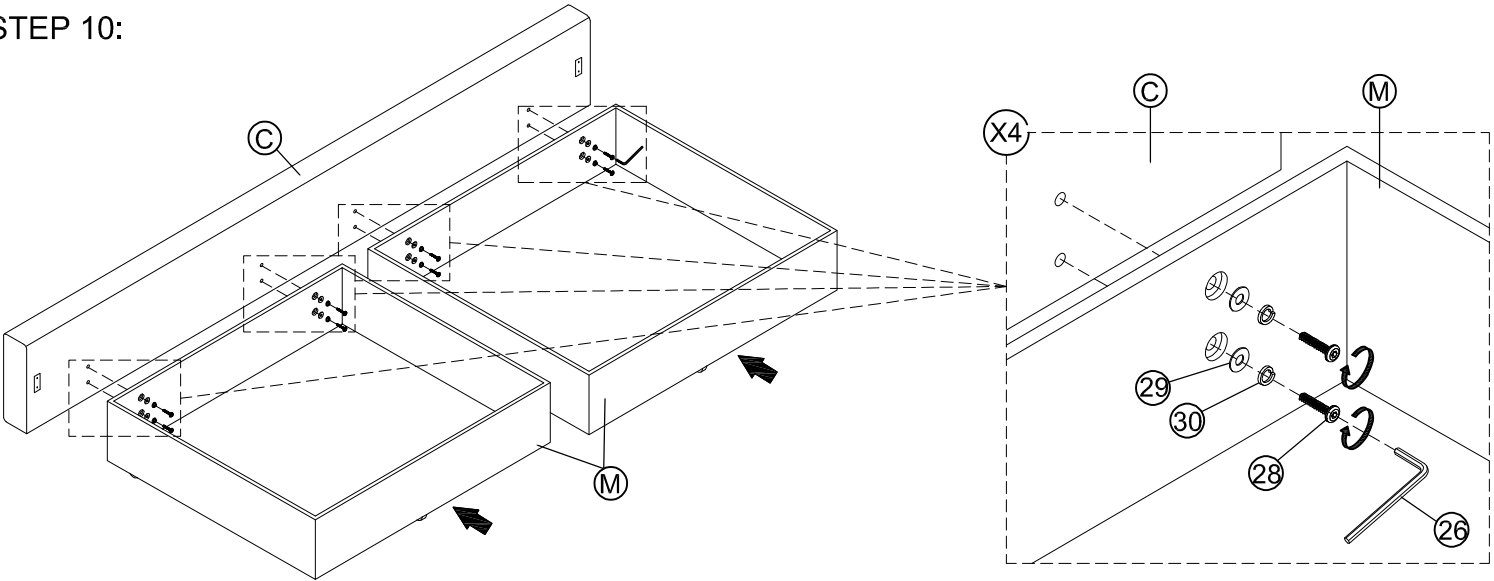

STEP 11:

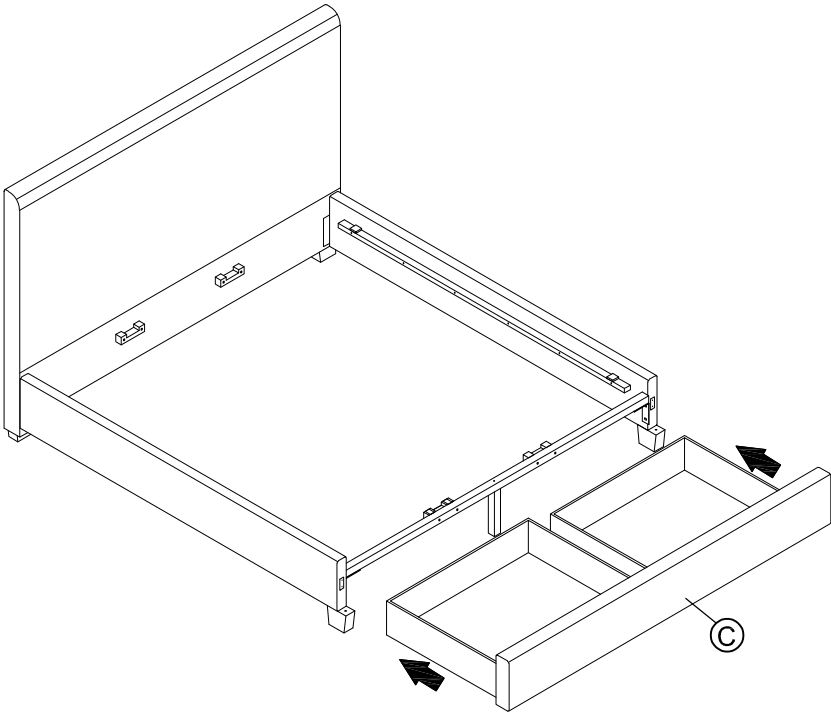

STEP 12:

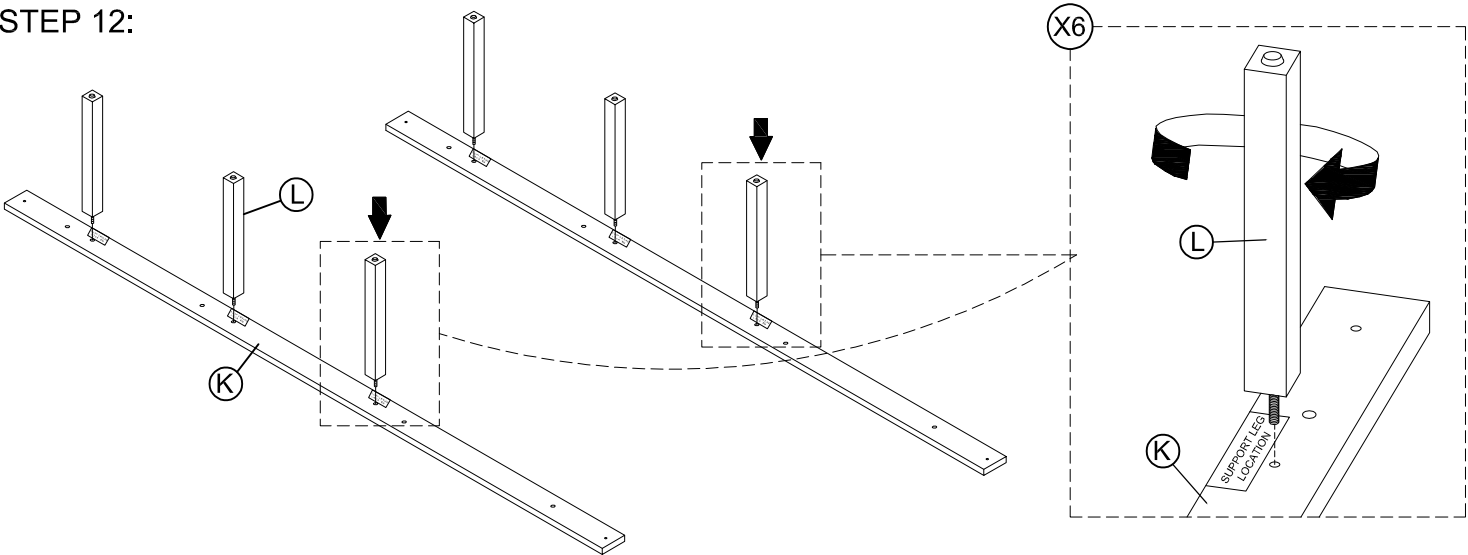


ADONA/MADELEINE/ROYAL UPH KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 13:

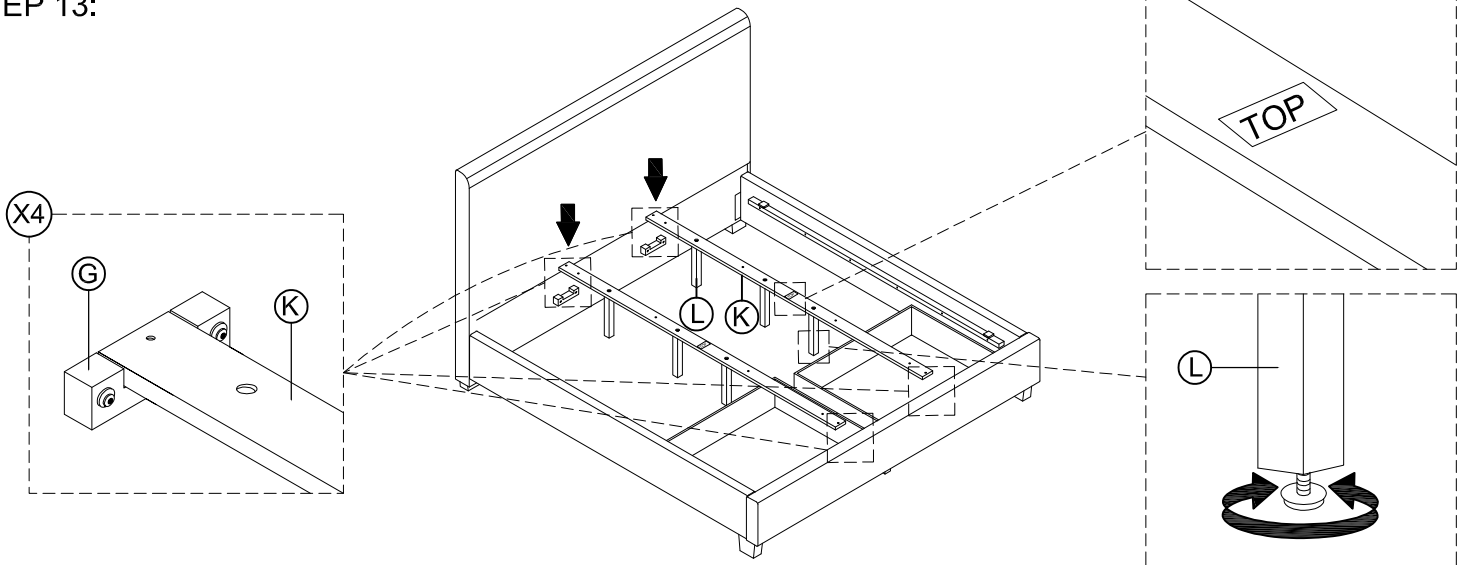

STEP 14:

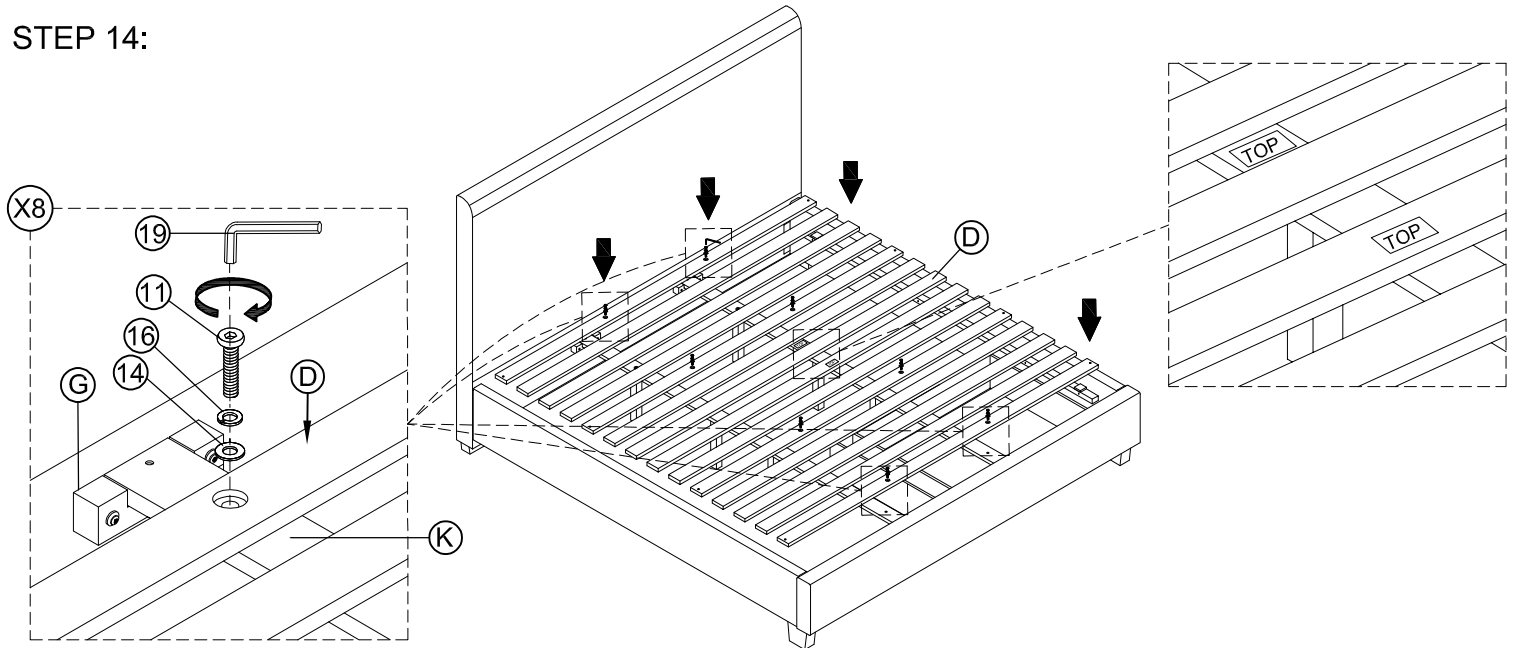


STEP 15:

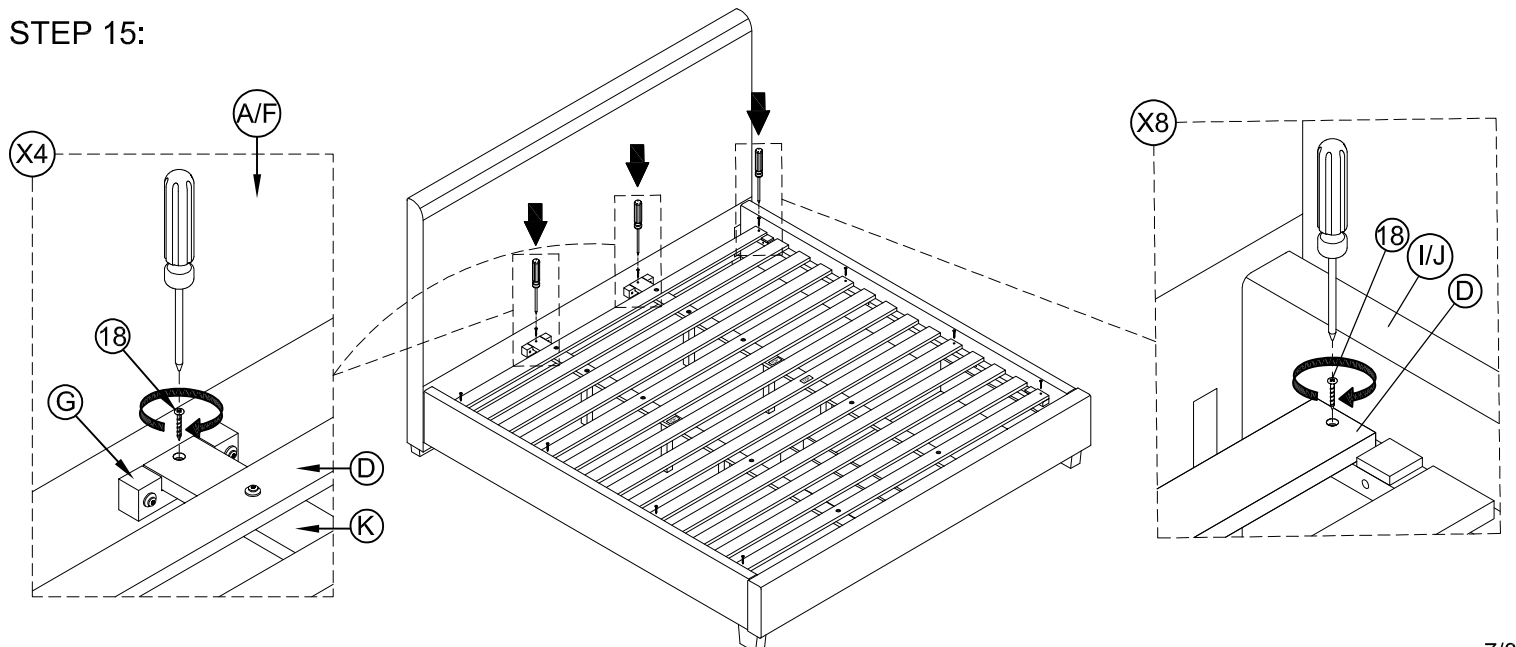

ADONA/MADELEINE/ROYAL UPH KING STORAGE BED

ASSEMBLY INSTRUCTIONS

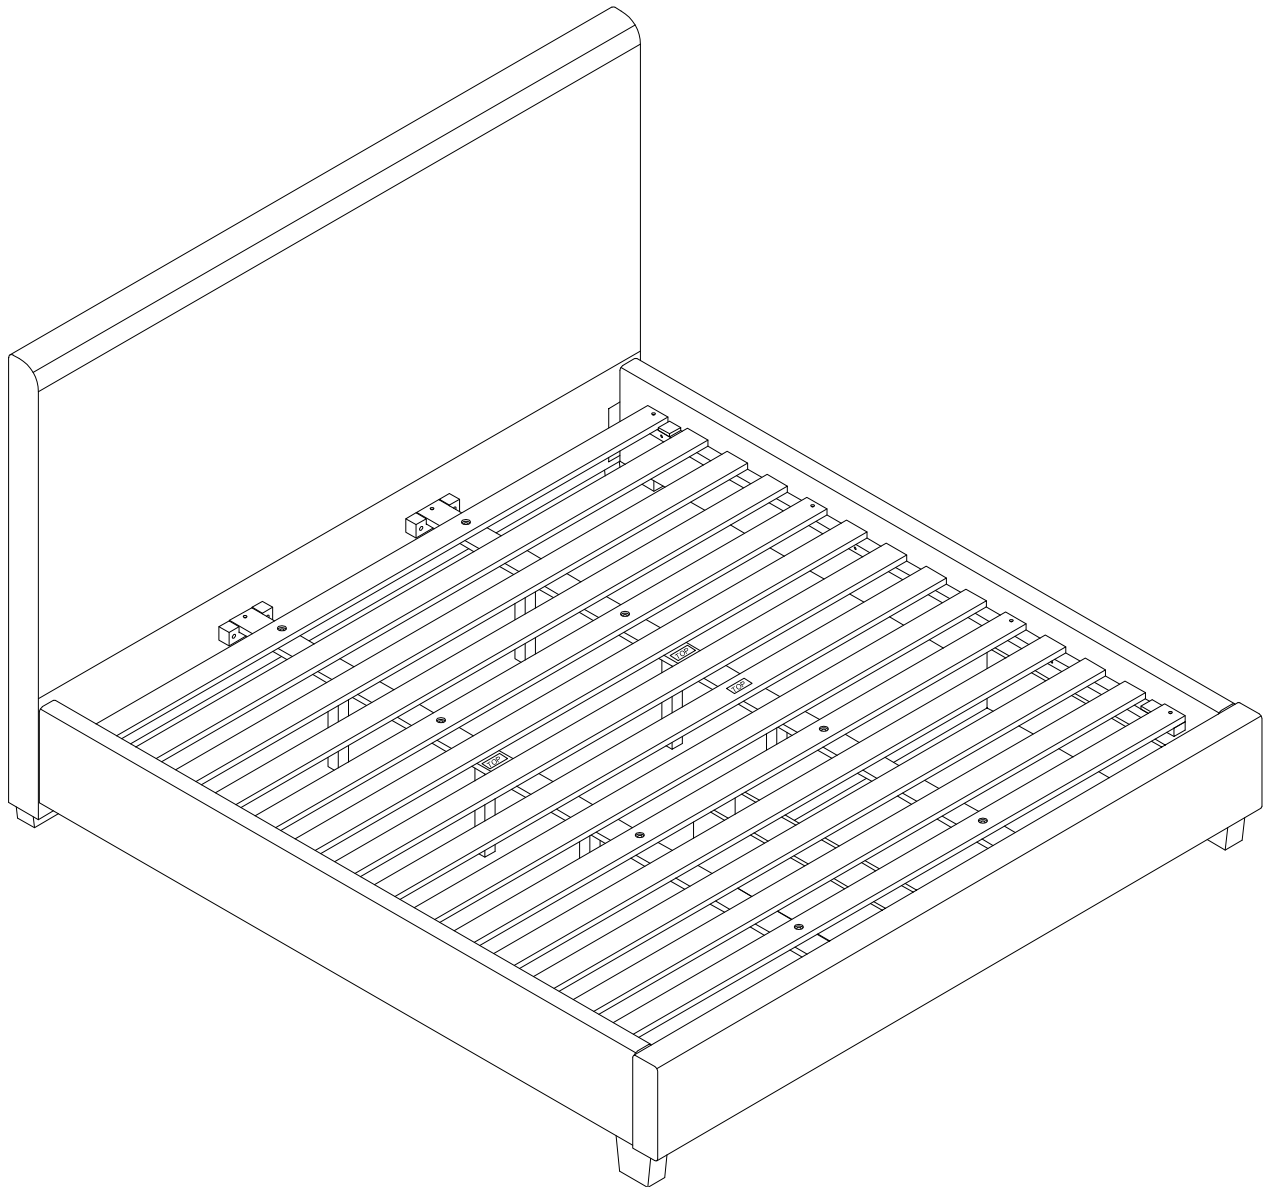


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

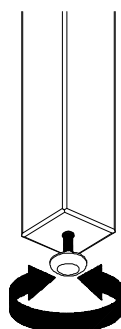

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED


ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD
B. LEG

1 PC
2 PCS

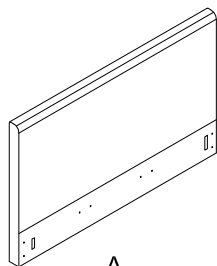

A




B


BOX#2

- C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. FOOT RAIL
G. CENTER SLAT SUPPORT CLEAT
H. SUPPORT LEG

1 PC
1 SET
2 PCS
1 PC
4 PCS
1 PC

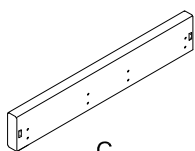


C

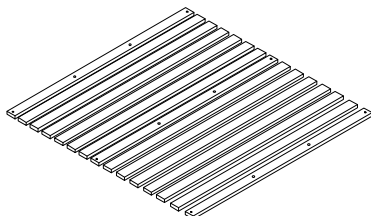

D



E

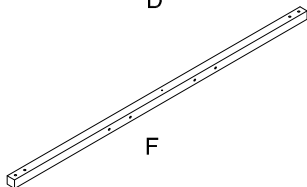

F



G




H


BOX#3

- I. LEFT SIDE RAIL
J. RIGHT SIDE RAIL
K. CENTER SLAT SUPPORT
L. SUPPORT LEG


1 PC
1 PC
2 PCS
6 PCS

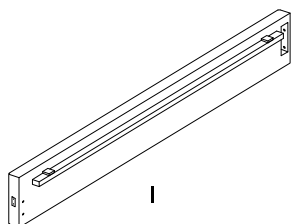

I

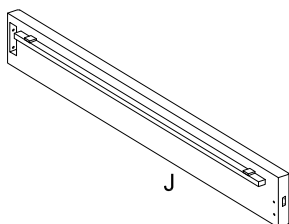

J

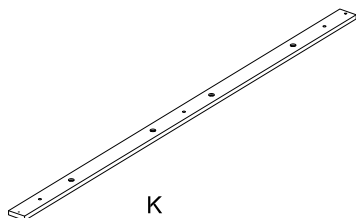

K



L

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC

HARDWARE KIT PACKED IN BOX #2


8	THREADED BOLT (5/16"x 3-1/2")		4 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		2 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		6 PCS
12	ALLEN BOLT (1/4"x 1")		8 PCS
13	FLAT WASHER (5/16")		14 PCS
14	FLAT WASHER (1/4")		14 PCS
15	LOCK WASHER (5/16")		14 PCS
16	LOCK WASHER (1/4")		14 PCS
17	HEX NUT (5/16")		4 PCS
18	PHILLIPS SCREW (M4 x 32mm)		10 PCS
19	ALLEN KEY (5/16")		1 PC
20	WRENCH		1 PC
21	CONNECTING BRACKET		2 PCS
22	L-BRACKET		2 PCS

ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED

ASSEMBLY INSTRUCTIONS






BOX# 4
M. DRAWER BOX 1 SET

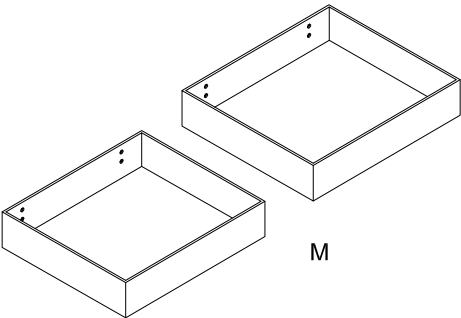

HARDWARE KIT PACKED IN BOX #4

23	ALLEN BOLT (1/4"x 3/4")		12 PCS
24	FLAT WASHER (1/4")		12 PCS
25	LOCK WASHER (1/4")		12 PCS
26	ALLEN KEY (5/16")		1 PC
27	CASTER		6 PCS
28	ALLEN BOLT (5/16"x 1-1/4")		8 PCS
29	FLAT WASHER (5/16")		8 PCS
30	LOCK WASHER (5/16")		8 PCS

FULLY ASSEMBLED

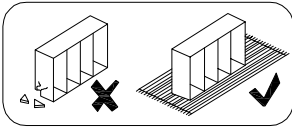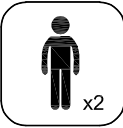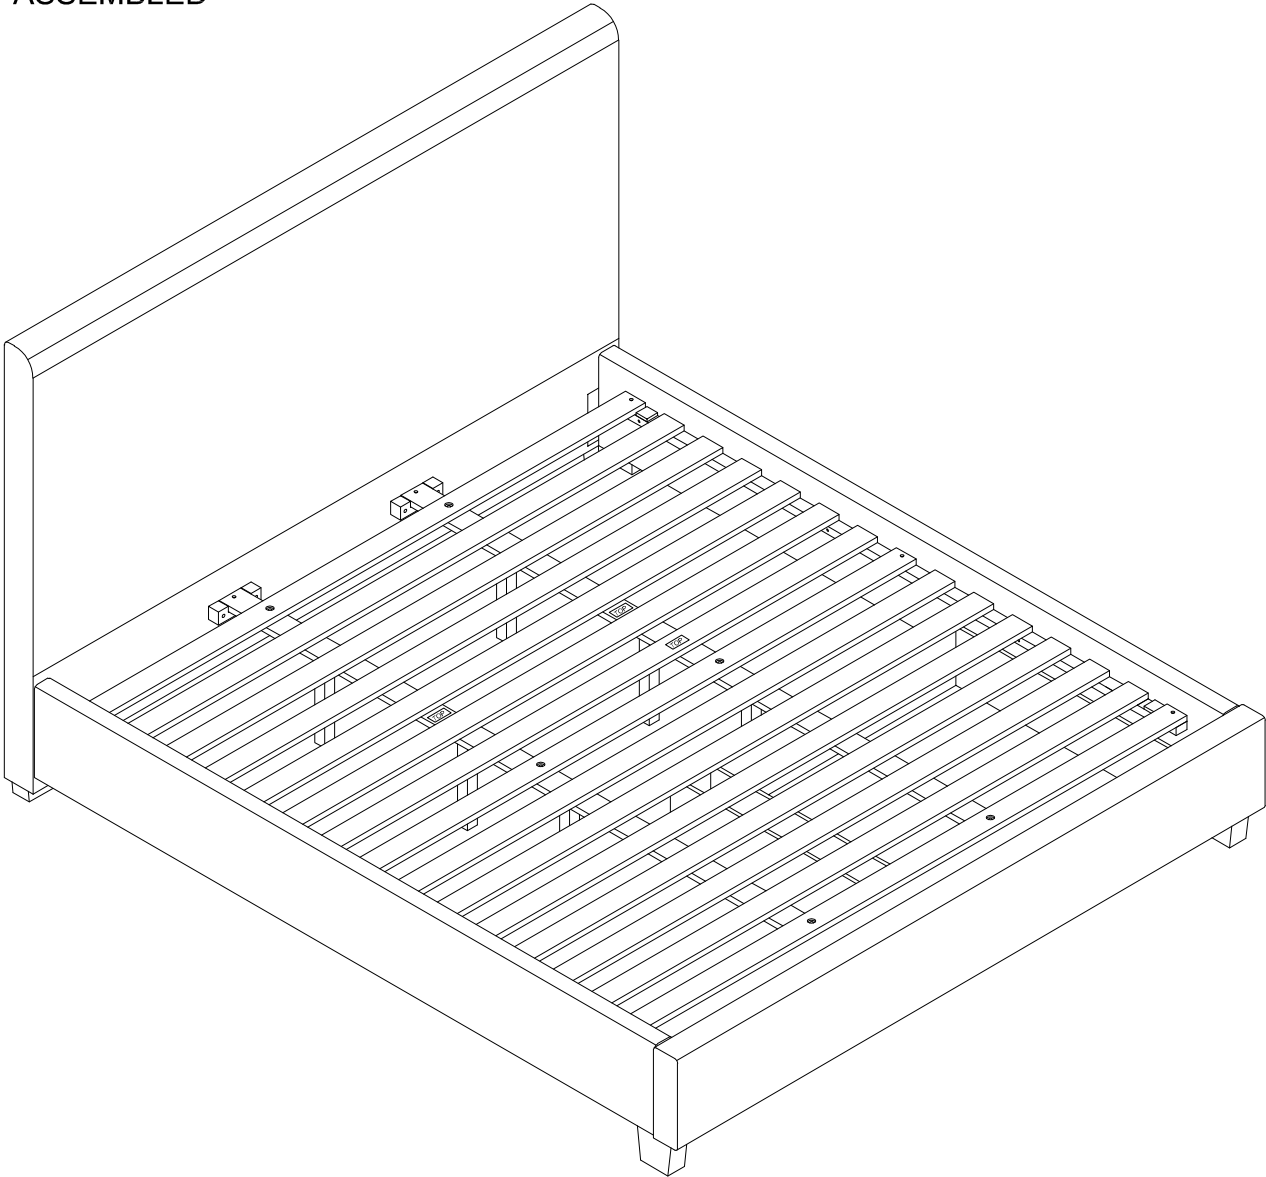


ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 1:

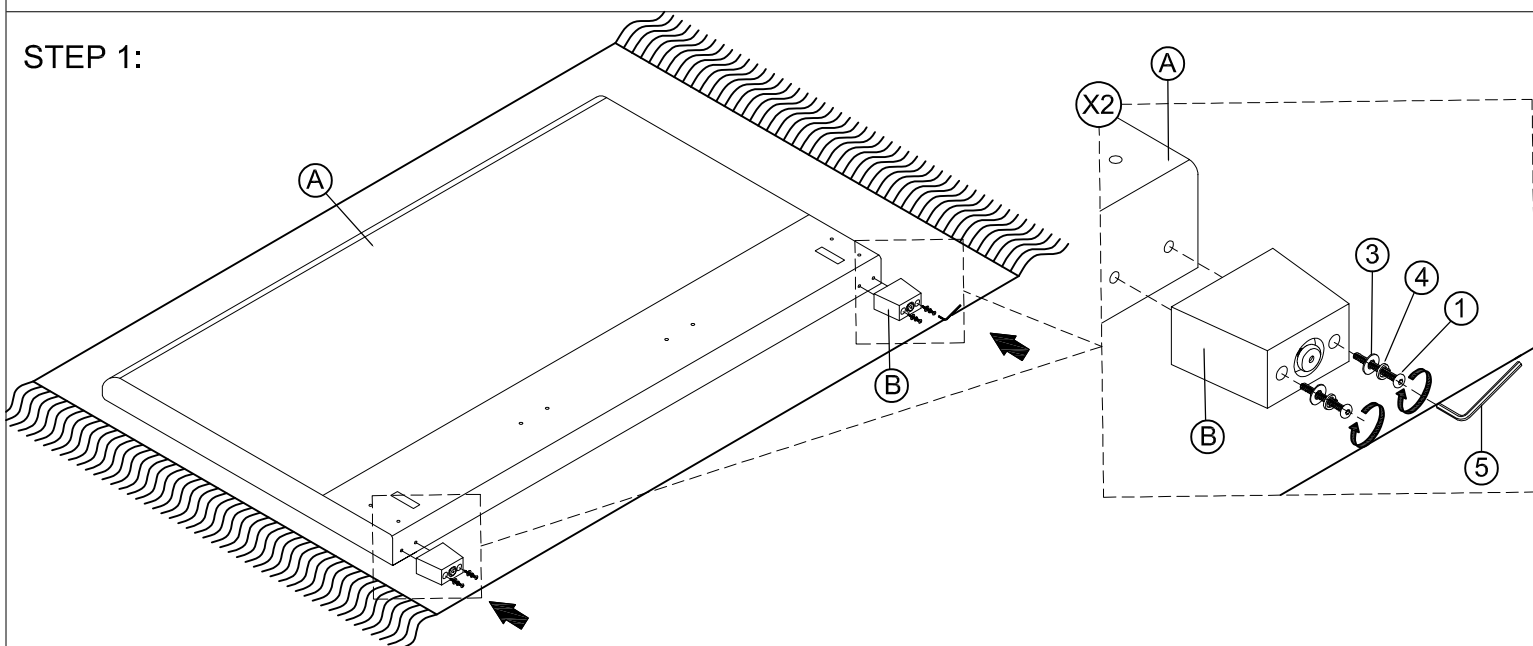

STEP 2:

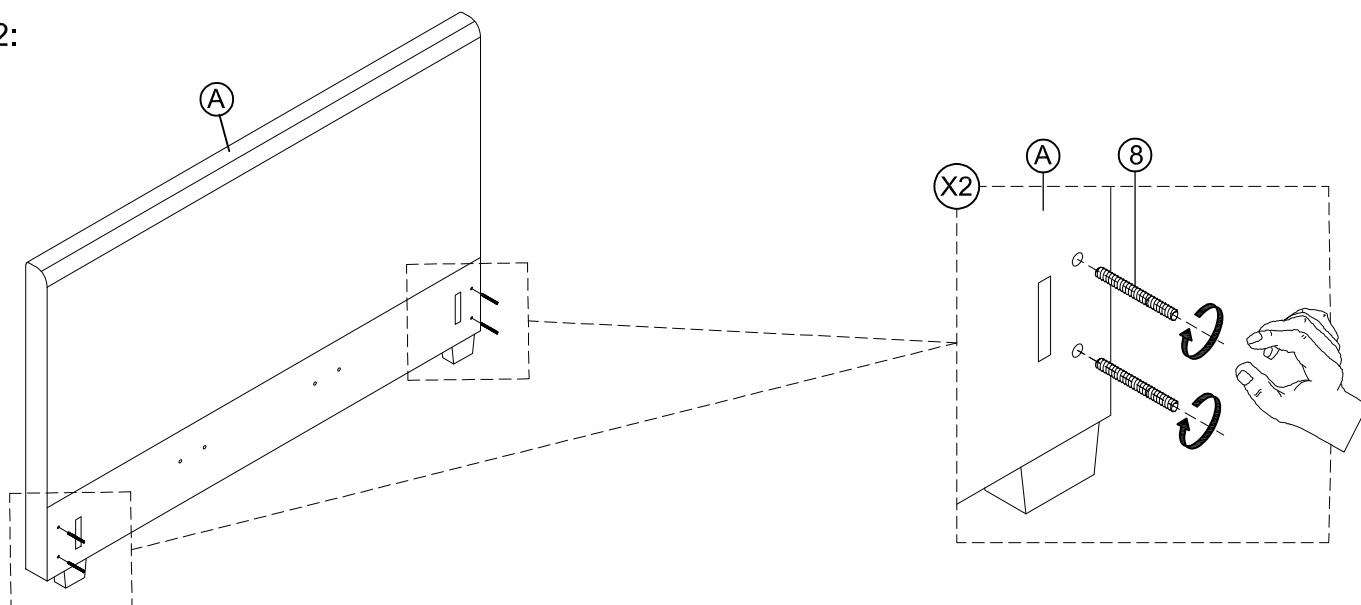

STEP 3:

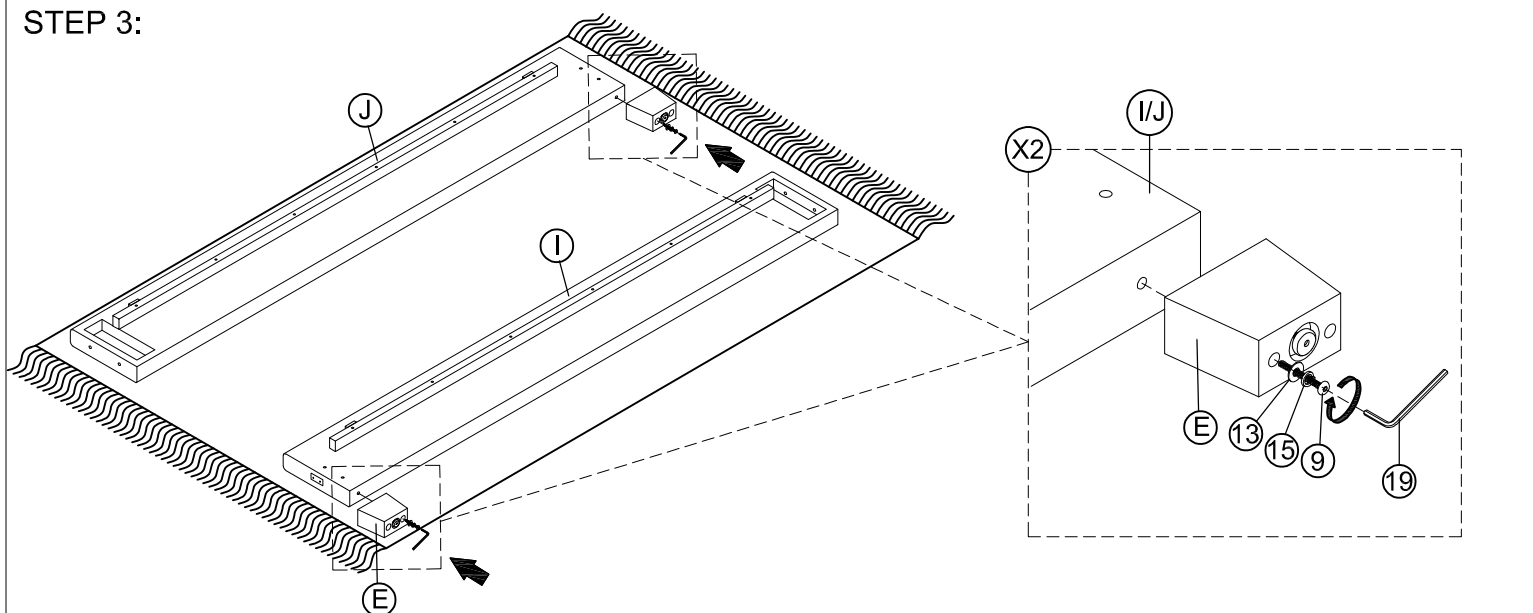


ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 4:

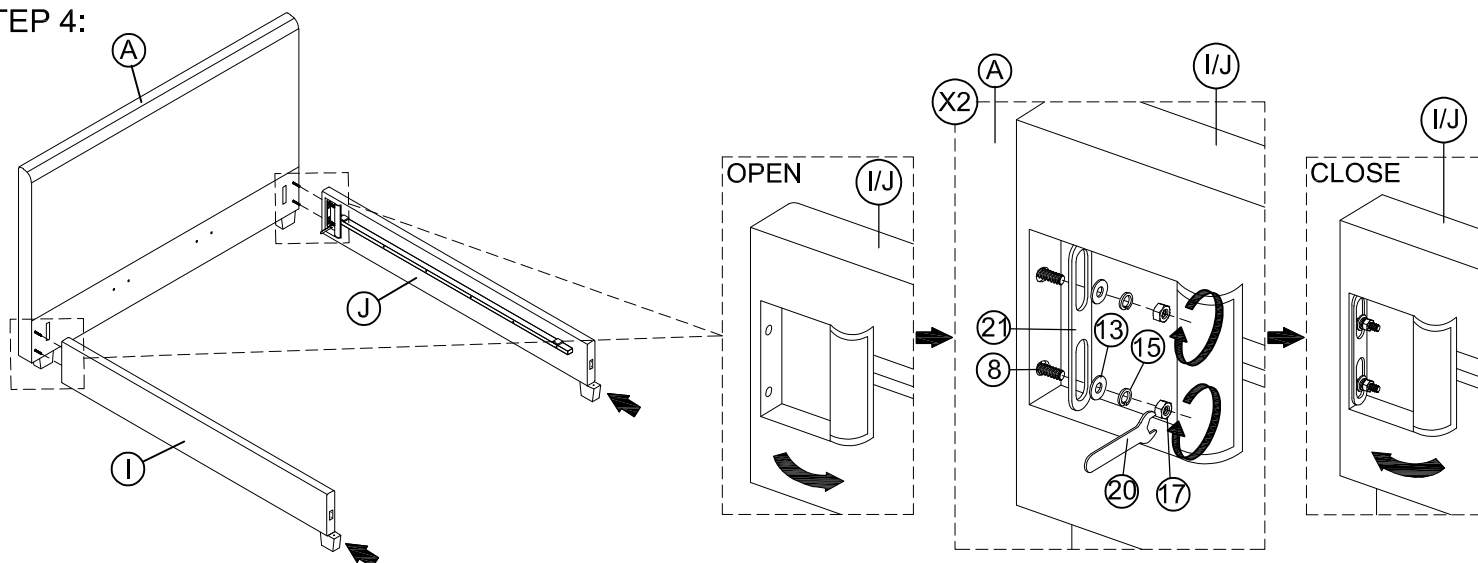

STEP 5:

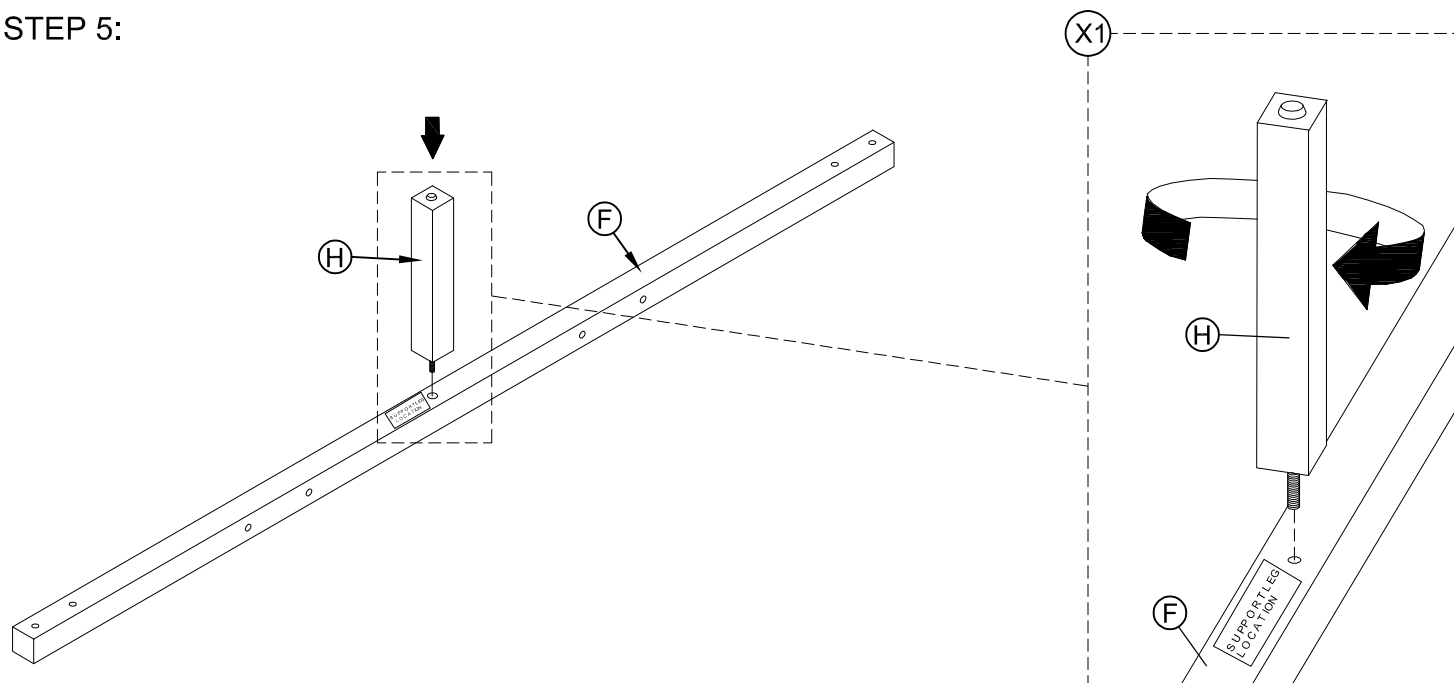

STEP 6:

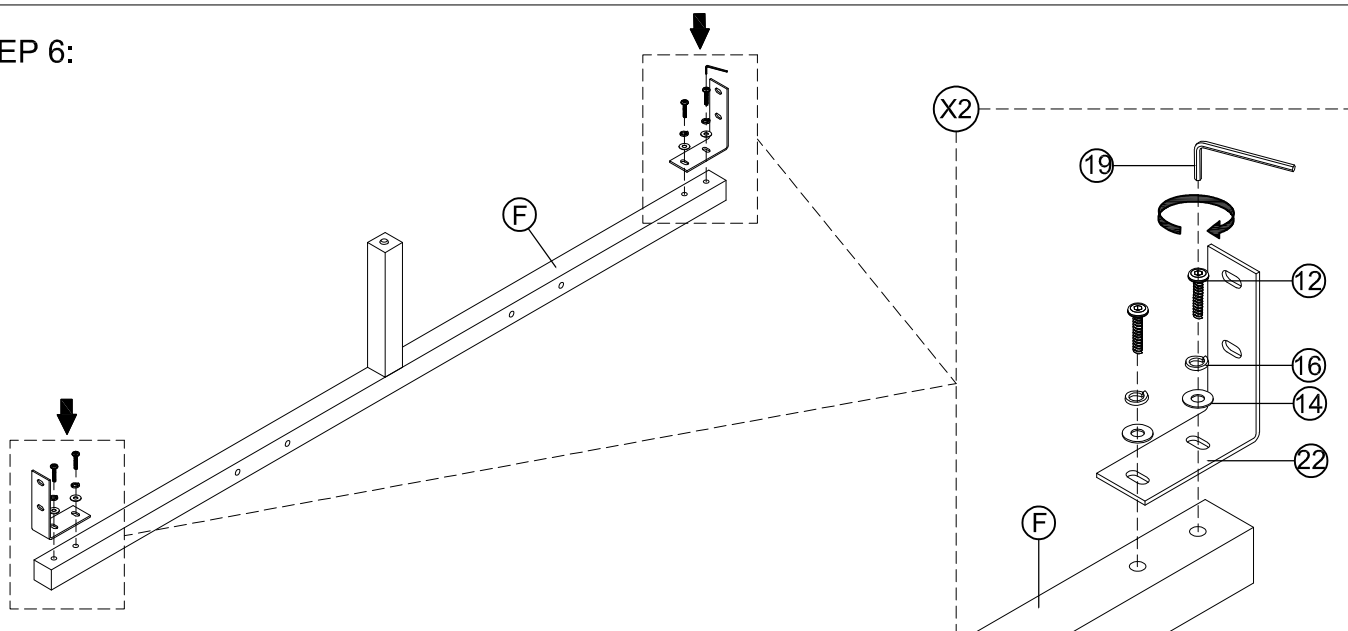


ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 7:

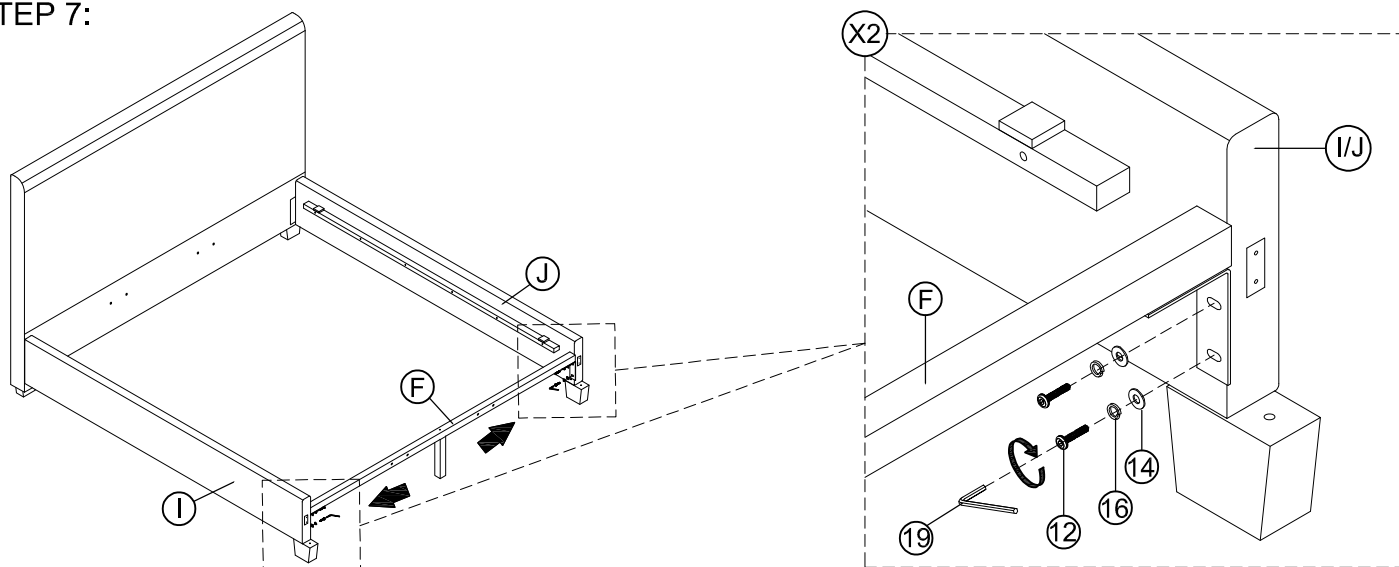

STEP 8:

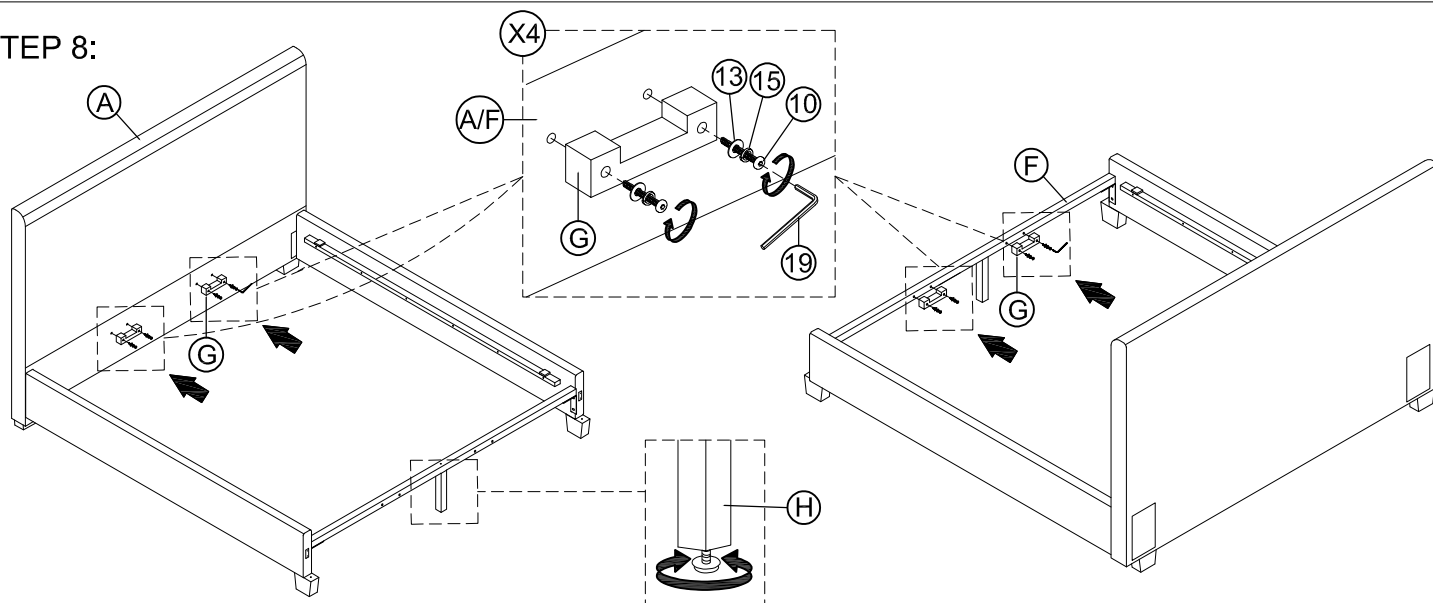

STEP 9:

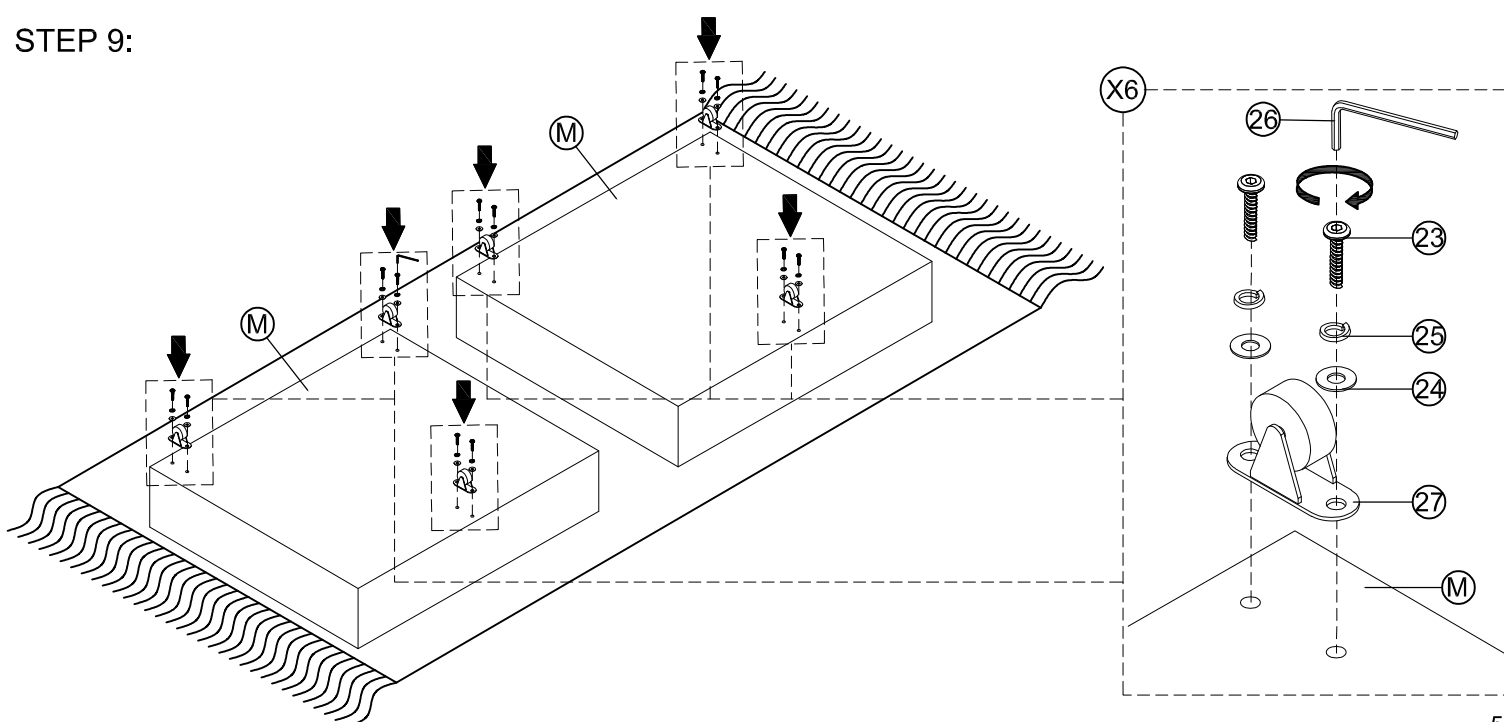


ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 10:

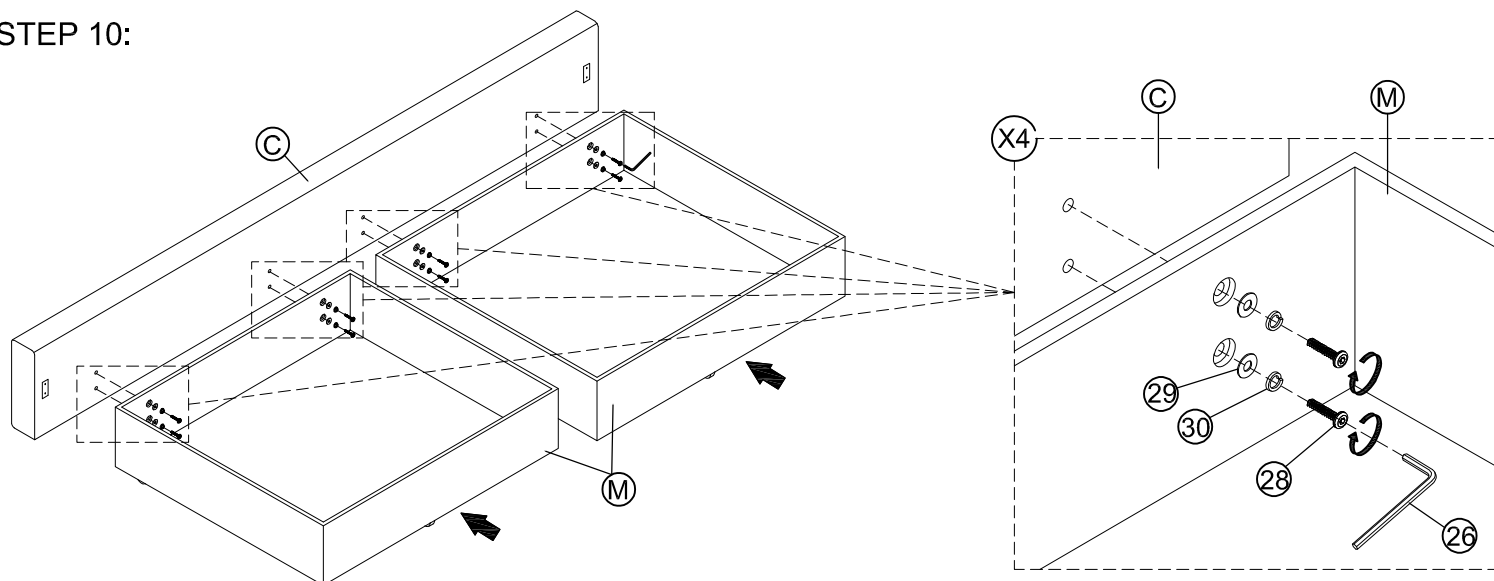

STEP 11:

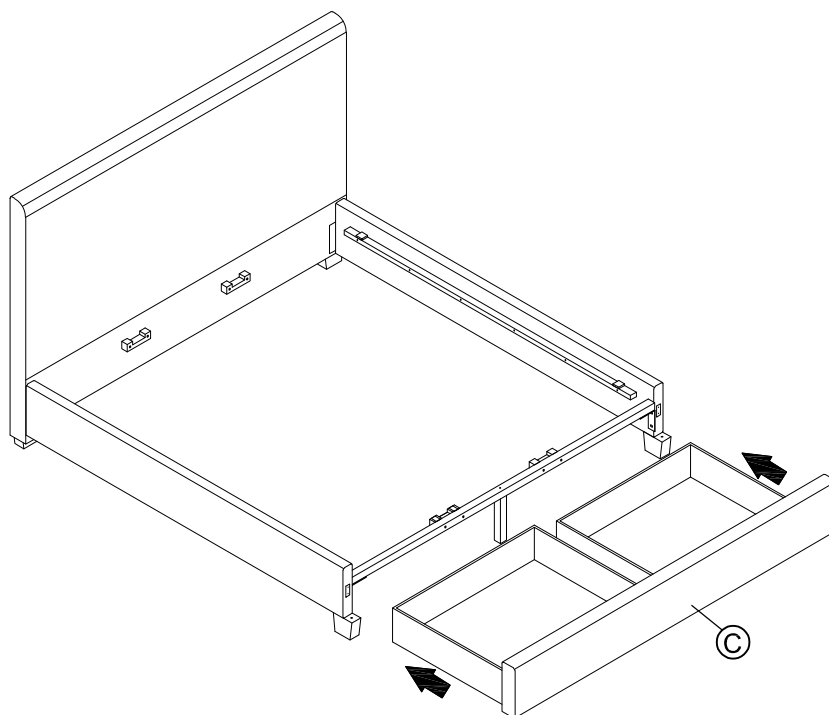

STEP 12:

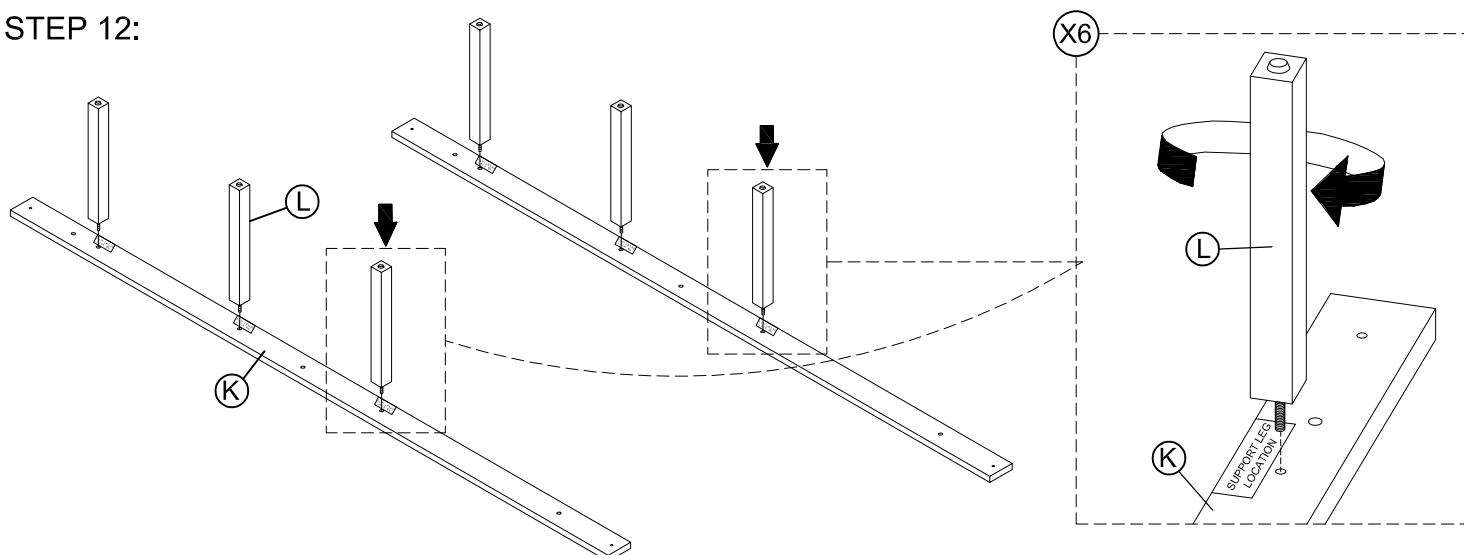


ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 13:

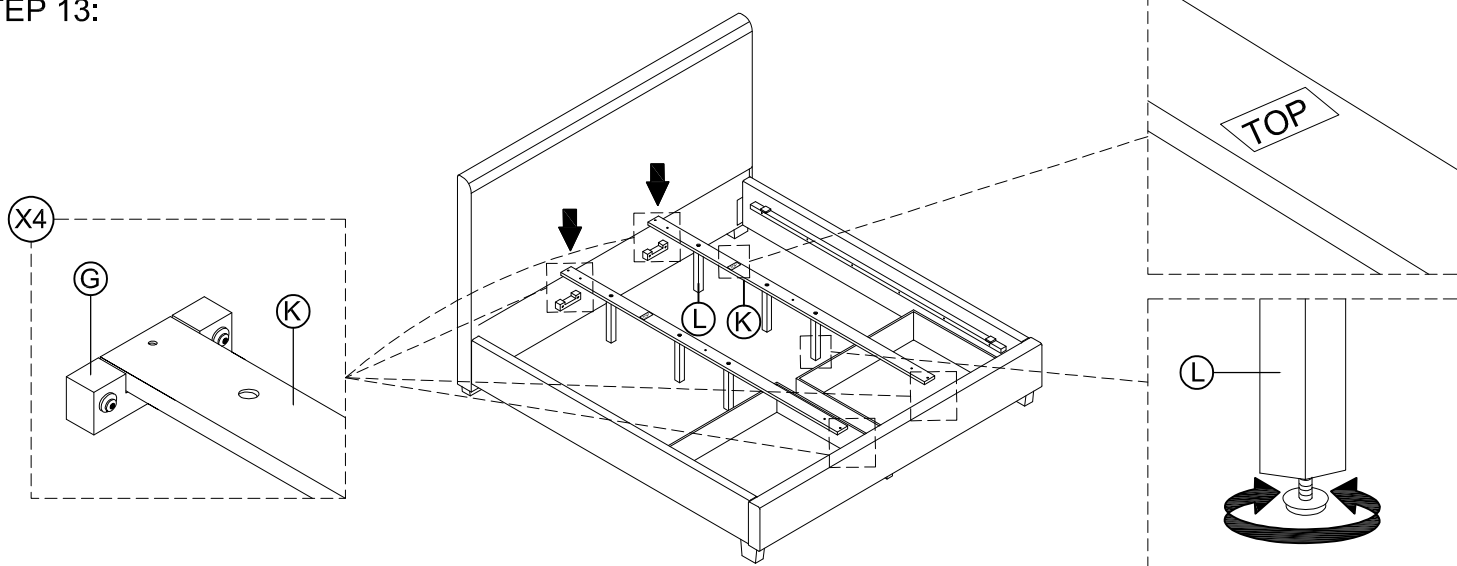

STEP 14:

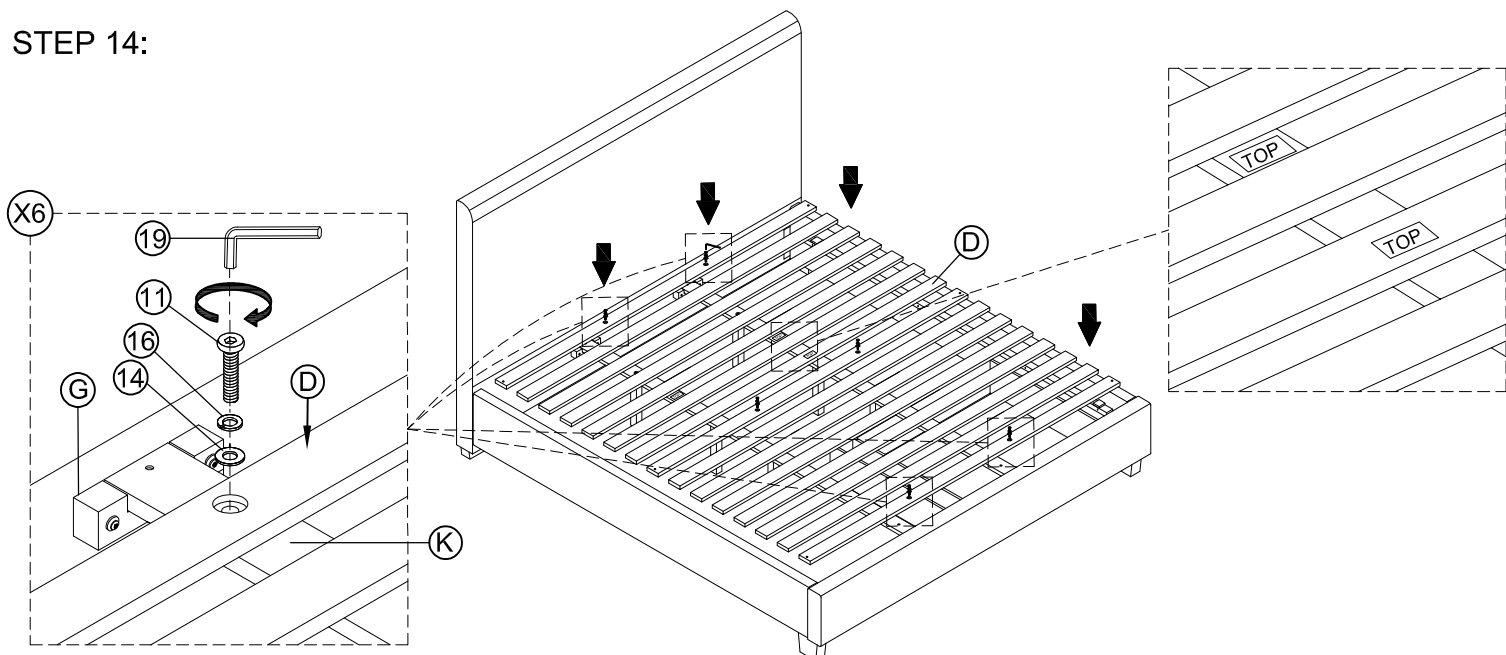


STEP 15:

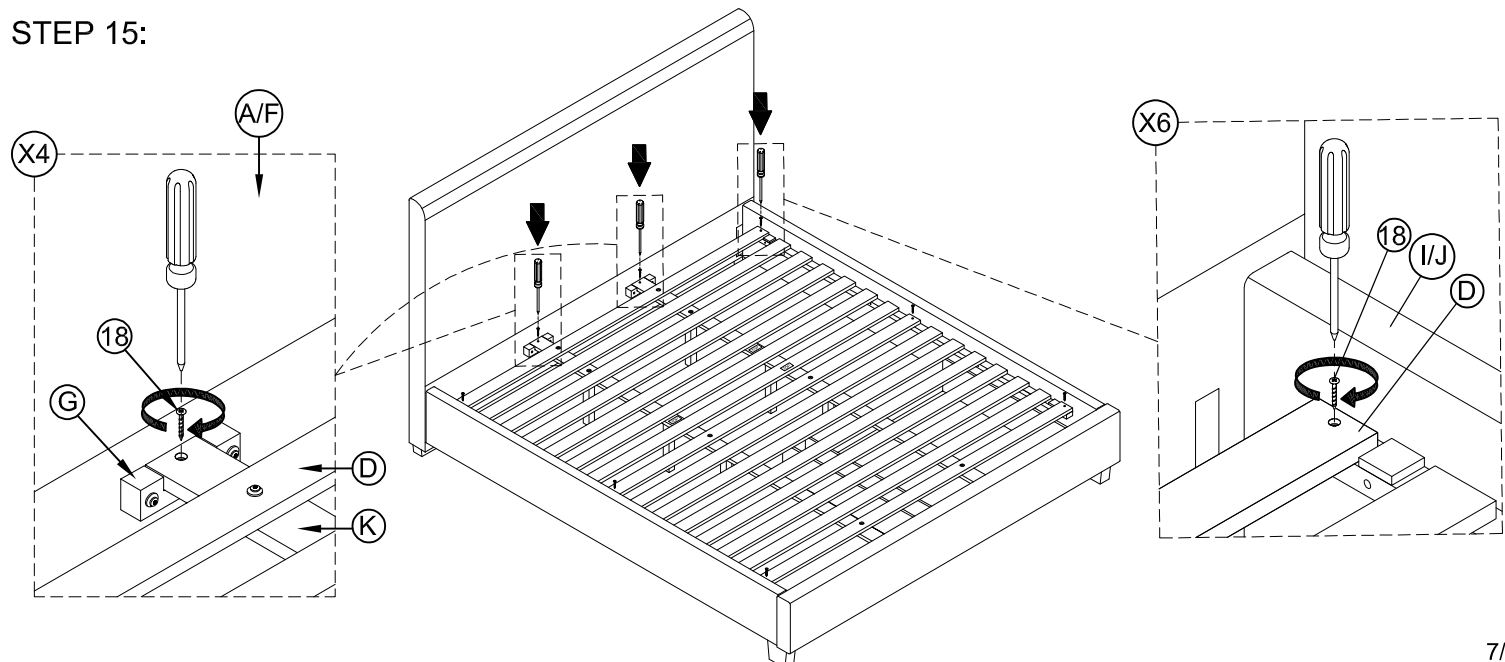

ADONA/MADELEINE/ROYAL UPH C.KING STORAGE BED

ASSEMBLY INSTRUCTIONS

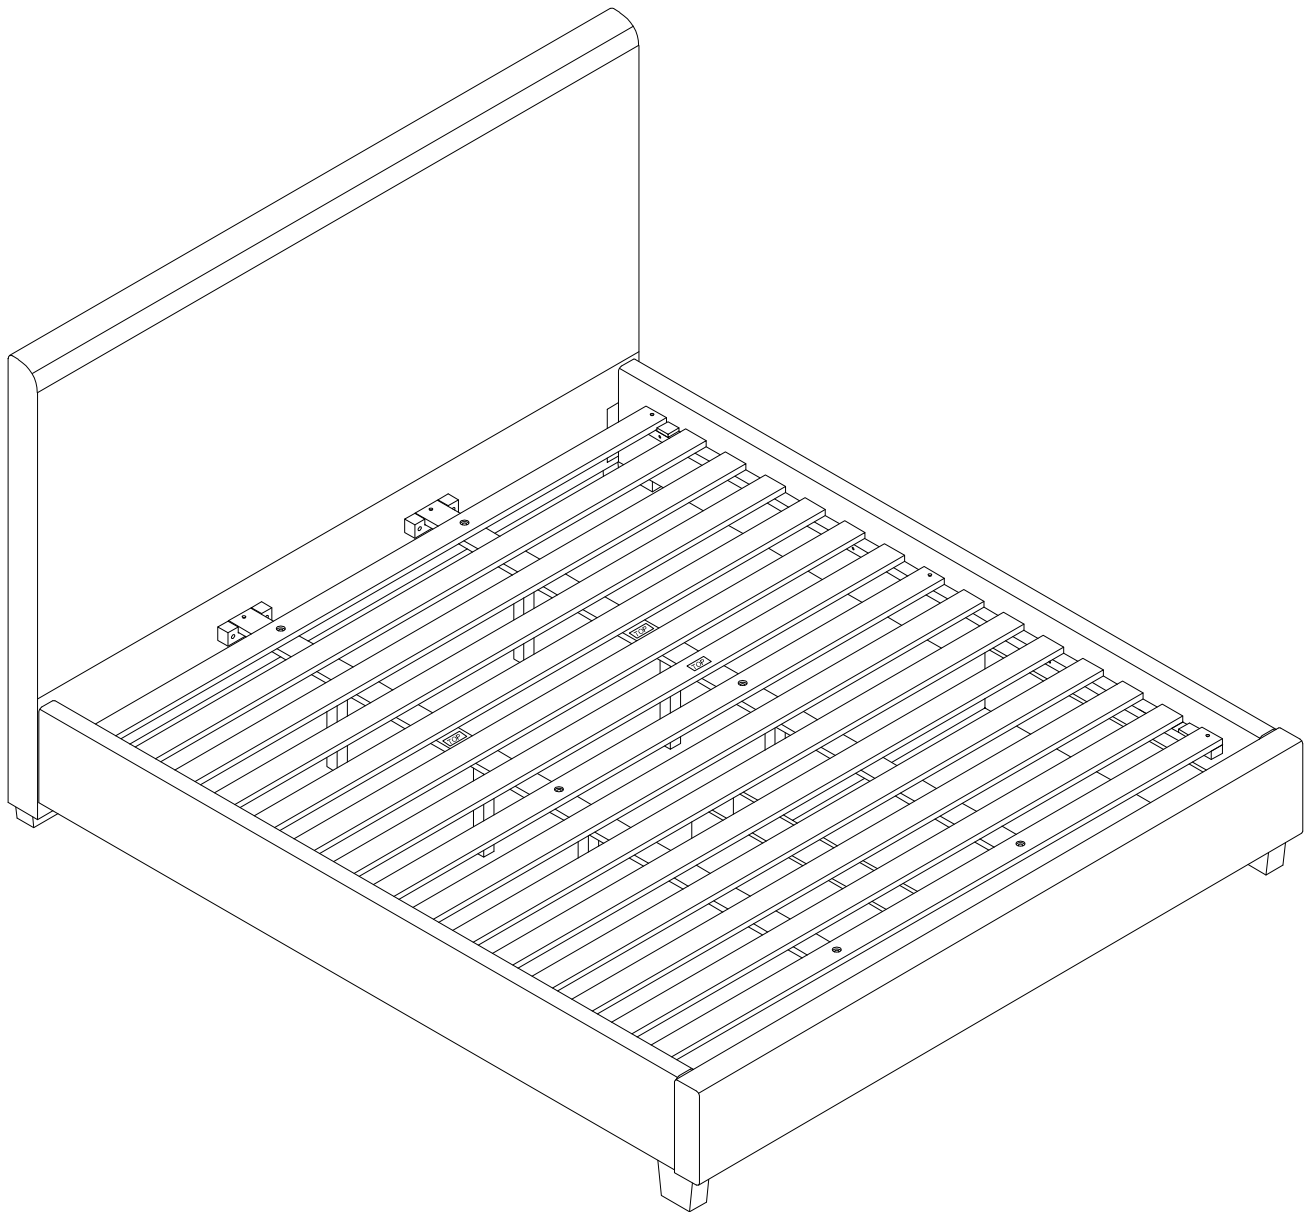


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

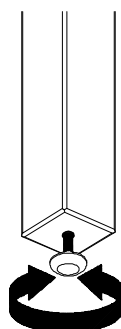

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED


ASSEMBLY INSTRUCTIONS



BOX#1

- A. HEADBOARD
B. LEG

1 PC
2 PCS

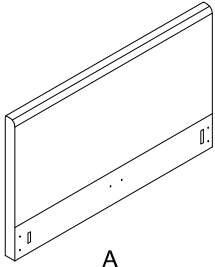

A




B


BOX#2

- C. FOOTBOARD
D. SLAT ROLL
E. LEG
F. FOOT RAIL
G. CENTER SLAT SUPPORT CLEAT
H. SUPPORT LEG

1 PC
1 SET
2 PCS
1 PC
2 PCS
1 PC

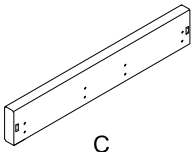

C

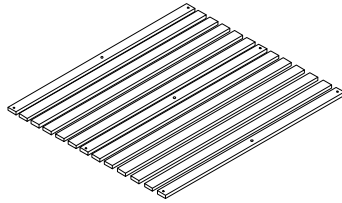


D



E



G

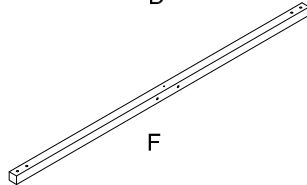

F




H


BOX#3

- I. LEFT SIDE RAIL
J. RIGHT SIDE RAIL
K. CENTER SLAT SUPPORT
L. SUPPORT LEG


1 PC
1 PC
1 PC
3 PCS

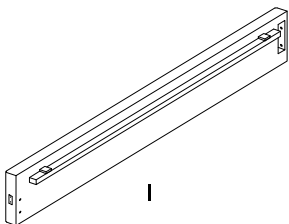

I

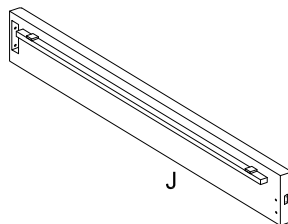

J

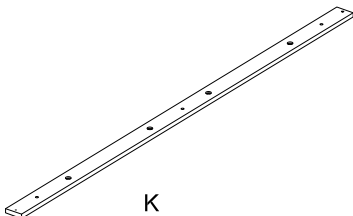


K




L

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 3-1/2")		4 PCS
2	ALLEN BOLT (5/16"x 1-3/4")		4 PCS
3	FLAT WASHER (5/16")		12 PCS
4	LOCK WASHER (5/16")		12 PCS
5	ALLEN KEY (5/16")		1 PC
6	HEX NUT (5/16")		4 PCS
7	WRENCH		1 PC

HARDWARE KIT PACKED IN BOX #2


8	THREADED BOLT (5/16"x 3-1/2")		4 PCS
9	ALLEN BOLT (5/16"x 3-1/2")		2 PCS
10	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
11	ALLEN BOLT (1/4"x 1-1/4")		3 PCS
12	ALLEN BOLT (1/4"x 1")		8 PCS
13	FLAT WASHER (5/16")		10 PCS
14	FLAT WASHER (1/4")		11 PCS
15	LOCK WASHER (5/16")		10 PCS
16	LOCK WASHER (1/4")		11 PCS
17	HEX NUT (5/16")		4 PCS
18	PHILLIPS SCREW (M4 x 32mm)		8 PCS
19	ALLEN KEY (5/16")		1 PC
20	WRENCH		1 PC
21	CONNECTING BRACKET		2 PCS
22	L-BRACKET		2 PCS

ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED

ASSEMBLY INSTRUCTIONS






BOX# 4
M. DRAWER BOX 1 SET

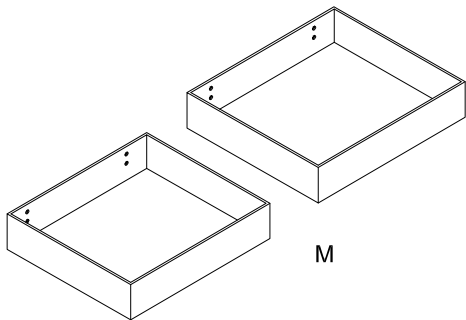

HARDWARE KIT PACKED IN BOX #4

23	ALLEN BOLT (1/4"x 3/4")		12 PCS
24	FLAT WASHER (1/4")		12 PCS
25	LOCK WASHER (1/4")		12 PCS
26	ALLEN KEY (5/16")		1 PC
27	CASTER		6 PCS
28	ALLEN BOLT (5/16"x 1-1/4")		8 PCS
29	FLAT WASHER (5/16")		8 PCS
30	LOCK WASHER (5/16")		8 PCS

FULLY ASSEMBLED

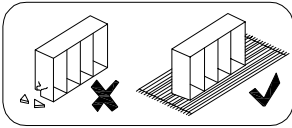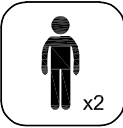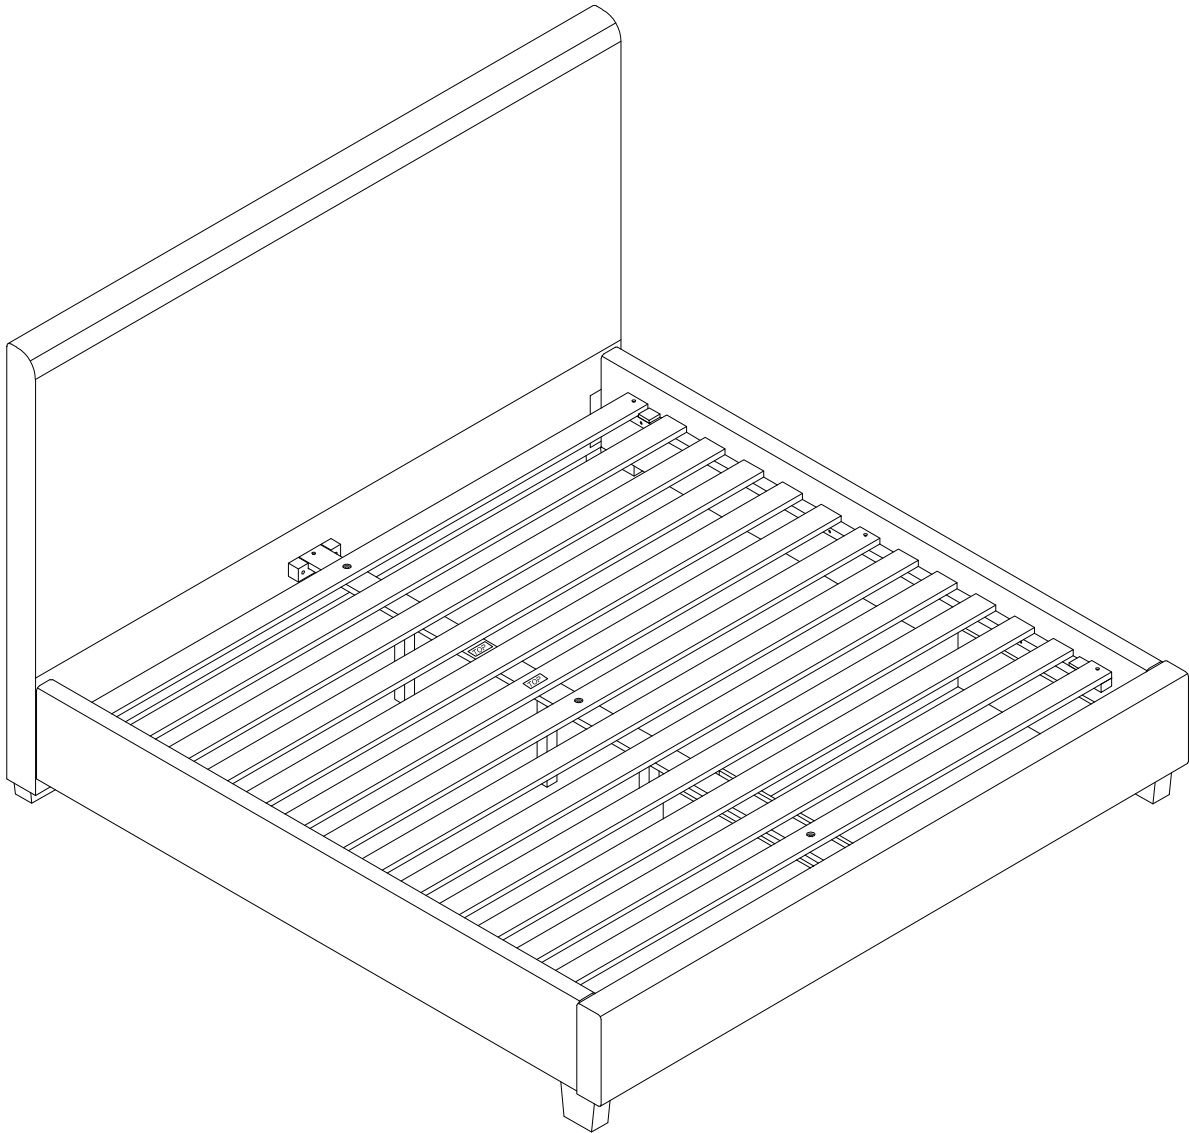


ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 1:

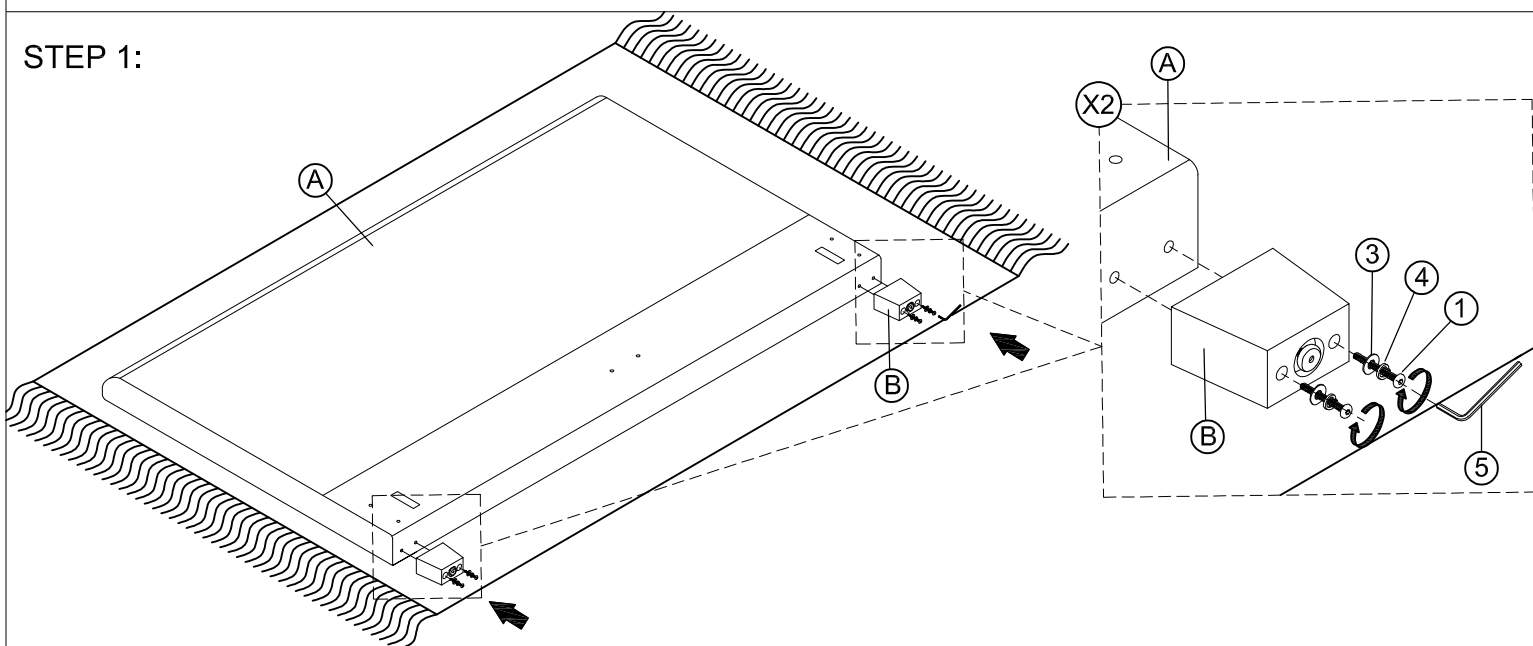

STEP 2:

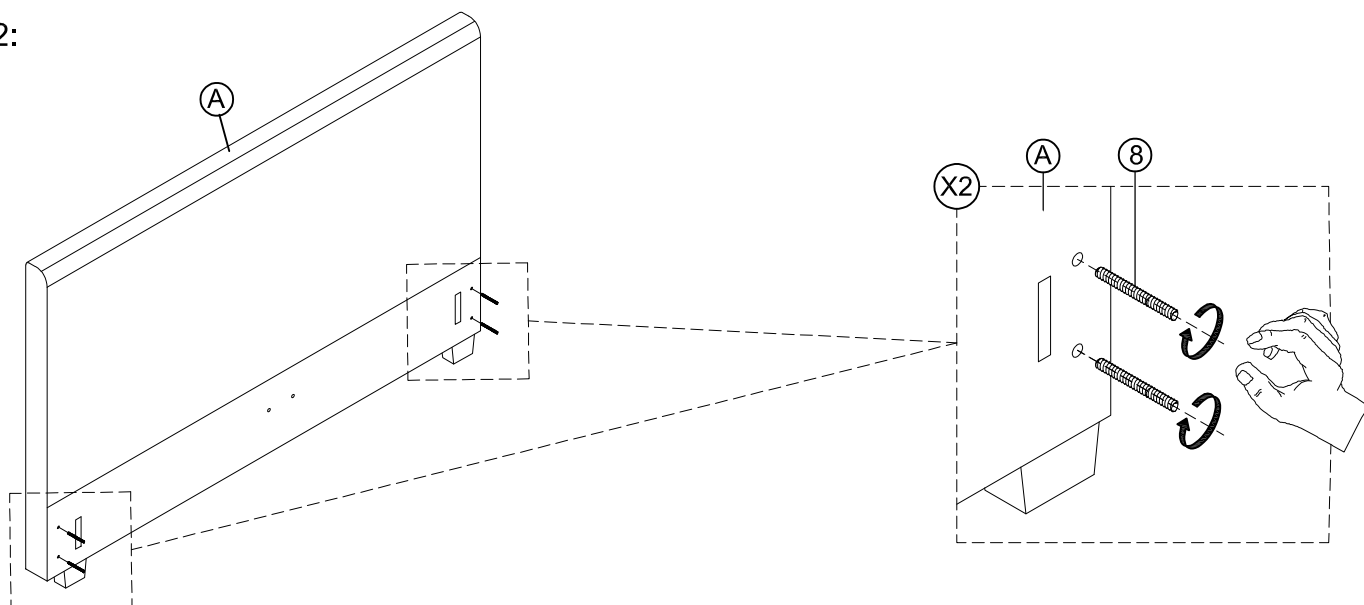

STEP 3:

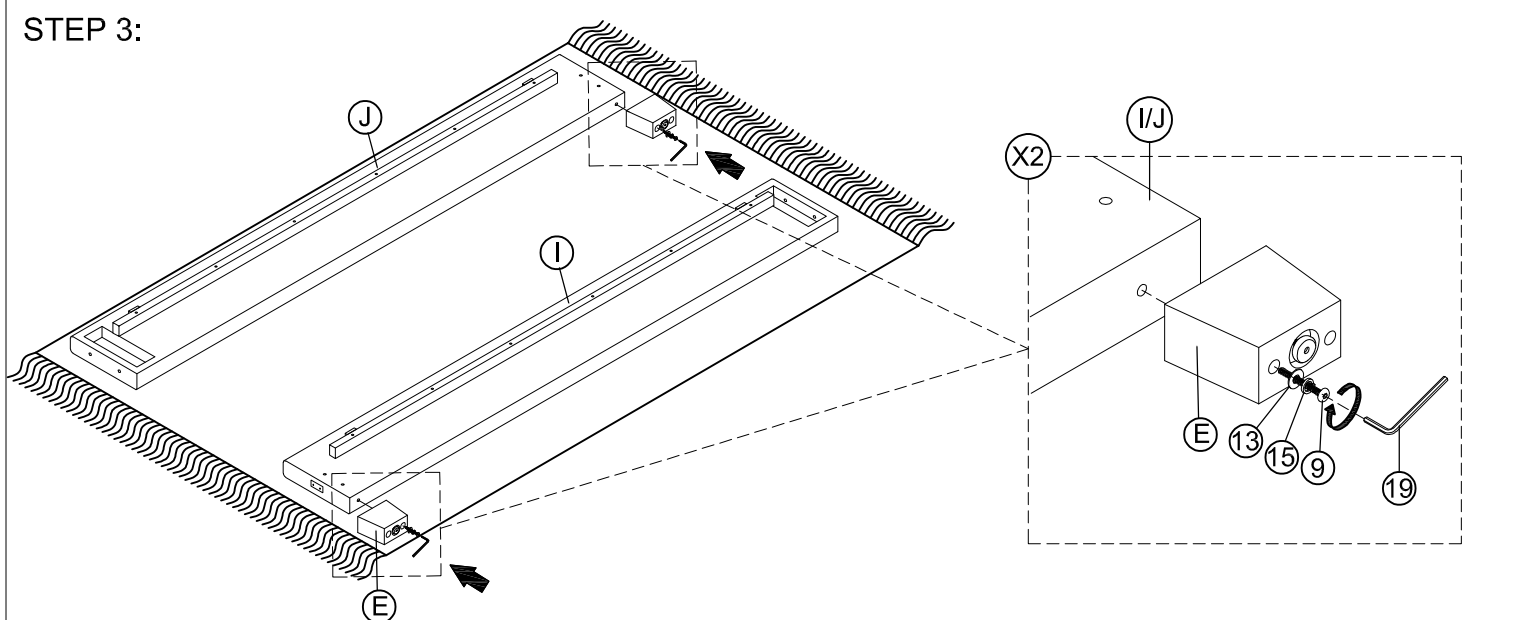


ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 4:

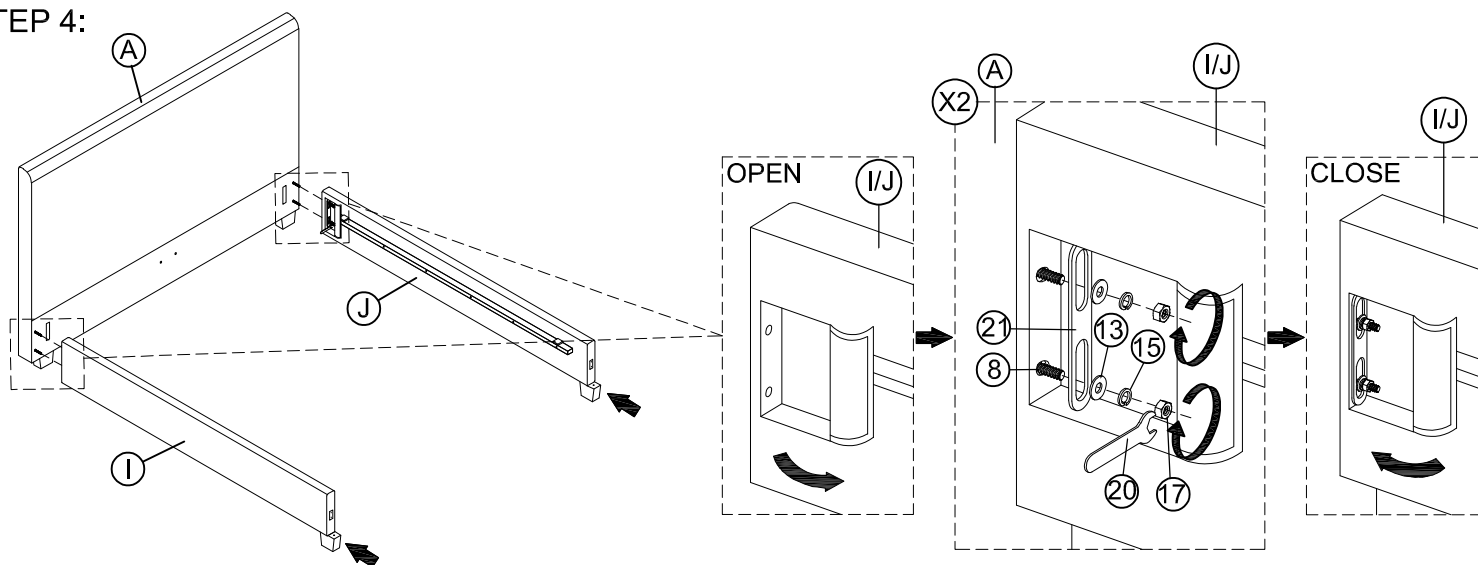

STEP 5:

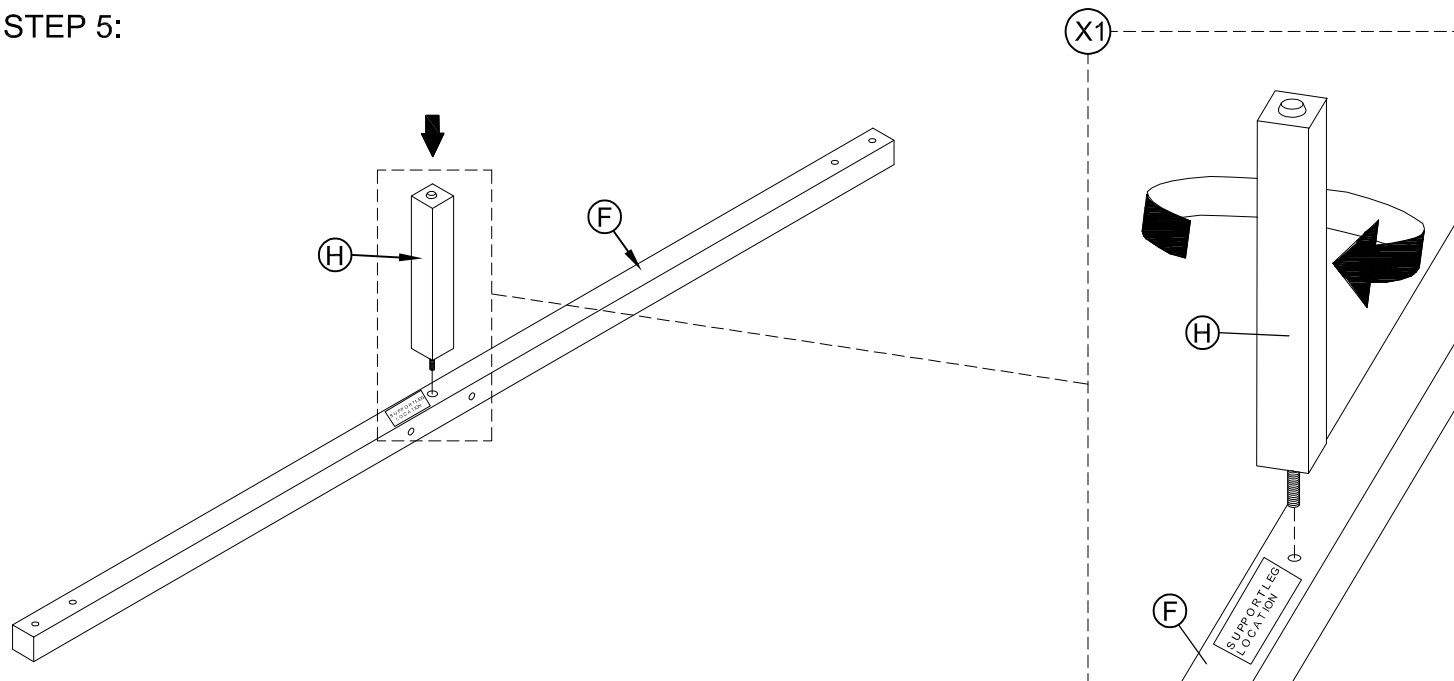

STEP 6:

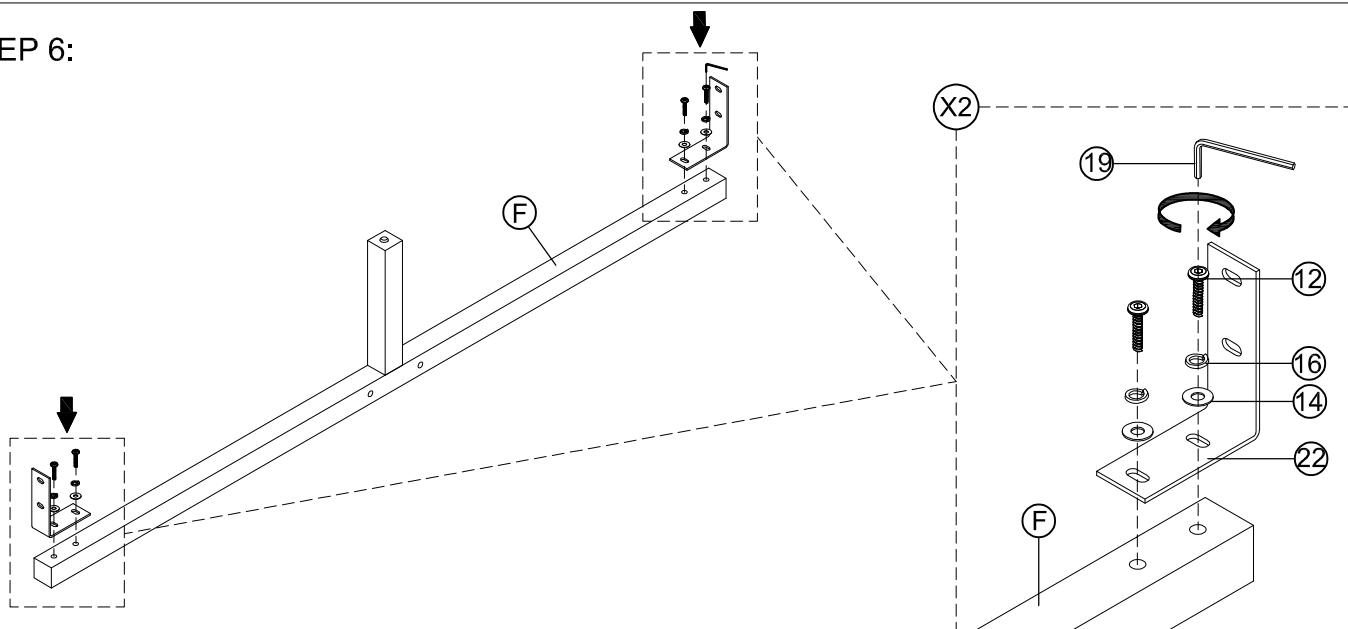


ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 7:

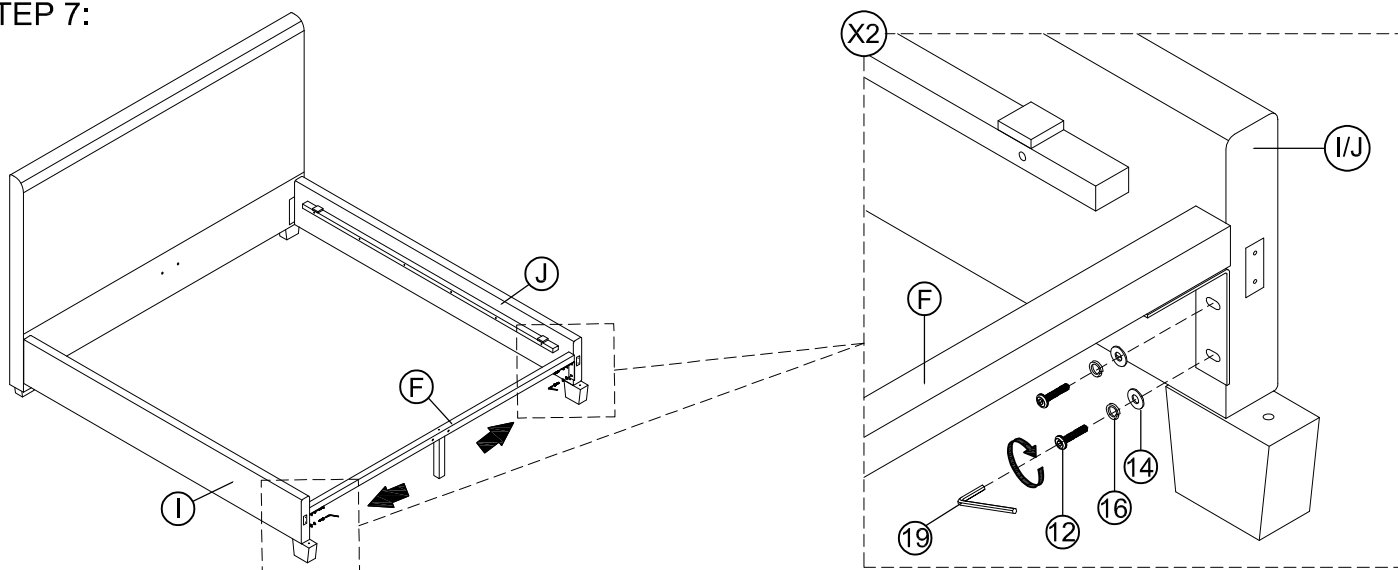

STEP 8:

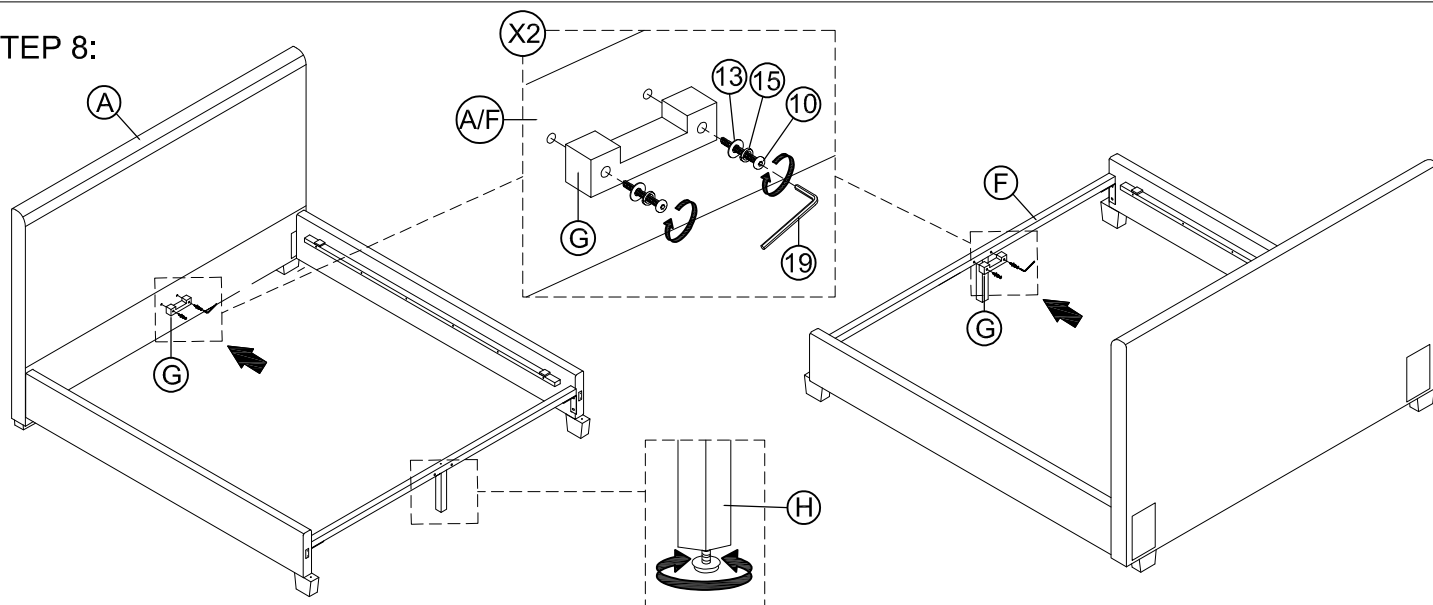

STEP 9:

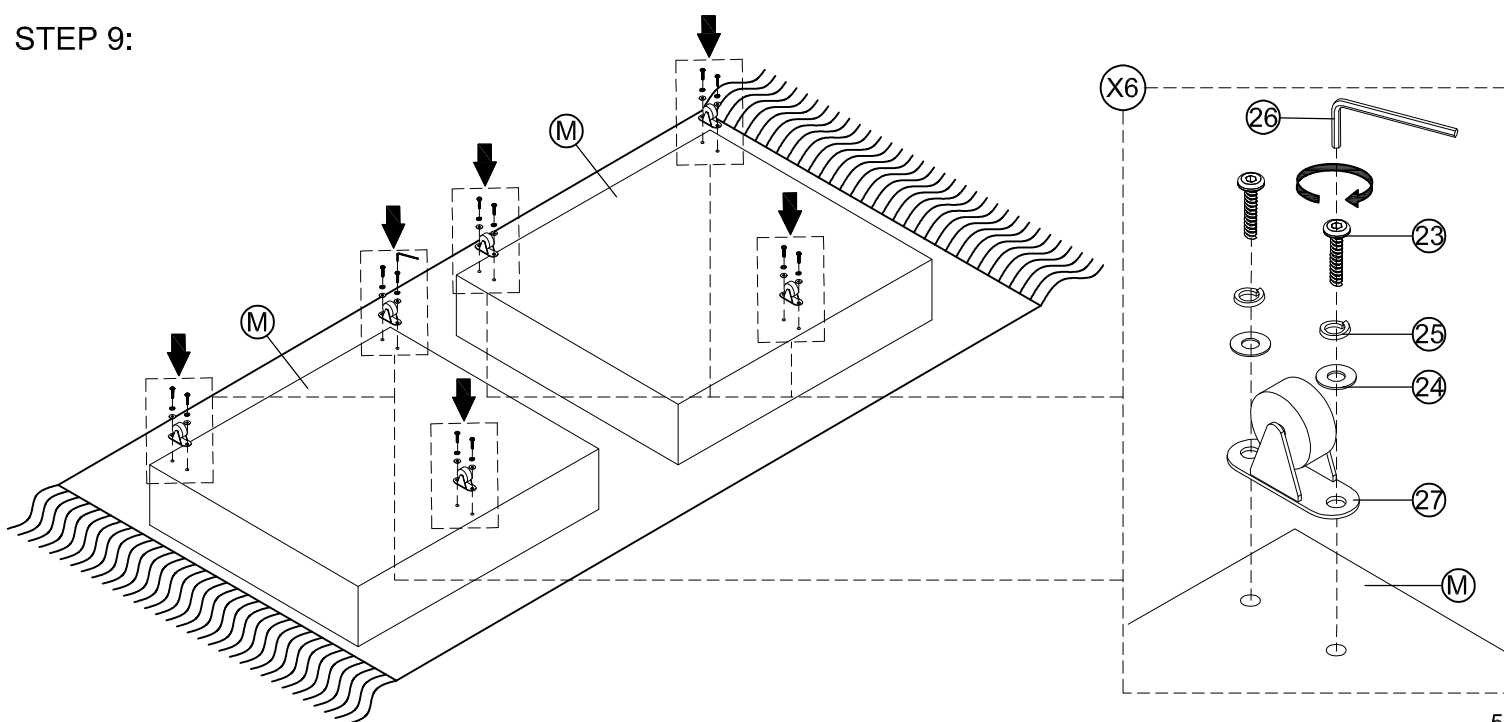


ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 10:

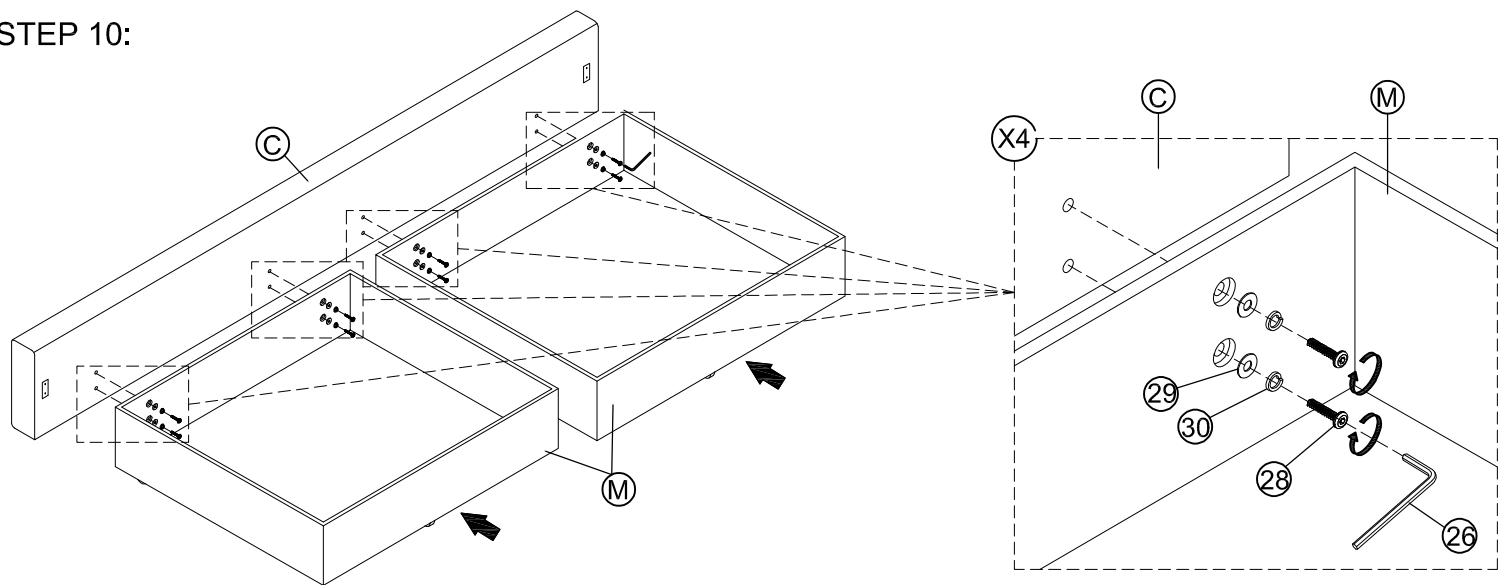

STEP 11:

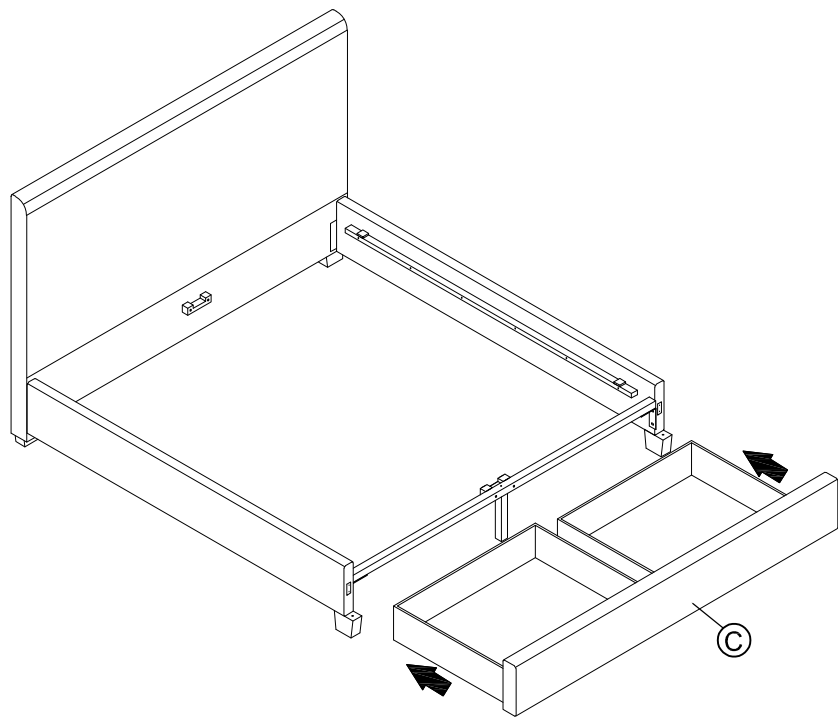

STEP 12:

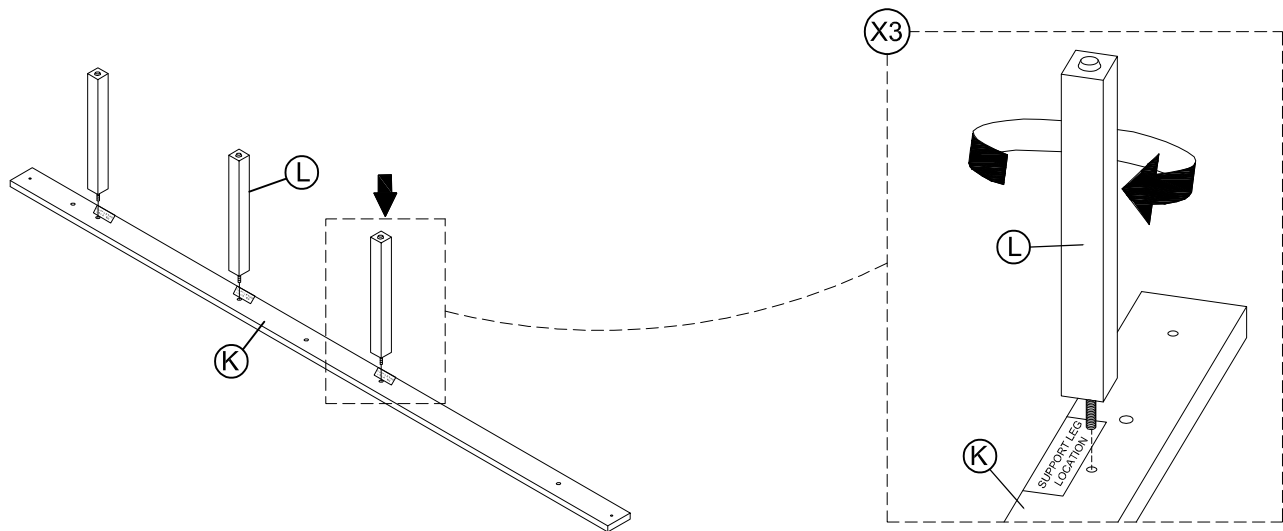


ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED


ASSEMBLY INSTRUCTIONS




STEP 13:

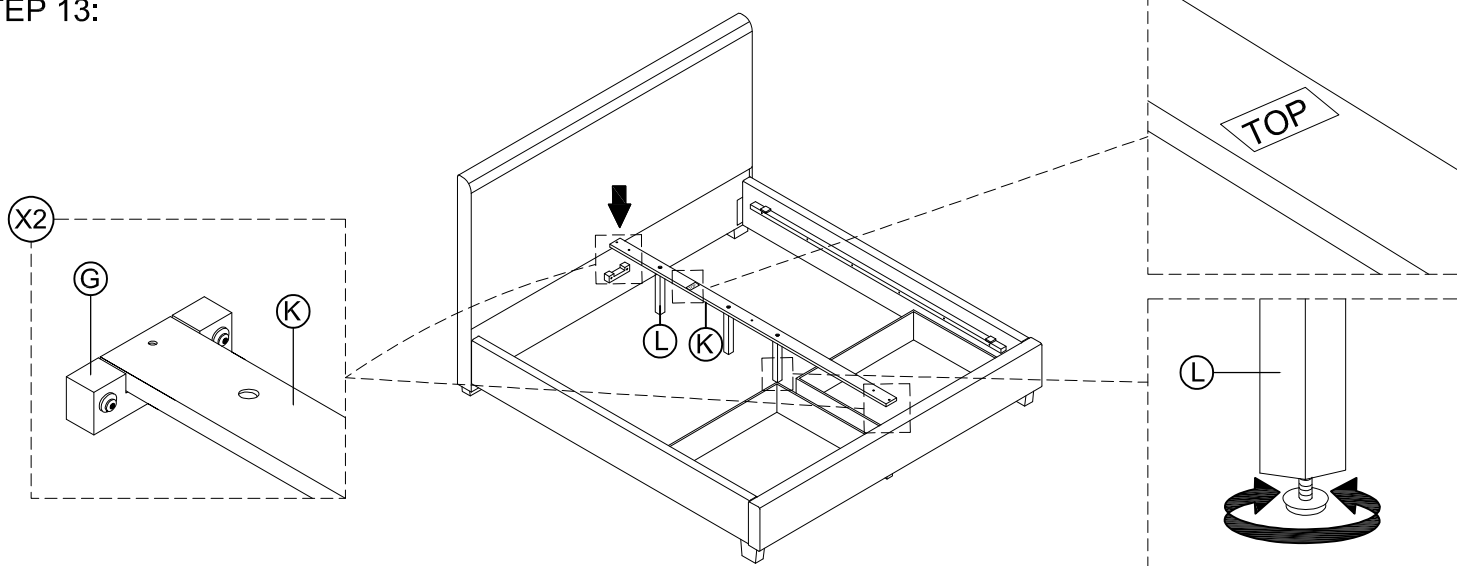

STEP 14:

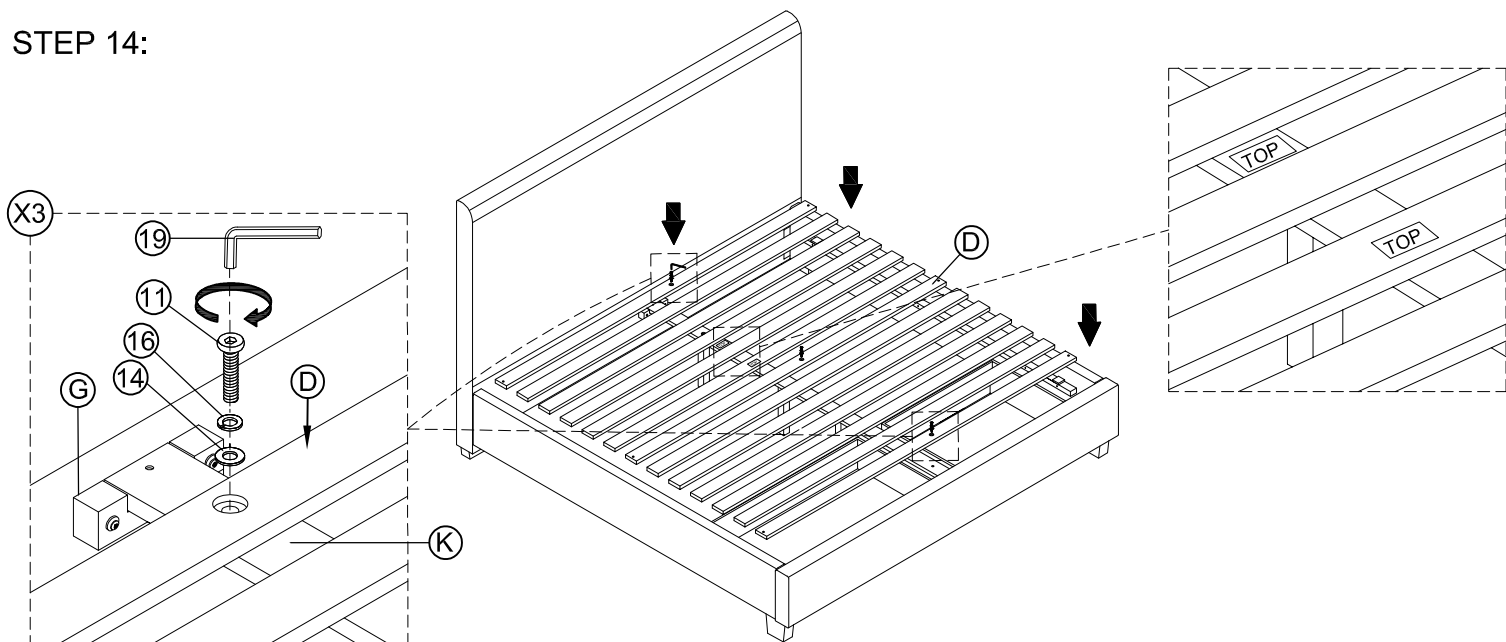


STEP 15:

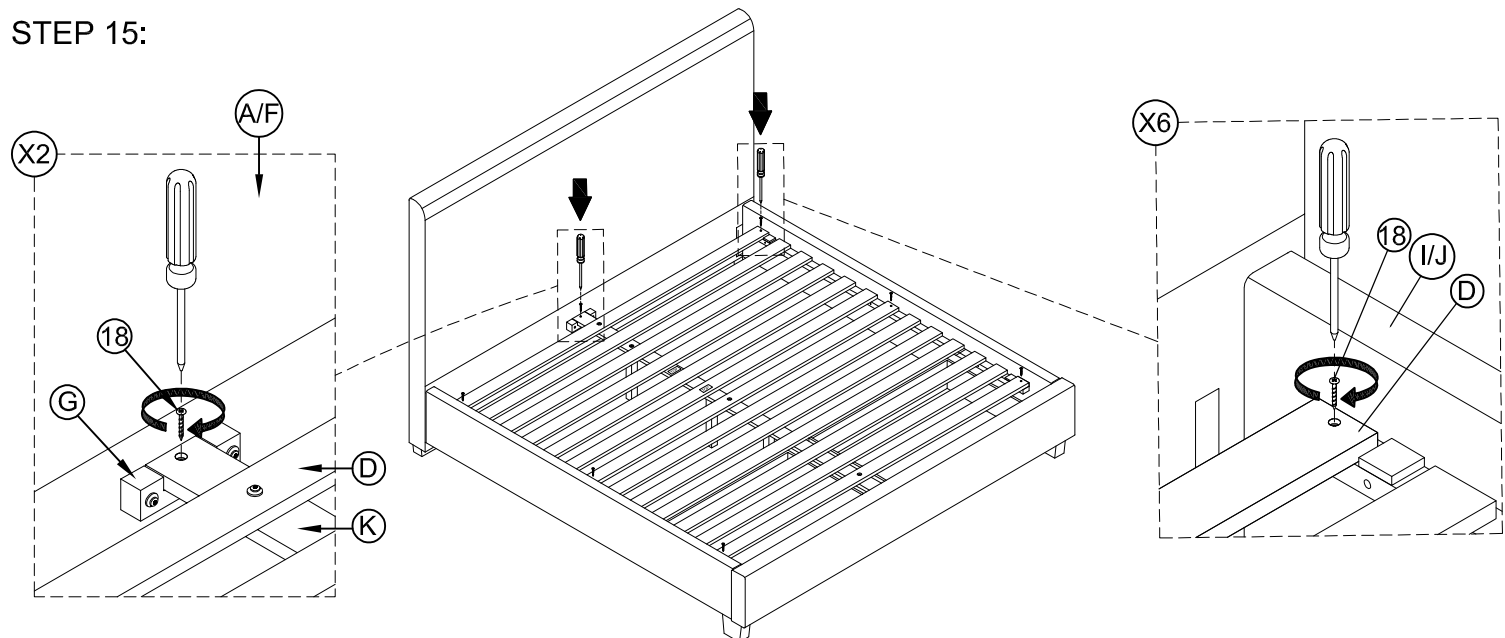

ADONA/MADELEINE/ROYAL UPH FULL STORAGE BED

ASSEMBLY INSTRUCTIONS

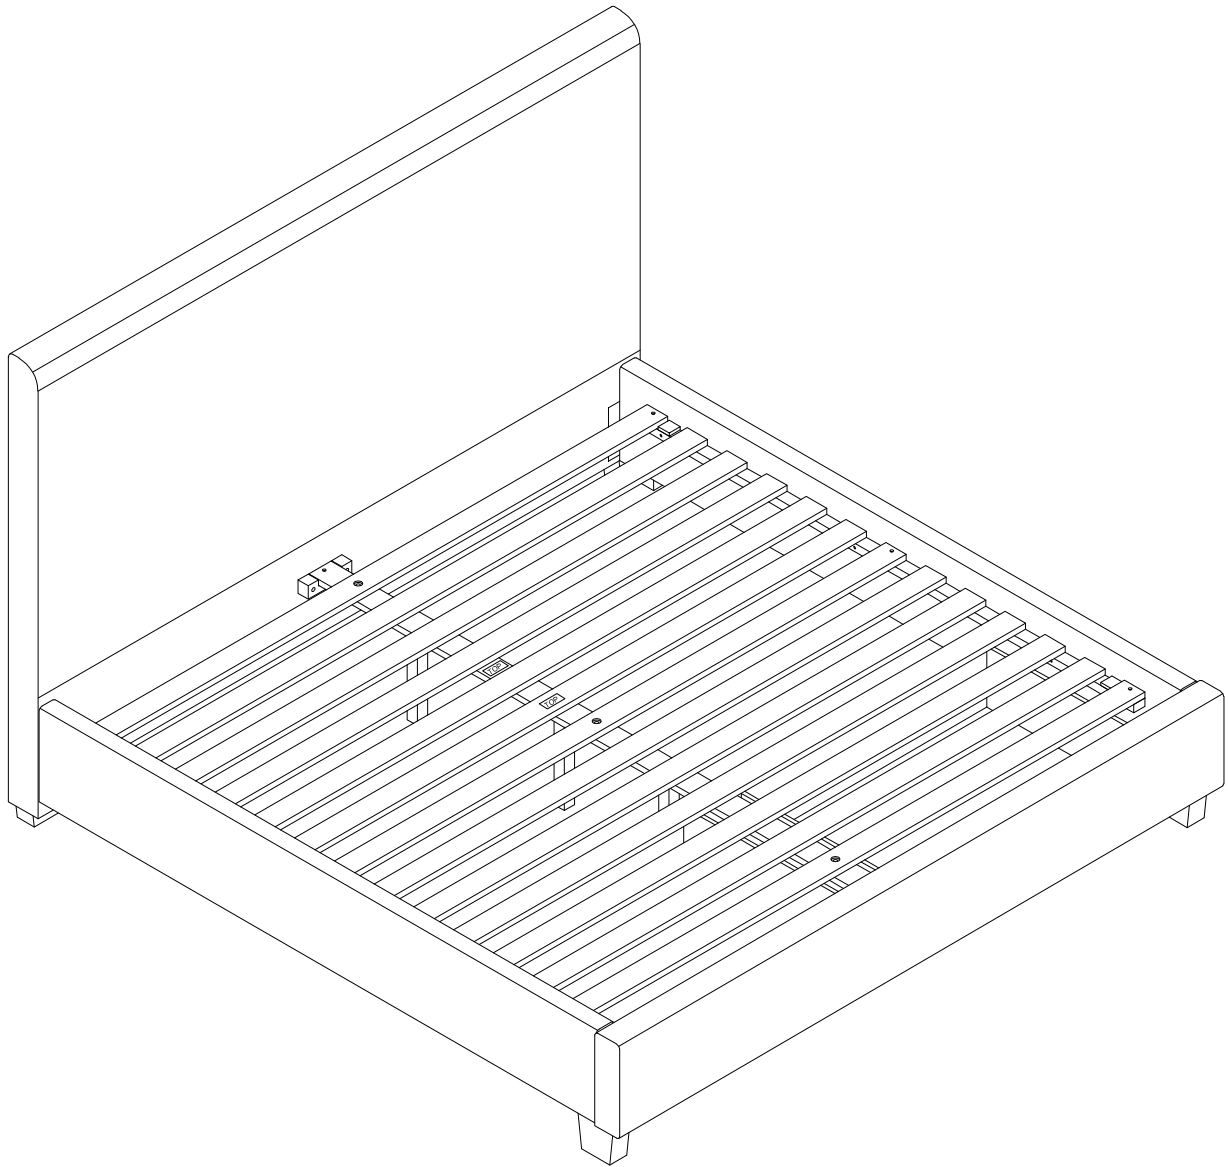


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

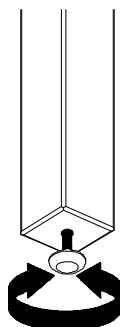

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.