


18" PIE-CUT TRAY TEMPLATE

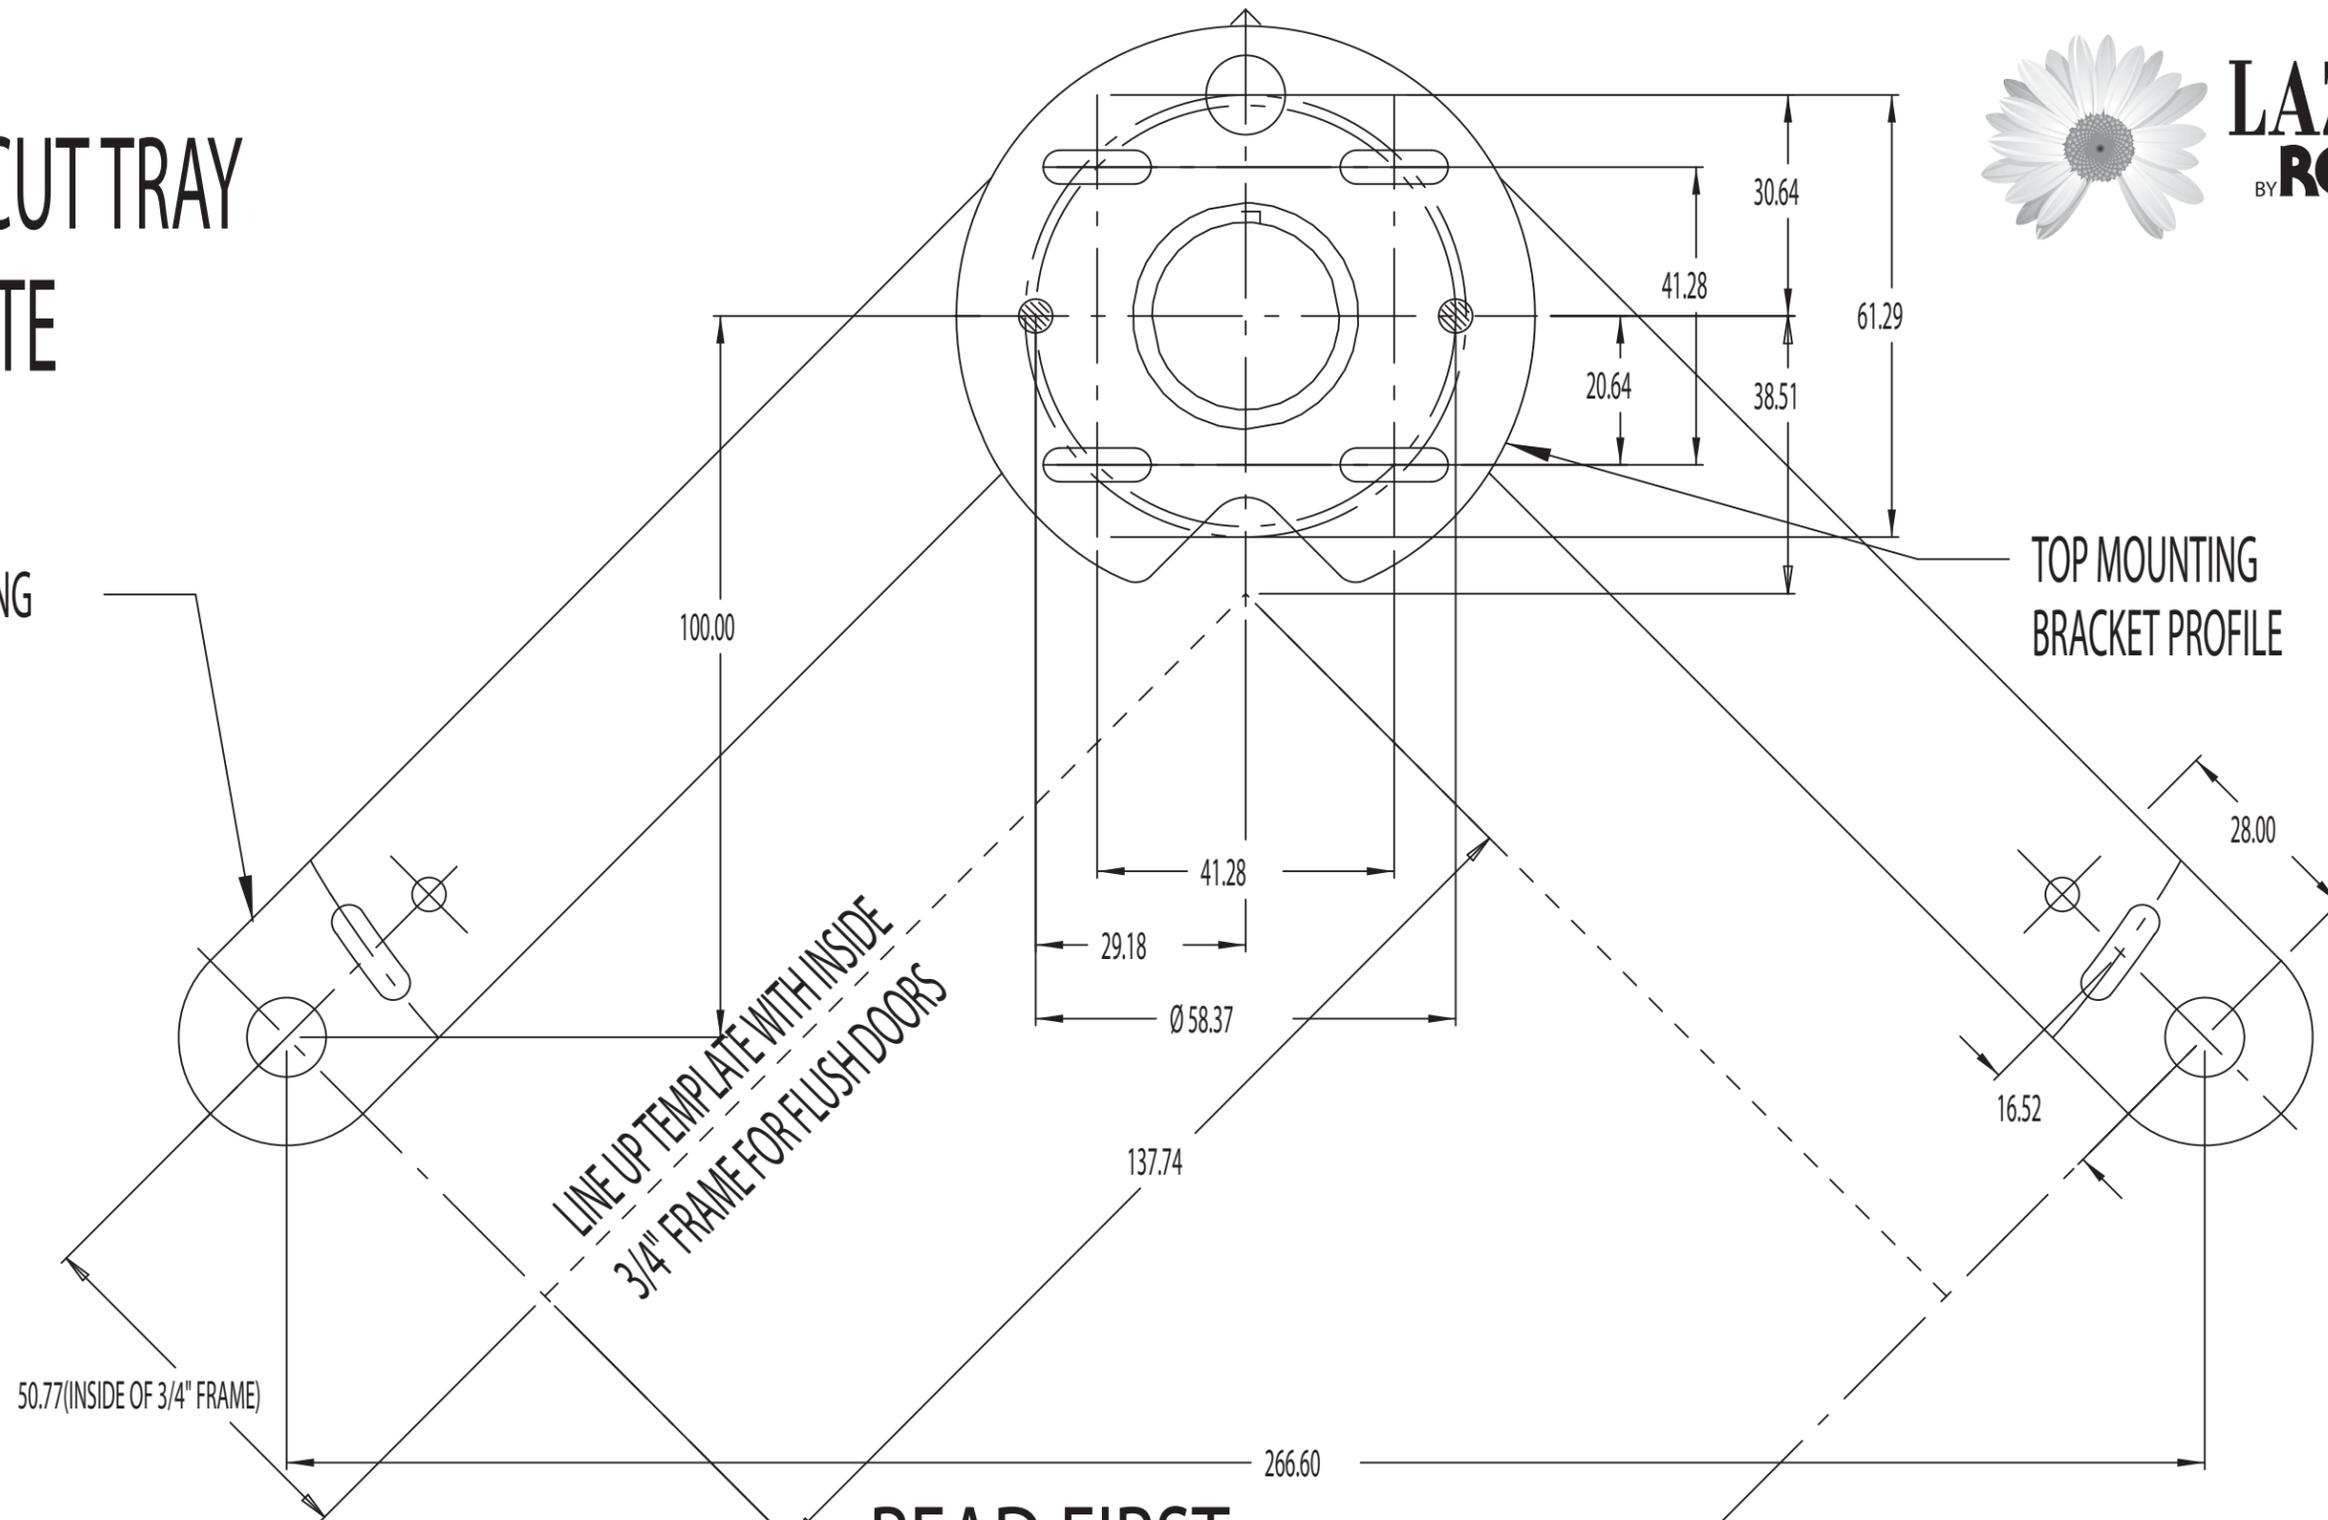

BOTTOM MOUNTING
BRACKET PROFILE

TOP MOUNTING
BRACKET PROFILE



LINE UP TEMPLATE WITH INSIDE
3/4" FRAME FOR FLUSH DOORS

READ FIRST

1. CHOOSE DESIRED DOOR MOUNT (SUCH AS FLUSH OR LIP)
2. CUT TEMPLATE ALONG DOTTED LINE.
3. LINE UP AND TAPE DOWN/UP TEMPLATE, THEN DRILL PILOT HOLES RELATED TO TOP OR BOTTOM MOUNTING BRACKETS.

* TEMPLATE BASED ON 3/4" DOORS.