



TOOLS REQUIRED:




Included Multi-Tool

INCLUDED HARDWARE:



x4) Chicago Bolt



x4) Threaded Insert



x4) Bolt Cap*

*Black or Blue, matches body color purchased

PLEASE NOTE: Hardware listed reflects what is required for 1 body sign.



FIG. 1



FIG. 2

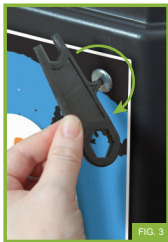


FIG. 3


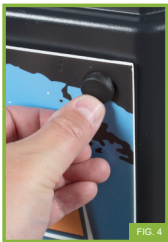


FIG. 4

STEP-BY-STEP INSTALLATION INSTRUCTIONS

- By hand, start to thread the inserts into each of the 4 predrilled holes on the body by turning clockwise, then use a Chicago Bolt with included multi-tool to tighten the inserts so they are tight to the body. (FIG. 1 & FIG. 2) Remove Chicago Bolts once Threaded Inserts are installed.
- Align signage with predrilled holes directly over installed Threaded Inserts so that all 4 holes align
- Insert 4 Chicago Bolts through signage and thread into inserts using multi-tool until snug (FIG. 3)
- Push bolt caps over exposed Chicago Bolt heads (FIG. 4)
- Repeat steps 1 - 4 until desired amount of signage is installed

TOOLS REQUIRED:

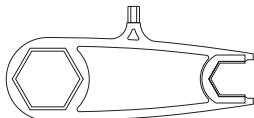

Included Multi-Tool



FIG. 1



FIG. 2

STEP-BY-STEP SIGN CHANGE INSTRUCTIONS

- 1 Using the included multi-tool, push slotted end into small slot on side of bolt caps and apply slight twisting pressure to the tool to pop off bolt caps (**FIG. 1**)
- 2 Using included multi-tool, turn Chicago bolts counterclockwise to remove all 4 (**FIG. 2**)
- 3 Once Chicago bolts are removed, change out sign(s) and follow installation instructions on page 1