Manufactured by:
Backyard Discovery
3305 Airport Drive, Pittsburg, KS 66762
800-856-4445

Basepoint Business Centre: Rivermead Drive,Westlea, Swindon SN5 7EX Phone: 0800-118-2476
J.P. Coenstraat 7, The Bridge, The Hague, 2595 WP, Netherlands Phone: 08005678990

LENNON 4-6 PERSON CUBE SAUNA WITH PORCH

MODEL # : 2504684B, 2504684B-V

THE ASSEMBLY MANUAL MUST BE RETAINED SINCE IT CONTAINS IMPORTANT INFORMATION

LICENSED ELECTRICIAN WORK IS REQUIRED TO INSTALL A DEDICATED 240V/50AMP CIRCUIT

WARNING
Cancer and Reproductive Harm
www.P65Warnings.ca.gov



Please visit www.backyarddiscovery.com

For the most up to date assembly manual, to register your product, or to order replacement parts *Para obtener instrucciones en español, visite www.backyarddiscovery.com*

BILT®

EASY STEP-BY-STEP
3D INTERACTIVE INSTRUCTIONS
DOWNLOAD THE FREE APP


App Store | Google play

OWNER'S MANUAL - BASIC SETUP DIMENSIONS & ASSEMBLY NOTES


CHOOSE A GOOD LOCATION FOR YOUR SAUNA!

It is critically important the sauna foundation is sturdy and level.
An unstable foundation can cause the sauna to tilt, shift, or fall, leading to injury.
Pay close attention to the items needed for each step. Make sure you are using the correct hardware for each step.

- Using incorrect hardware may result in improper assembly.
- Ensure the surface is firm and level and can support the weight of the sauna and its users. (1000+ lbs.)
- Many garages, basements or deck floors are sloped for drainage. A slight slope will not be an issue. A more pronounced slope will require shimming to make the sauna level.
- Consider a concrete slab, paver stones, or something similar to prevent the cradle supports from settling in the ground. Concrete anchors are provided in the kit.
- If installing on the ground or gravel surface, ground anchors are included in the kit.
- If installing on a deck, confirm there is ample structural support under the deck. The hardware to mount to a wood deck is NOT included and will need to be purchased separately.
- Consider distance from your electrical service box as this can greatly impact the cost of needed electrical work
- If located in an area that tends to receive high winds, it is recommended to take extra precautions to ensure the door does not blow open. In most situation, this should not be a concern.

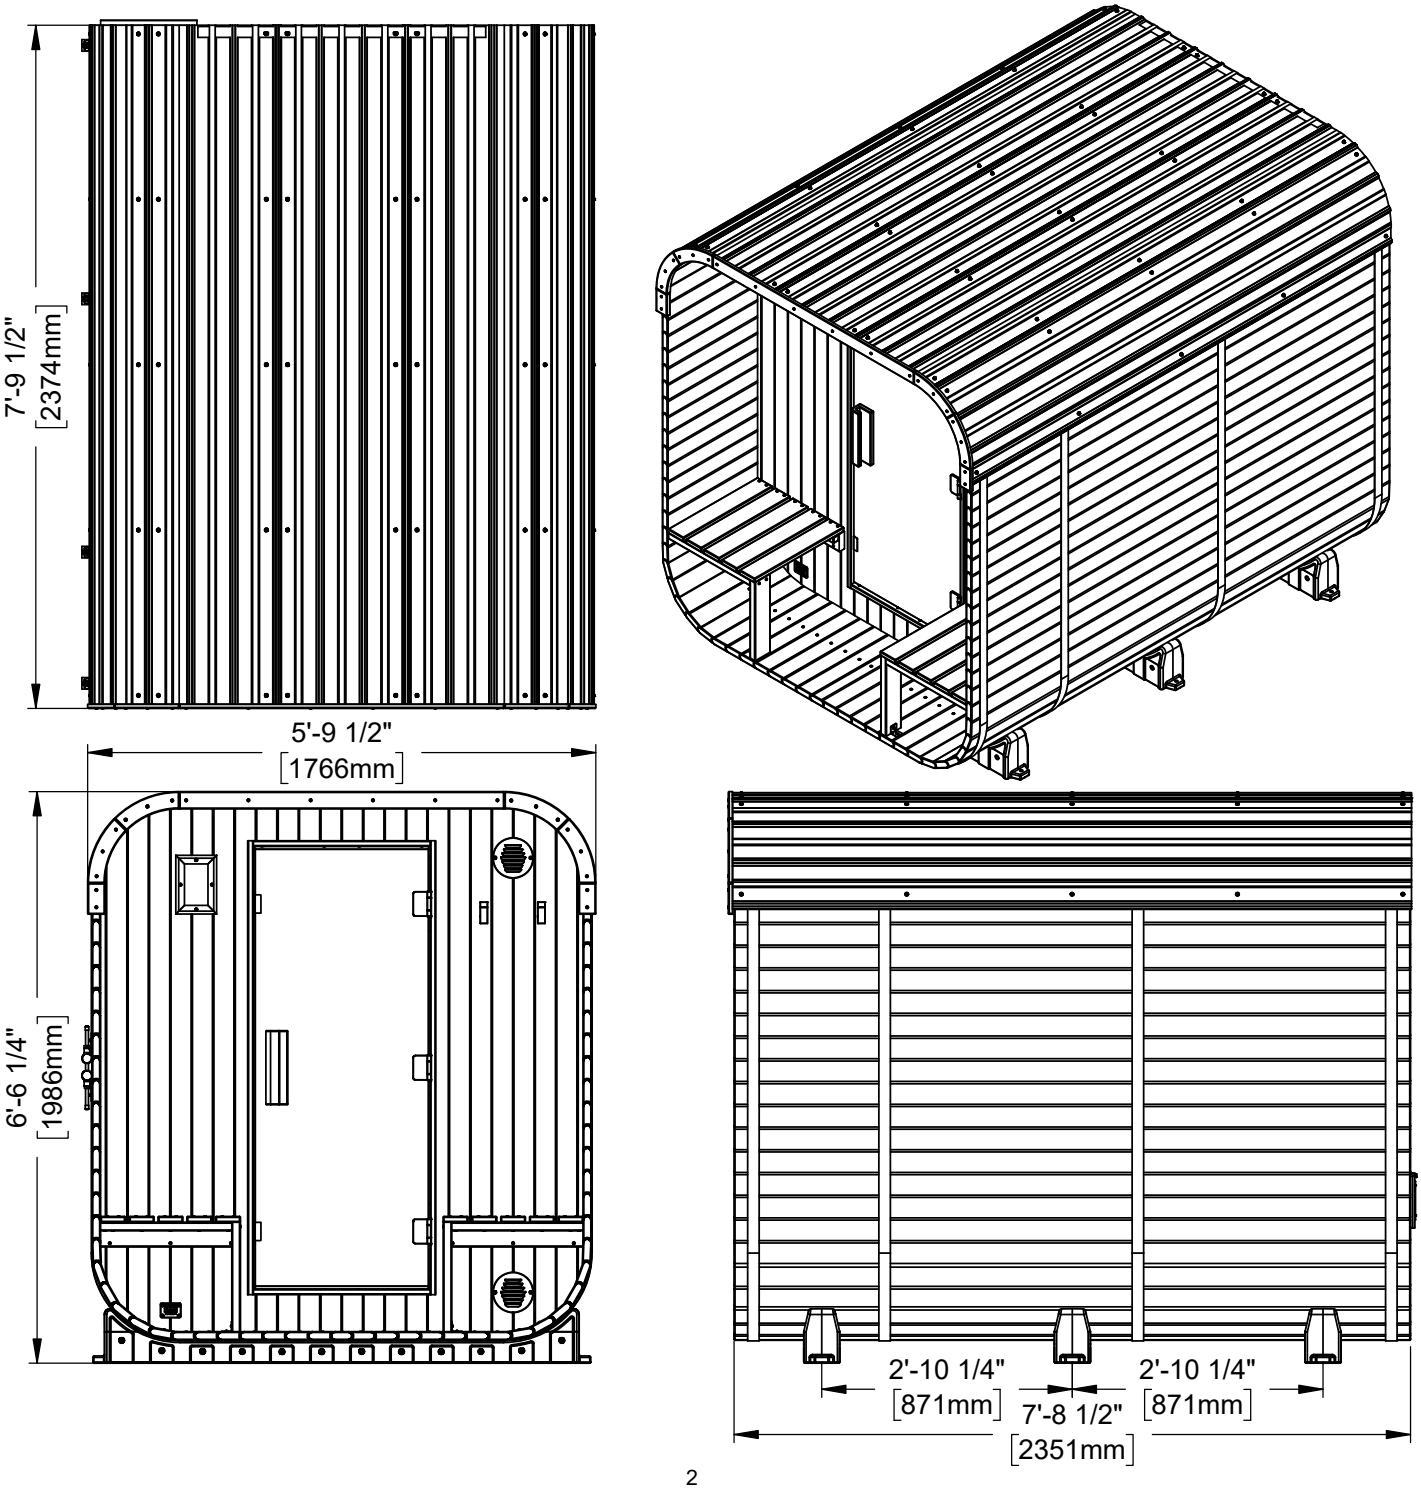

OWNER'S MANUAL - ANCHORING LAYOUT

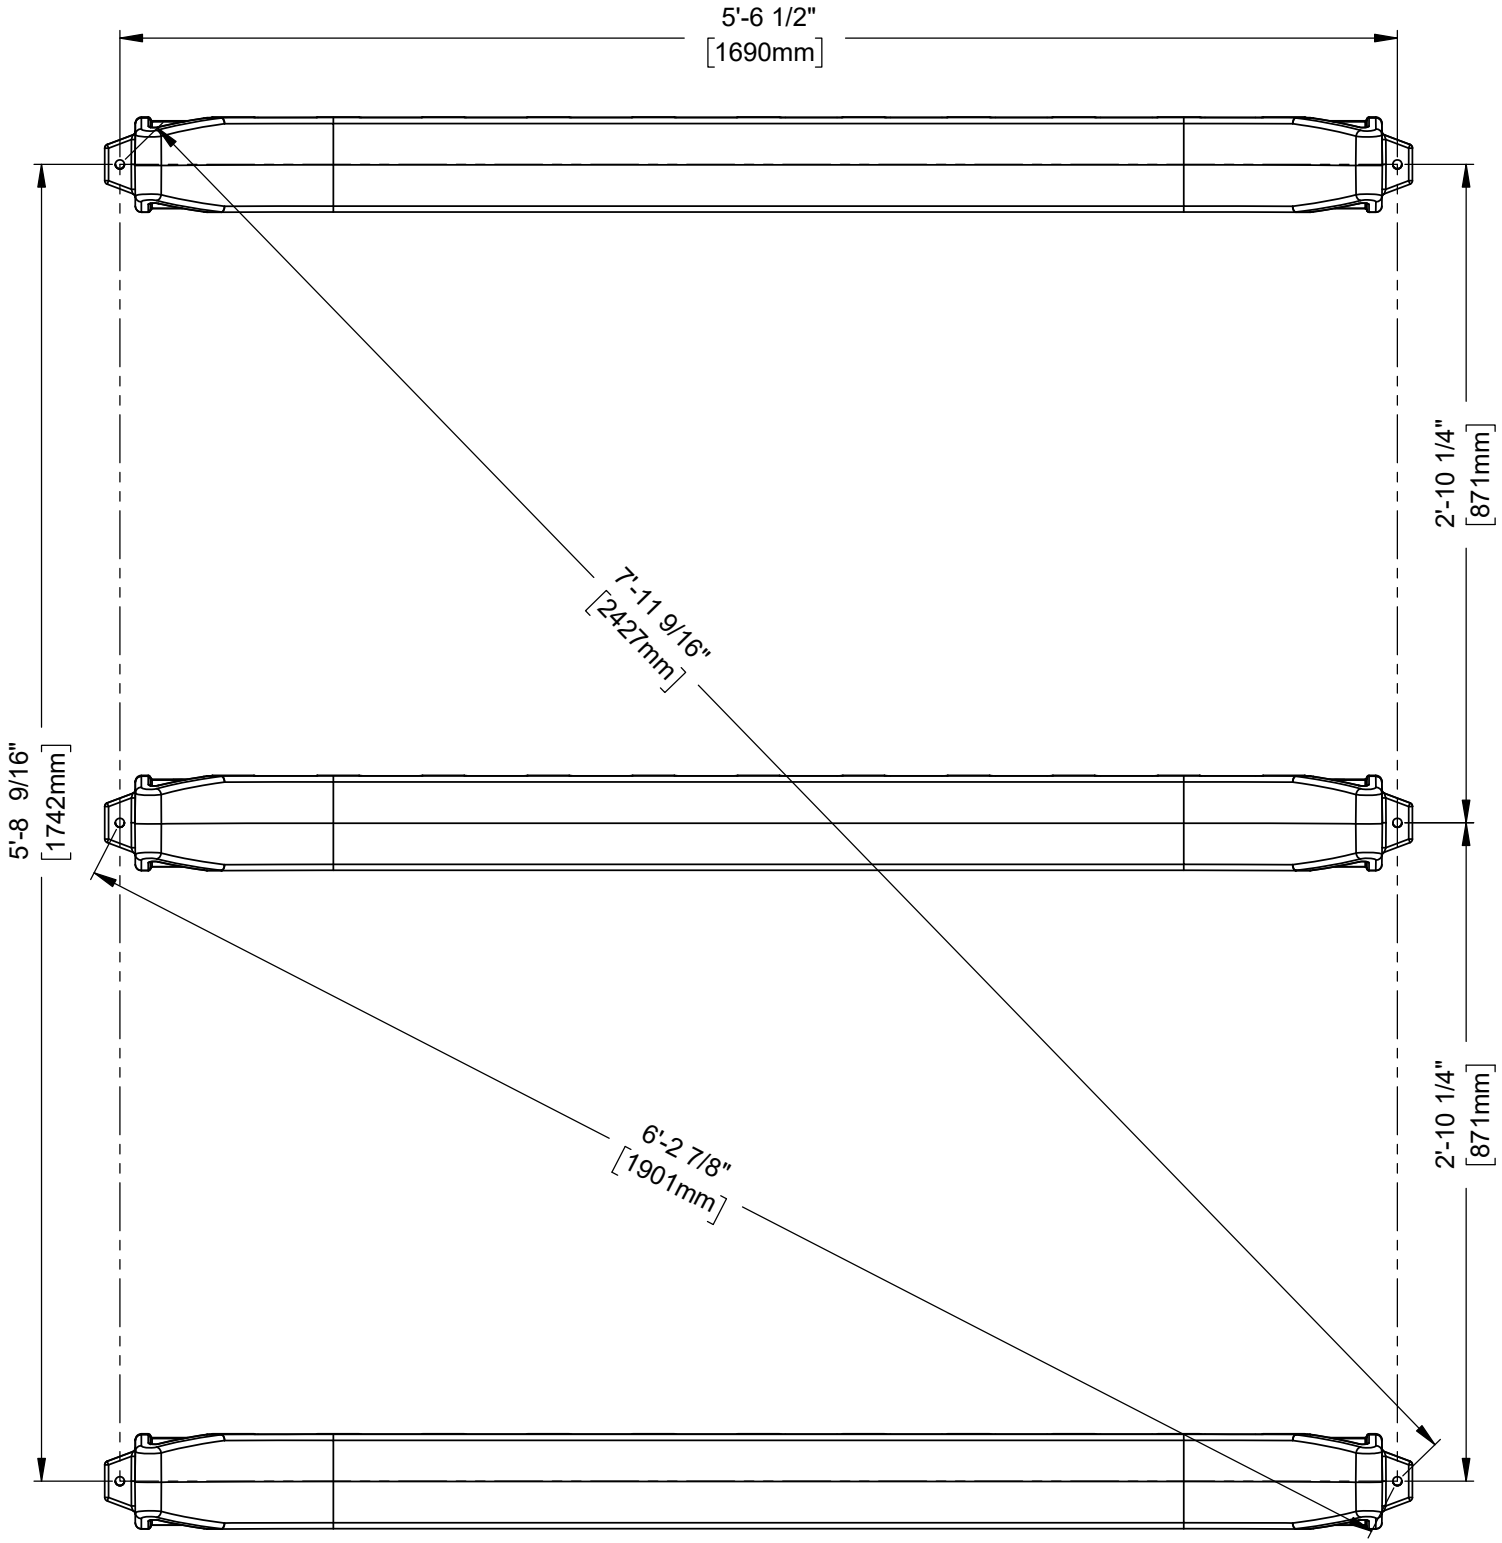


OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)




NG01 SLAT-W4L21949
(x3) 13/16"x3 3/8"x65 3/4" (20x86x1670)

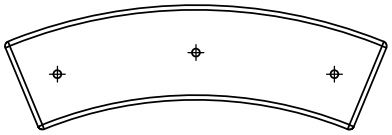


NG02 TRIM-W4L22032
(x4) 13/16"x3 1/8"x9 9/16" (20x80x243)




NR01 TRIM-W4L22033
(x1) 13/16"x2 3/8"x44 1/2" (20x60x1130)

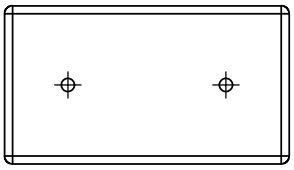

NR02 TRIM-W4L22034
(x2) 13/16"x2 3/8"x4 1/4" (20x60x108)



NR03 HEATER GUARD BOARD-W4L22036
(x5) 13/16"x2 3/8"x20 3/8" (20x60x518)




NR04 HEATER GUARD BOARD-W4L22037
(x5) 13/16"x2 3/8"x15 11/16" (20x60x398)

OWNER'S MANUAL - PARTS IDENTIFICATION

WOOD COMPONENTS (NOT TO SCALE)




OB01 PERIMETER BOARD-W4L23474
(x1) 1 3/16"x3"x92 9/16" (30x76x2351)



OG01 PERIMETER BOARD-W4L22323
(x10) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)




OG02 SEAT CLEAT-W4L21943
(x1) 1 3/16"x3 3/8"x60 15/16" (30x86x1548)



OG03 SEAT CLEAT-W4L21944
(x2) 1 3/16"x3 3/8"x23 1/16" (30x86x586)




OG07 CLEAT-W4L22039
(x2) 1 3/16"x3 3/8"x17 11/16" (30x86x450)



OG04 SEAT CLEAT-W4L21951
(x2) 1 3/16"x3 3/8"x23 1/16" (30x86x586)



OG06 CLEAT-W4L22031
(x2) 1 3/16"x3 3/8"x18 1/8" (30x86x460)




OG05 CLEAT-W4L22030
(x1) 1 3/16"x3 3/8"x60 15/16" (30x86x1548)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)




OG09 PERIMETER BOARD-W4L23475
(x10) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)



OG10 PERIMETER BOARD-W4L23476
(x21) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)



OG11 PERIMETER BOARD-W4L21938
(x21) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)



OG13 SEAT CLEAT-W4L21940
(x2) 1 3/16"x3 3/8"x19 1/8" (30x86x486)



OG08 WIREWAY BOARD-W4L22040
(x1) 1 3/16"x3 3/8"x14 7/16" (30x86x367)




OG14 WIREWAY BOARD-W4L23535
(x1) 1 3/16"x3 3/8"x66 13/16" (30x86x1697)




OG15 WIREWAY BOARD-W4L23536
(x1) 1 3/16"x3 3/8"x35 7/16" (30x86x900)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)




OG16 PERIMETER BOARD-W4L23557
(x10) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)




OG17 PERIMETER BOARD-W4L23558
(x10) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)




OO01 SLAT CLEAT-W4L21950
(x2) 1 3/16"x1 3/16"x14 15/16" (30x30x380)



OO03 HEATER GUARD BOARD-W4L22038
(x2) 1 3/16"x1 3/16"x16 1/8" (30x30x410)



OO04 HEATER GUARD BOARD-W4L22035
(x1) 1 3/16"x1 3/16"x16 1/8" (30x30x410)



OO05 FLOOR CLEAT-W4L22600
(x2) 1 3/16"x1 3/16"x45 1/4" (30x30x1150)




OR01 SEAT UPRIGHT-W4L21945
(x2) 1 3/16"x2 3/8"x30 11/16" (30x60x780)




OR02 ANGLE BRACE-W4L21946
(x4) 1 3/16"x2 3/8"x10 7/8" (30x60x276)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

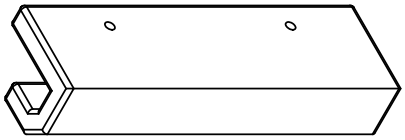


AM01 DOOR HANDLE-W4L21937
(x1) 2 1/4"x3"x10 3/16" (57x76x258)



Y01 HEATER SPACER BOARD-W4L22601
(x2) 5/8"x4"x18 1/4" (16x102x464)



OR03 SEAT UPRIGHT-W4L21947
(x2) 1 3/16"x2 3/8"x14 15/16" (30x60x380)

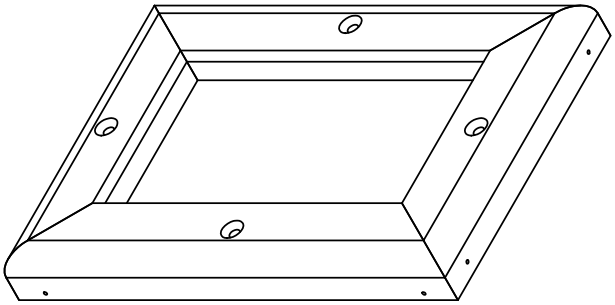


TF01 TRIM FRAME-W2A04797
(x1) 7/8"x5 9/16"x8 1/16" (22x142x204)




OR04 SEAT UPRIGHT-W4L21941
(x2) 1 3/16"x3 3/8"x14 15/16" (30x86x380)



W01 SEAT TRIM-W4L21948
(x2) 1 9/16"x3 3/8"x65 3/4" (40x86x1670)




OR05 PERIMETER BOARD-W4L23477
(x1) 1 3/16"x1 13/16"x92 9/16" (30x46x2351)




OR06 PERIMETER BOARD-W4L23478
(x1) 1 3/16"x1 13/16"x92 9/16" (30x46x2351)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

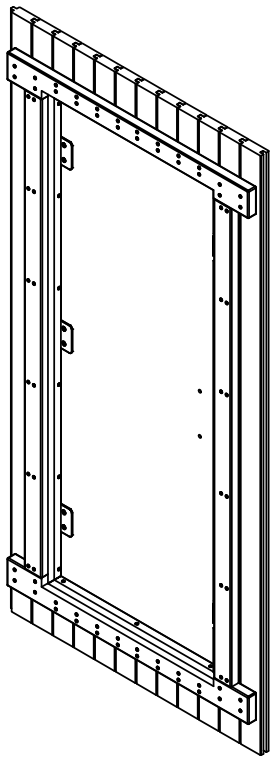


WP01 WALL PANEL ASSEMBLY-W2A04816
(x1) 2 3/8"X35 5/8"X73 1/8" (60x906x1858)

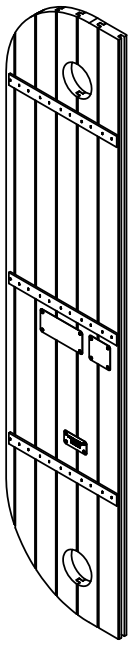


WP03 WALL PANEL ASSEMBLY-W2A05386
(x1) 1 3/8"x15 7/8"x73 1/8" (35x403x1858)

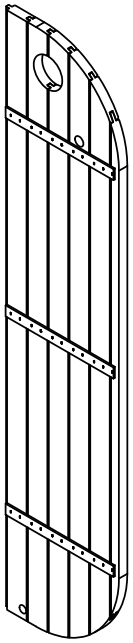


WP05 WALL PANEL ASSEMBLY-W2A05410
(x1) 1 3/8"x16 5/16"x73 1/8" (35x415x1858)

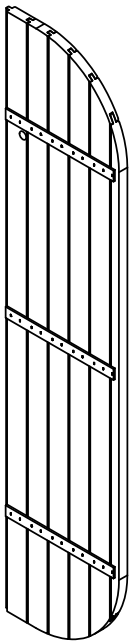

WP02 WALL PANEL ASSEMBLY-W2A05387
(x1) 1 3/8"x16 5/16"x73 1/8" (35x415x1858)

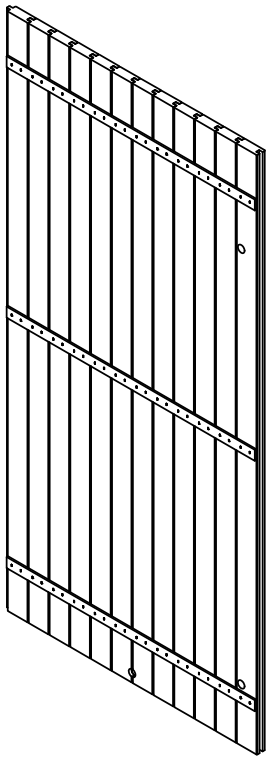


WP04 WALL PANEL ASSEMBLY-W2A05388
(x1) 1 3/8"x35 5/8"x73 1/8" (35x906x1858)

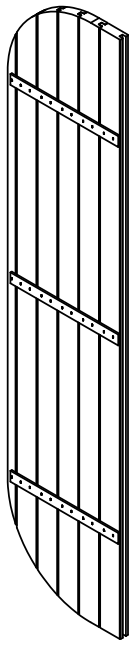


WP06 WALL PANEL ASSEMBLY-W2A05411
(x1) 3 3/8"x15 7/8"x73 1/8" (35x403x1858)

OWNER'S MANUAL - PARTS IDENTIFICATION


WOOD COMPONENTS (NOT TO SCALE)

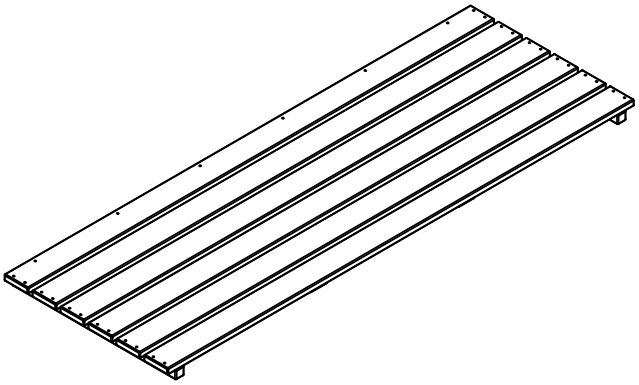


BA01 BENCH ASSEMBLY-W2A04821
(x1) 1 15/16"x23 1/16"x65 3/4" (50x586x1670)

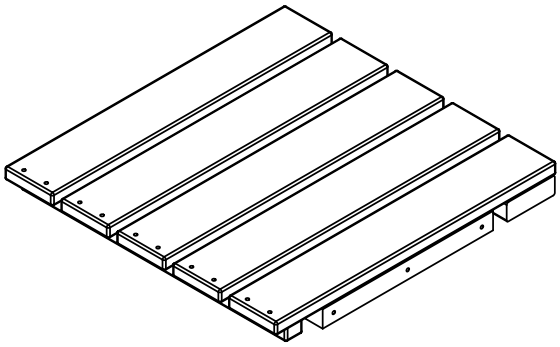


BA04 BENCH ASSEMBLY-W2A04825
(x1) 1 15/16"x17 15/16"x19 3/4" (50x456x502)

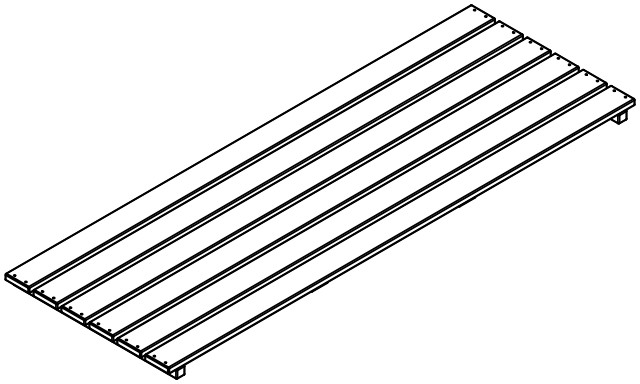


BA02 BENCH ASSEMBLY-W2A04822
(x1) 1 15/16"x23 1/16"x65 3/4" (50x586x1670)

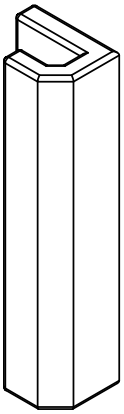

HA01 HANDLE ASSEMBLY-W2A04820
(x1) 2 1/4"x3"x10 3/16" (57x76x258)

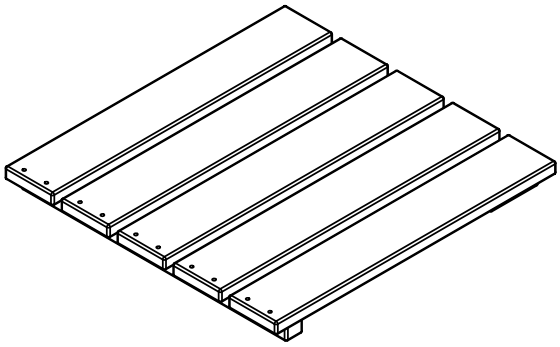


BA03 BENCH ASSEMBLY-W2A04824
(x1) 1 15/16"x19 1/8"x19 3/4" (50x486x502)

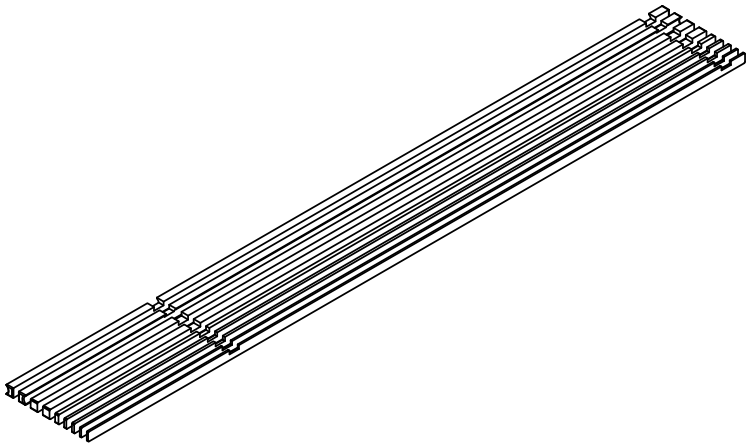


BS01 BOARD SPACER KIT-W2A05412
(x1)

OWNER'S MANUAL - PARTS IDENTIFICATION


ACCESSORY COMPONENTS (NOT TO SCALE)

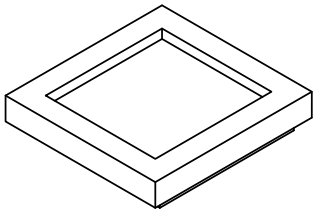


1698 HYGROMETER-A6P01698
(x1)

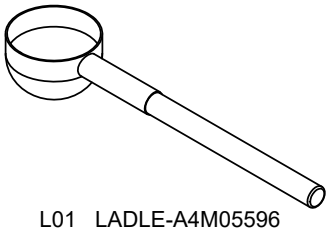


L01 LADLE-A4M05596
(x1)

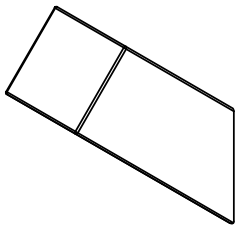


5672 TOWEL HANGER-A4M05672
(x2)

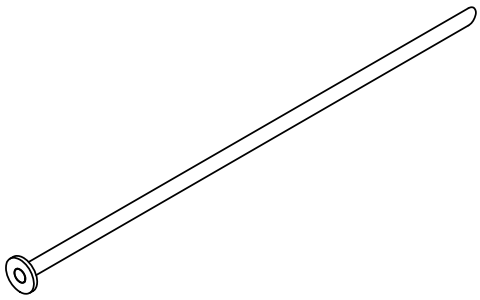


5667 GROUND STAKE-A4M05667
(x6)

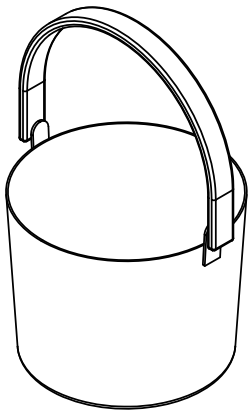

B01 BUCKET-A4M05673
(x1)

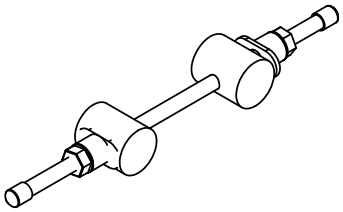


5671 BANDING CINCH-A4M05671
(x4)

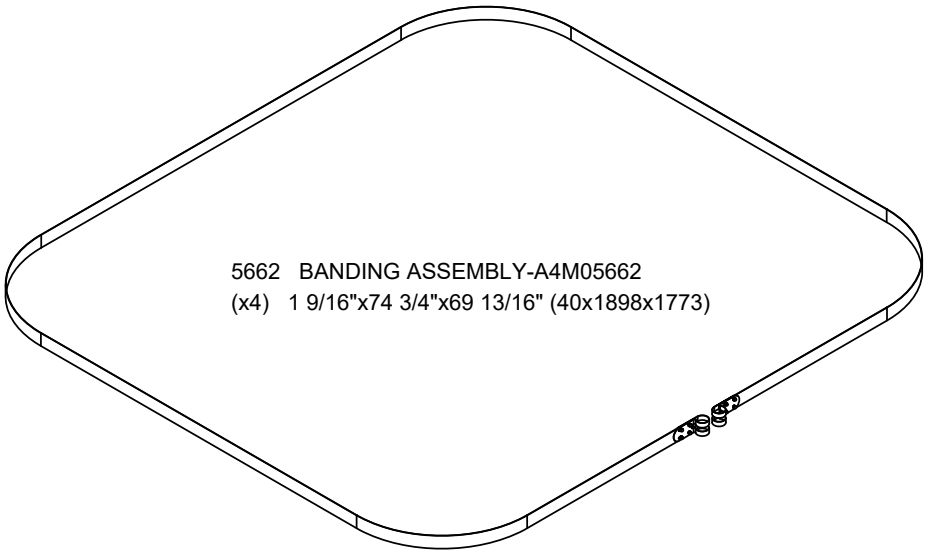


5662 BANDING ASSEMBLY-A4M05662
(x4) 1 9/16"x74 3/4"x69 13/16" (40x1898x1773)

OWNER'S MANUAL - PARTS IDENTIFICATION


ACCESSORY COMPONENTS (NOT TO SCALE)

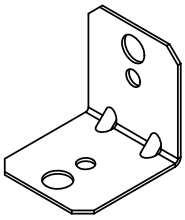

555 L BRACKET BLK-A4M00555
(x6) 1 1/4"x1 3/8"x1 3/8" (32x35x35)

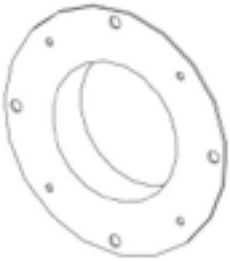

7417 SAUNA FAN BRACKET-A4M07417
(x1)

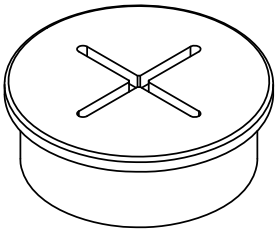


1468 30mm SILICONE GROMMET-A6P01468
(x1)




1448 ZIP CABLE TIE-A6P01448
(x10)




7272 SAUNA FAN -A4M07272
(x1)

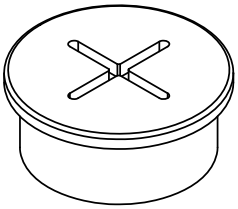


1467 25mm SILICONE GROMMET-A6P01467
(x5)

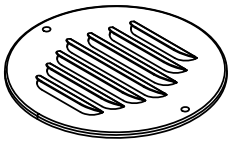

7415 VENT COVER-A4M07415
(x1)

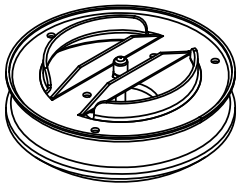

5592 VENT ASSEMBLY-A4M05592
(x1)

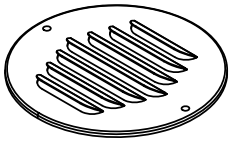


5285 VENT COVER-A4M05285
(x2)



1733 SAUNA POWER WIRE-A6P01733
(x1)




5590-10 WIRING HARNESS-A4M05590-10
(x1)

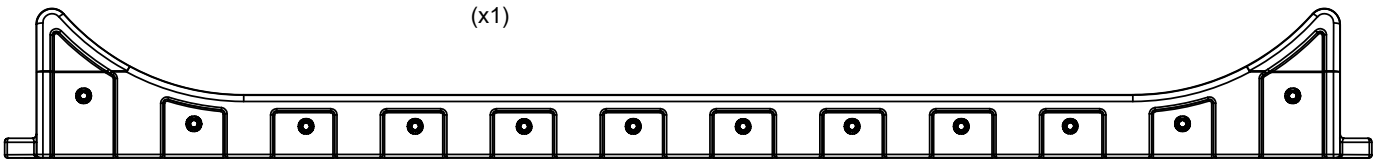


1487 CUBE SAUNA STAND-A6P01487
(x3) 4 15/16"x7 7/16"x68 1/8" (125x189x1730)

OWNER'S MANUAL - PARTS IDENTIFICATION


ACCESSORY COMPONENTS (NOT TO SCALE)

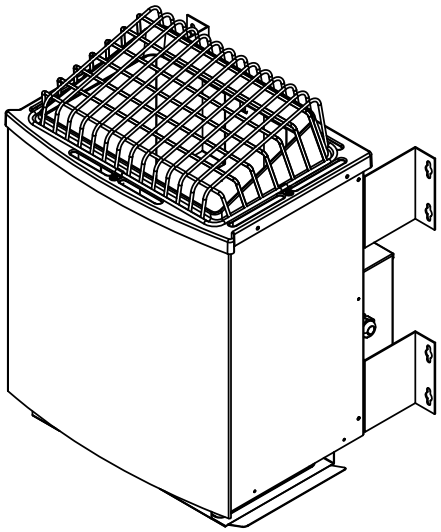


7271 9KW ELECTRIC SAUNA HEATER-A4M07271
(x1)

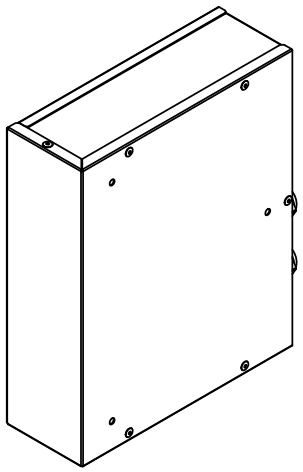


7170 CONTROL BOX-A4M07170
(x1)

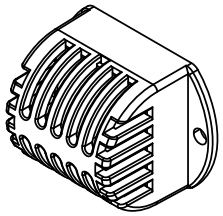

1714 TEMPERATURE SENSOR-A6P01714
(x1)

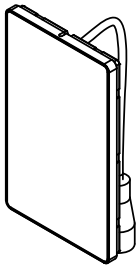


7172 SCREEN CONTROLLER-A4M07172
(x1)

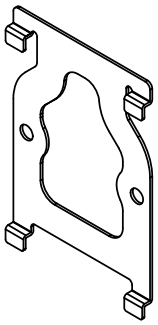


5590-03 CONTROL PANEL MOUNTING BRACKET-A4M05590-03
(x1)



1713 LED LIGHT 2-LEAD EXTENSION CABLE-A6P01713
(x1)

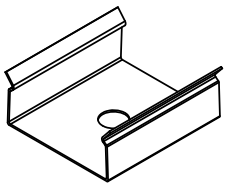


1493-04 LIGHT CLIP-A6P01493-04
(x4)

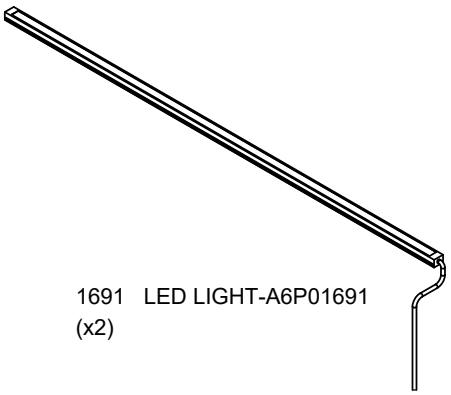


1691 LED LIGHT-A6P01691
(x2)

OWNER'S MANUAL - PARTS IDENTIFICATION


ACCESSORY COMPONENTS (NOT TO SCALE)

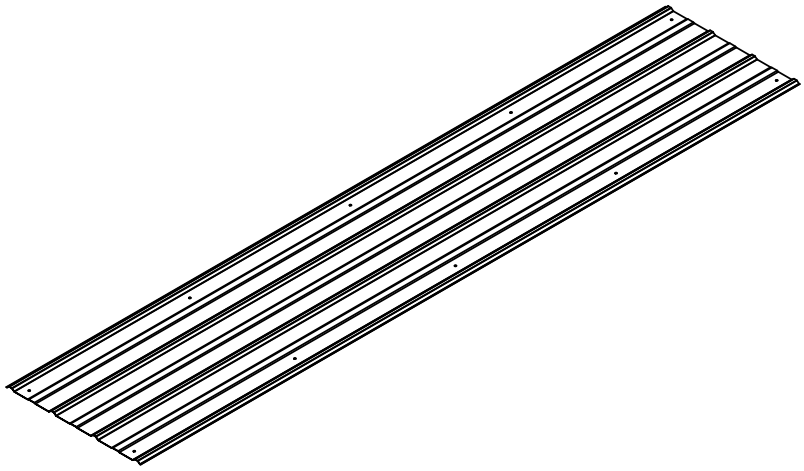


5664 29GA SHEETING-A4M05664
(x5) 1/4"X18 7/8"X92 7/8" (7x480x2359)

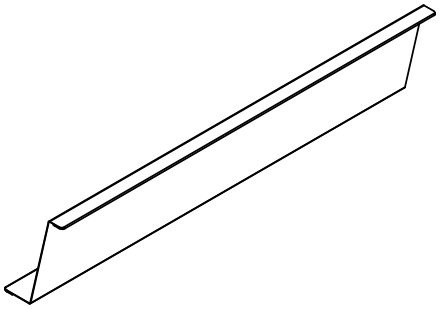

6935 FLASHING-A4M06935
(x1) 2 1/16"x2 7/8"x13 1/4" (53x74x335)

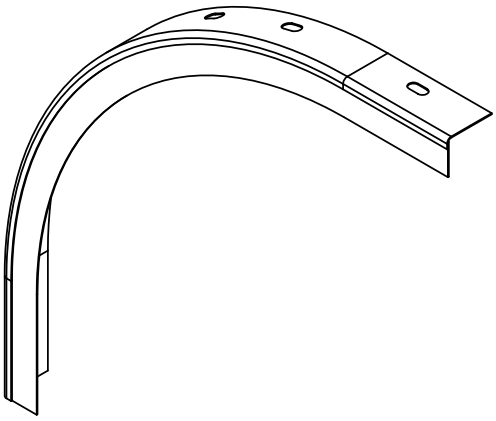


7213 DRIP EDGE-A4M07213
(x2) 1 9/16"x15 11/16"x15 11/16" (40x398x398)

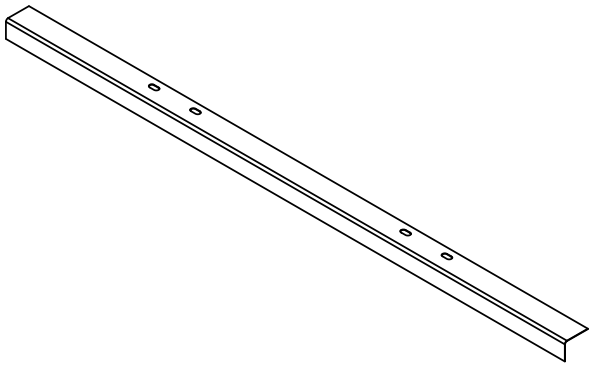


7214 DRIP EDGE-A4M07214
(x1) 1 3/16"x1 5/8"x39 3/8" (30x41x1000)

OWNER'S MANUAL - PARTS IDENTIFICATION


HARDWARE COMPONENTS




H101423 SCREW TFH 8X7/8 SS-BLK
(x4) 8x7/8




H101424 SCREW TFH 8X1 SS-BLK
(x1) 8x1




H101426 SCREW TFH 8X1 1/4 SS-BLK
(x3) 8x1-1/4




H101427 SCREW TFH 8X1 1/2 SS-BLK
(x8) 8x1-1/2




H101428 SCREW TFH 8X1 3/4 SS-BLK
(x181) 8x1-3/4




H101429 SCREW TFH 8X2 SS-BLK
(x260) 8x2




H101430 SCREW TFH 8X2 1/4 SS-BLK
(x12) 8x2-1/4




H101431 SCREW TFH 8X2 1/2 SS-BLK
(x16) 8x2-1/2

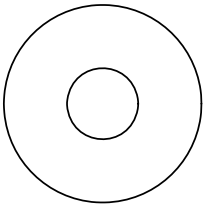


1403 POLY WASHER-H101403
(x4)




H101480 SCREW SELF TAPPING #9x3/4 BLK
(x53) 1/4 x 3/4




H101437 SCREW TWH 8x5/8 SS-BLK
(x4) 8x5/8




H100627 SCREW PFH BLK
(x2) 6x3/4

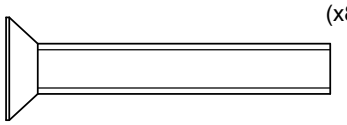


H101402 SCREW TFH 1/4-20 X 1 5/8 SS
(x2) 1/4-20 X 1 5/8

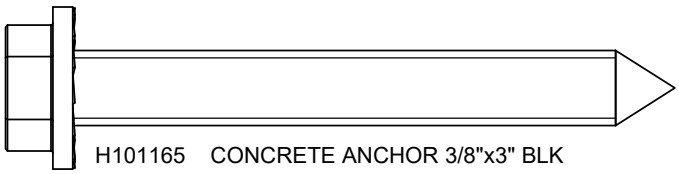


H101165 CONCRETE ANCHOR 3/8"x3" BLK
(x6) 3/8x3

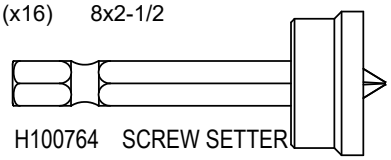


H100764 SCREW SETTER
(x1)




H101100 MAGNETIC DRIVER
(x1)




H100147 TORX BIT T-30
(x1)




H100879 TORX BIT T-20
(x1)

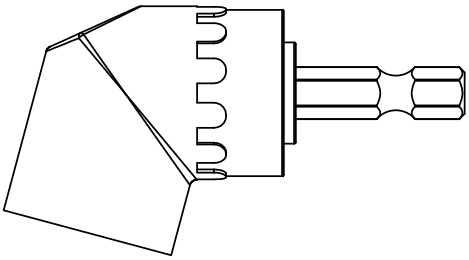

H101114 RIGHT ANGLE DRILL ADAPTER
(x1)

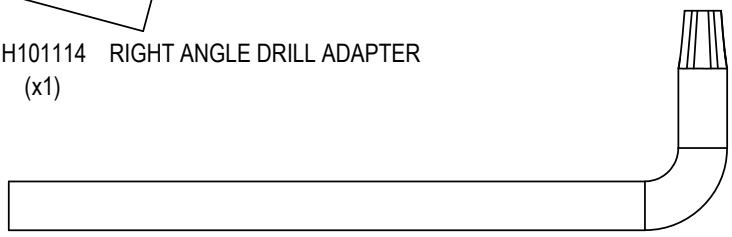

H100114 TORX WRENCH
(x1)



H101278 6" MAGNETIC DRIVER EXTENSION
(x1)

PRE-ASSEMBLY STEP 1 - SORTING PARTS

It is critical for ease of assembly that you take the time to sort and organize the wood and hardware.

WOOD PARTS:

- Organize wood parts by the three-digit, alpha-numeric number stamped on each board (ex. P01).
- If there are multiple boards with the same stamped number, stack those pieces together.
- Stamps can be found on the flat surface of the boards or on the end of the boards.
- Allow yourself plenty of room - the wood pieces can take up a significant amount of space.

NOTE: CARTONS ARE NOT ORGANIZED BY BOARD NUMBER.



HARDWARE PARTS:

- We recommend that you have a separate table to organize the hardware.
- Hardware bags are printed with a seven-digit, alpha-numeric part number.
- You can organize your hardware by part number or group by hardware type (i.e. bolts, nuts, etc.).
- During assembly you only need to reference the last four digits of the number.



PRE-ASSEMBLY STEP 2 - TOOLS REQUIRED



Cordless Drill or
Electric Drill



Drill Attachments:
Phillips Head



1/8", 3/16", 3/8" &
7/16" Drill Bits



Phillips Screw Driver



Open End
Wrench 11/16"




3/8" Drive Ratchet, 1/2" &
7/16" STD Sockets, 1/2" &
7/16" Deep Sockets



Tape Measure



Claw Hammer

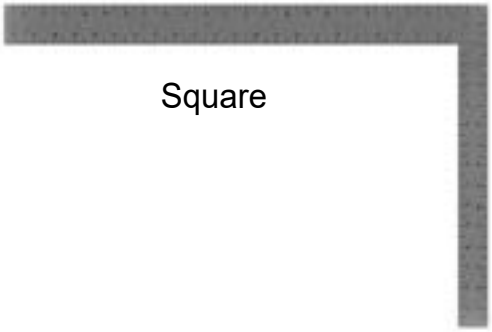

Square



Level 24"



Rubber Mallet -
Optional



Rope 25ft [7.62m] long - Optional

PRE-ASSEMBLY STEP 3 - CHOOSE YOUR ASSEMBLY METHOD

There are several types of assembly instructions available to you.

1. Printed Assembly Manual included with your set
2. BILT APP - 3D interactive instructions
3. Combination of the Printed Manual and BILT APP (Note: Step numbers can differ between the two methods)




STEP 1 - BASE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H101429	SCREW TFH 8X2 SS-BLK





OB01 (x1) PERIMETER BOARD - W4L23474
1 3/16"x3"x92 9/16" (30x76x2351)

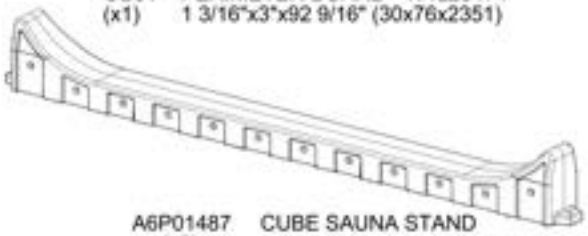

A6P01487 (x3) CUBE SAUNA STAND

- STAND BASE SUPPORTS UP AND HOLD DIMENSIONS SHOWN.
- ATTACH HARDWARE AS SHOWN.

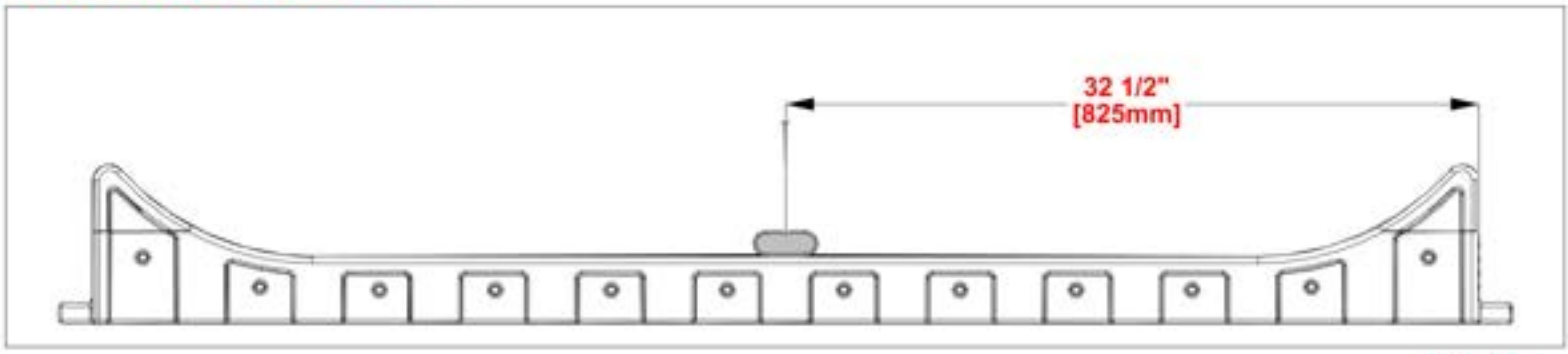

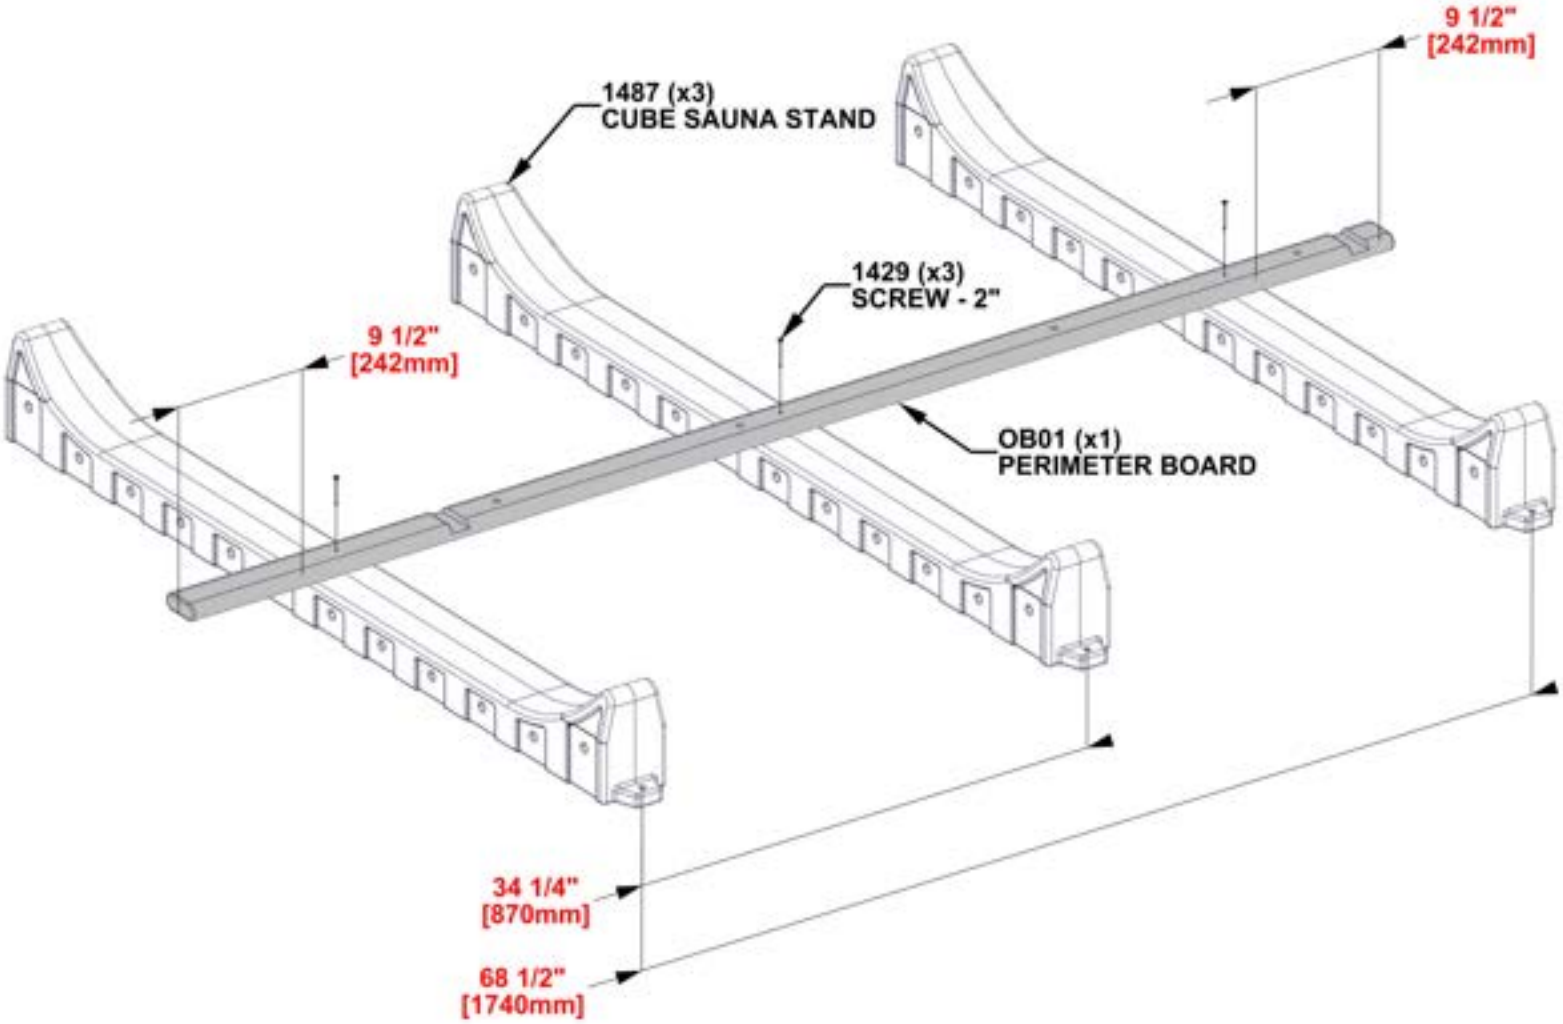


STEP 2 - ANCHORING TO GROUND



A4M05667 GROUND STAKE
(x6)


- IF SAUNA IS TO SIT ON A CONCRETE SURFACE, SEE STEP 3.
- BEFORE ANCHORING, ENSURE THERE IS A SLIGHT DOWNWARD SLOPE FROM THE FRONT TO THE BACK OF THE SAUNA.
- THE FRONT OF THE SAUNA SHOULD BE APPROXIMATELY 1" HIGHER THAN THE BACK.
- THIS WILL ENSURE THAT WATER WILL RUN OFF THE BACK.
- ADDING SHIMS UNDER THE FRONT SAUNA BASE MAY BE NECESSARY TO ACHIEVE THIS SLOPE.

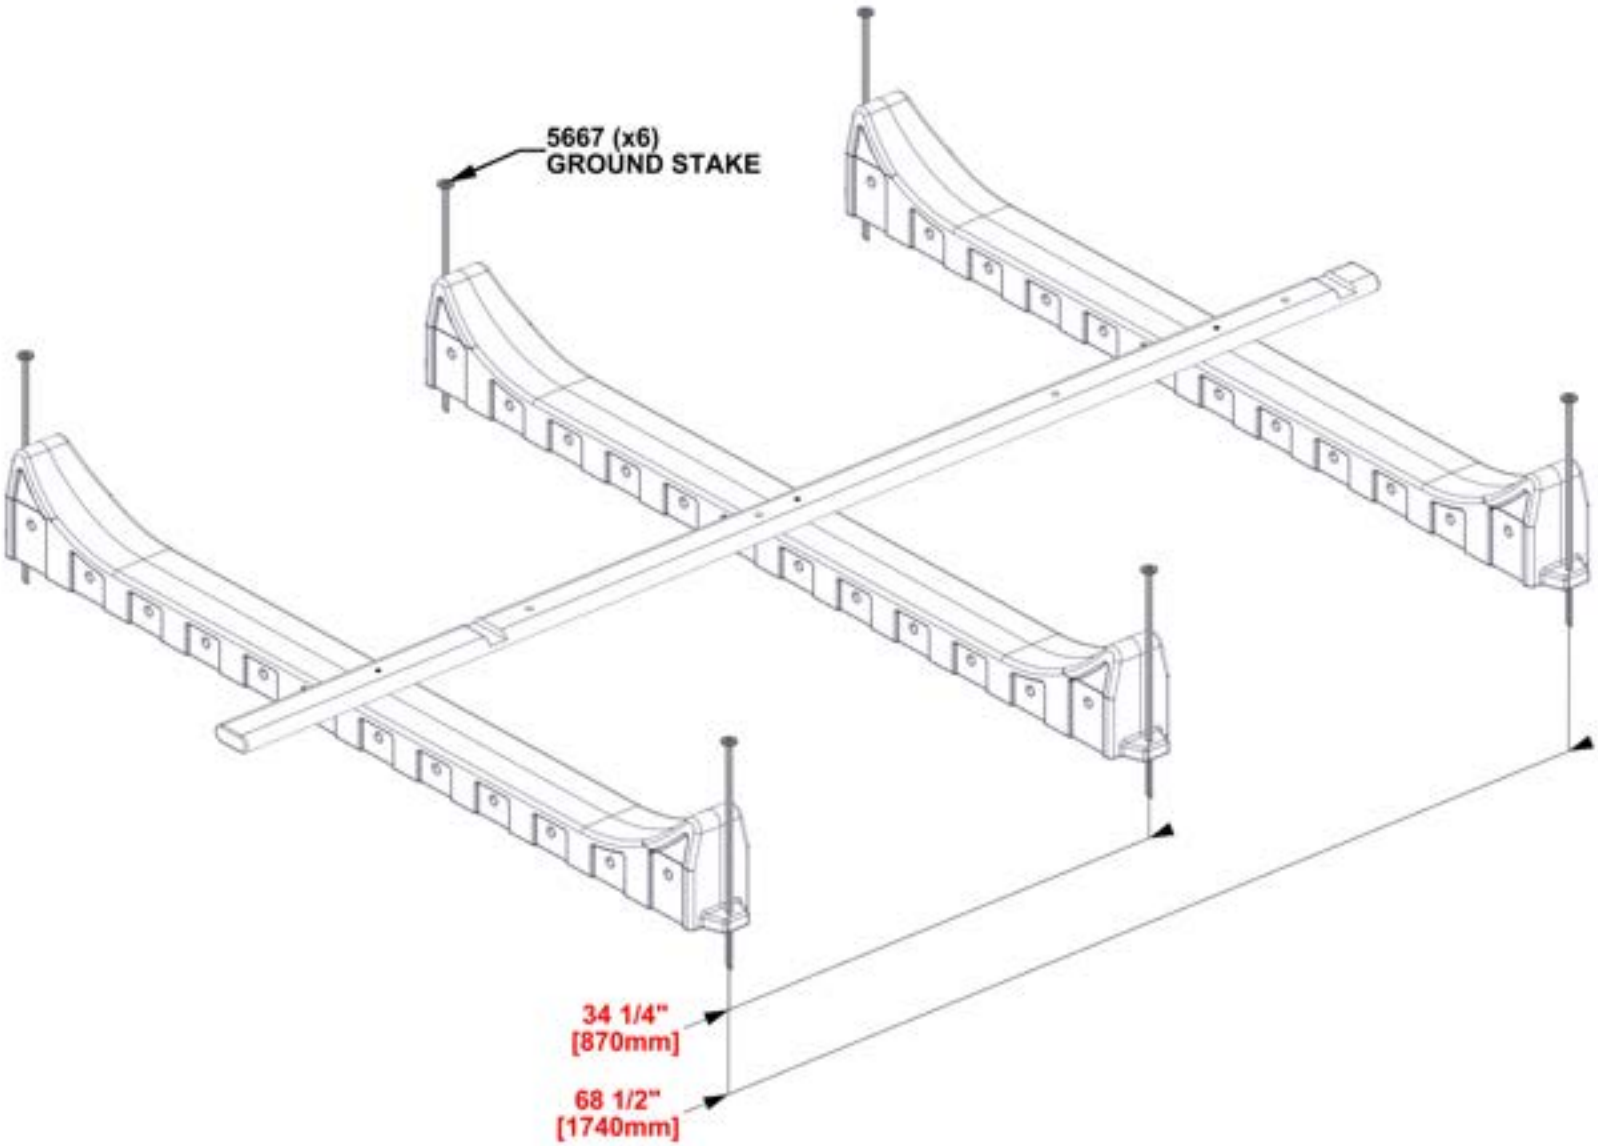

STEP 3 - ANCHORING TO CONCRETE

QTY	PART NUMBER	DESCRIPTION
6	H101165	CONCRETE ANCHOR 3/8x3" BLK

- IF SAUNA IS TO SIT ON THE GROUND, SEE STEP 2.
- BEFORE ANCHORING, ENSURE THERE IS A SLIGHT DOWNWARD SLOPE FROM THE FRONT TO THE BACK OF THE SAUNA.
- THE FRONT OF THE SAUNA SHOULD BE APPROXIMATELY 1" HIGHER THAN THE BACK.
- THIS WILL ENSURE THAT WATER WILL RUN OFF THE BACK.
- ADDING SHIMS UNDER THE FRONT SAUNA BASE MAY BE NECESSARY TO ACHIEVE THIS SLOPE.

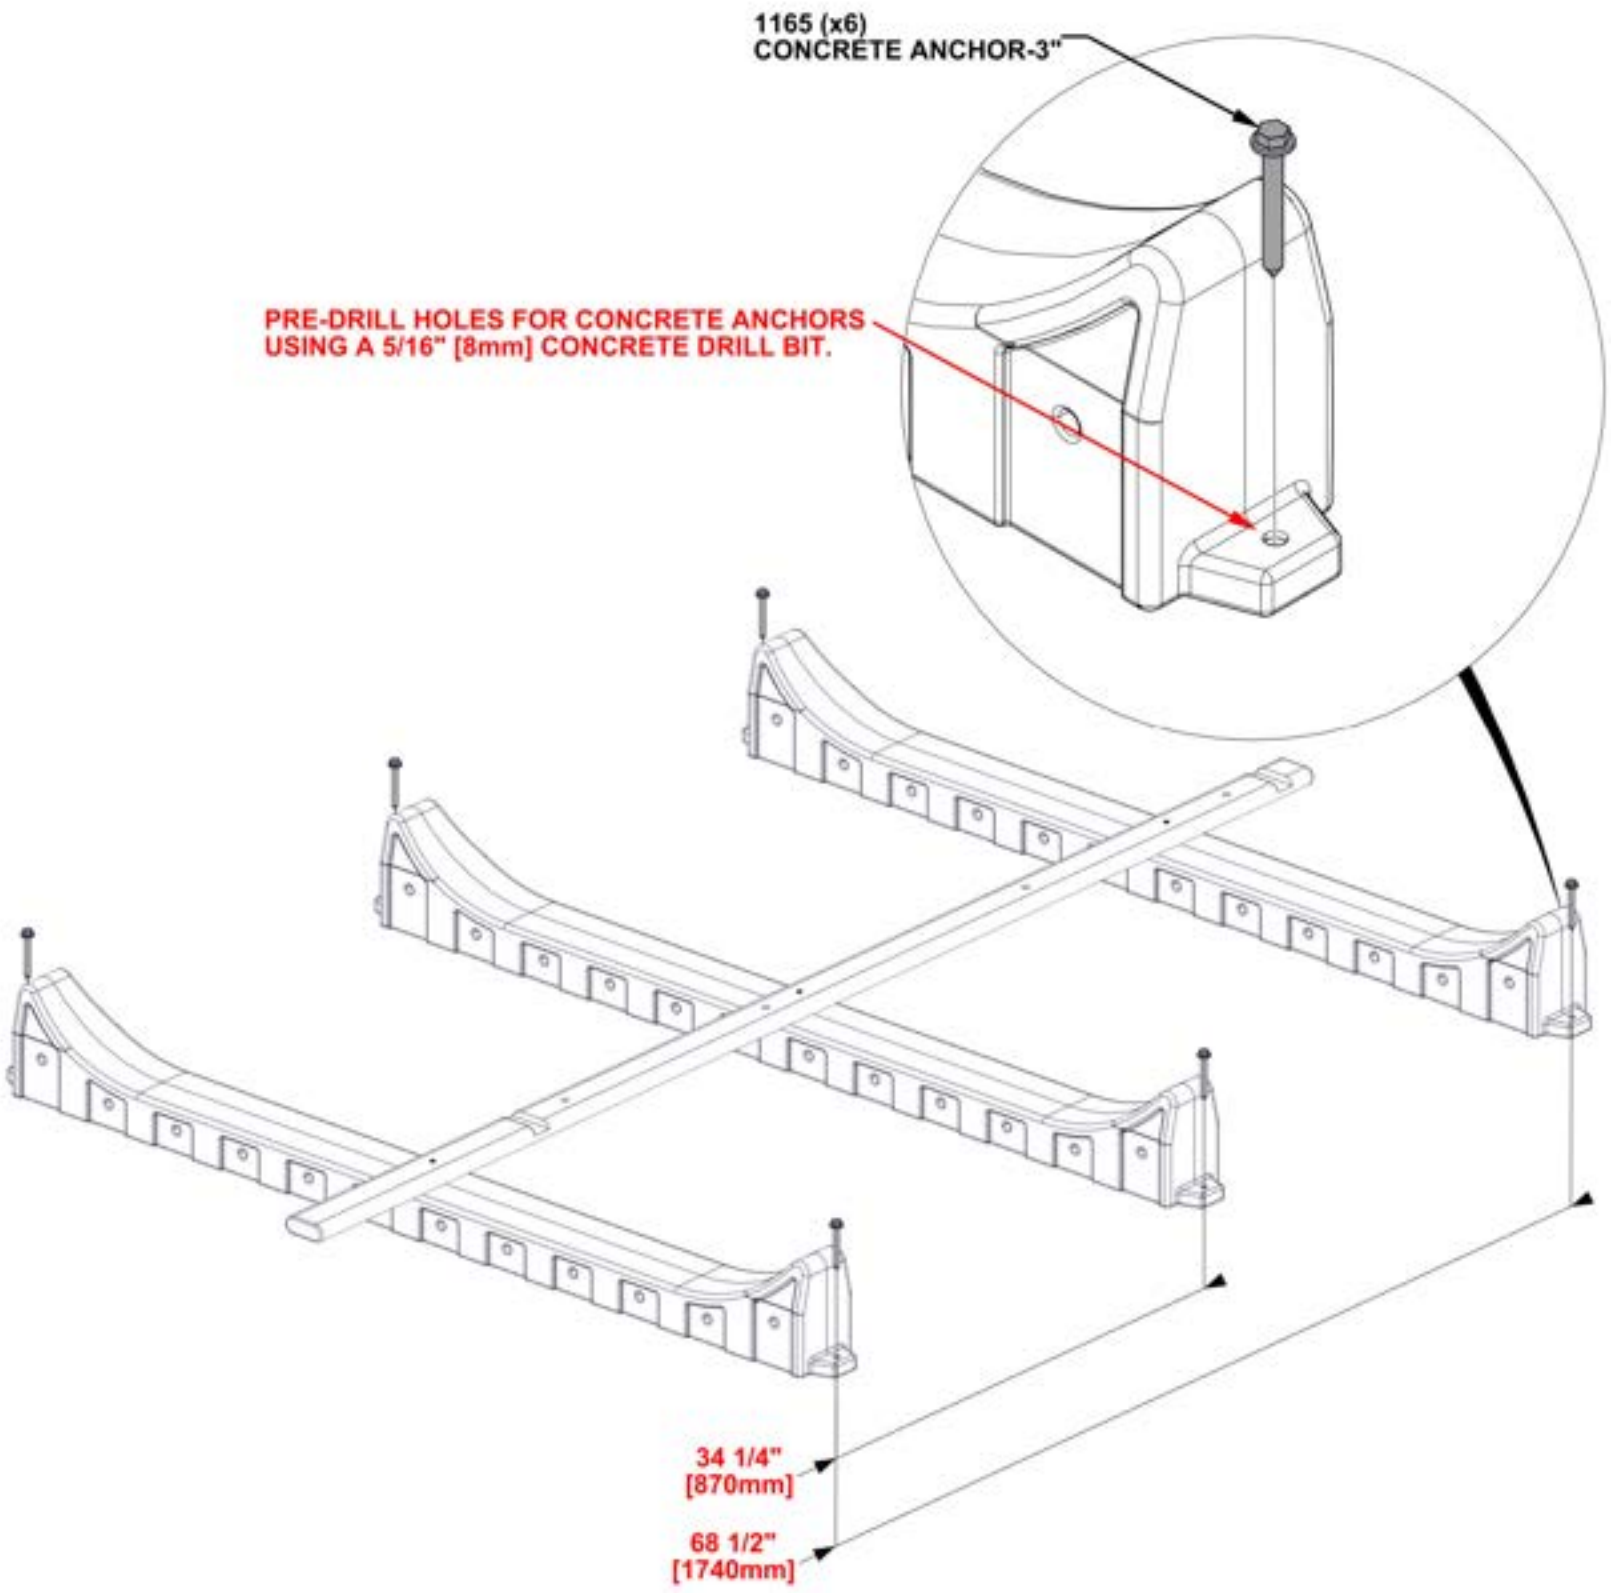

STEP 4 - BASE ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
60	H101429	SCREW TFH 8X2 SS-BLK



OG01 (x10) PERIMETER BOARD - W4L22323
1 3/16"x3 3/8"x92 9/16" (30x86x2351)




OG09 (x10) PERIMETER BOARD - W4L23475
1 3/16"x3 3/8"x92 9/16" (30x86x2351)

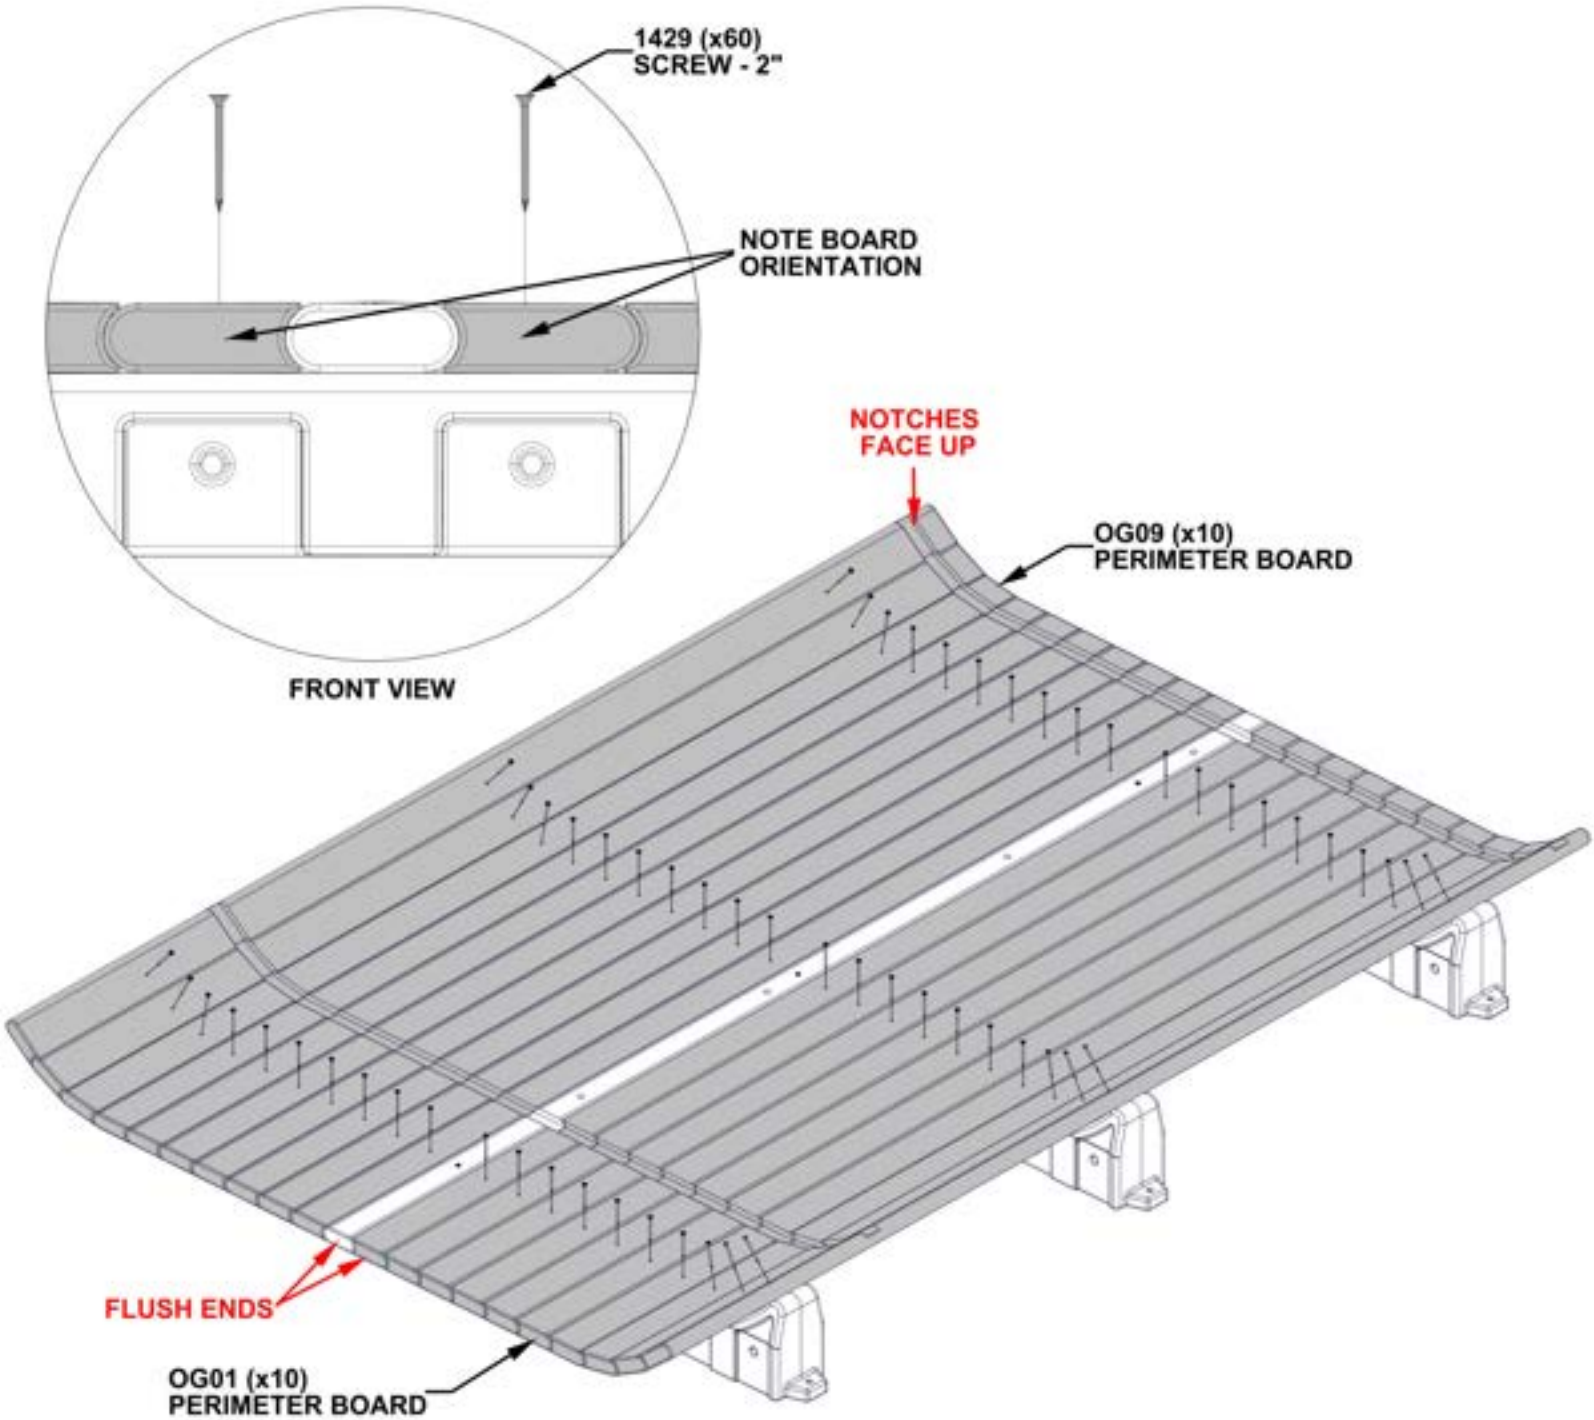

STEP 5 - BACK WALL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
24	H101429	SCREW TFH 8X2 SS-BLK




OG02 (x1) SEAT CLEAT - W4L21943
1 3/16"x3 3/8"x60 15/16" (30x86x1548)




OG05 (x1) CLEAT - W4L22030
1 3/16"x3 3/8"x60 15/16" (30x86x1548)



WP04 (x1) WALL PANEL ASSEMBLY - W2A05388
1 3/8"x35 5/8"x73 1/8" (35x906x1858)

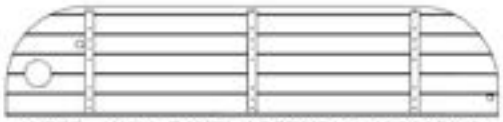


WP05 (x1) WALL PANEL ASSEMBLY - W2A05410
1 3/8"x16 5/16"x73 1/8" (35x415x1858)



WP06 (x1) WALL PANEL ASSEMBLY - W2A05411
3 3/8"x15 7/8"x73 1/8" (35x403x1858)

- USING DIMENSIONS SHOWN, CENTER AND ATTACH WALL CLEATS.
- FINISHED PANEL WIDTH SHOULD MEASURE 66 15/16" [1700mm].

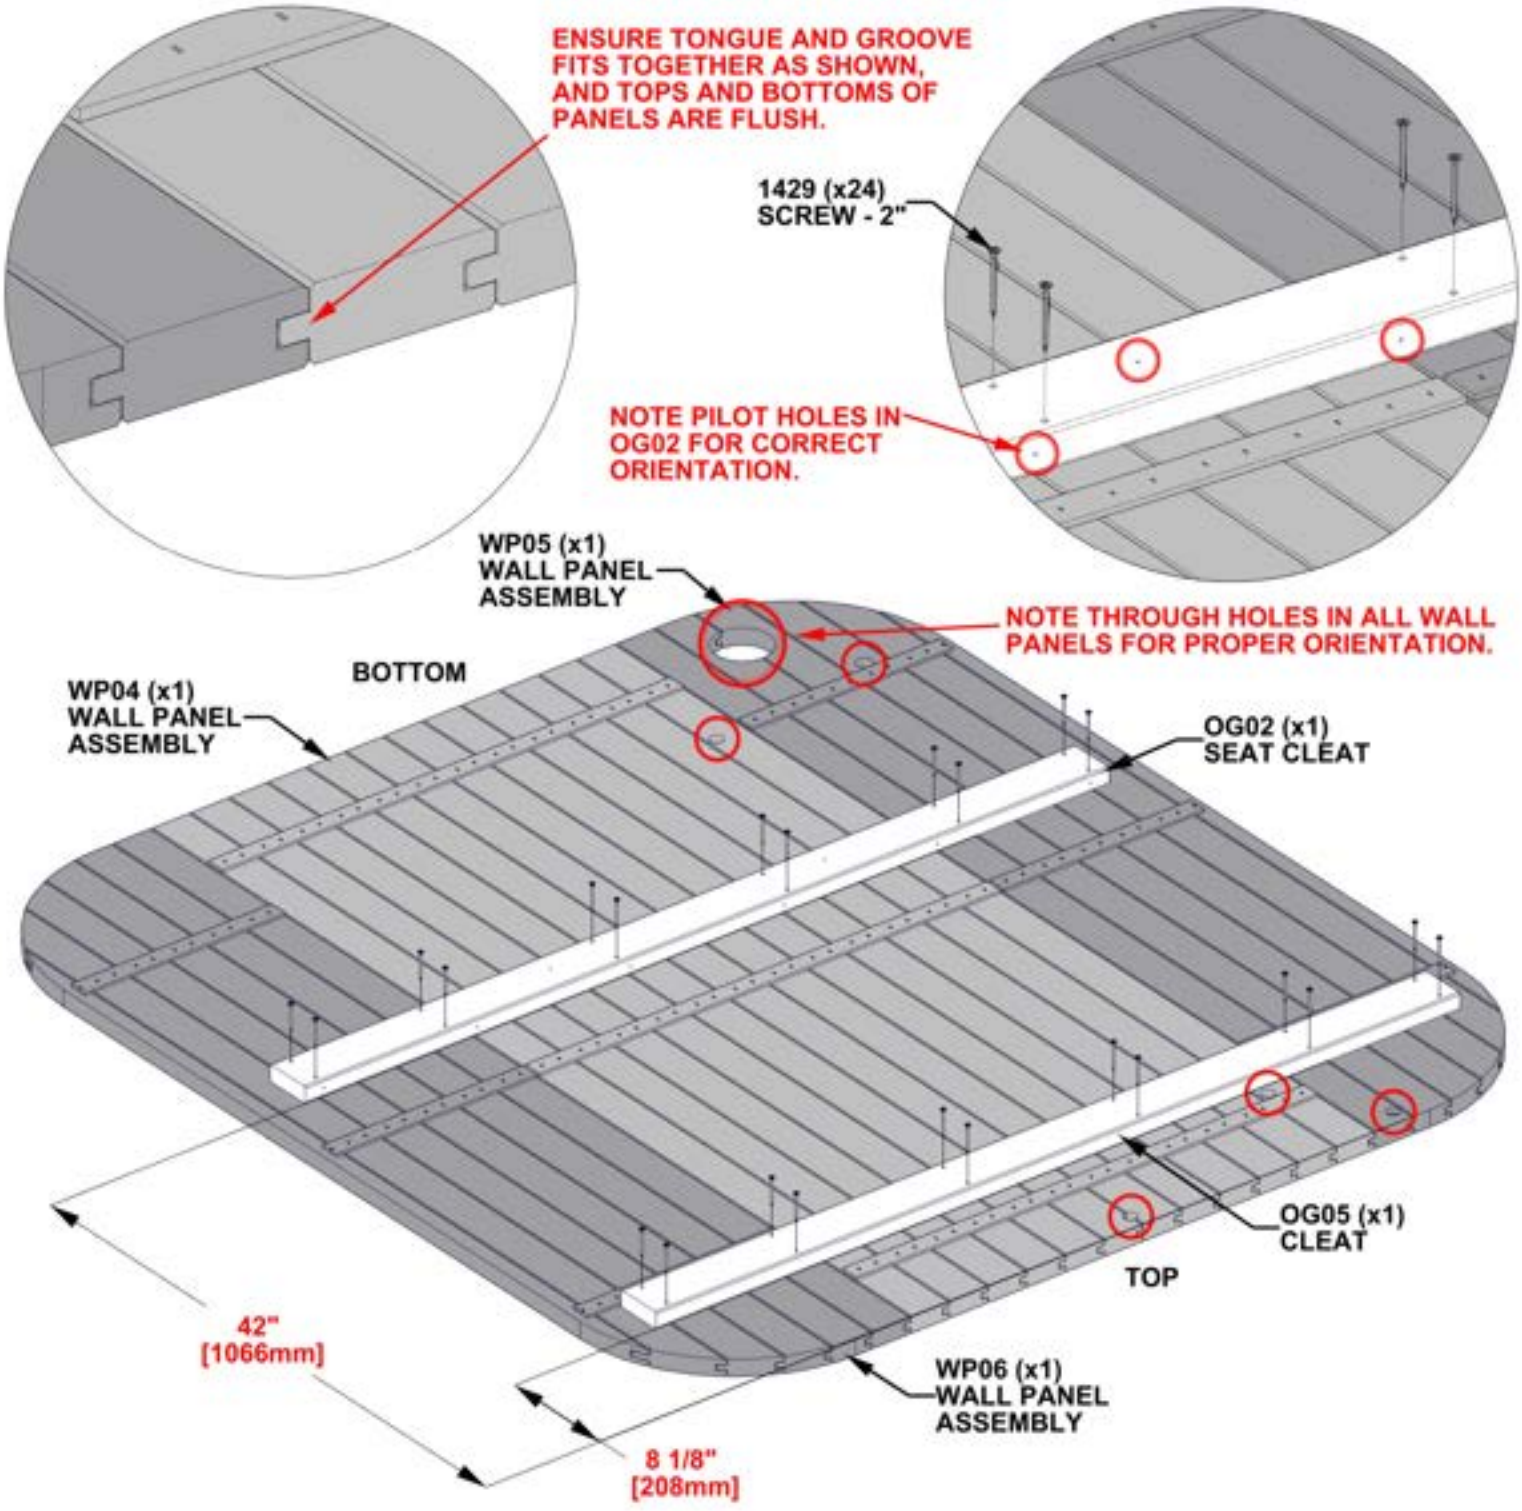

STEP 6 - FRONT WALL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
32	H101429	SCREW TFH 8X2 SS-BLK




OG06 (x2) CLEAT - W4L22031
1 3/16"x3 3/8"x18 1/8" (30x86x460)




OG07 (x2) CLEAT - W4L22039
1 3/16"x3 3/8"x17 11/16" (30x86x450)



WP01 (x1) WALL PANEL ASSEMBLY - W2A04816
2 3/8"X35 5/8"X73 1/8" (60x906x1858)

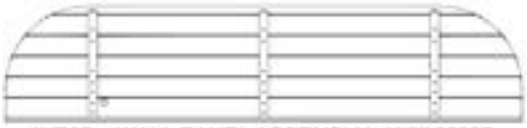


WP02 (x1) WALL PANEL ASSEMBLY - W2A05387
1 3/8"x16 5/16"x73 1/8" (35x415x1858)

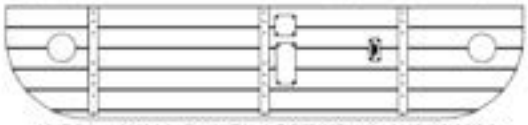

WP03 (x1) WALL PANEL ASSEMBLY - W2A05386
1 3/8"x15 7/8"x73 1/8" (35x403x1858)

- USE DIMENSIONS SHOWN AND ATTACH CLEATS.
- FINISHED PANEL WIDTH SHOULD MEASURE 66 15/16" [1700mm].
- CAUTION: SUPPORT GLASS DOOR AT ALL TIMES TO PREVENT ACCIDENTAL OPENING AND BREAKAGE.

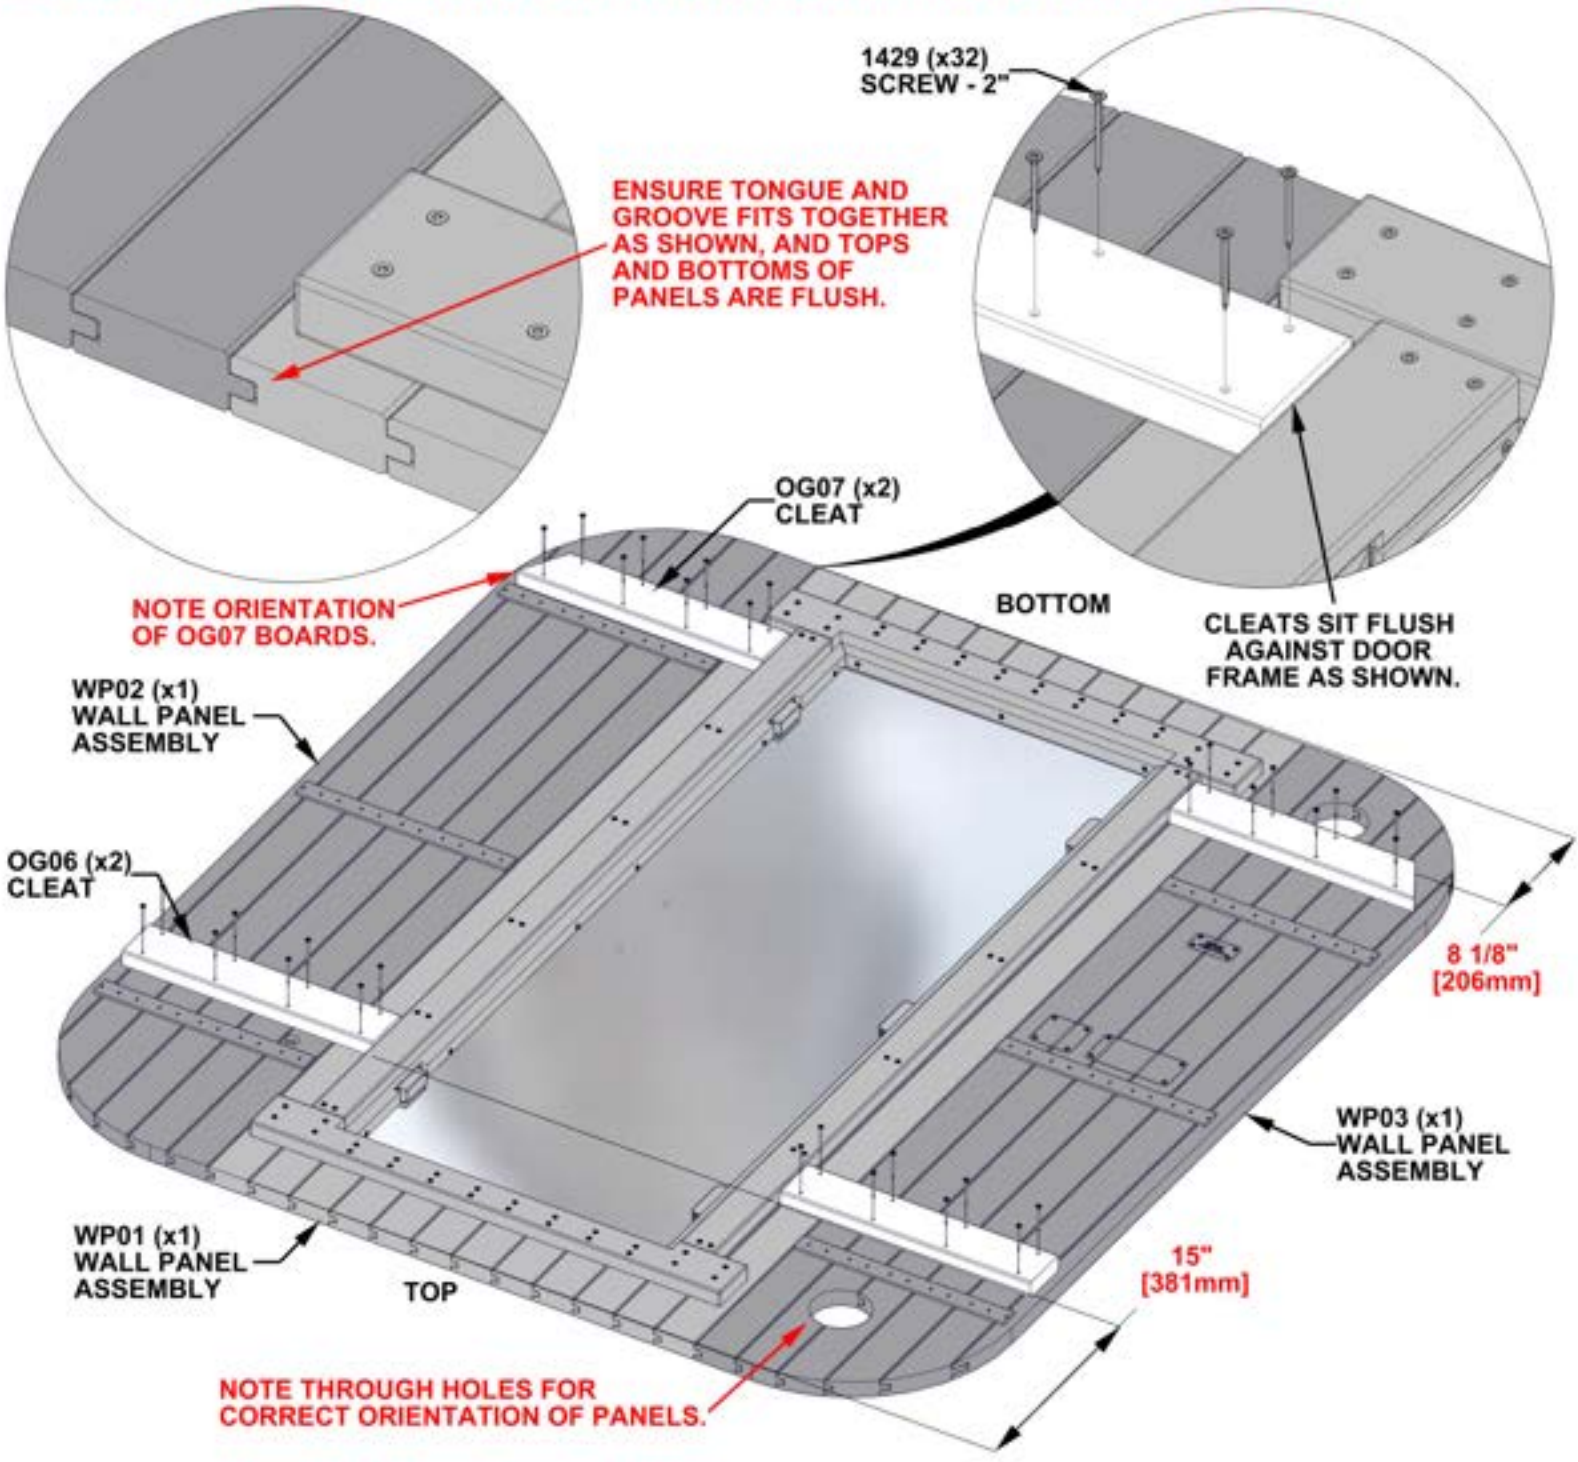


STEP 7 - SAUNA ASSEMBLY



BACK WALL ASSEMBLY - FROM STEP 5

- CAREFULLY LOWER BACK WALL ASSEMBLY INTO THE GROOVES ON THE PERIMETER BOARD/BASE SUPPORT ASSEMBLED IN STEP 4.
- HAVE A SECOND PERSON HOLD THE BACK WALL TO KEEP IT STEADY DURING THE NEXT FEW STEPS.
- WHEN LIFTING THE WALL ASSEMBLY, LIFT BY THE TOP AND BOTTOM NOT THE SIDES.

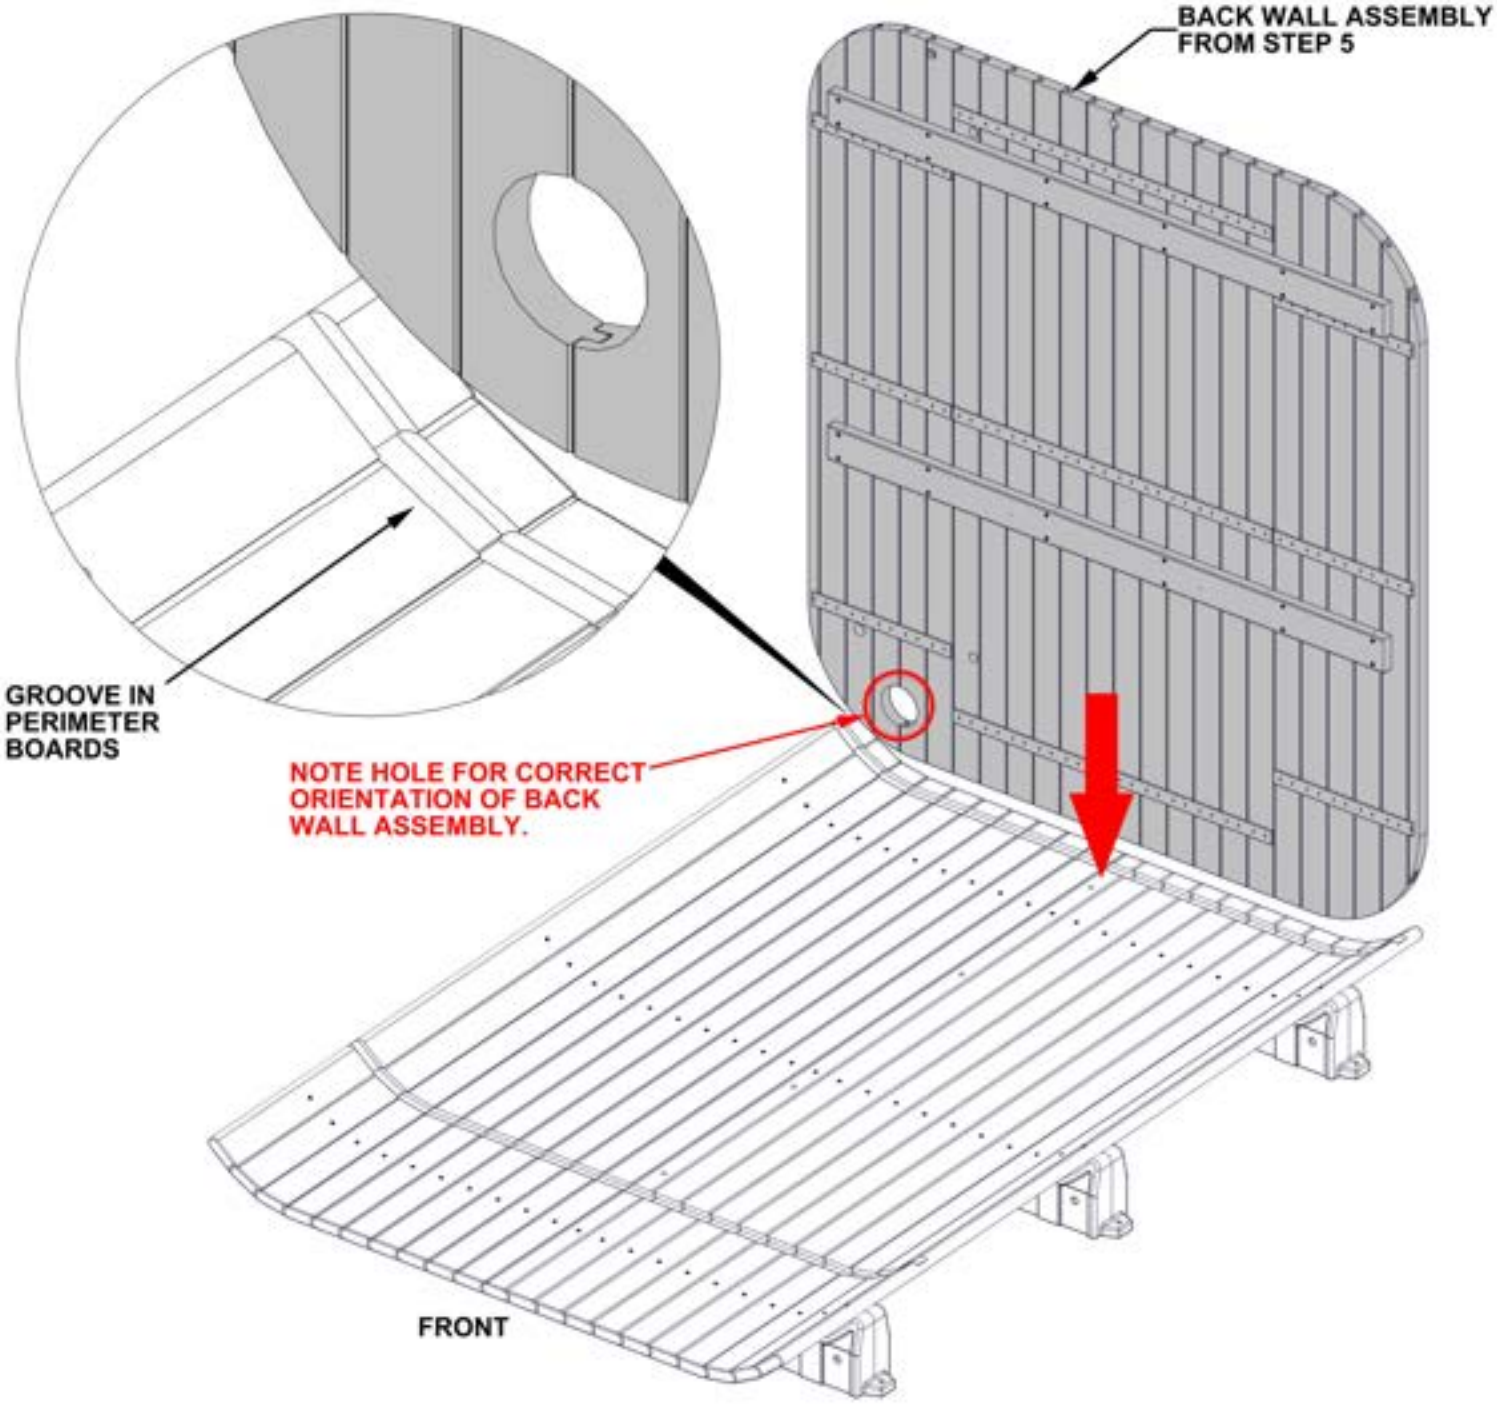

STEP 8 - SAUNA ASSEMBLY




FRONT WALL ASSEMBLY - FROM STEP 6




OG11 PERIMETER BOARD - W4L21938
(x1) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)

- CAREFULLY LOWER FRONT WALL ASSEMBLY INTO THE GROOVES ON THE PERIMETER BOARD/BASE SUPPORT ASSEMBLED IN STEP 4.
- POSITION THE PERIMETER BOARD ON THE TOP OF THE WALL ASSEMBLIES TO HOLD THE WALLS IN PLACE.
- WHEN LIFTING WALL ASSEMBLY, LIFT BY TOP AND BOTTOM NOT THE SIDES.
- CAUTION: SUPPORT GLASS DOOR AT ALL TIMES TO PREVENT ACCIDENTAL OPENING AND BREAKAGE.

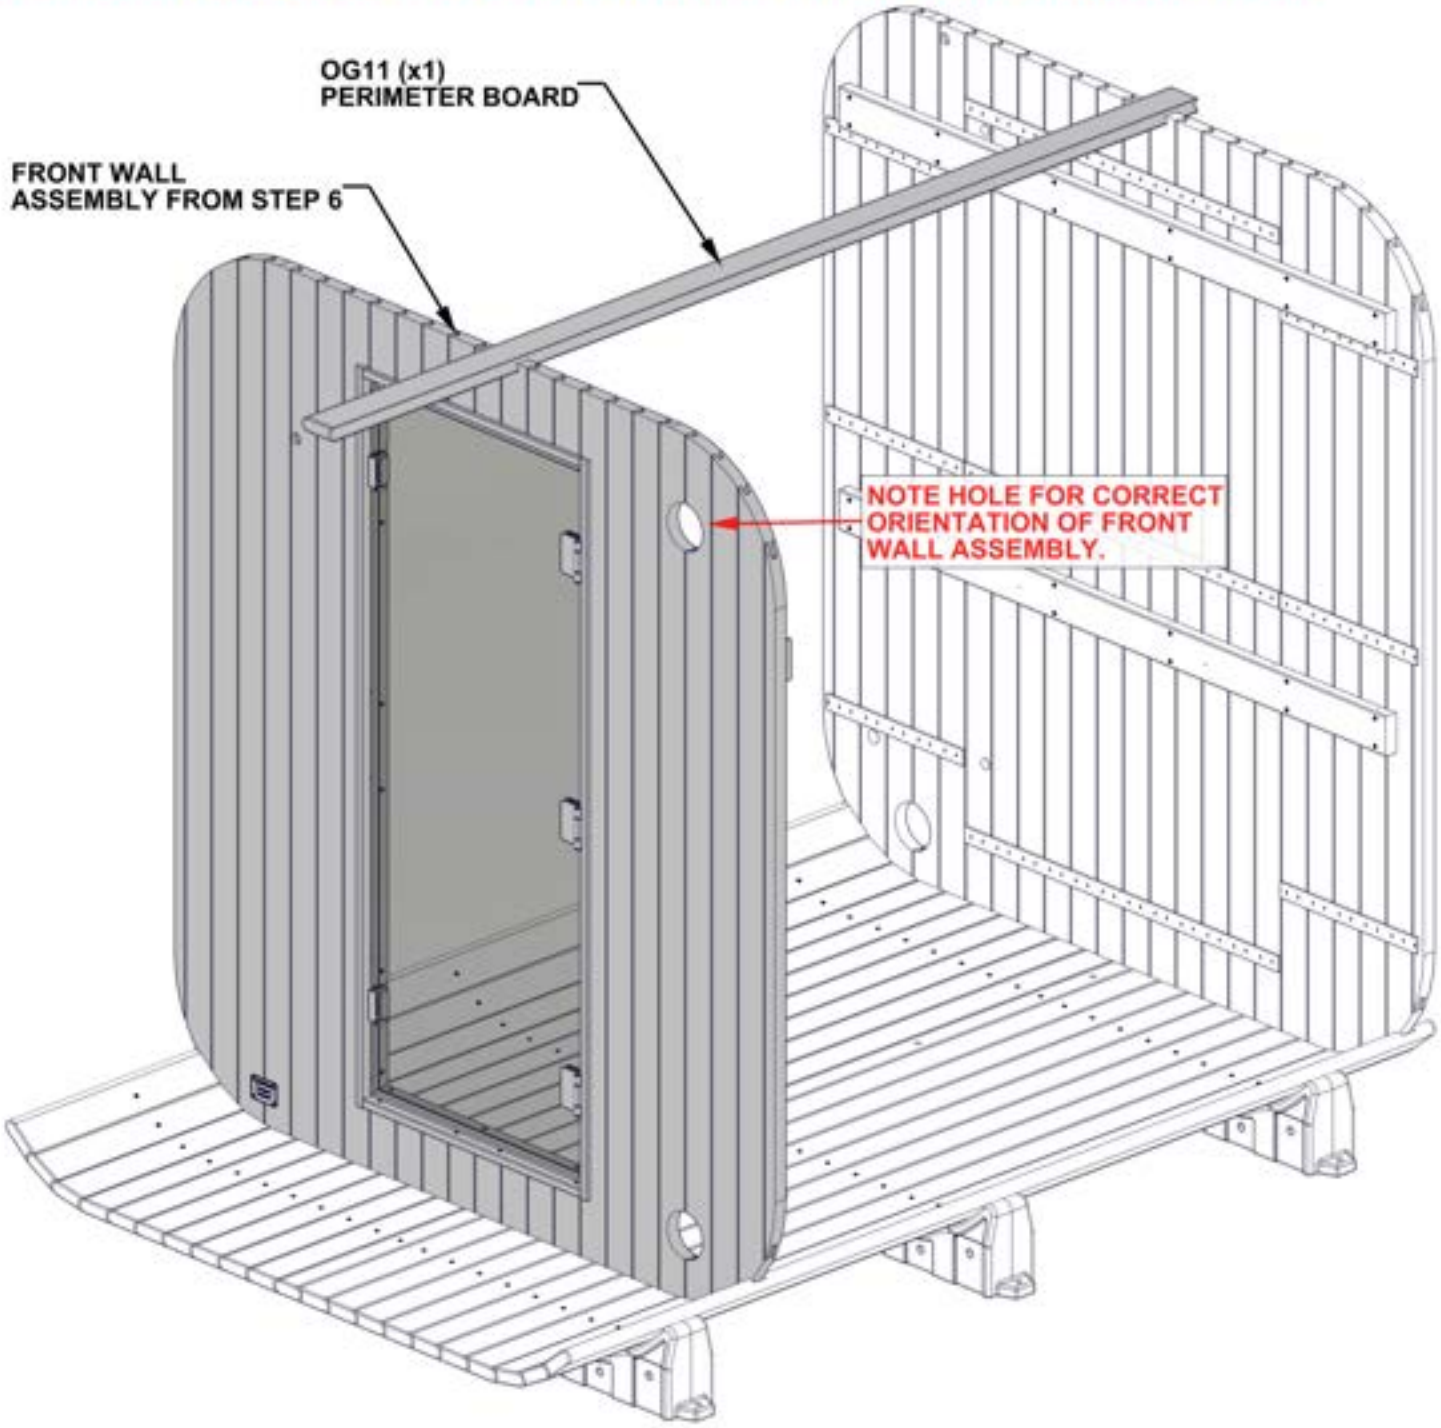

STEP 9 - SAUNA ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
12	H101428	SCREW TFH 8X1 3/4 SS-BLK

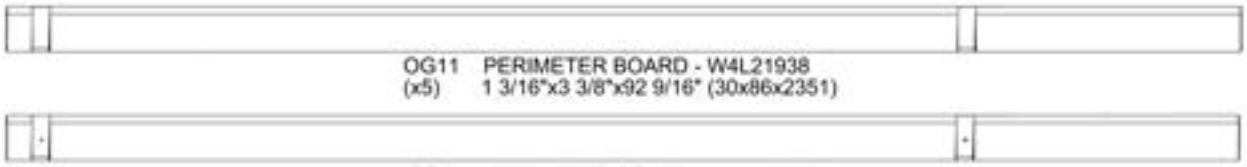

OG11 (x5) PERIMETER BOARD - W4L21938
1 3/16"x3 3/8"x92 9/16" (30x86x2351)


OG16 (x6) PERIMETER BOARD - W4L23557
1 3/16"x3 3/8"x92 9/16" (30x86x2351)

- ALIGN GROOVE IN PERIMETER BOARDS WITH BOTH FRONT WALL AND BACK WALL ASSEMBLIES.
- STARTING WITH AN OG16 BOARD, WORK UPWARDS STACKING BOARDS IN THE ORDER SHOWN.
- ATTACH EACH OG16 WITH SCREWS BEFORE THE NEXT BOARD IS INSTALLED.

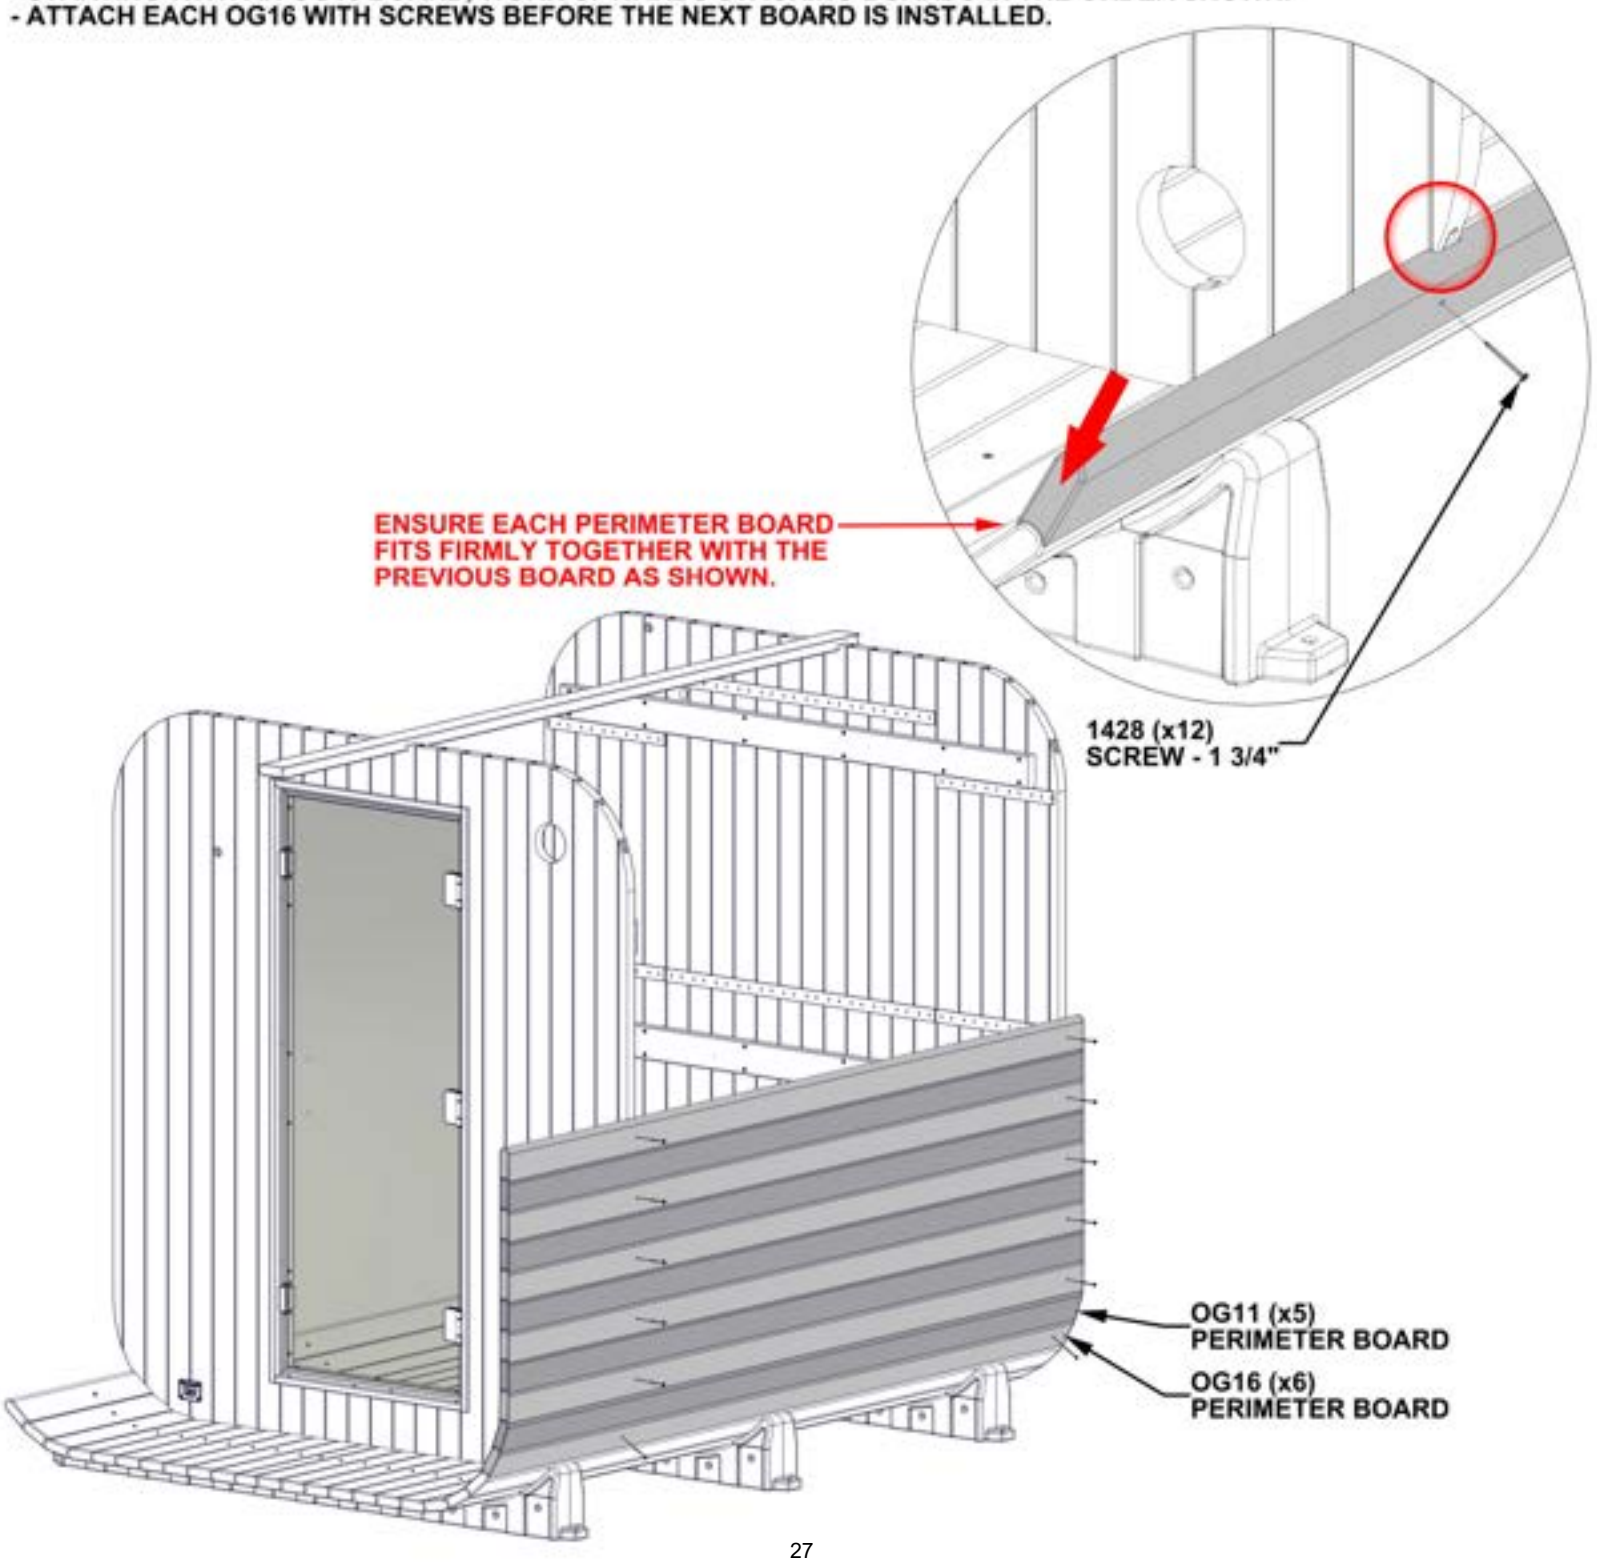

STEP 10 - SAUNA ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
12	H101428	SCREW TFH 8X1 3/4 SS-BLK

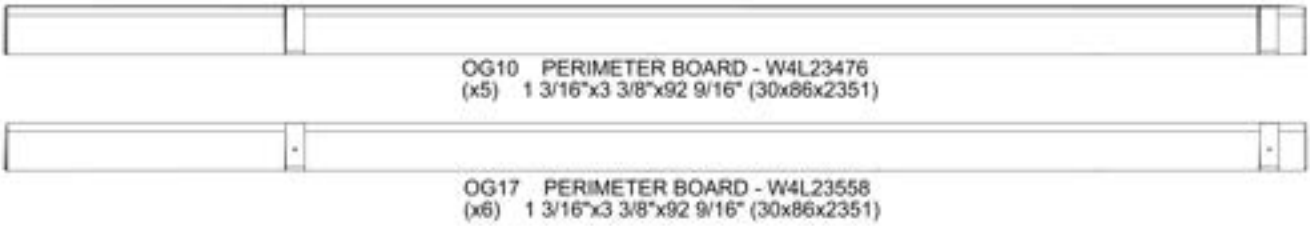

OG10 PERIMETER BOARD - W4L23476
(x5) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)

OG17 PERIMETER BOARD - W4L23558
(x6) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)


- ALIGN GROOVE IN PERIMETER BOARDS WITH BOTH FRONT WALL AND BACK WALL ASSEMBLIES.
- STARTING WITH AN OG17 BOARD, WORK UPWARDS STACKING BOARDS IN THE ORDER SHOWN.
- ATTACH EACH OG17 WITH SCREWS BEFORE THE NEXT BOARD IS INSTALLED.

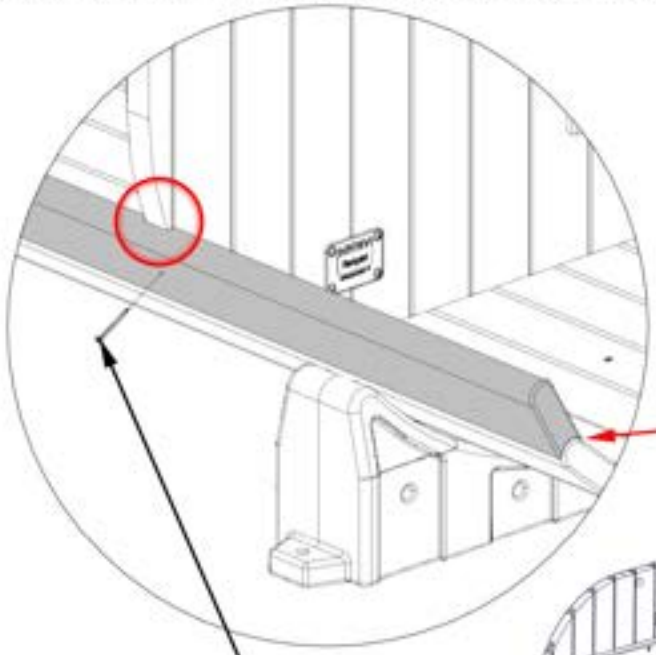

ENSURE EACH PERIMETER BOARD FITS FIRMLY TOGETHER WITH THE PREVIOUS BOARD AS SHOWN.

1428 (x12)
SCREW - 1 3/4"

ONCE PERIMETER BOARDS ARE INSTALLED, TOP PERIMETER BOARD MAY BE REMOVED AND SET TO THE SIDE FOR LATER STEPS.

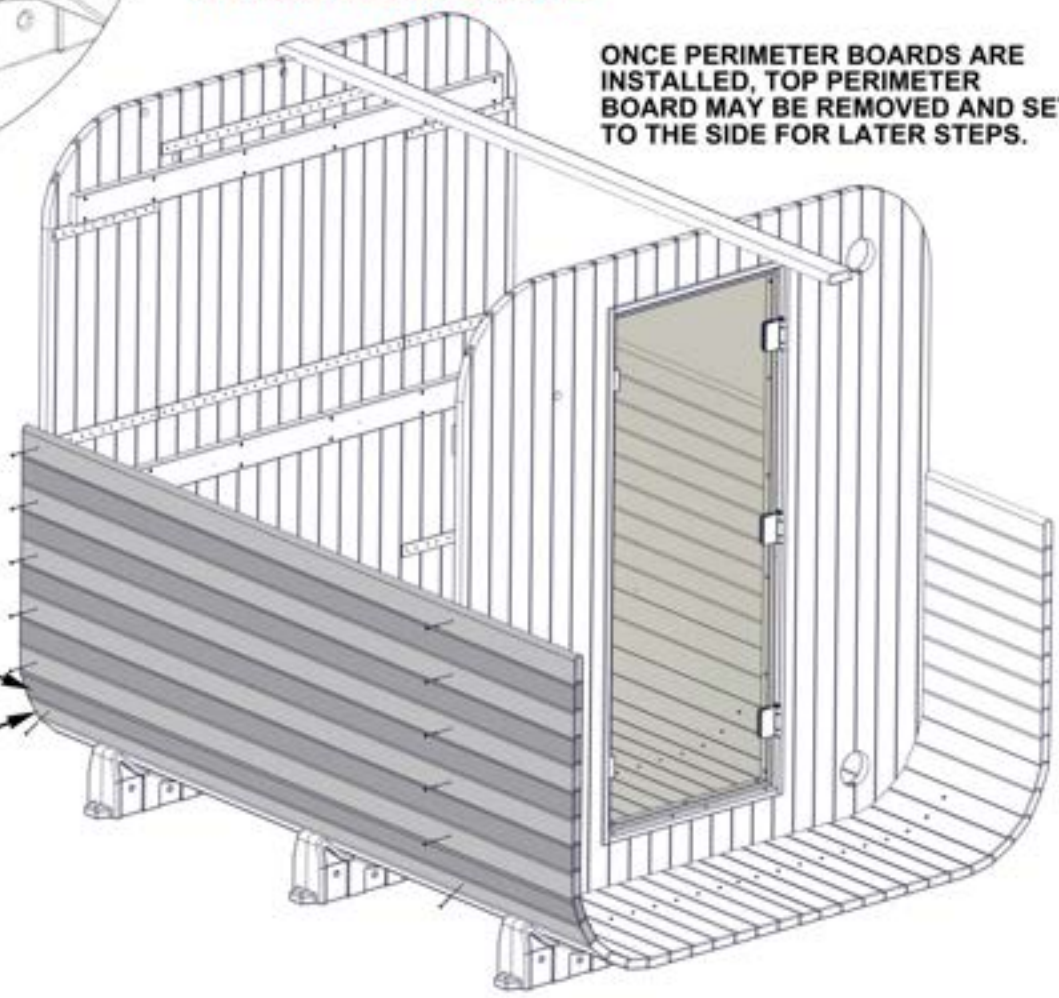

OG10 (x5)
PERIMETER BOARD


OG17 (x6)
PERIMETER BOARD

STEP 11 - HANDLE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H101402	SCREW TFH 1/4-20 X 1 5/8 SS
4	H101403	POLY WASHER




AM01 (x1) DOOR HANDLE - W4L21937
2 1/4"x3"x10 3/16" (57x76x258)

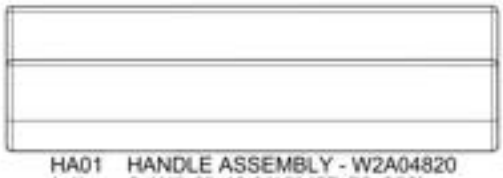

HA01 (x1) HANDLE ASSEMBLY - W2A04820
2 1/4"x3"x10 3/16" (57x76x258)

- ATTACH DOOR HANDLES AS SHOWN.
- DO NOT OVERTIGHTEN.

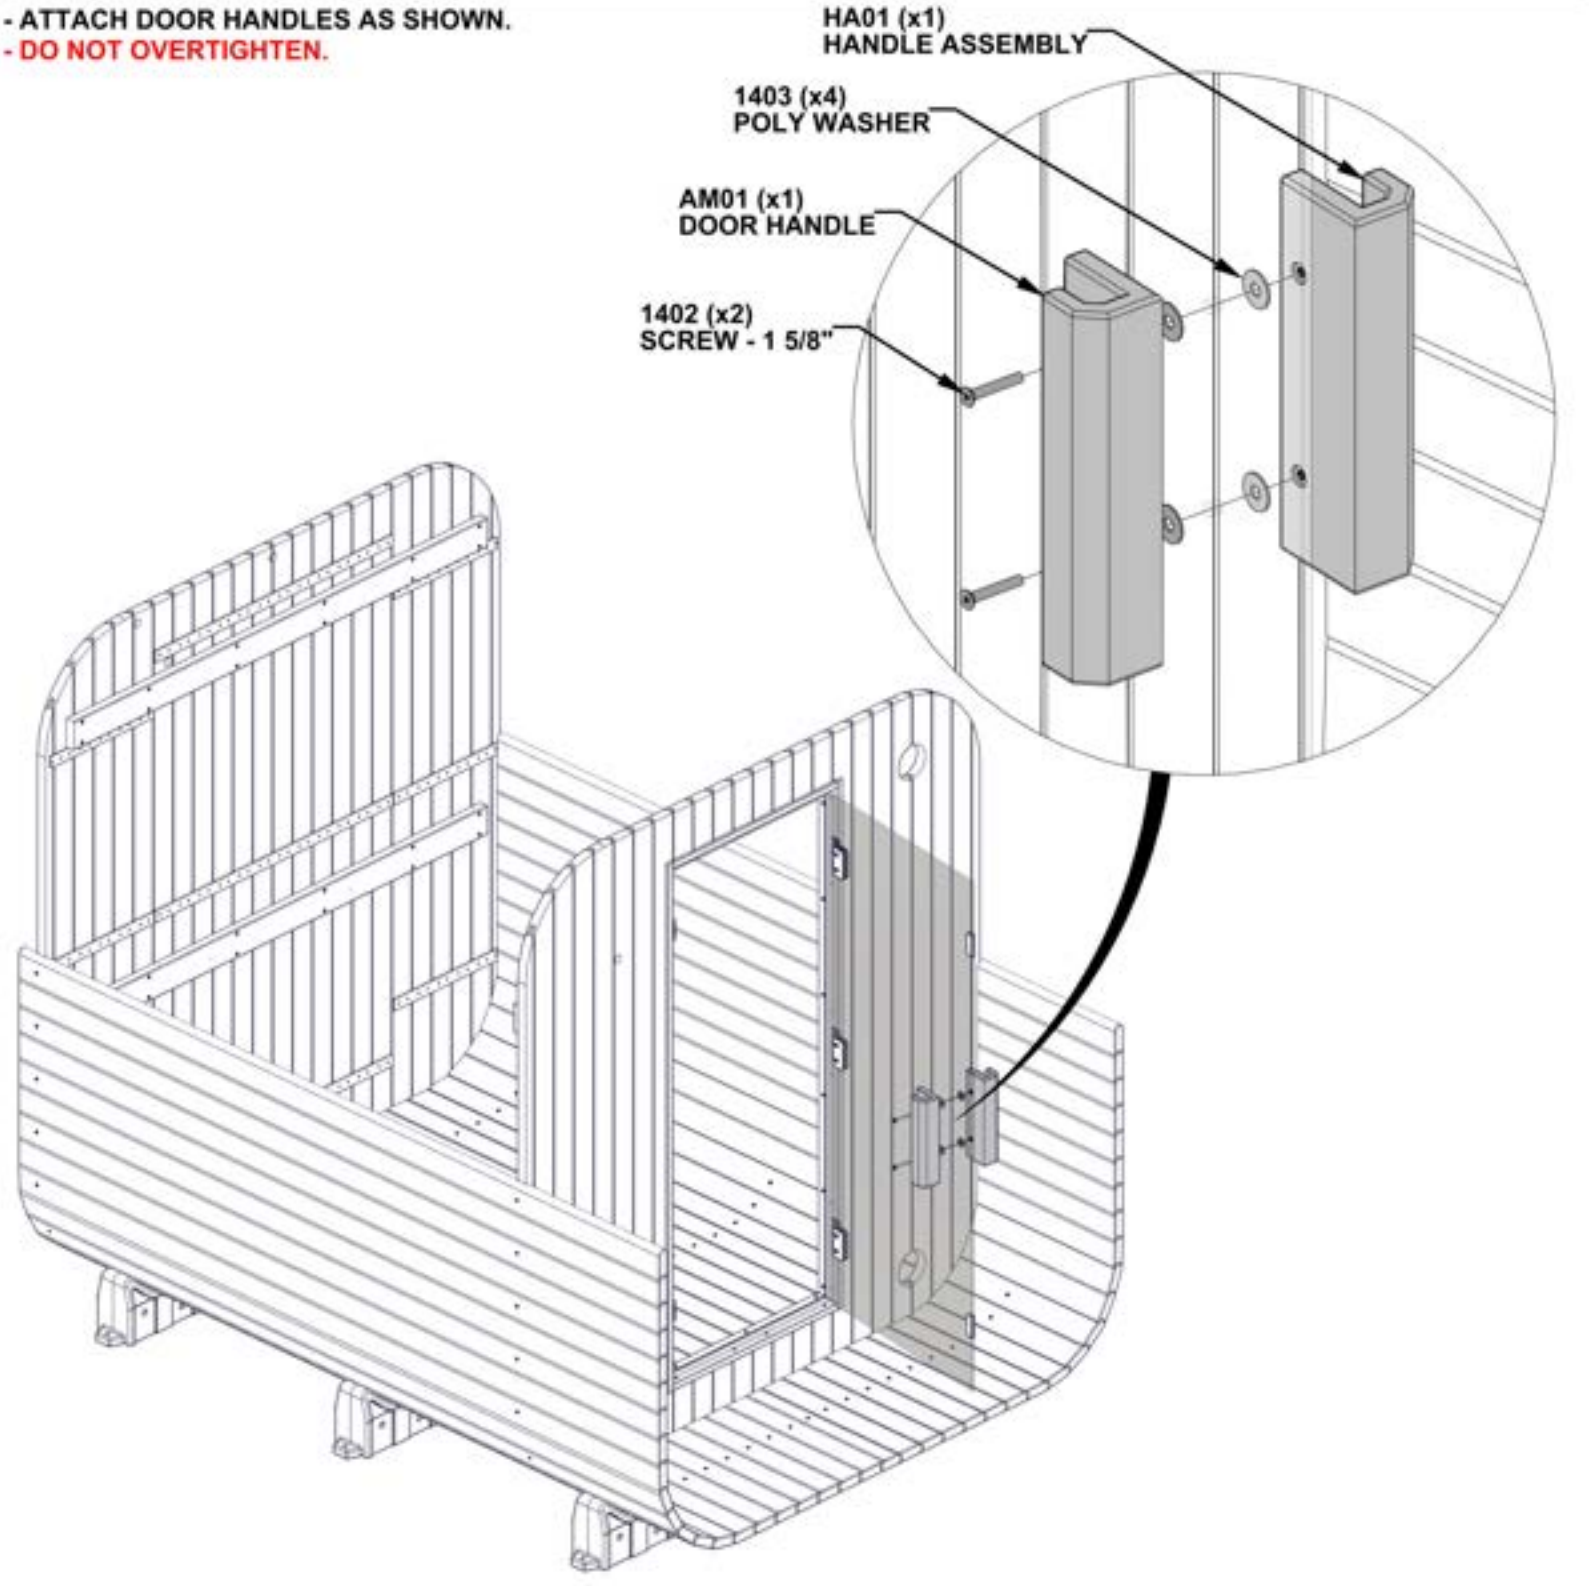


STEP 12 - FLOOR CLEAT

QTY	PART NUMBER	DESCRIPTION
15	H101429	SCREW TFH 8X2 SS-BLK




OO05 FLOOR CLEAT - W4L22600
(x1) 1 3/16"x1 3/16"x45 1/4" (30x30x1150)

- CENTER FLOOR CLEAT FROM SIDE TO SIDE AND ATTACH USING MEASUREMENT SHOWN.
- CHECK MEASUREMENT AT BOTH ENDS OF CLEAT TO ENSURE IT IS PARALLEL WITH THE BACK WALL.

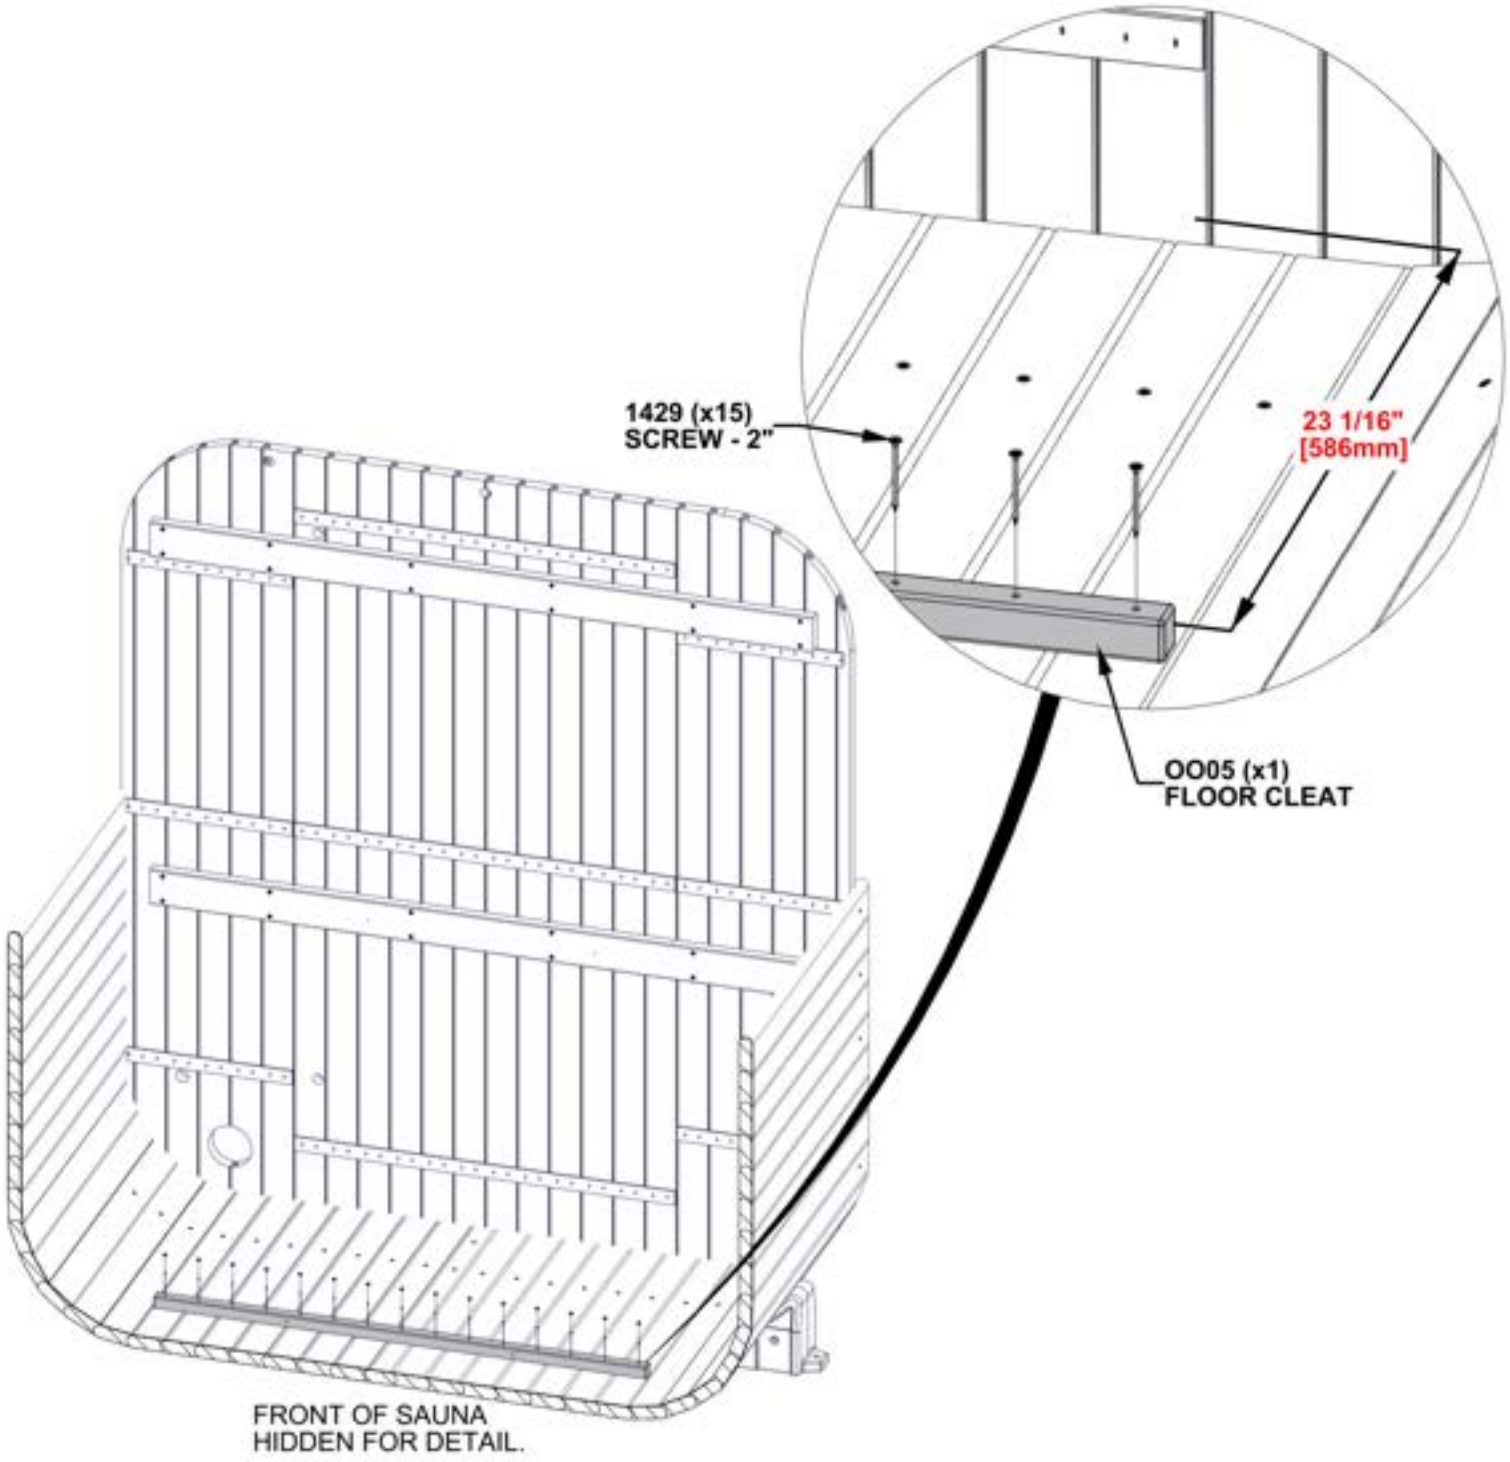


STEP 13 - FAN ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101438	SCREW TWH 8x3/4 SS-BLK

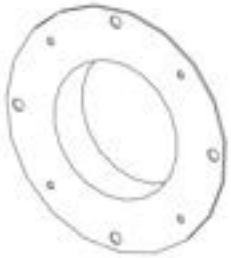

A4M07417 SAUNA FAN BRACKET
(x1)

- CENTER BRACKET IN WALL PANEL HOLE AND ATTACH AS SHOWN.
- ENSURE SCREWS ARE INSERTED INTO SMALLER HOLES IN BRACKET.

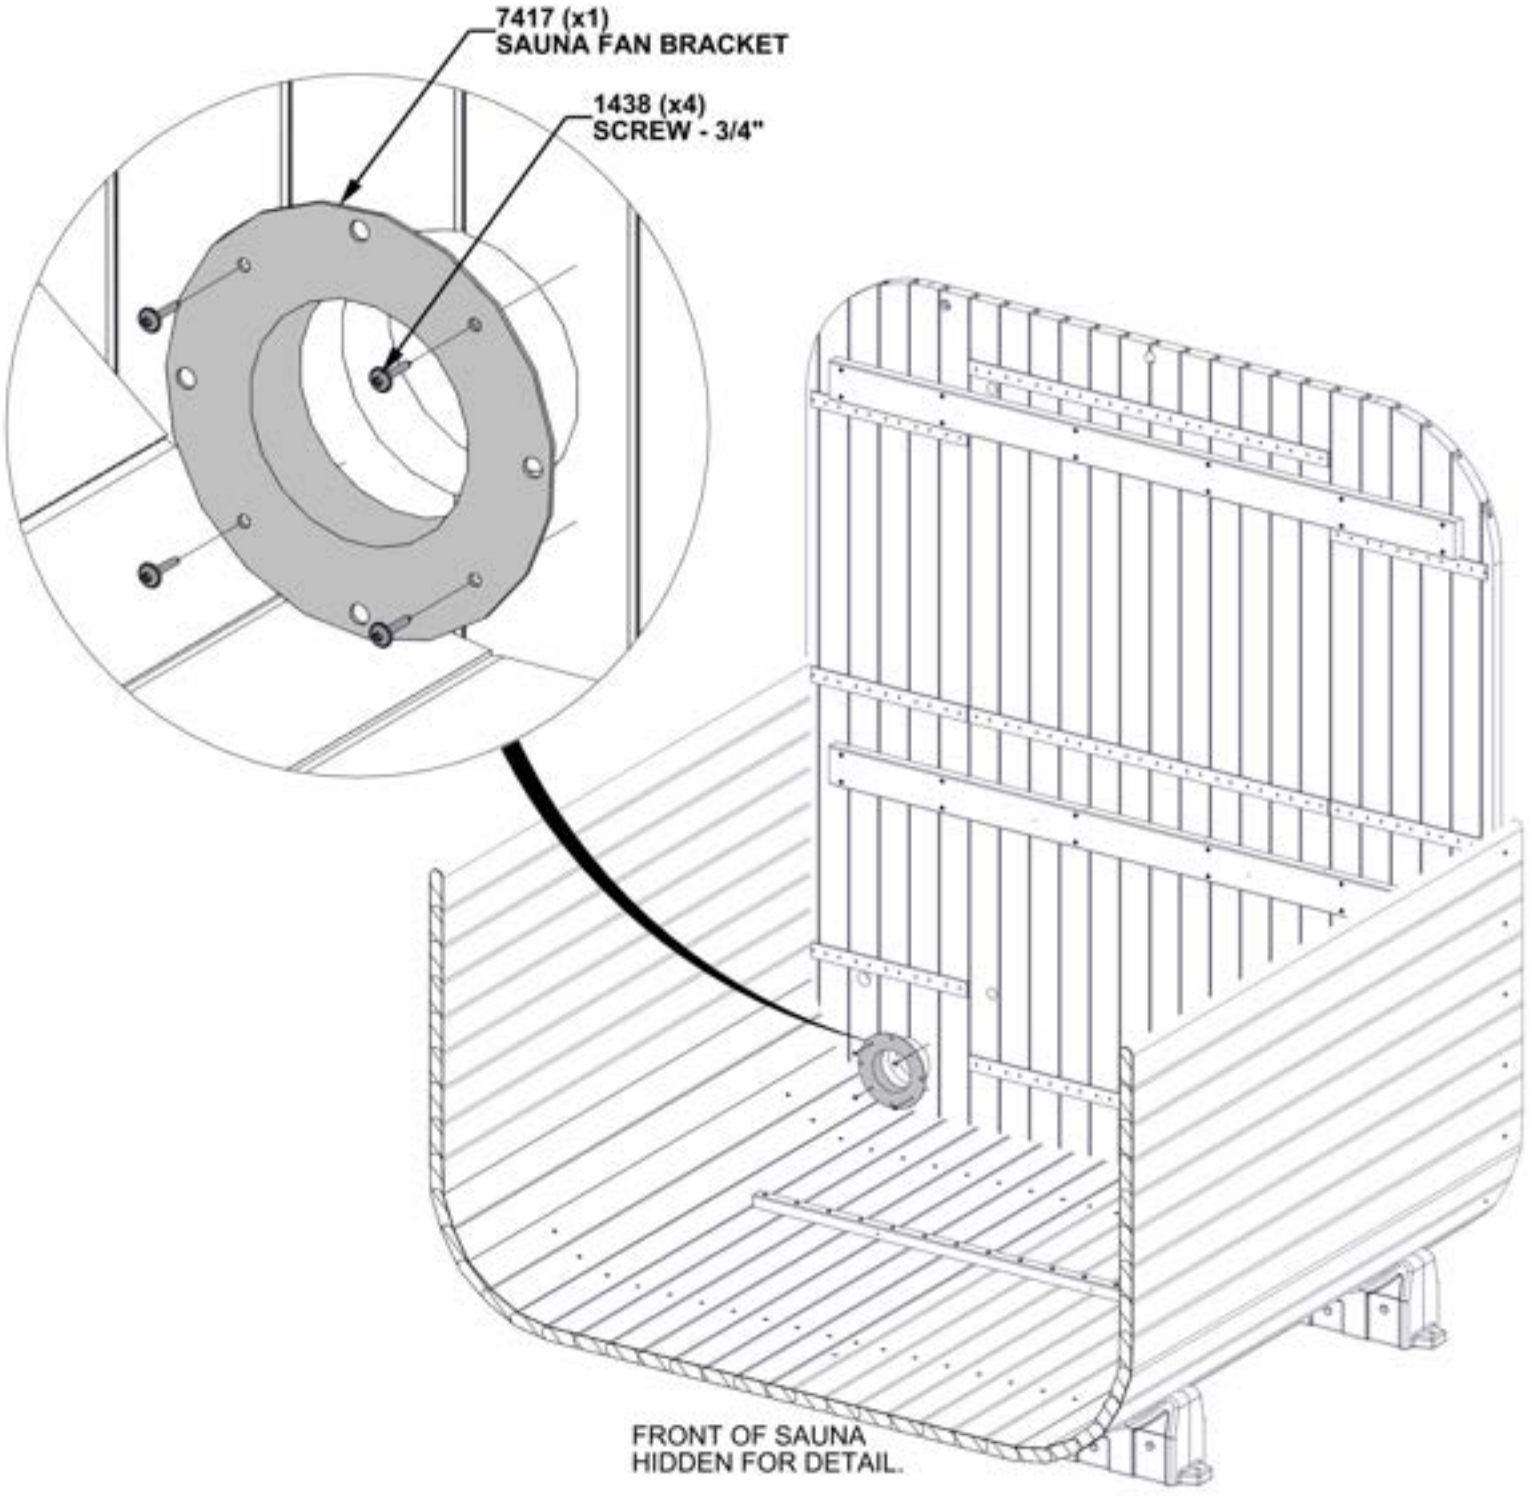


STEP 14 - FAN ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101446	SCREW TWH 8x2 1/4 SS-BLK



A4M07272 SAUNA FAN
(x1)

- ALIGN HOLES IN SAUNA FAN WITH LARGER HOLES IN BRACKET AND ATTACH AS SHOWN.
- FOR SAFETY, ATTACH METAL GUARD AS SHOWN.
- RUN WIRING FOR SAUNA FAN THROUGH INDICATED HOLE IN WALL ASSEMBLY.

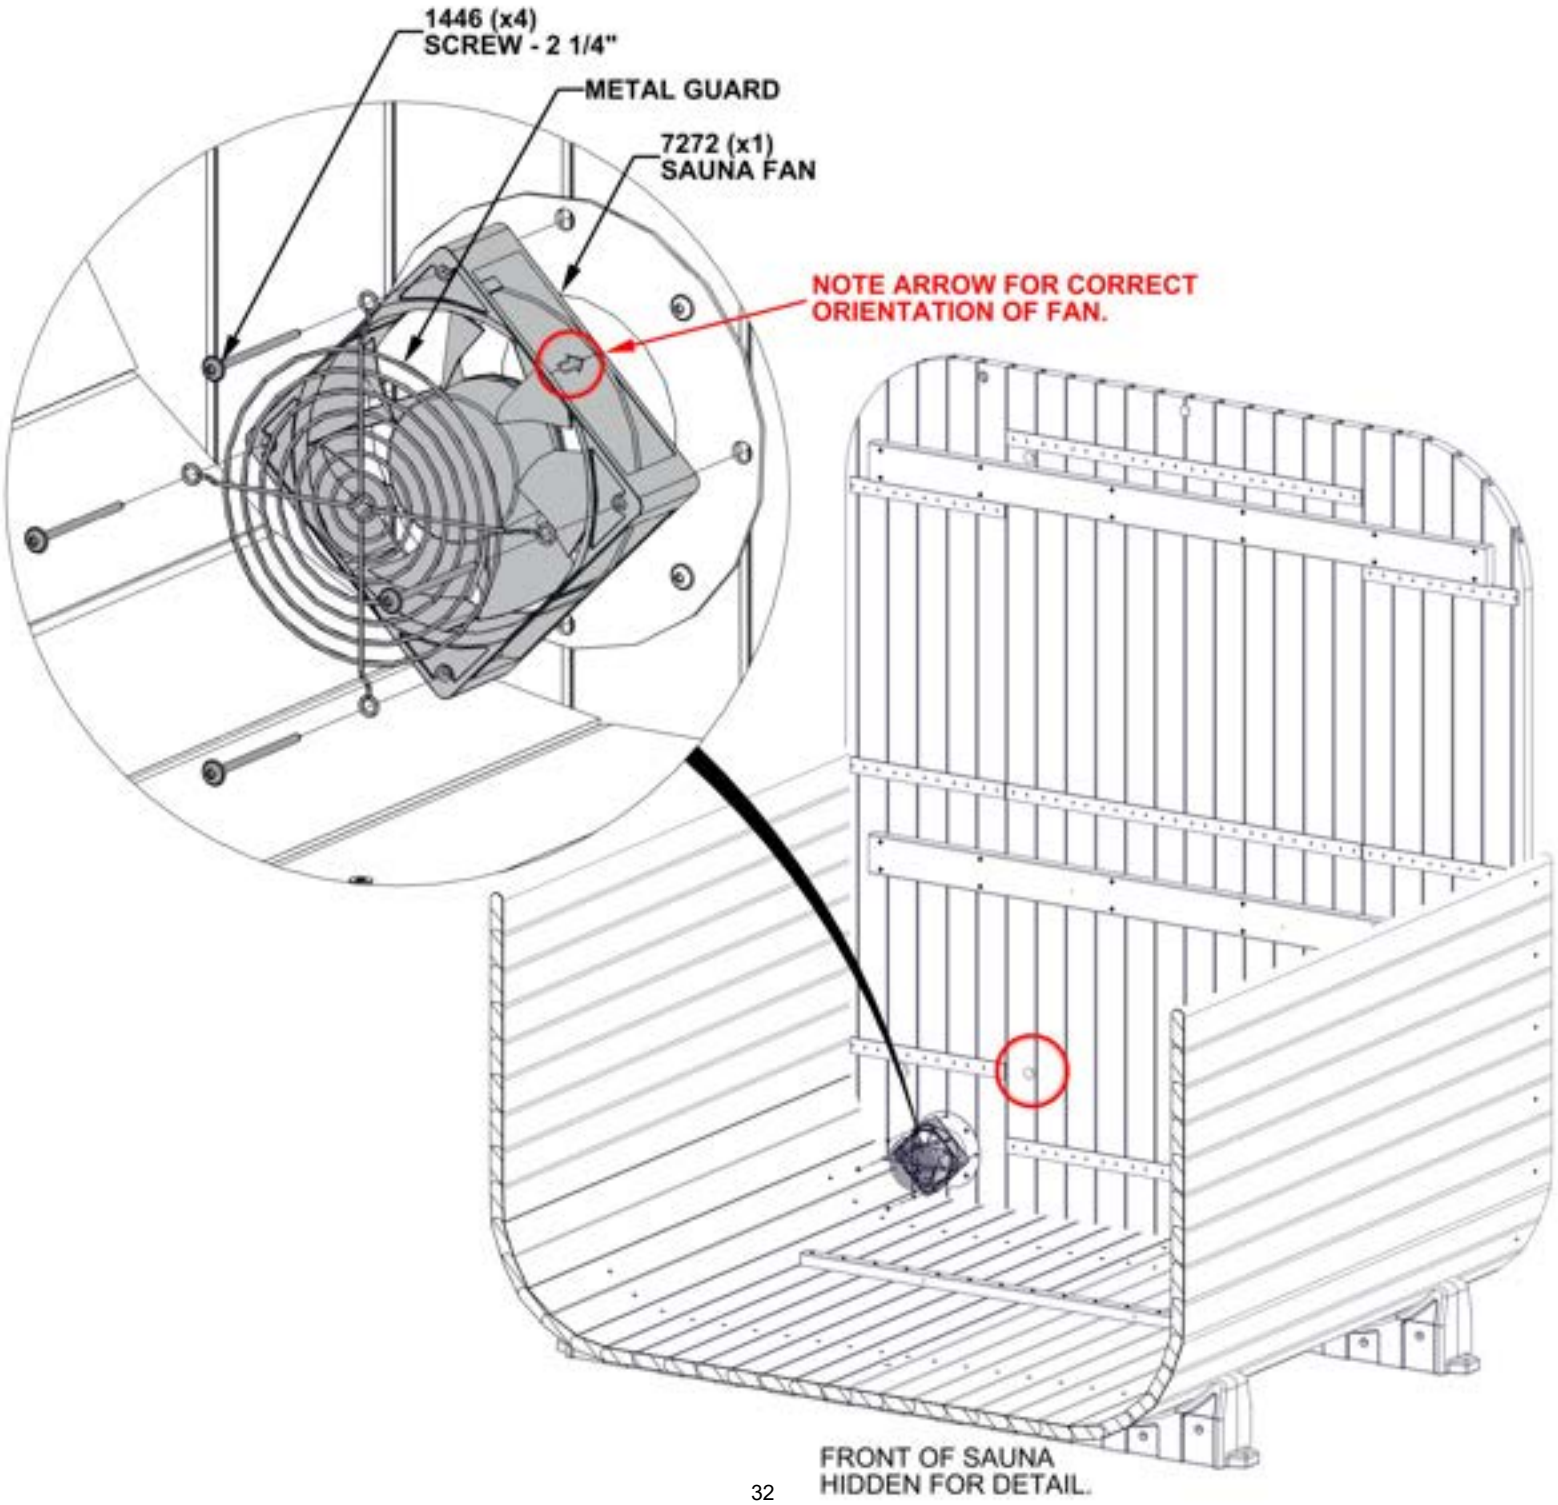


STEP 15 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H101429	SCREW TFH 8X2 SS-BLK



OG04 (x1) SEAT CLEAT - W4L21951
1 3/16"x3 3/8"x23 1/16" (30x86x586)

- NOTE PILOT HOLES IN SEAT CLEAT FOR CORRECT ORIENTATION.
- FLUSH END OF SEAT CLEAT AGAINST BACK WALL.
- ENSURE TOP OF SEAT CLEAT IS FLUSH WITH CLEAT ON BACK WALL AND LEVEL.
- ATTACH BOARD AS SHOWN.

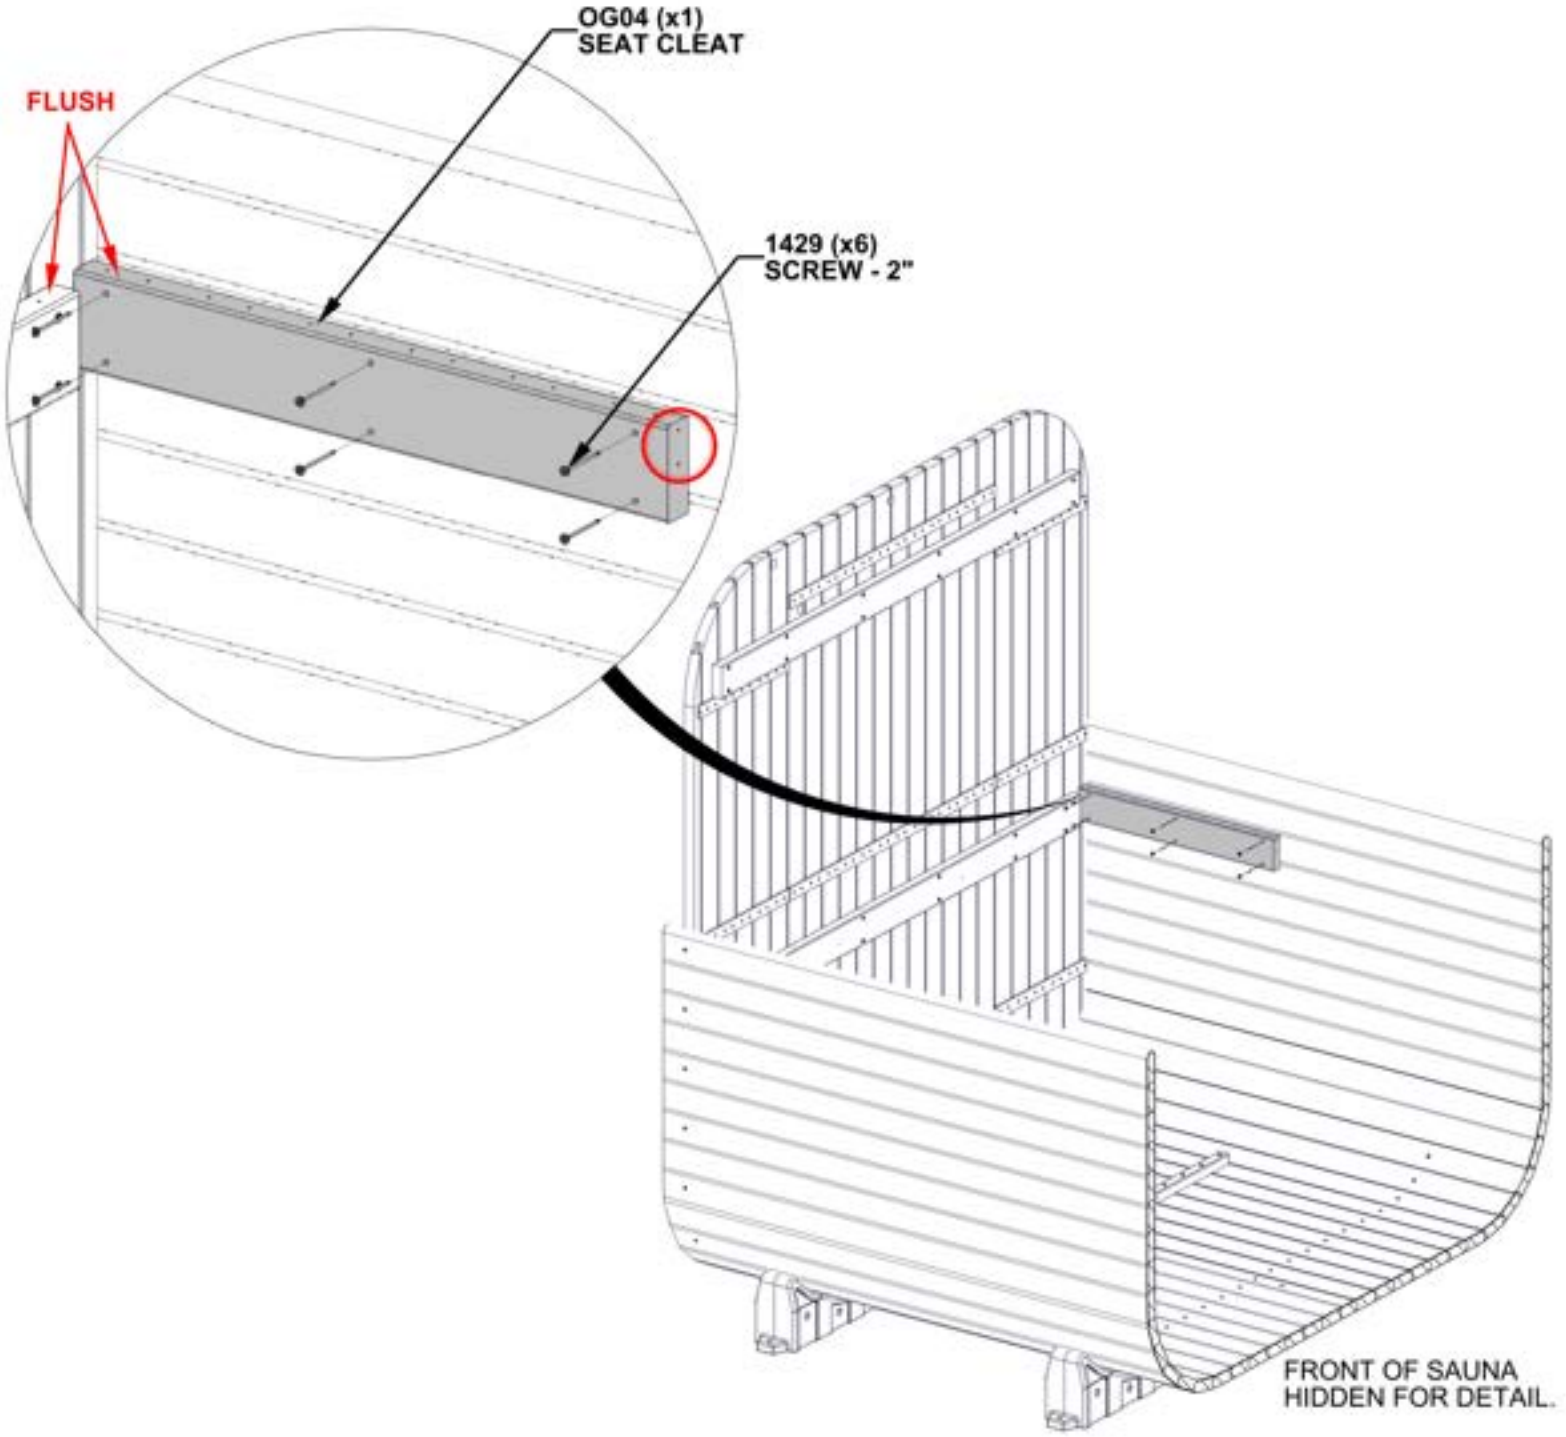


STEP 16 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H101429	SCREW TFH 8X2 SS-BLK




OG04 (x1) SEAT CLEAT - W4L21951
1 3/16"x3 3/8"x23 1/16" (30x86x586)

- NOTE PILOT HOLES IN SEAT CLEAT FOR CORRECT ORIENTATION.
- FLUSH END OF SEAT CLEAT AGAINST BACK WALL.
- ENSURE TOP OF SEAT CLEAT IS FLUSH WITH CLEAT ON BACK WALL AND LEVEL.
- ATTACH BOARD AS SHOWN.

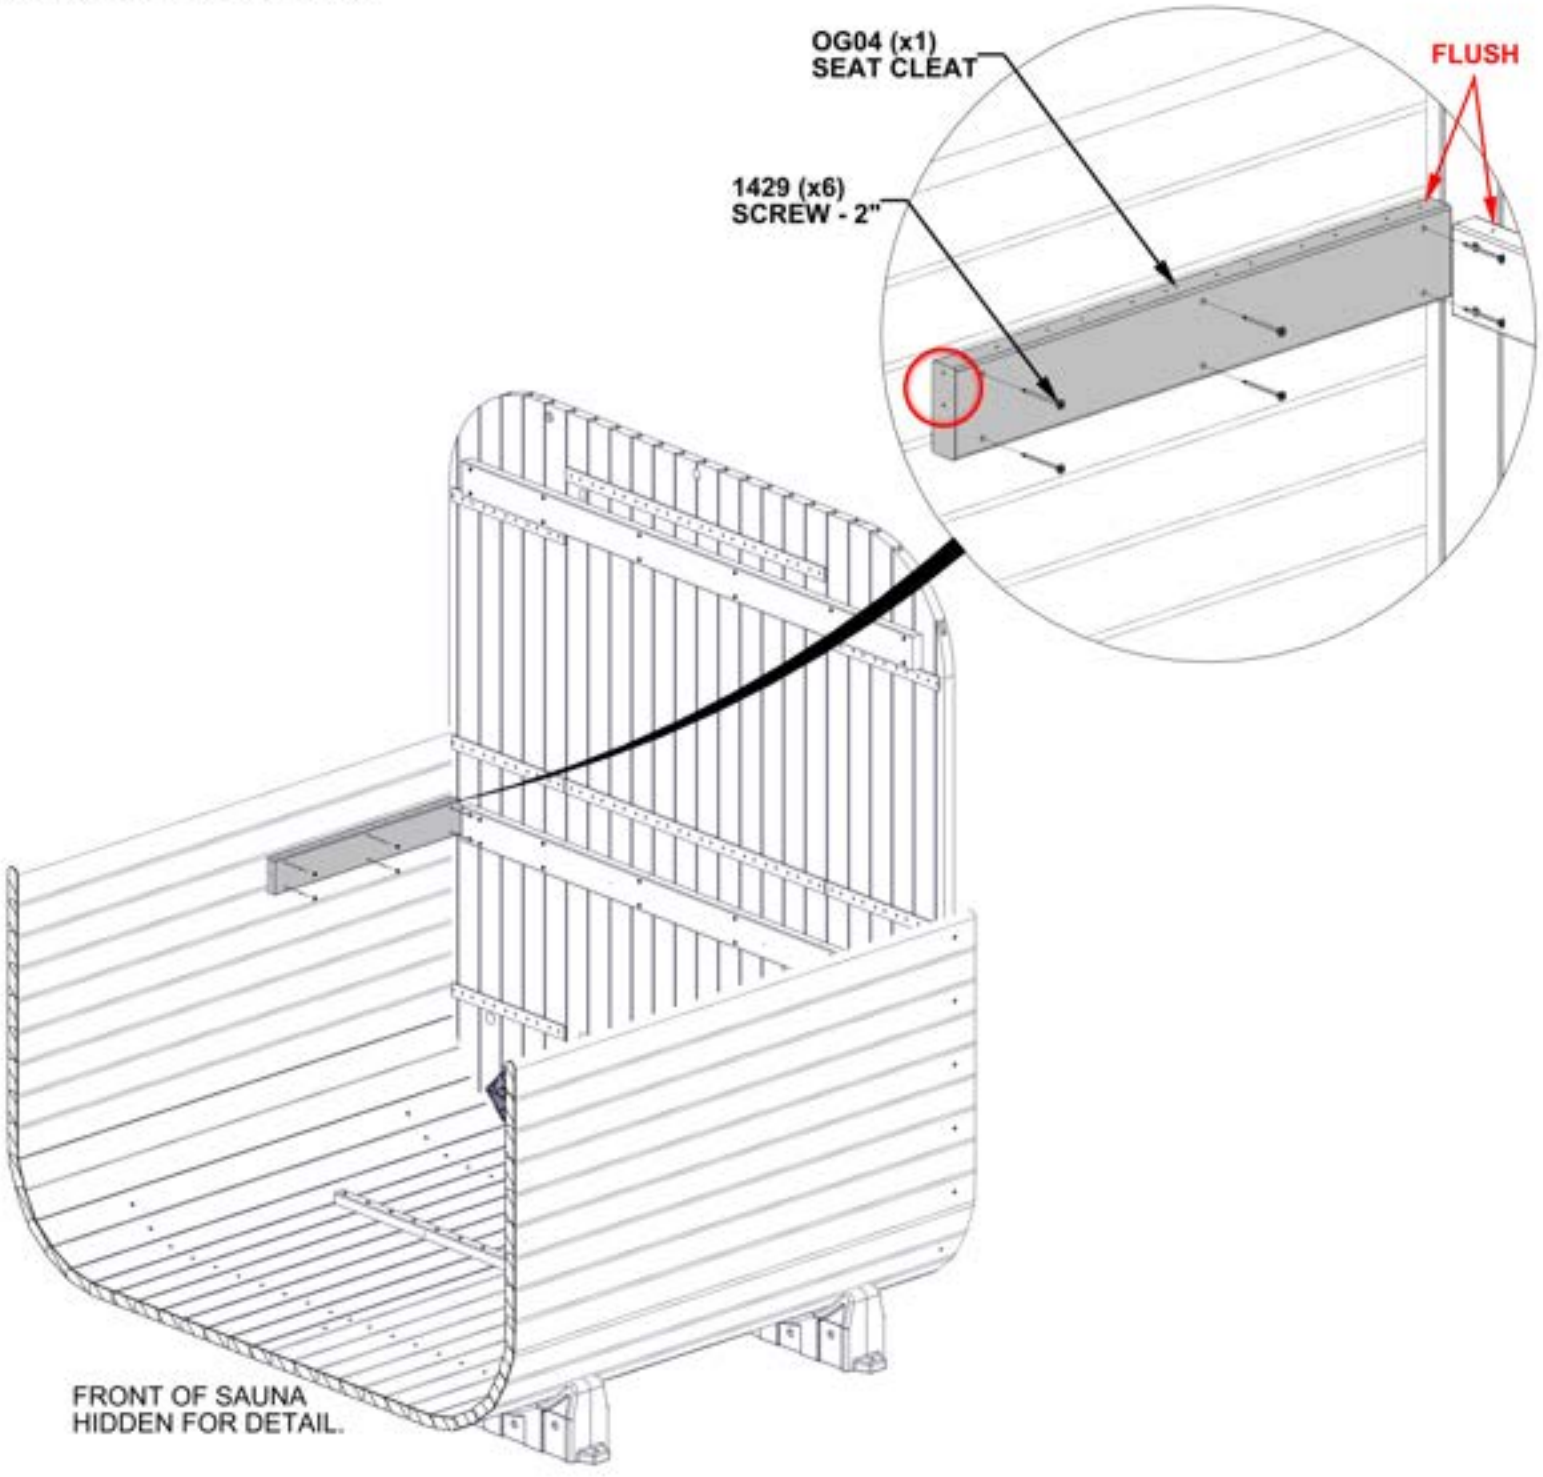

STEP 17 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101431	SCREW TFH 8X2 1/2 SS-BLK
8	H101443	SCREW TWH 8x1 1/2 SS-BLK

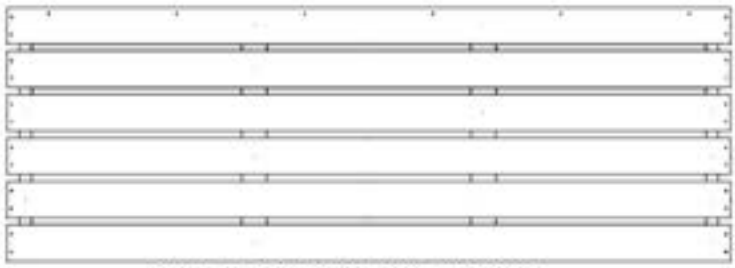

BA01 (x1) BENCH ASSEMBLY - W2A04821
1 15/16"x23 1/16"x65 3/4" (50x586x1670)




OR01 (x2) SEAT UPRIGHT - W4L21945
1 3/16"x2 3/8"x30 11/16" (30x60x780)



OR02 (x2) ANGLE BRACE - W4L21946
1 3/16"x2 3/8"x10 7/8" (30x60x276)


- ALIGN PILOT HOLES AND ATTACH SEAT UPRIGHT TO BENCH ASSEMBLY AS SHOWN.
- THEN ALIGN PILOT HOLES IN ANGLE BRACE WITH PILOT HOLES IN SEAT UPRIGHT AND BENCH ASSEMBLY AND ATTACH.

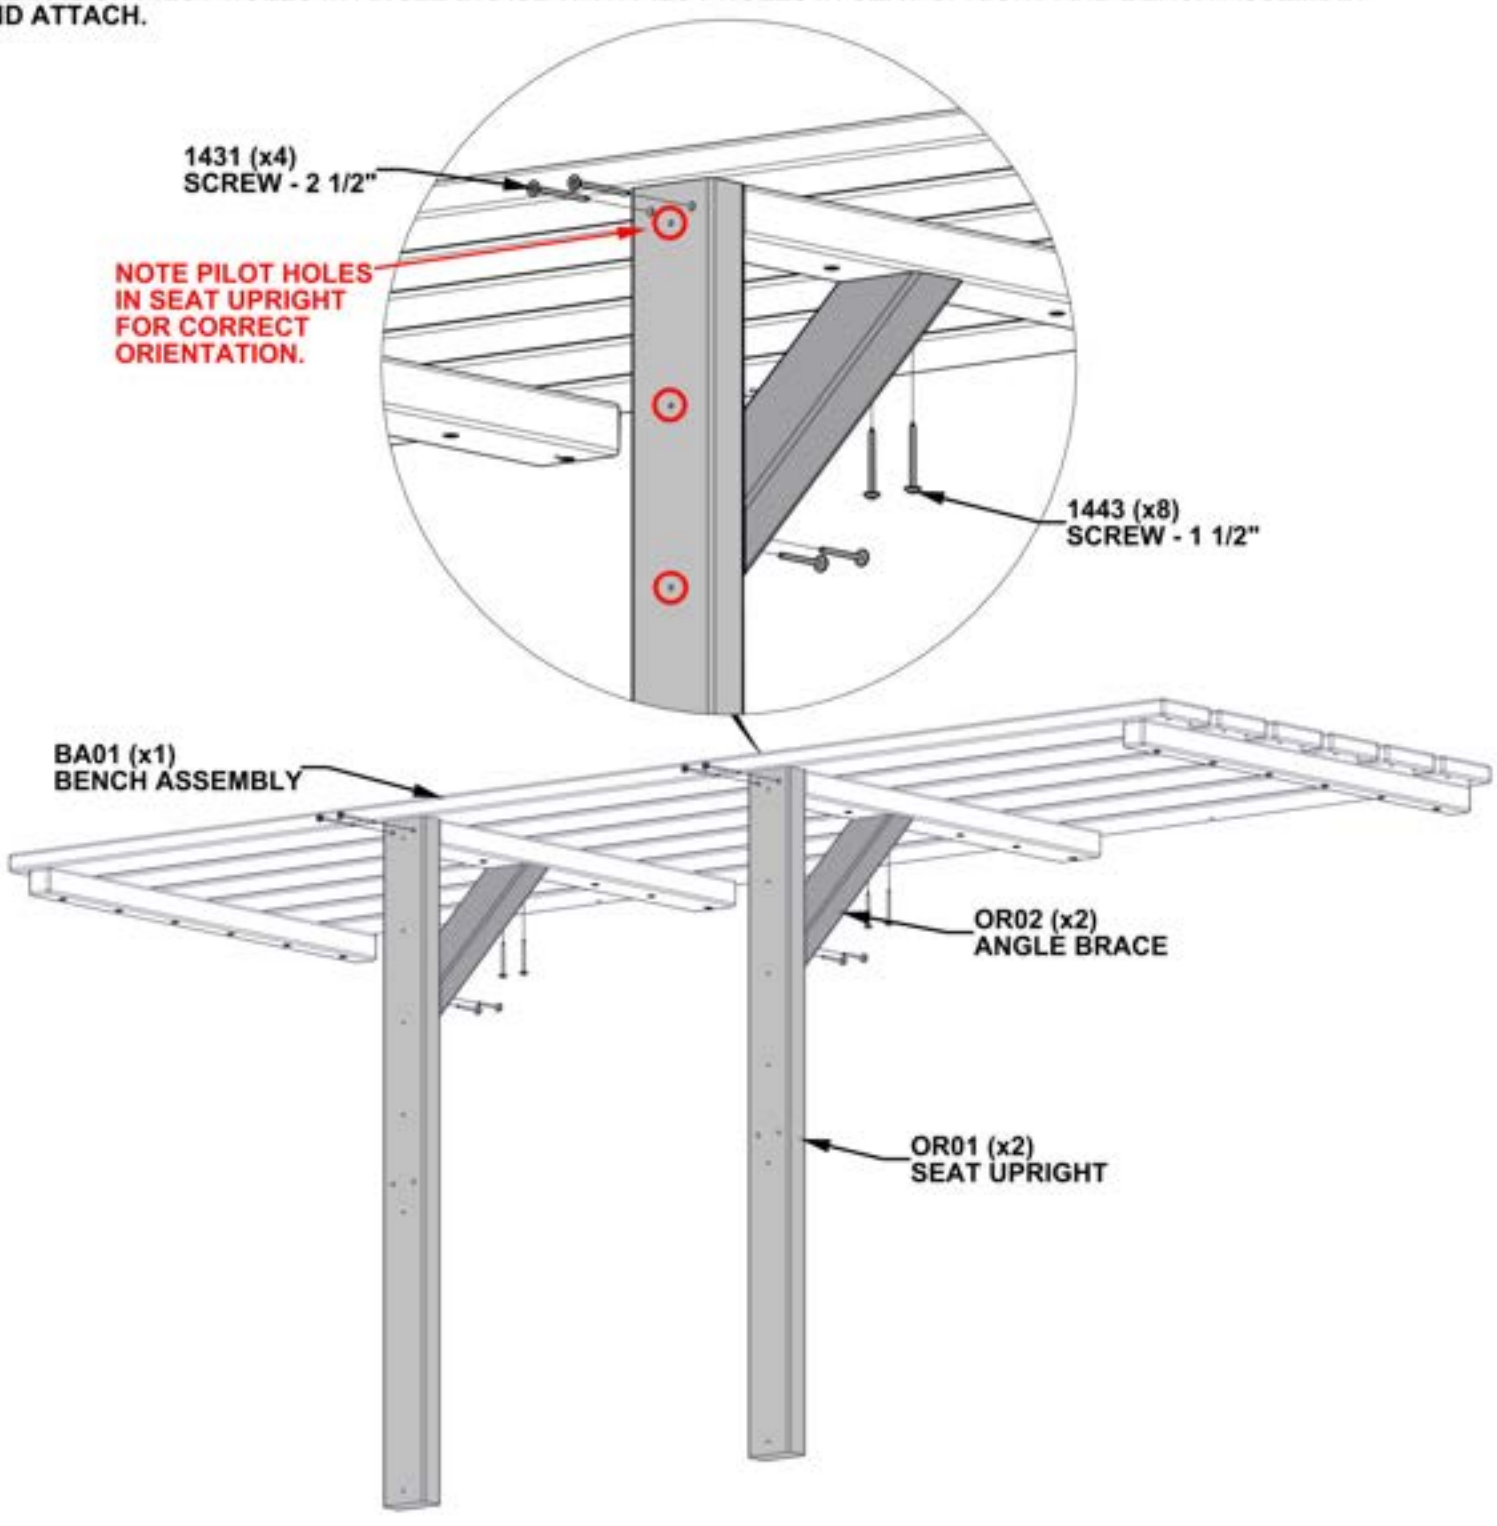

STEP 18 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
30	H101428	SCREW TFH 8X1 3/4 SS-BLK

- ALIGN THROUGH HOLES IN BENCH ASSEMBLY WITH PILOT HOLES IN SEAT CLEATS AND ATTACH AS SHOWN.

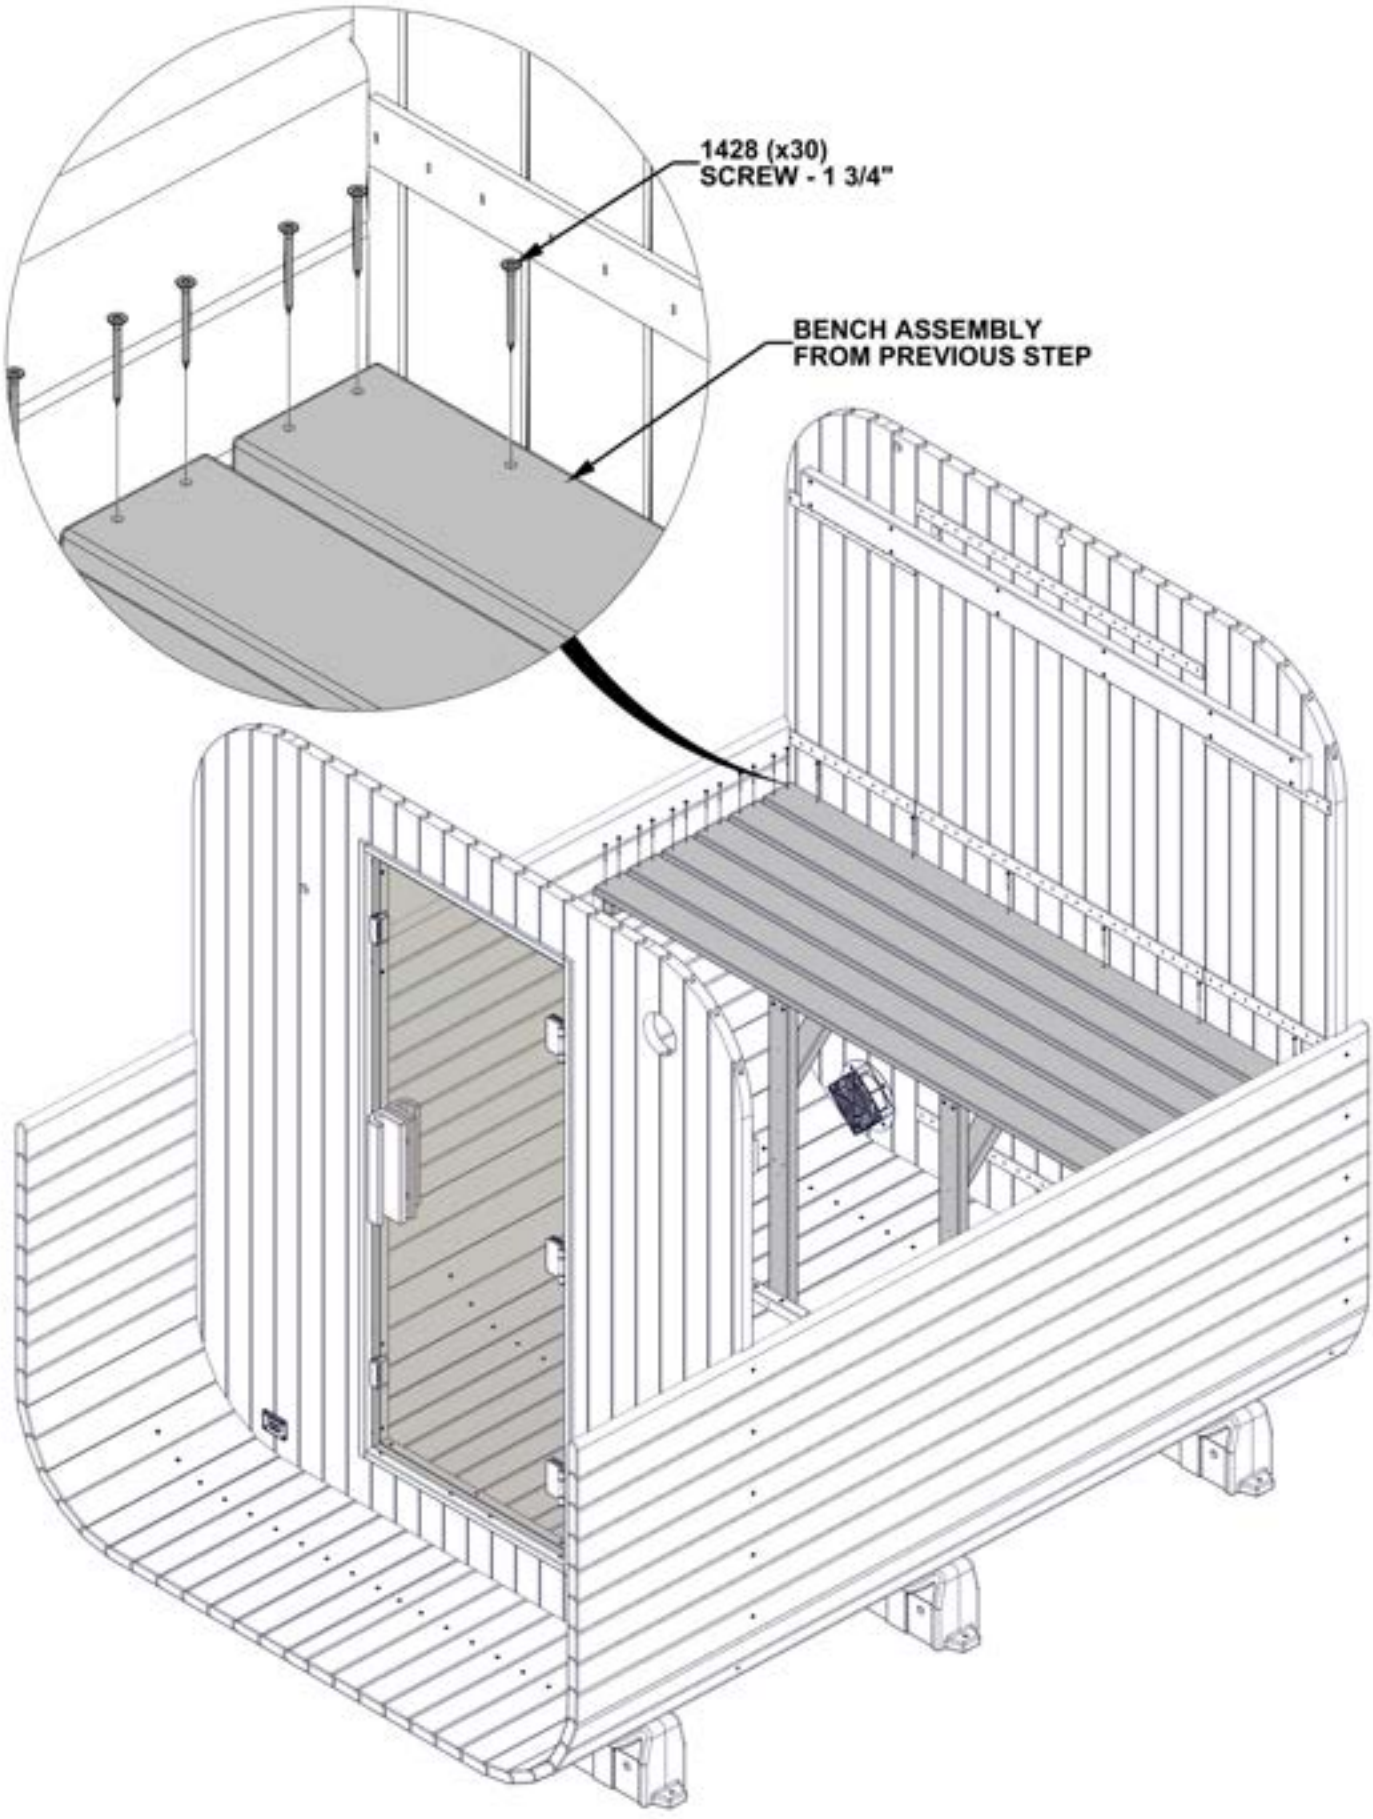


STEP 19 - SAUNA ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101438	SCREW TWH 8x3/4 SS-BLK



A4M00555 L BRACKET BLK
(x2)


- ALIGN BRACKETS WITH PILOT HOLES AND ATTACH AS SHOWN.

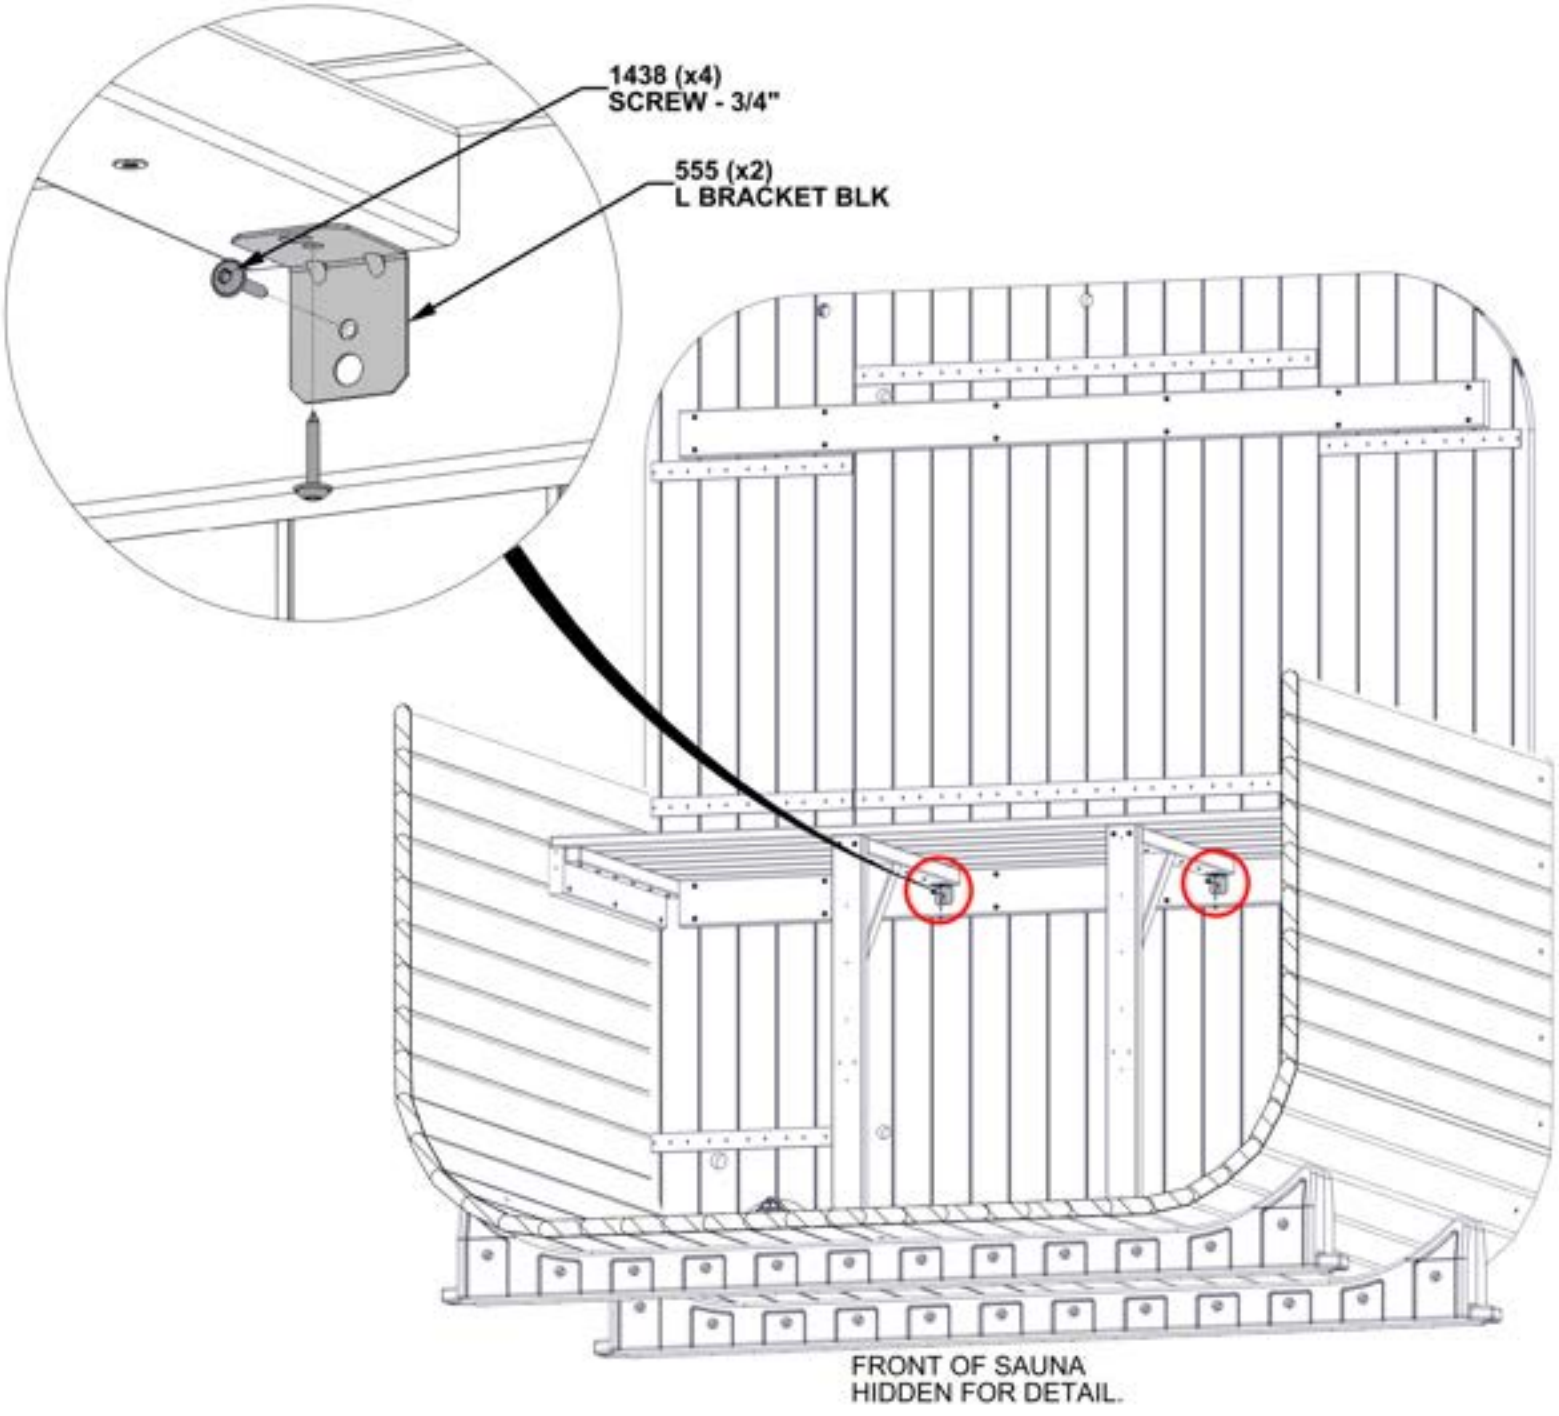

STEP 20 - SAUNA ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H101429	SCREW TFH 8X2 SS-BLK

- INSERT SCREWS INTO THROUGH HOLES IN PREVIOUSLY INSTALLED FLOOR CLEAT AS SHOWN.

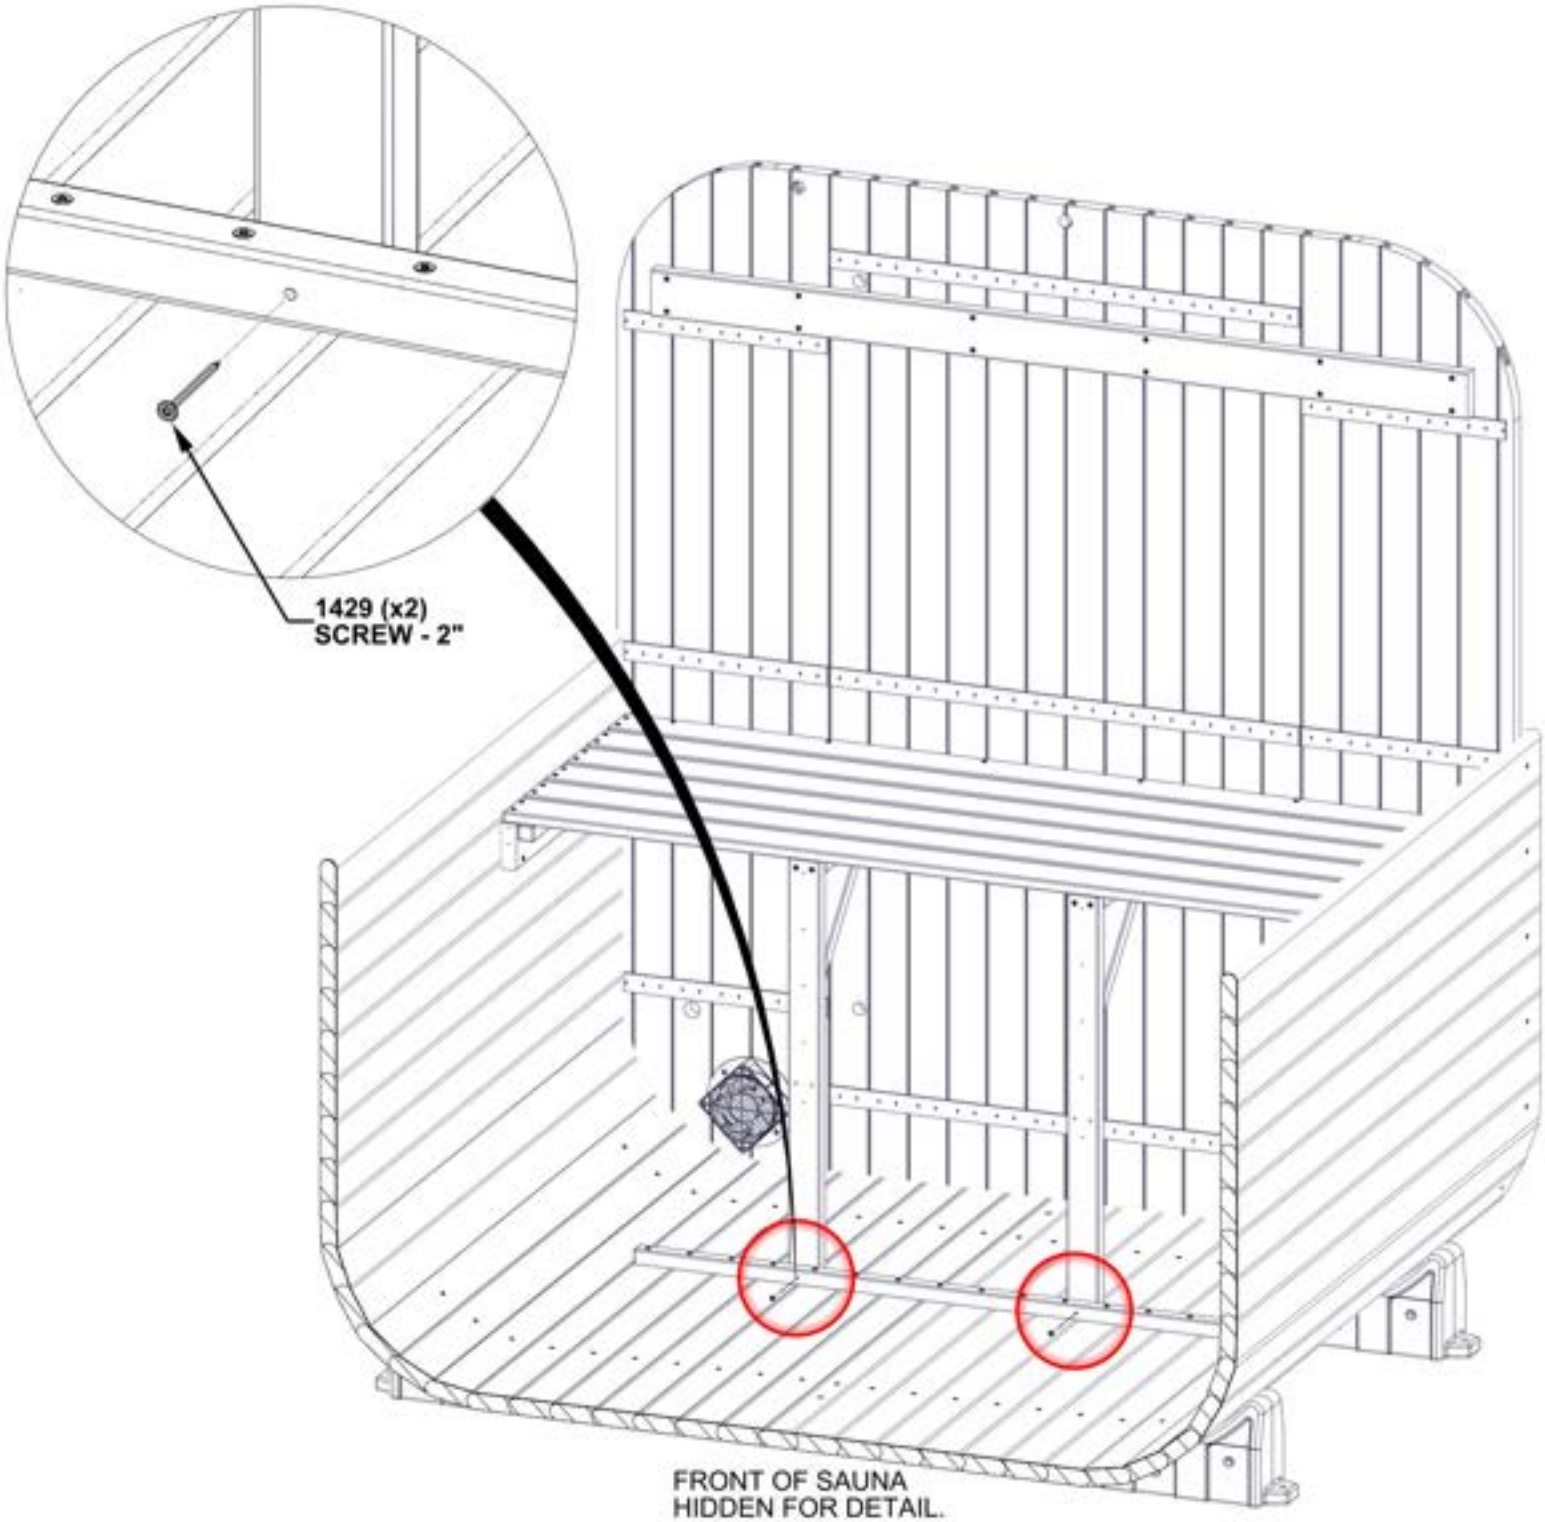

STEP 21 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101429	SCREW TFH 8X2 SS-BLK




OO01 SLAT CLEAT - W4L21950
(x2) 1 3/16"x1 3/16"x14 15/16" (30x30x380)



OG03 SEAT CLEAT - W4L21944
(x2) 1 3/16"x3 3/8"x23 1/16" (30x86x586)


- NOTE PILOT HOLES IN BOARDS FOR CORRECT ORIENTATION.
- ATTACH AS SHOWN.
- REPEAT THIS STEP TWICE.

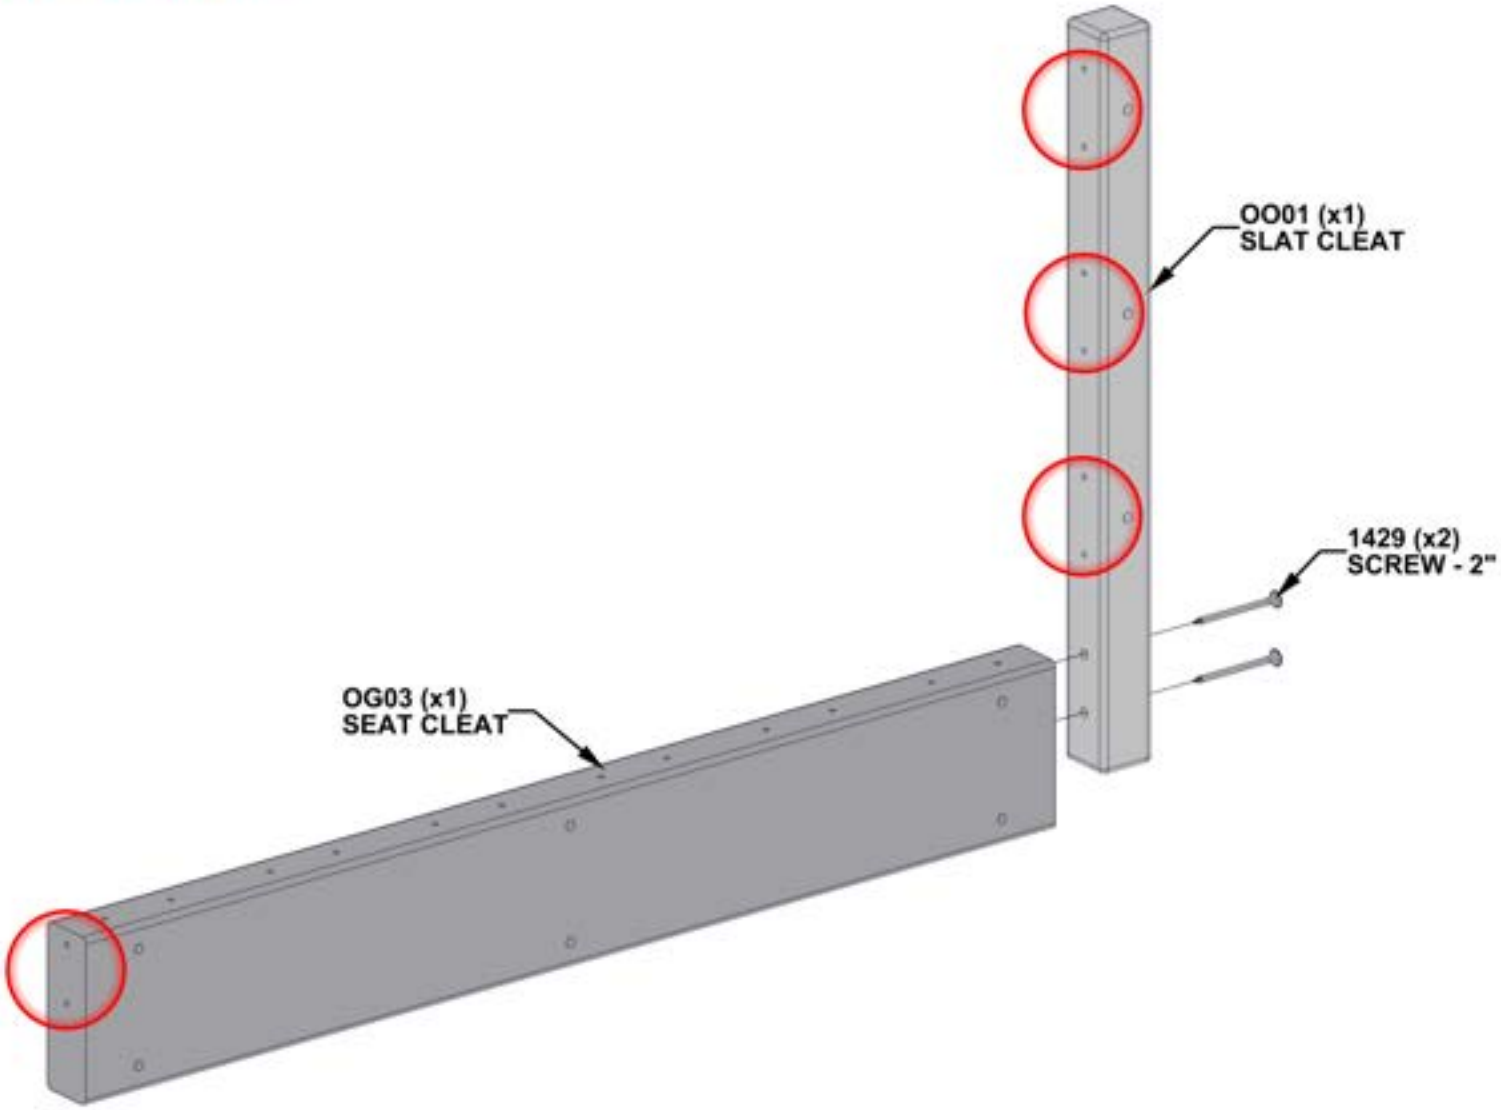

STEP 22 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
18	H101429	SCREW TFH 8X2 SS-BLK

- FLUSH TOP OF CLEAT ASSEMBLY AGAINST EXISTING CLEAT AS SHOWN.
- ENSURE FRONT OF SEAT CLEAT IS FLUSH WITH END OF EXISTING CLEAT.
- ENSURE SEAT CLEAT IS LEVEL.
- ATTACH AS SHOWN.

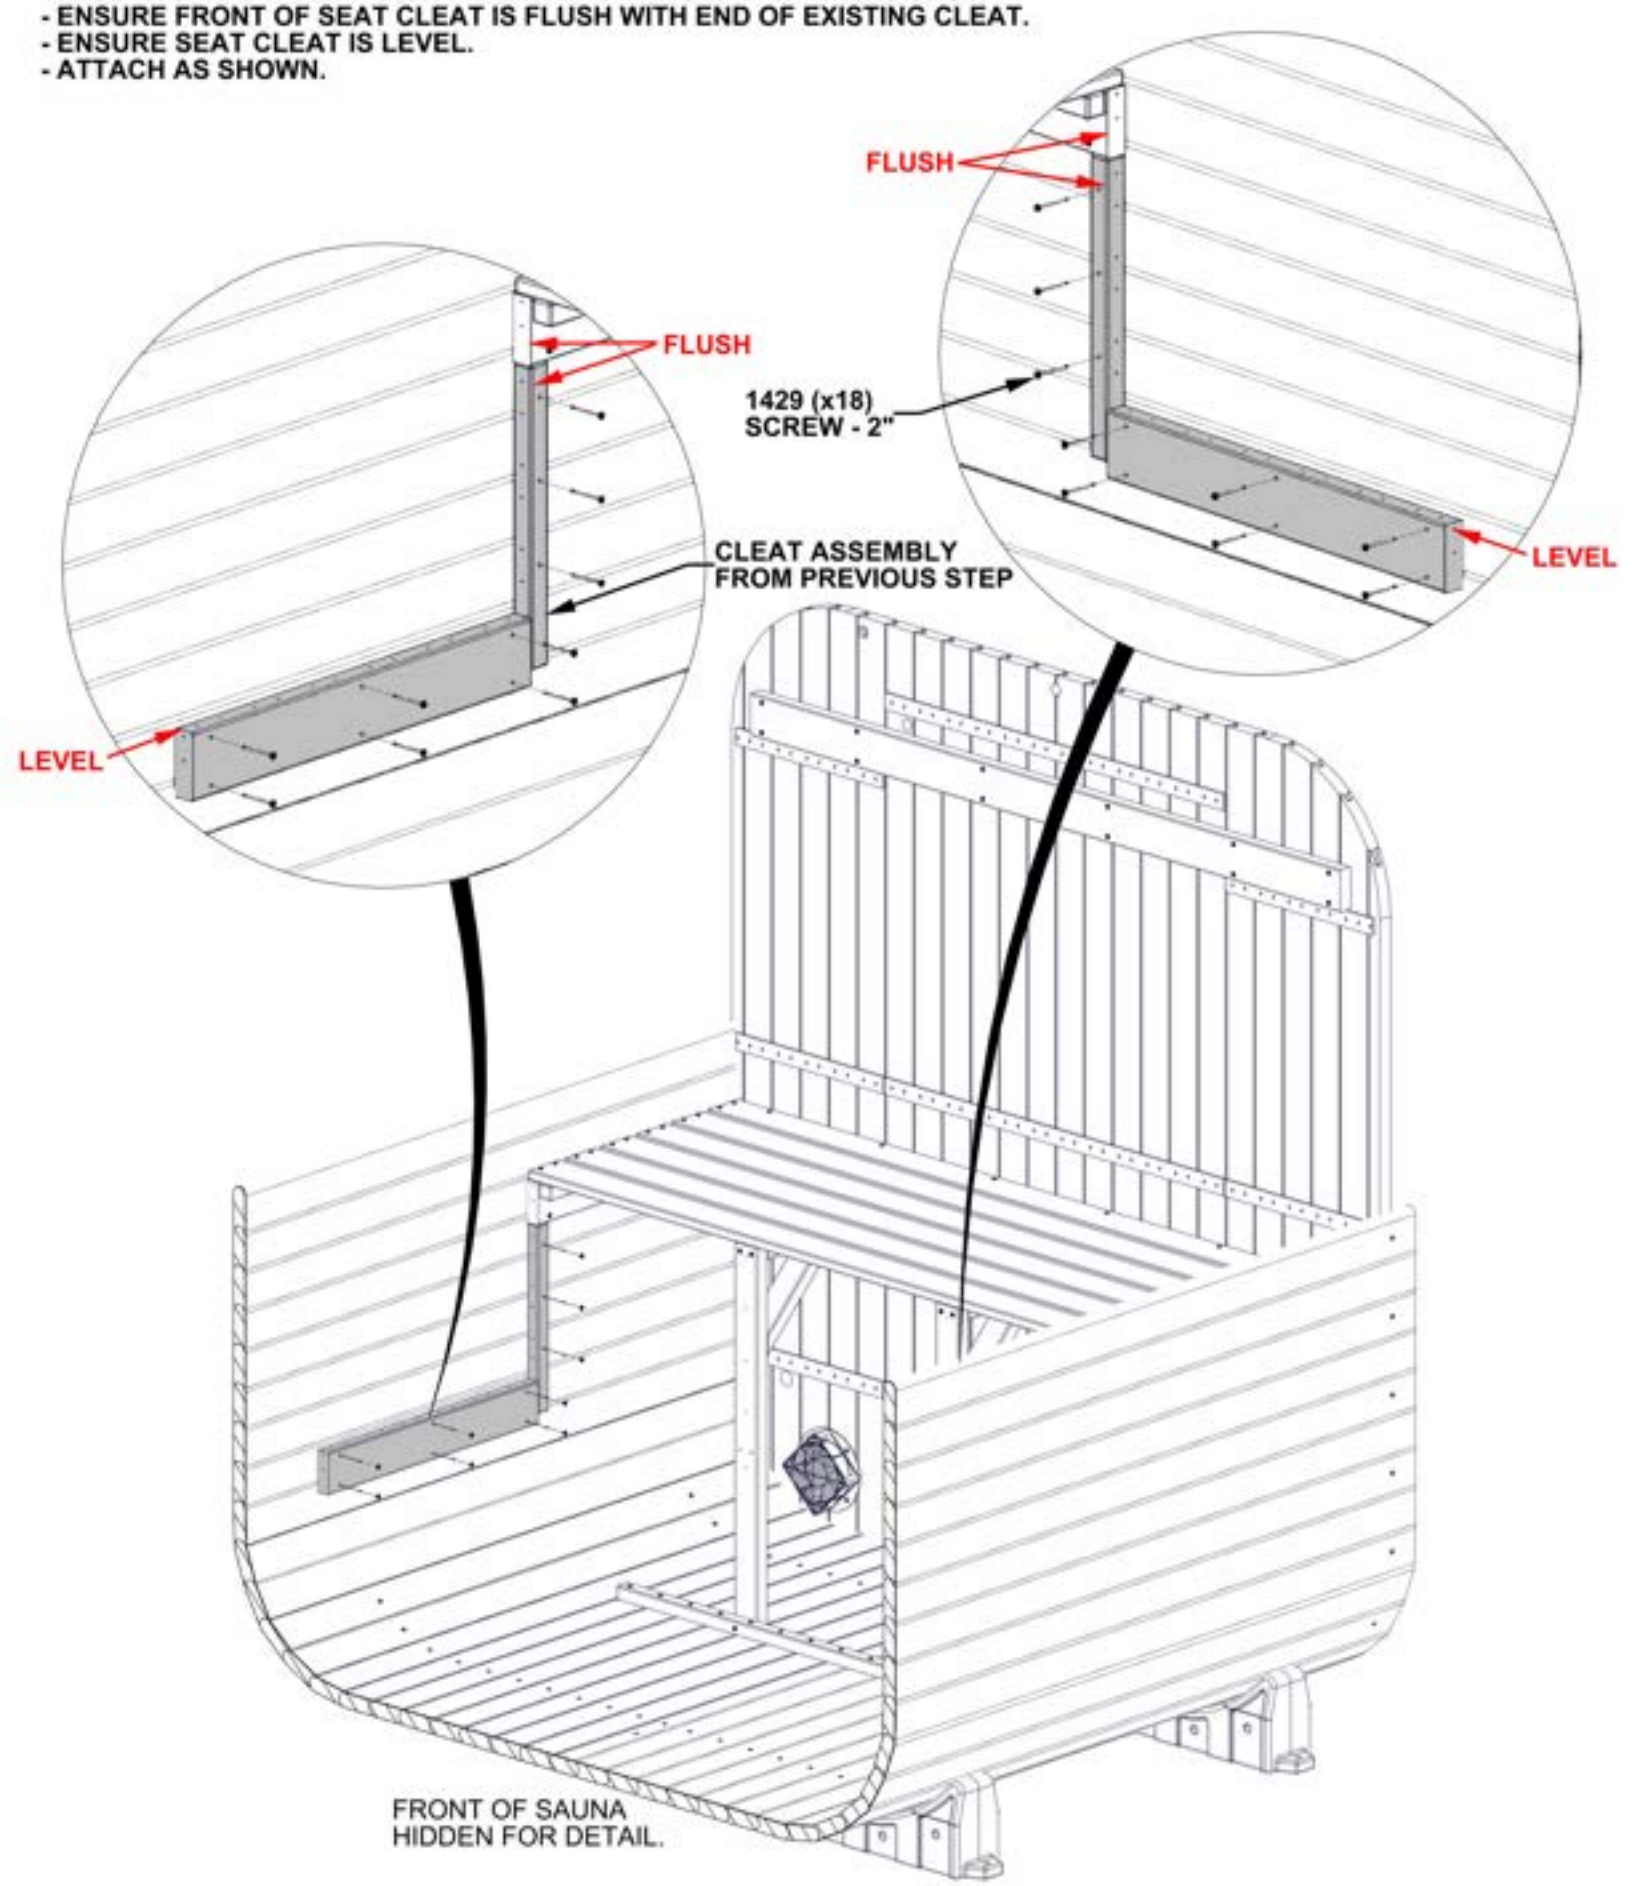

STEP 23 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101431	SCREW TFH 8X2 1/2 SS-BLK
8	H101443	SCREW TWH 8x1 1/2 SS-BLK



BA02 (x1) BENCH ASSEMBLY - W2A04822
1 15/16"x23 1/16"x65 3/4" (50x586x1670)




OR02 (x2) ANGLE BRACE - W4L21946
1 3/16"x2 3/8"x10 7/8" (30x60x276)



OR03 (x2) SEAT UPRIGHT - W4L21947
1 3/16"x2 3/8"x14 15/16" (30x60x380)


- ALIGN PILOT HOLES AND ATTACH SEAT UPRIGHT TO BENCH ASSEMBLY AS SHOWN.
- THEN ALIGN PILOT HOLES IN ANGLE BRACE WITH PILOT HOLES IN SEAT UPRIGHT AND BENCH ASSEMBLY AND ATTACH.

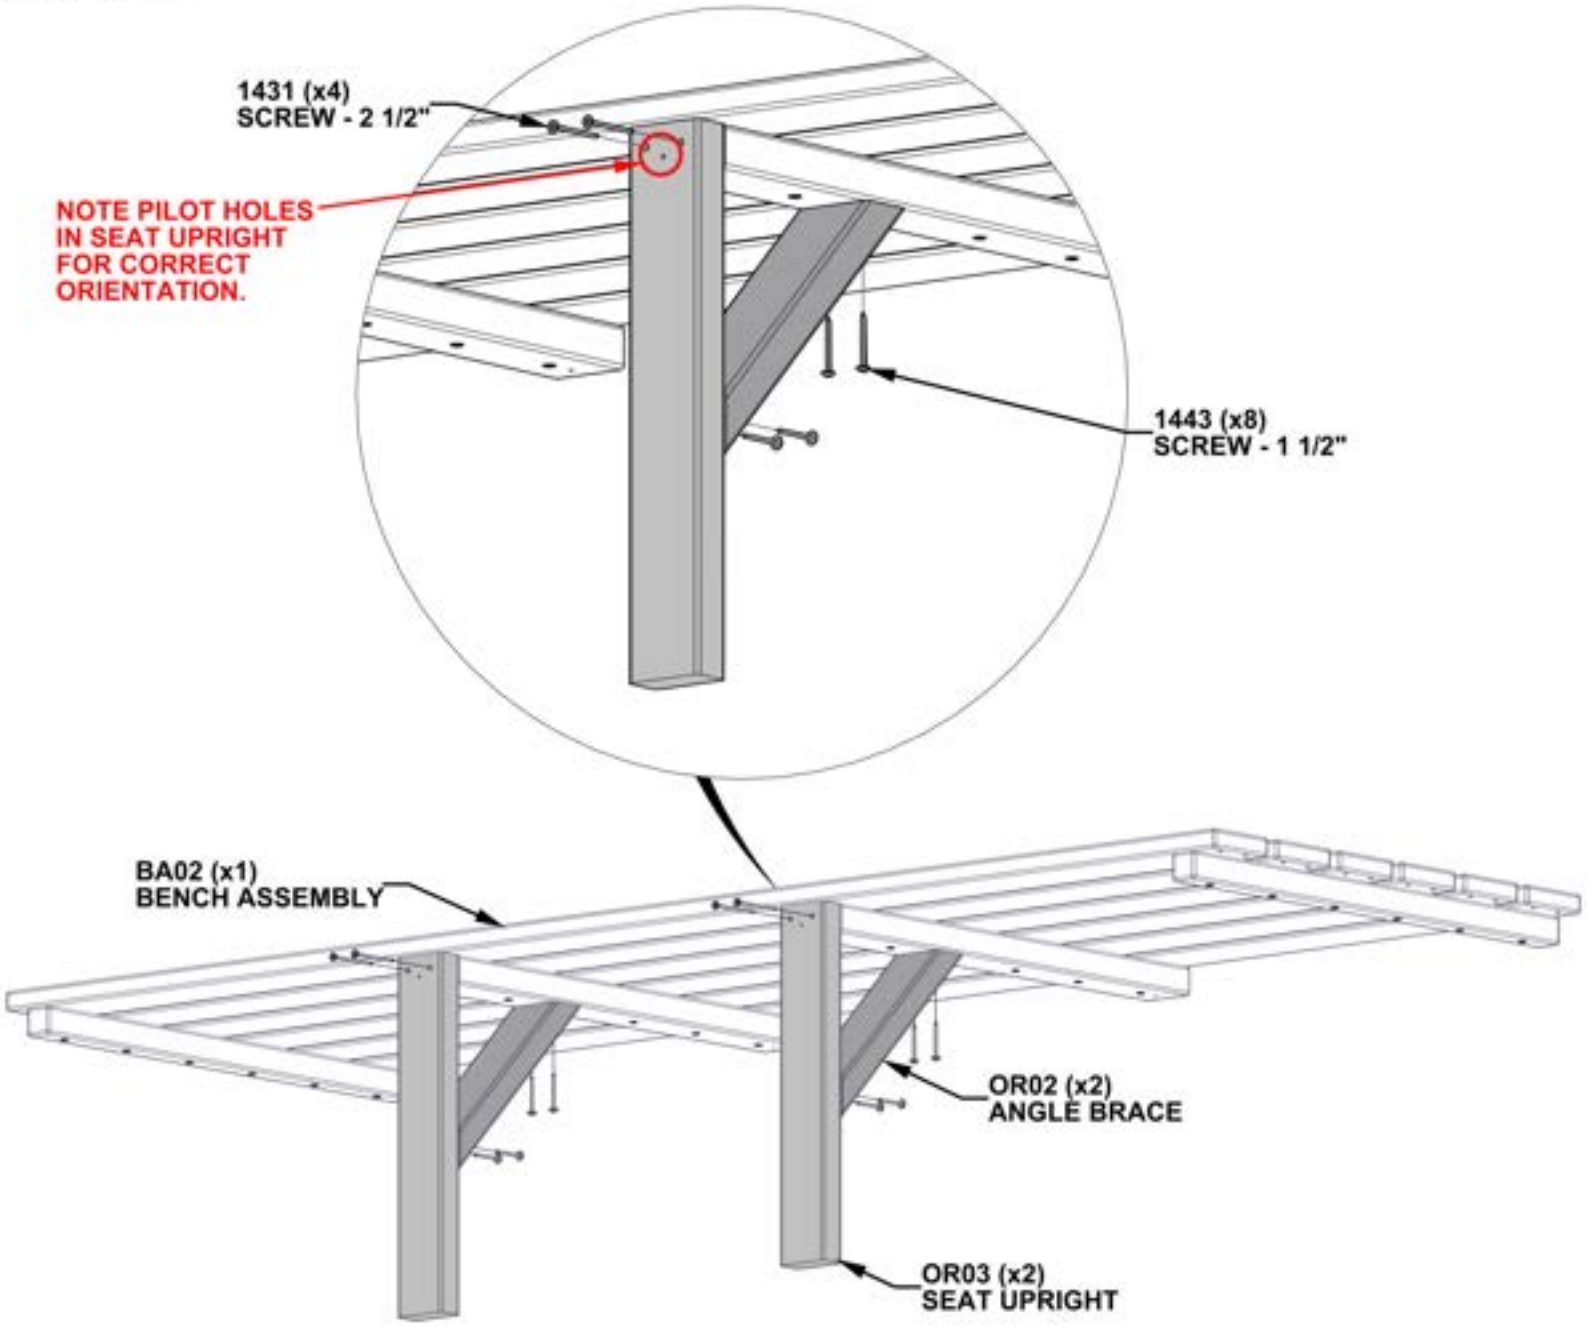

STEP 24 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
24	H101428	SCREW TFH 8X1 3/4 SS-BLK
4	H101431	SCREW TFH 8X2 1/2 SS-BLK

- ALIGN THROUGH HOLES IN BENCH ASSEMBLY WITH PILOT HOLES IN SEAT CLEATS AND ATTACH AS SHOWN.
- ALIGN THROUGH HOLES IN PREVIOUSLY INSTALLED UPRIGHTS WITH PILOT HOLES IN BENCH ASSEMBLY.

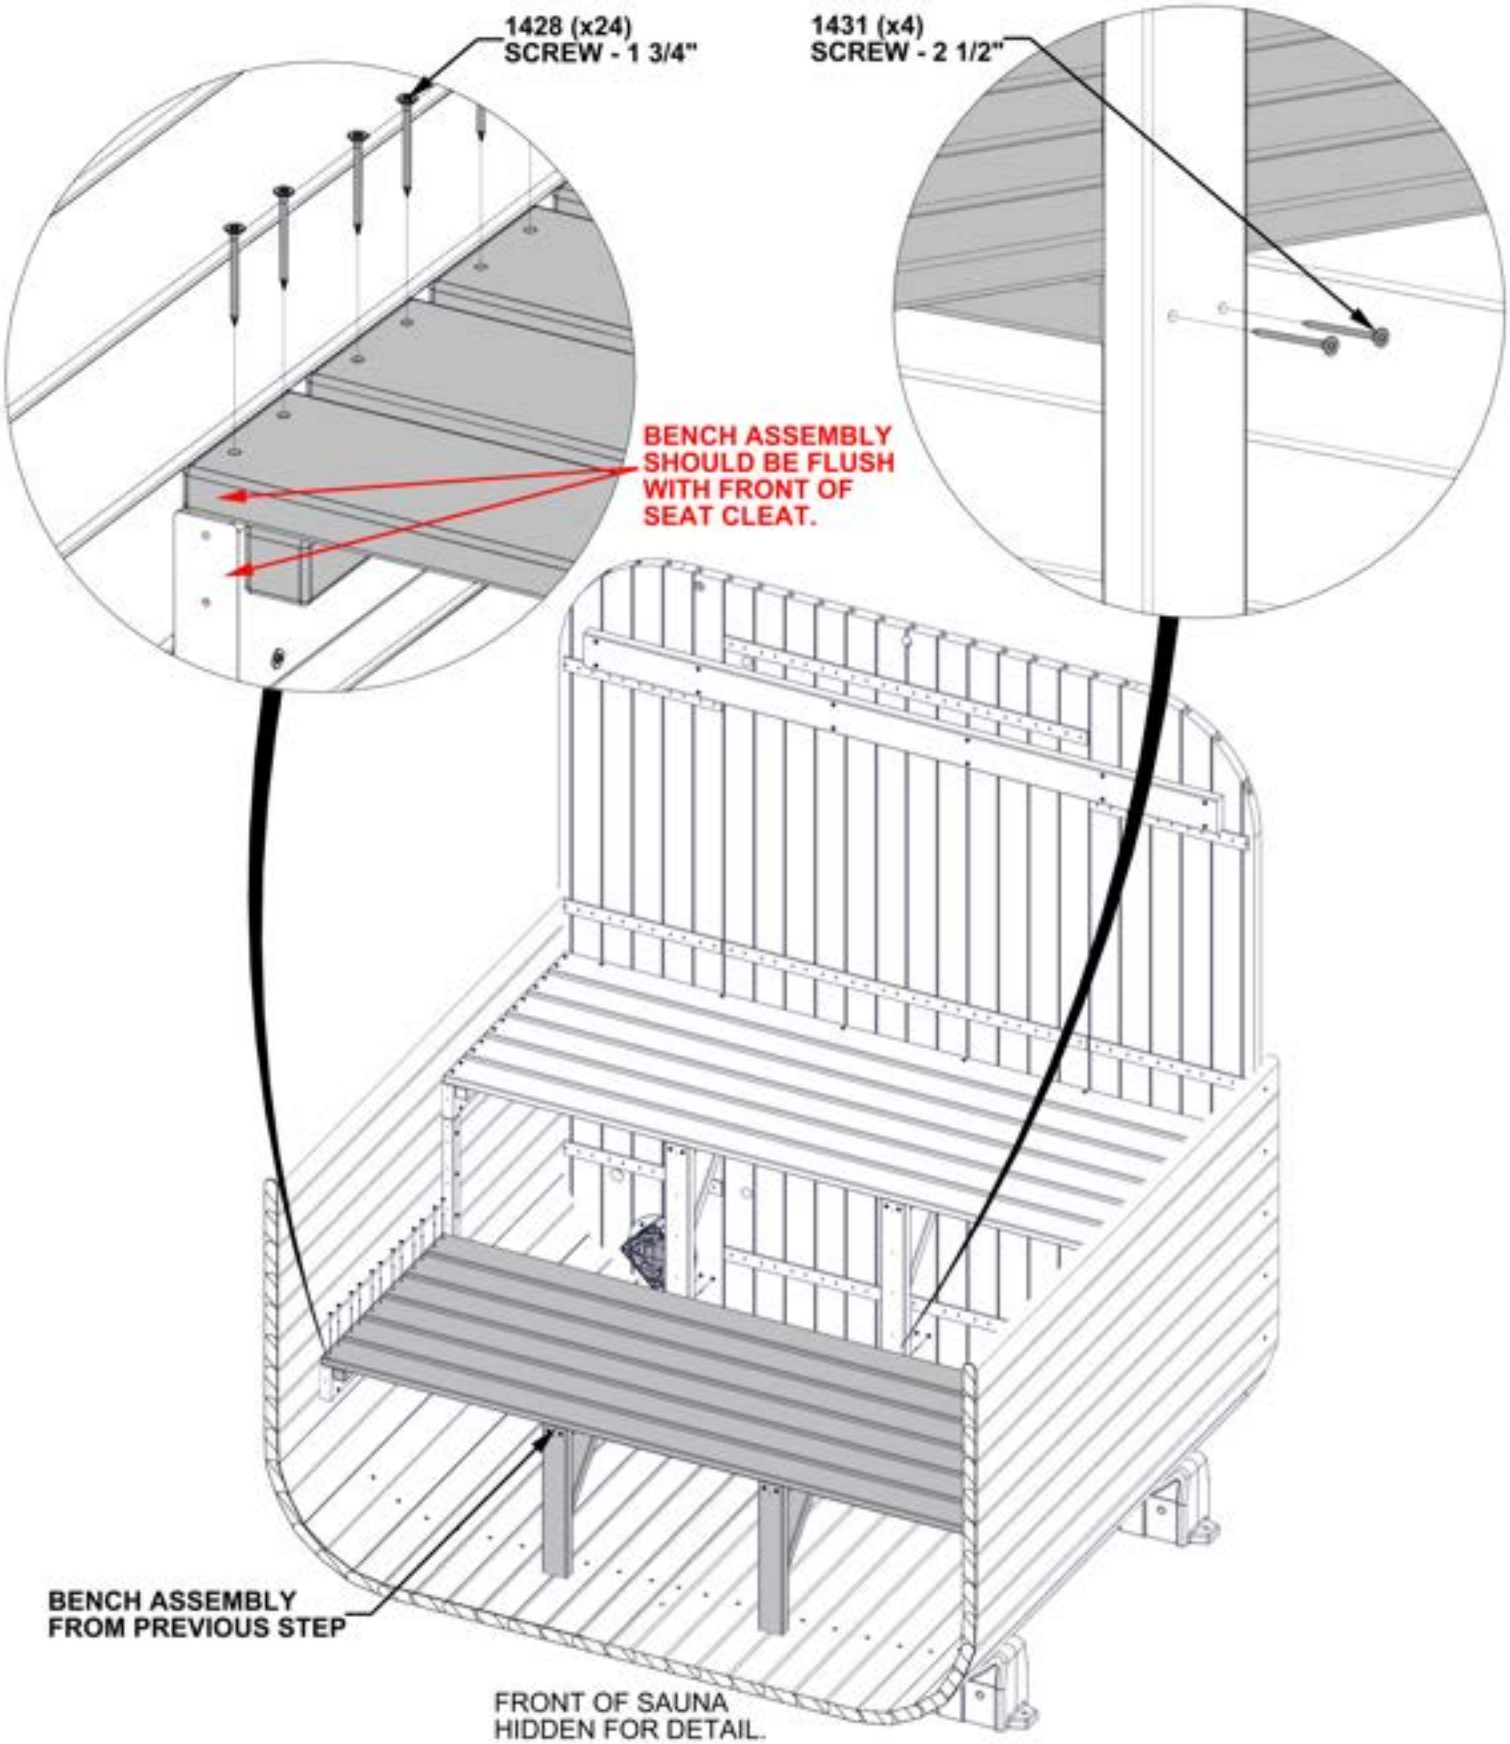


STEP 25 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101438	SCREW TWH 8x3/4 SS-BLK



A4M00555 L BRACKET BLK
(x2)

- ALIGN BRACKETS WITH PILOT HOLES IN BACKS OF UPRIGHTS AND ATTACH AS SHOWN.

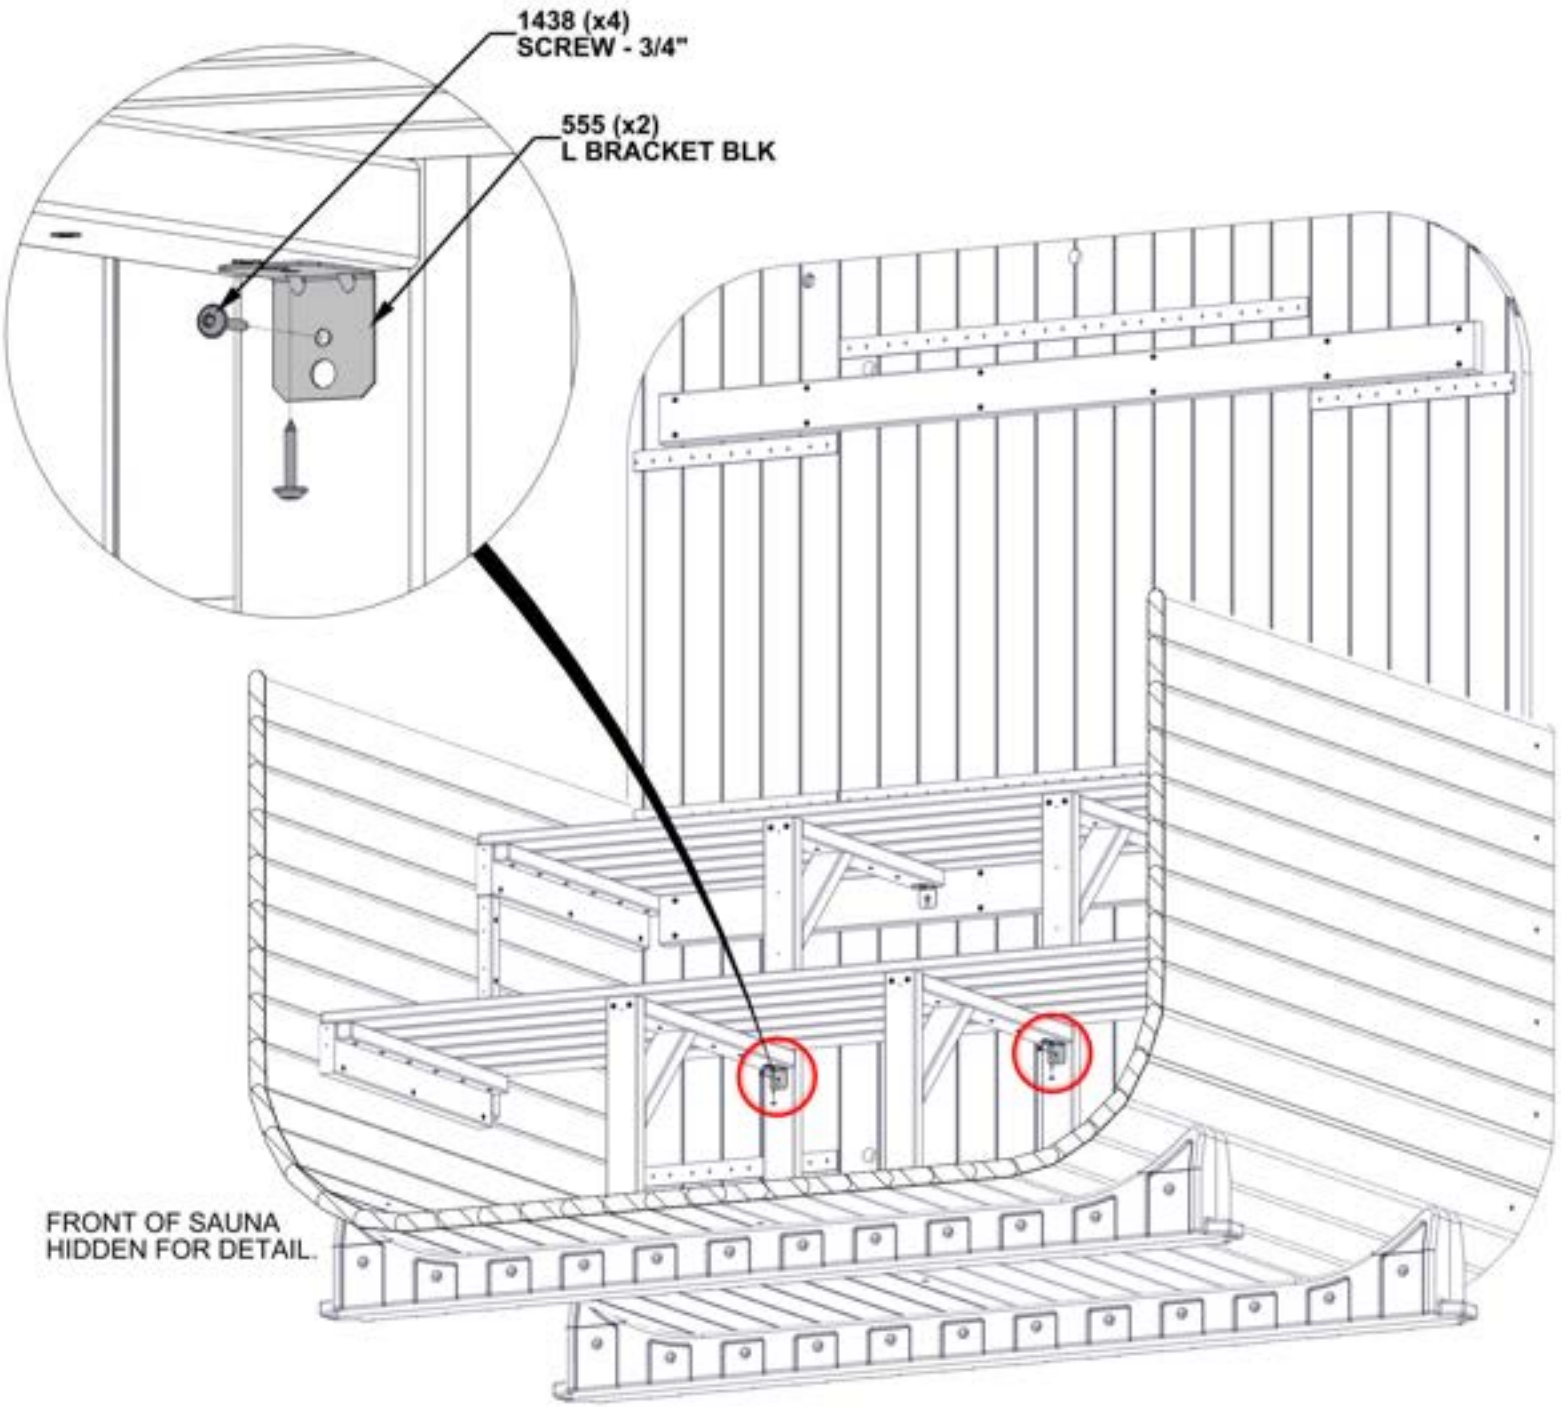


STEP 26 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
17	H101429	SCREW TFH 8X2 SS-BLK



OO05 (x1) FLOOR CLEAT - W4L22600
1 3/16"x1 3/16"x45 1/4" (30x30x1150)

- ENSURE BENCH UPRIGHTS ARE LEVEL AND SQUARE.
- ALIGN PILOT HOLES WITH THROUGH HOLES IN FLOOR CLEAT AND ATTACH AS SHOWN.

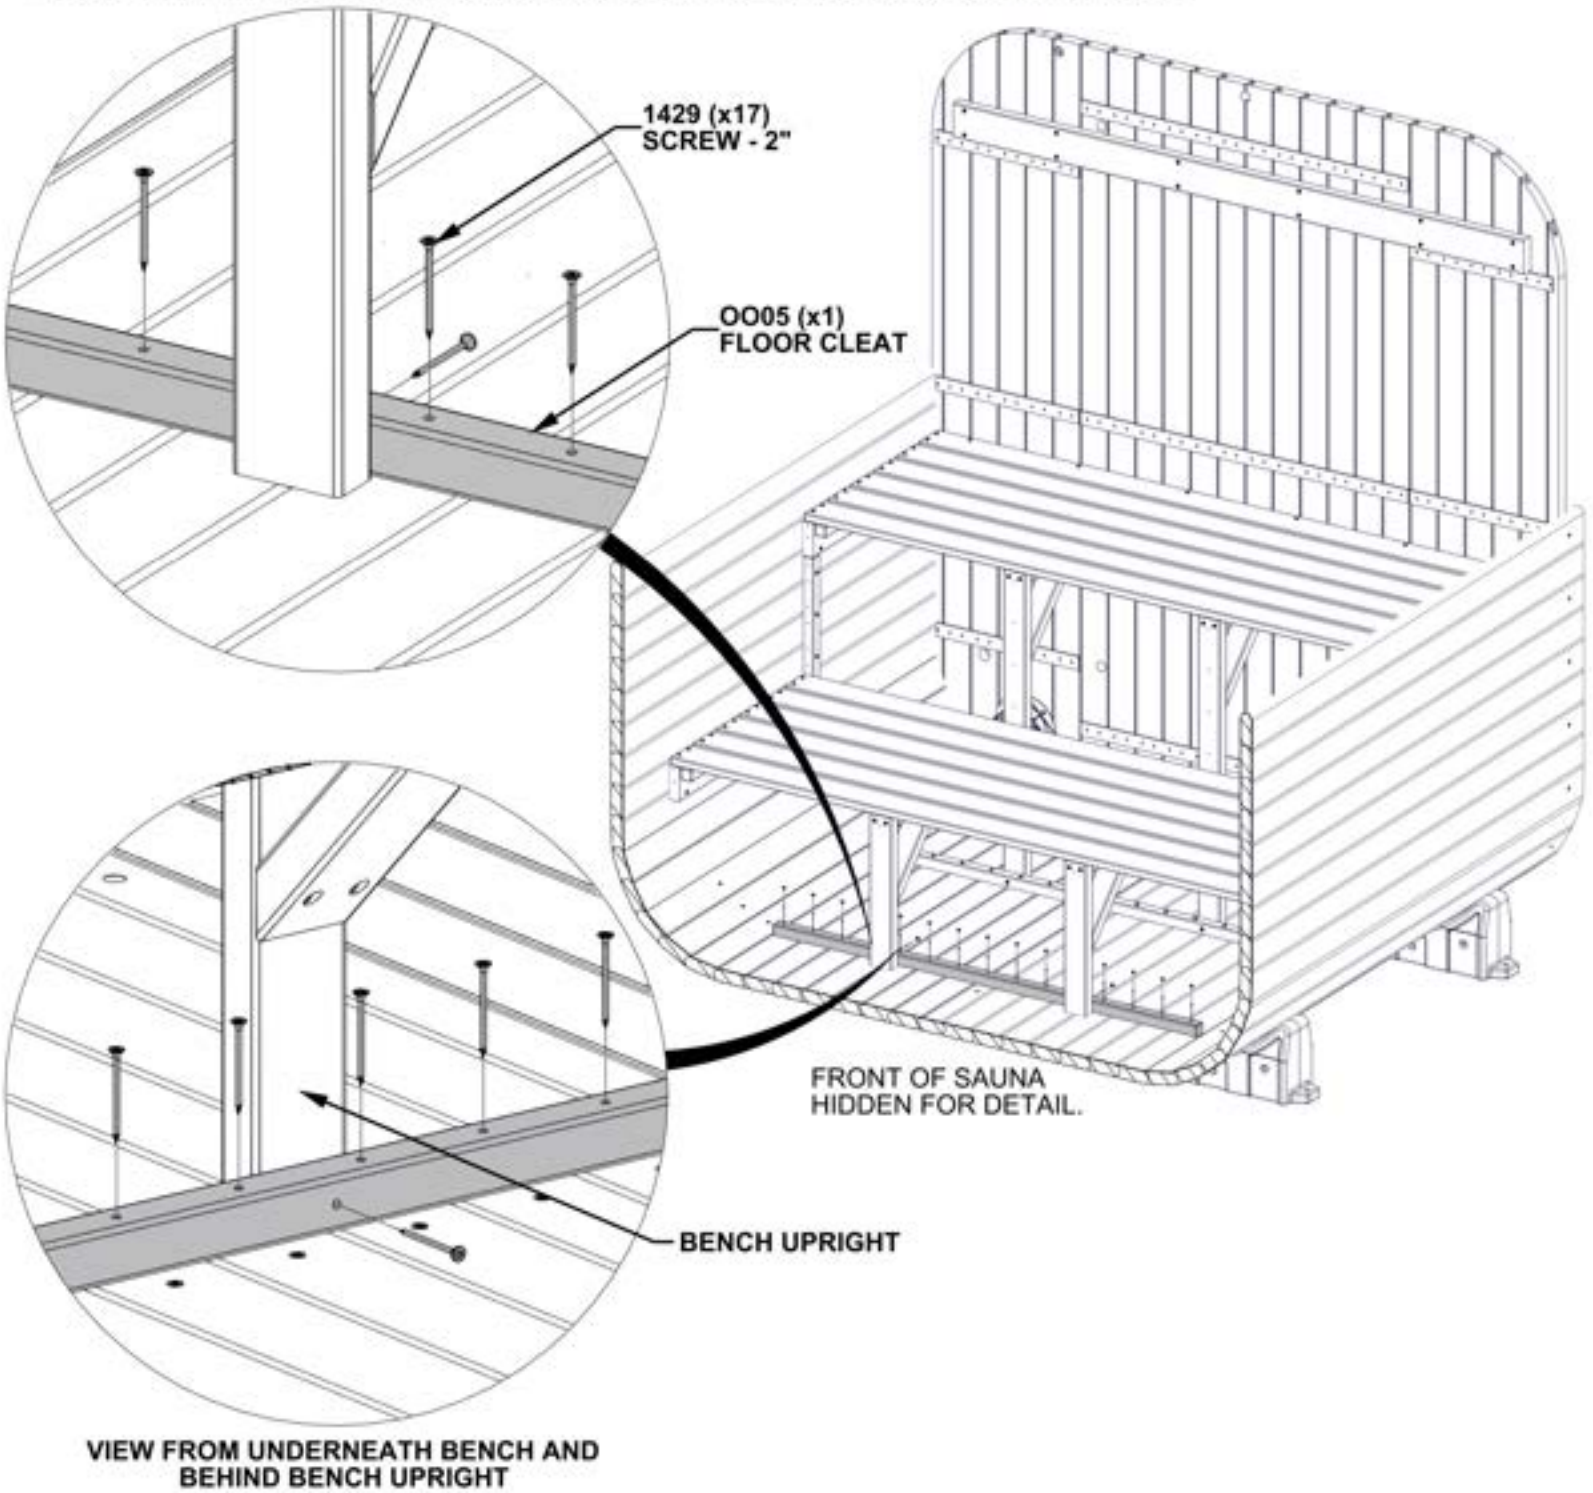

VIEW FROM UNDERNEATH BENCH AND BEHIND BENCH UPRIGHT


STEP 27 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H101430	SCREW TFH 8X2 1/4 SS-BLK



W01 SEAT TRIM - W4L21948
(x2) 1 9/16"x3 3/8"x65 3/4" (40x86x1670)

- ALIGN THROUGH HOLES IN SEAT TRIM WITH PILOT HOLES IN UPRIGHTS AND CLEATS AND ATTACH.

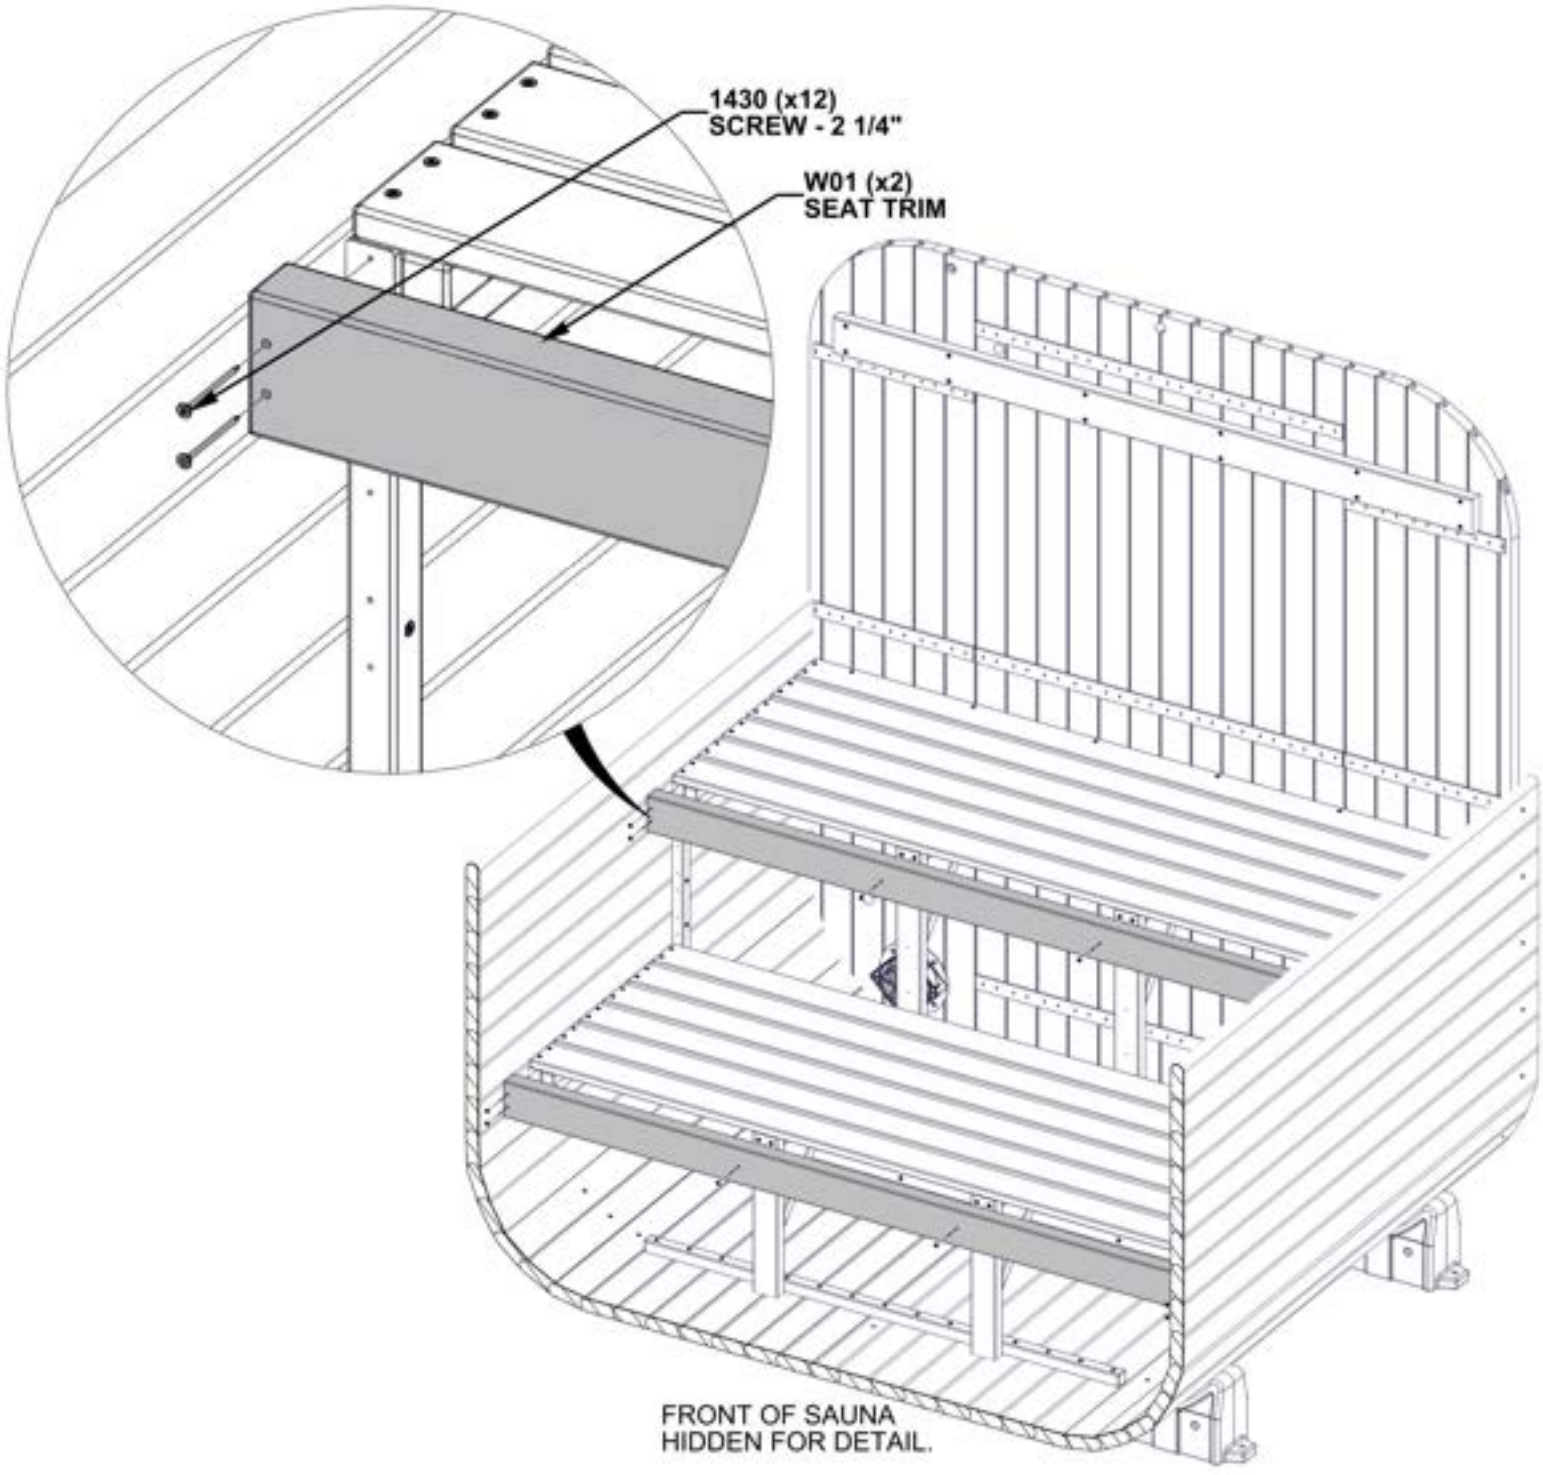


STEP 28 - SAUNA ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101427	SCREW TFH 8X1 1/2 SS-BLK



Y01 HEATER SPACER BOARD - W4L22601
(x2) 5/8"x4"x18 1/4" (16x102x464)


- BUTT TOP OF Y01 AGAINST BOTTOM OF CLEAT AS SHOWN AND ATTACH.
- USING MEASUREMENT GIVEN, ATTACH OTHER BOARD.
- DO NOT INSERT SCREWS INTO THE SMALLER PILOT HOLES.

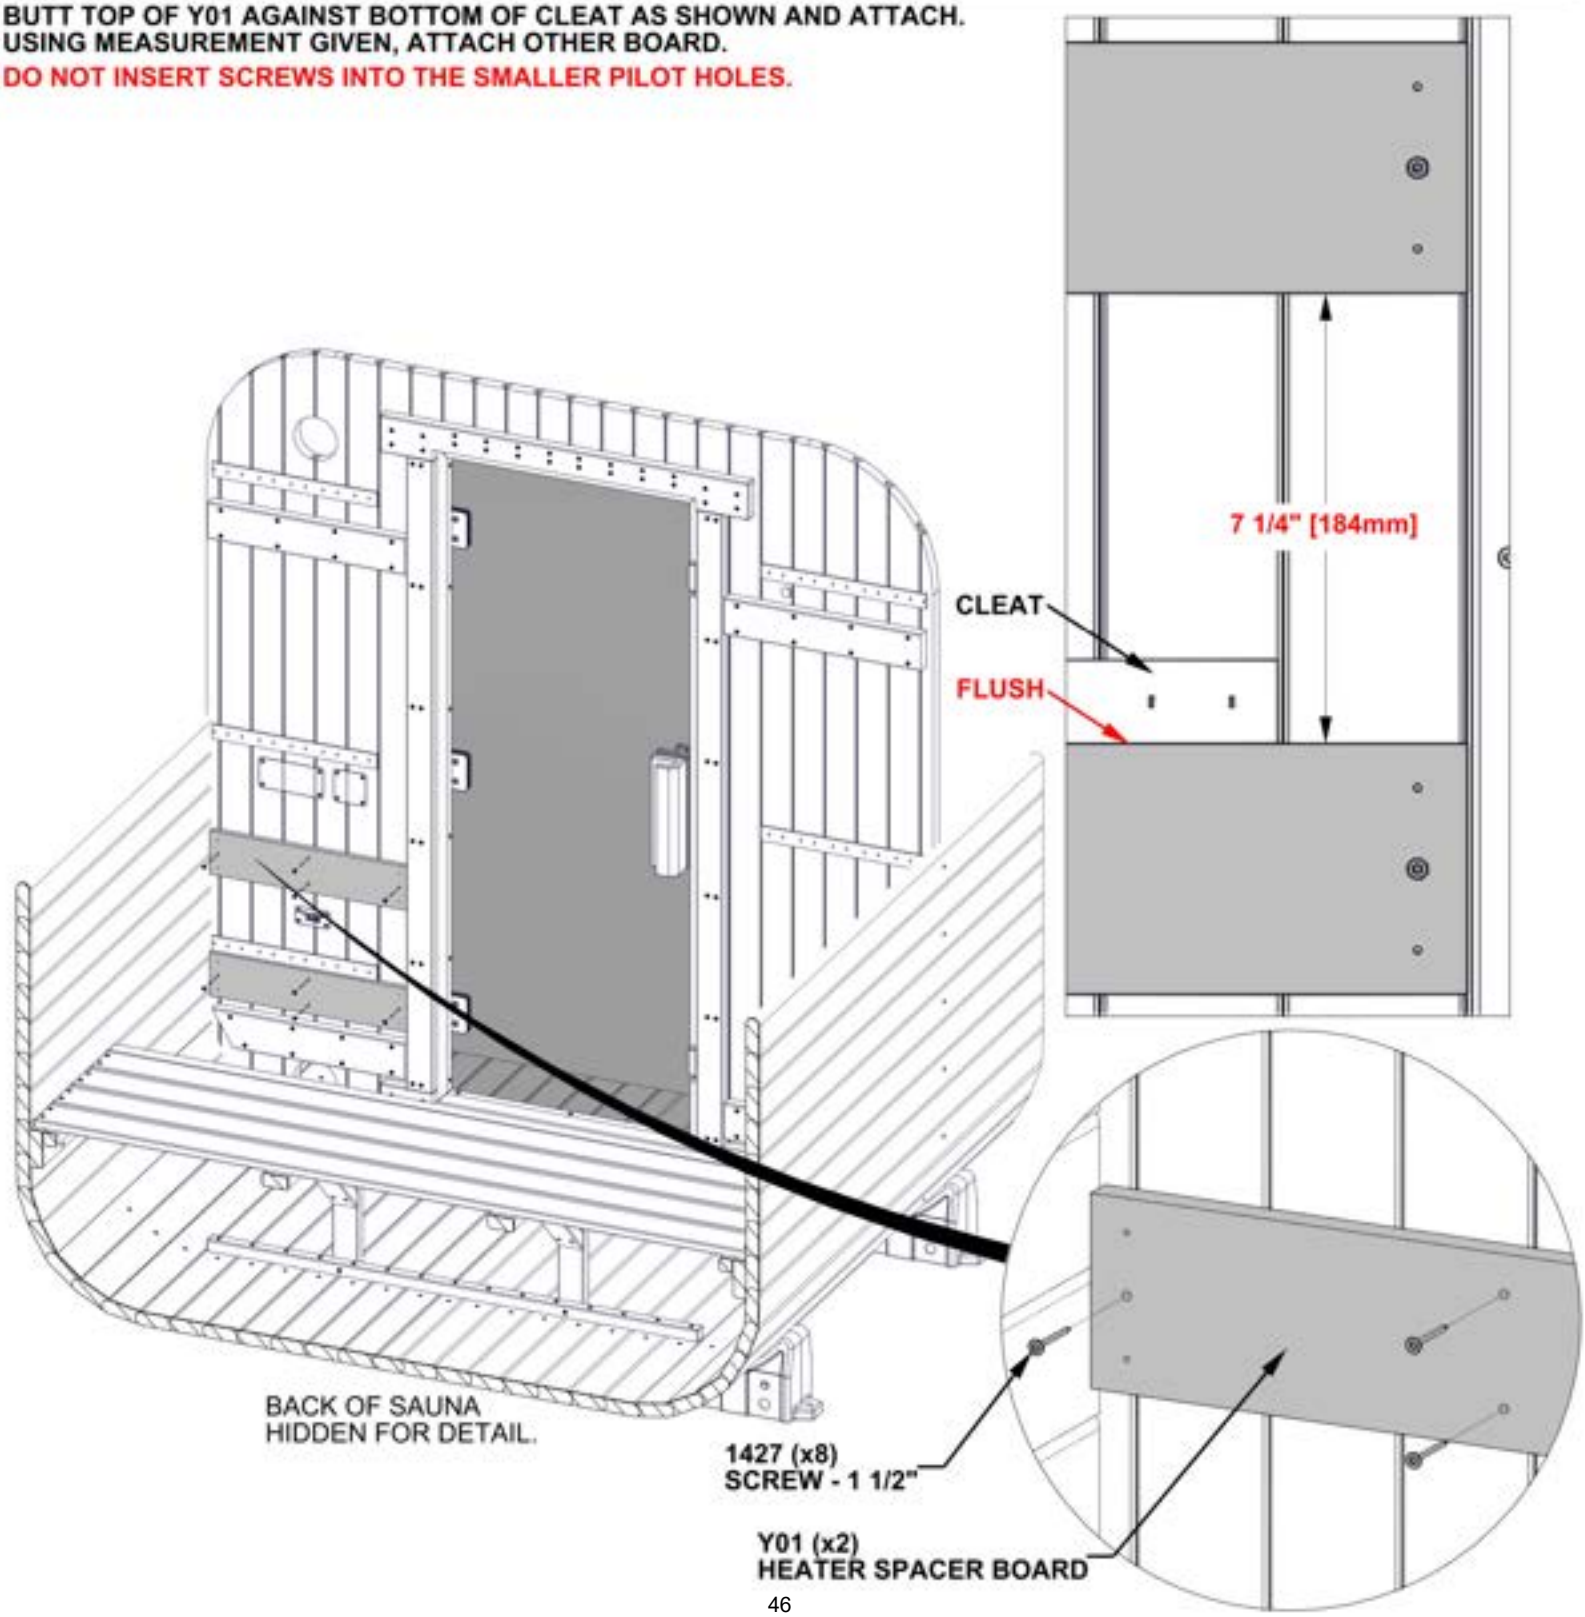

STEP 29 - HEATER MOUNT INSTALLATION

QTY	PART NUMBER	DESCRIPTION
8	H101468	SCREW RAISED HEAD 8x1 BLK

- INSERT SCREWS INTO PILOT HOLES IN BOARDS INSTALLED IN PREVIOUS STEP.

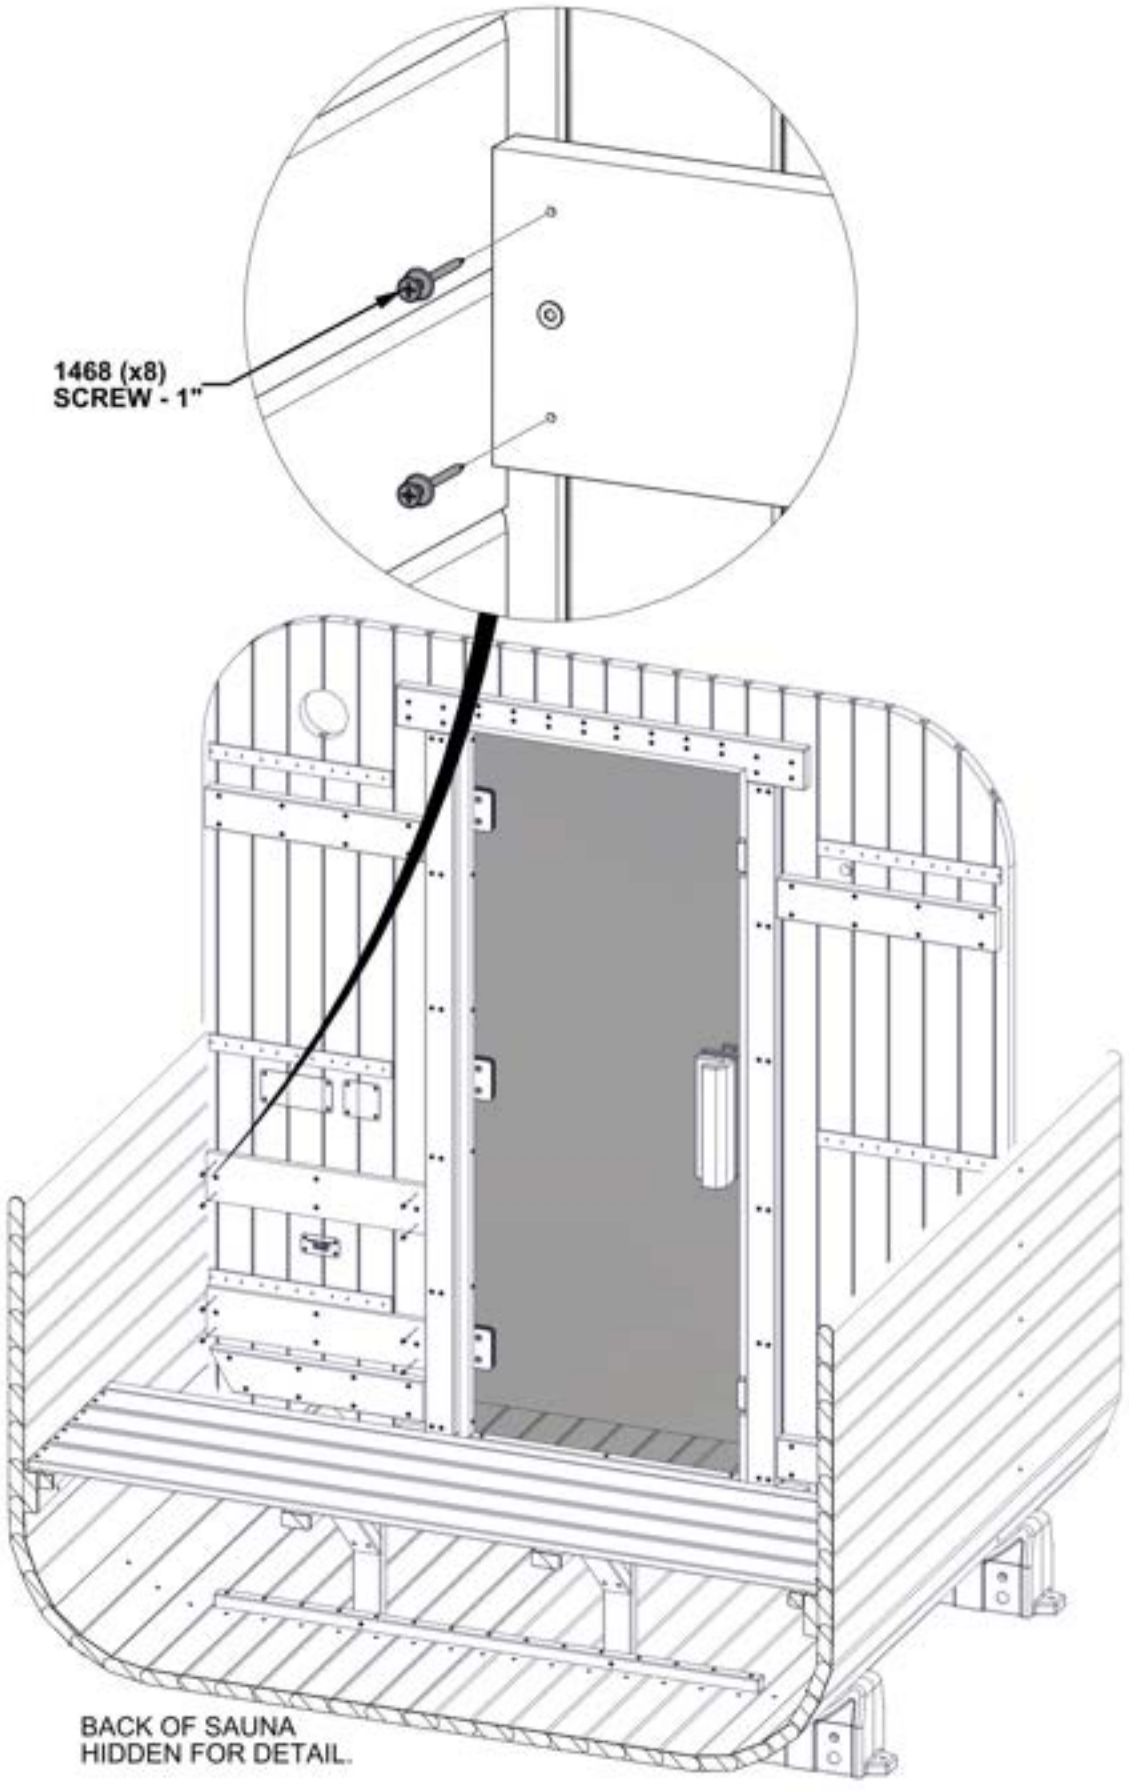

STEP 30 - HEATER GUARD ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
25	H101428	SCREW TFH 8X1 3/4 SS-BLK



NR04 HEATER GUARD BOARD - W4L22037
(x5) 13/16"x2 3/8"x15 11/16" (20x60x398)




NR03 HEATER GUARD BOARD - W4L22036
(x5) 13/16"x2 3/8"x20 3/8" (20x60x518)



OO04 HEATER GUARD BOARD - W4L22035
(x1) 1 3/16"x1 3/16"x16 1/8" (30x30x410)

- ALIGN THROUGH HOLES WITH PILOT HOLES AND ATTACH AS SHOWN.

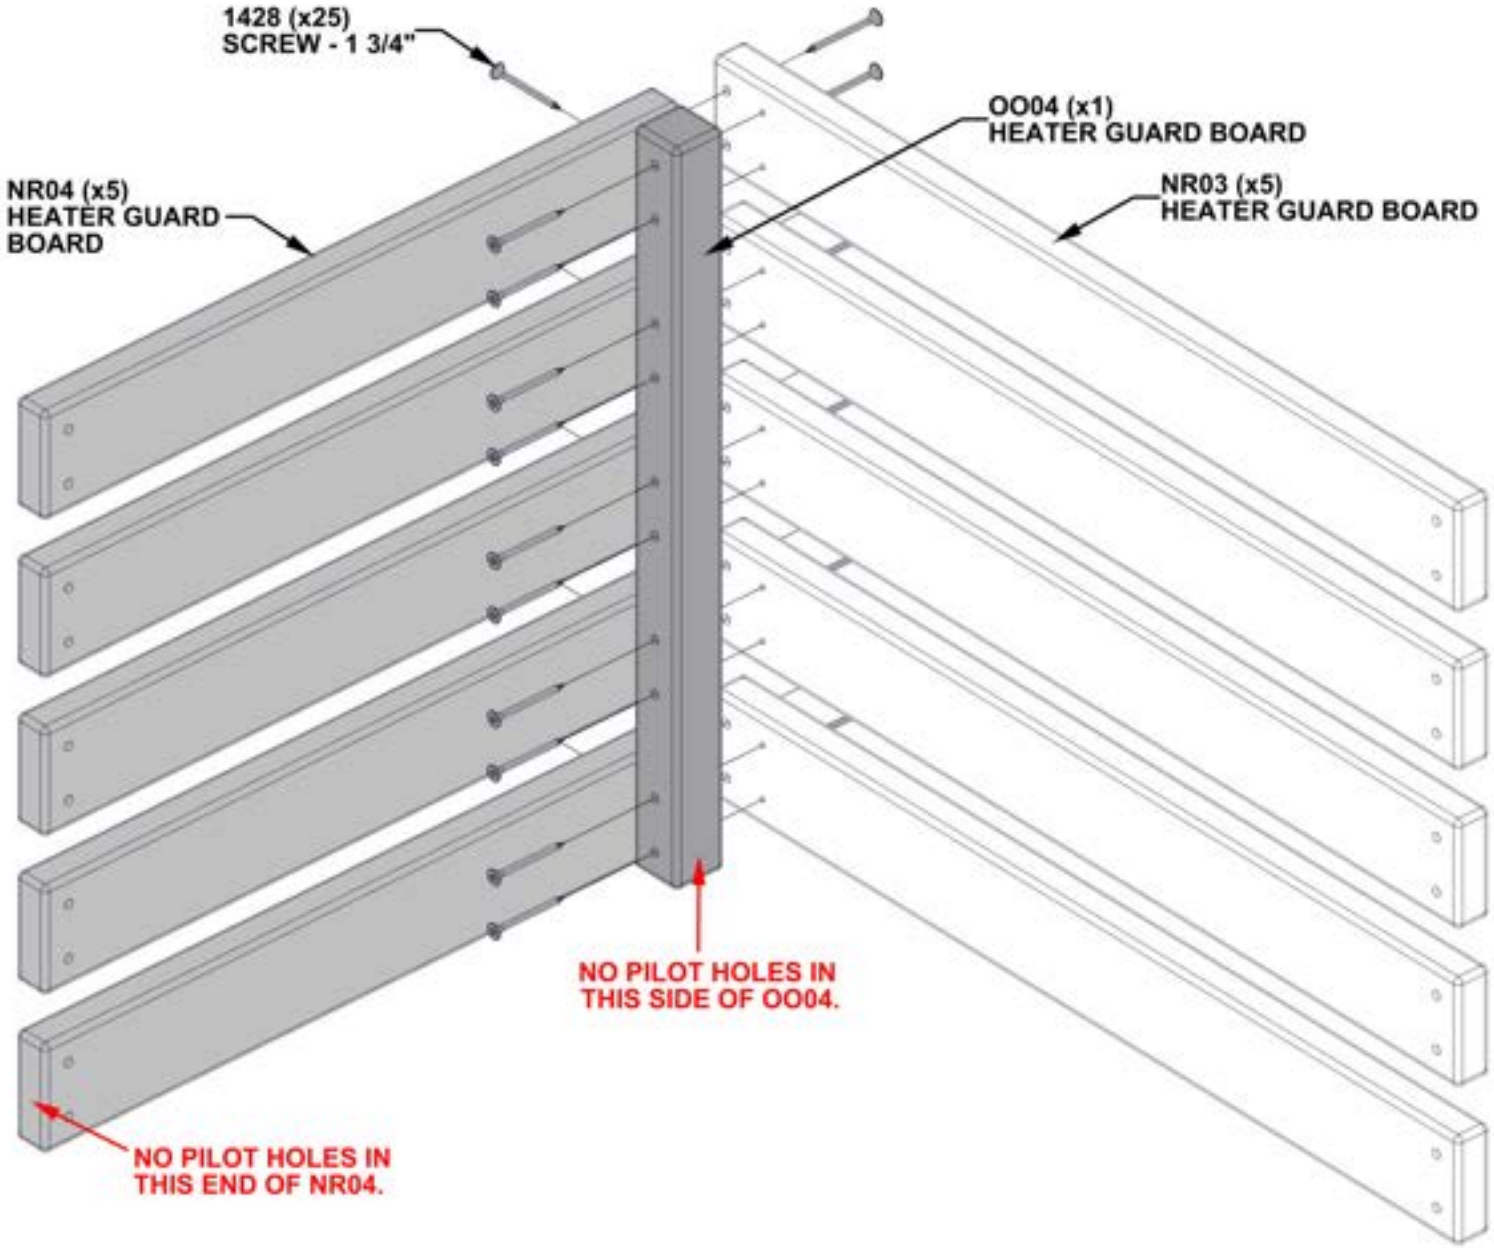


STEP 31 - HEATER GUARD ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
20	H101428	SCREW TFH 8X1 3/4 SS-BLK



OO03 (x2) HEATER GUARD BOARD - W4L22038
1 3/16"x1 3/16"x16 1/8" (30x30x410)


- ALIGN THROUGH HOLES WITH PILOT HOLES AND ATTACH AS SHOWN.

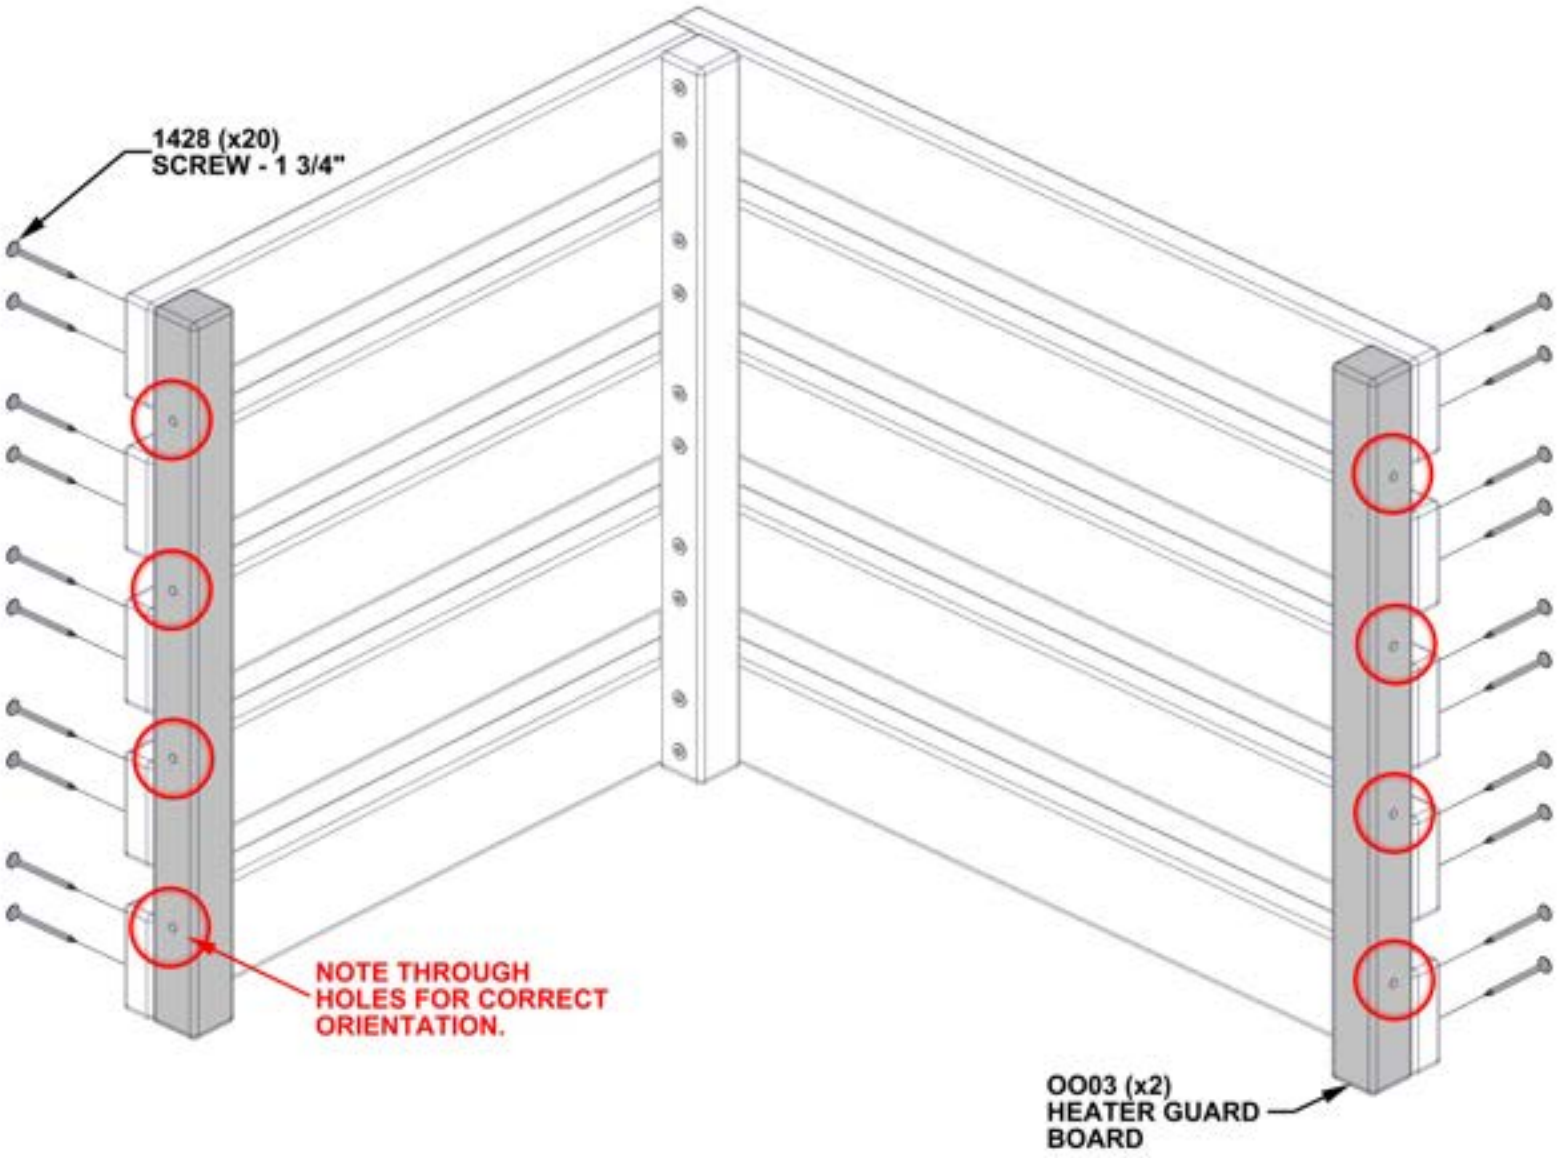



STEP 32 - HEATER GUARD ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
8	H101429	SCREW TFH 8X2 SS-BLK

- MEASURE FROM THE SAUNA FLOOR TO THE BOTTOM OF THE HEATER GUARD ASSEMBLY FOR CORRECT PLACEMENT.
- ENSURE HEATER GUARD CLEAT IS FLUSH WITH OUTSIDE OF DOOR FRAME AS SHOWN.
- ONCE THE HEATER GUARD ASSEMBLY IS CORRECTLY LOCATED, ATTACH WITH SCREWS.

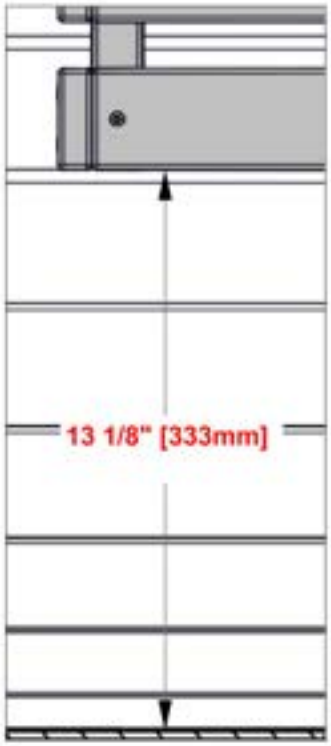


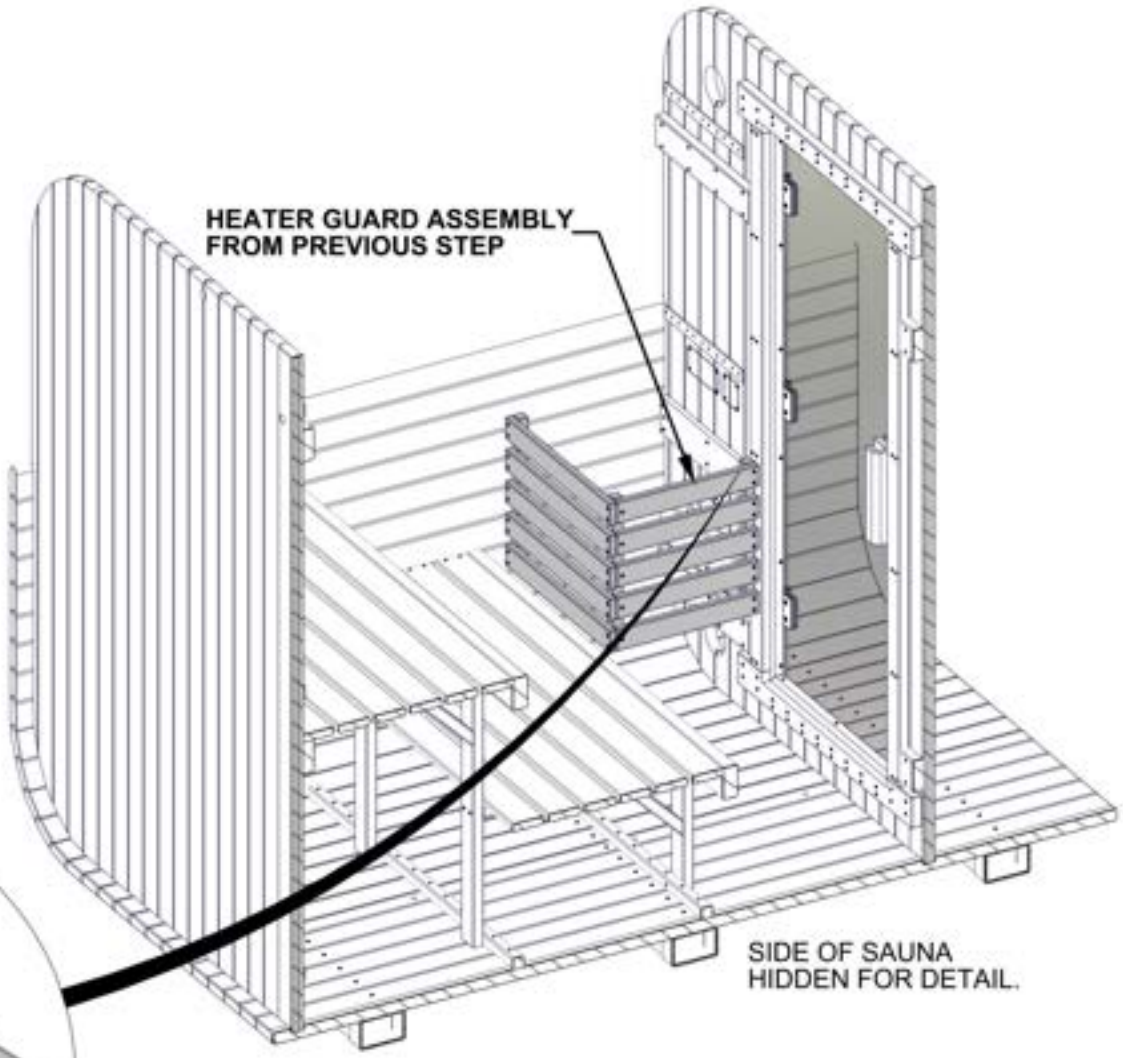

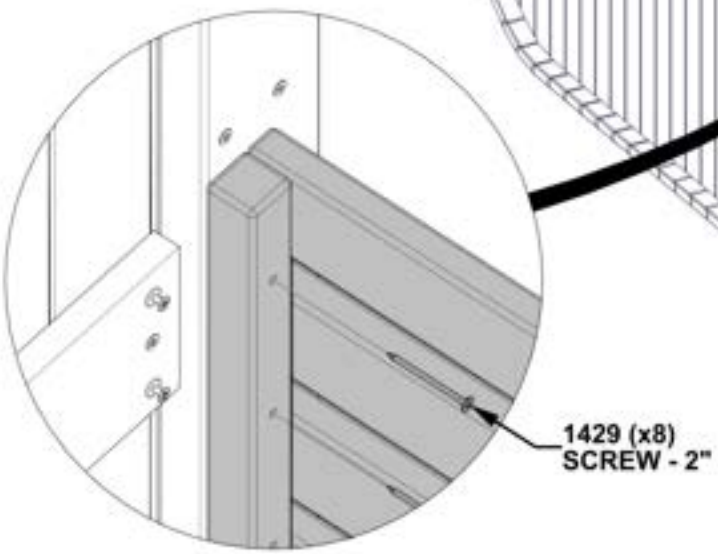

STEP 33 - SAUNA ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
8	H101428	SCREW TFH 8X1 3/4 SS-BLK

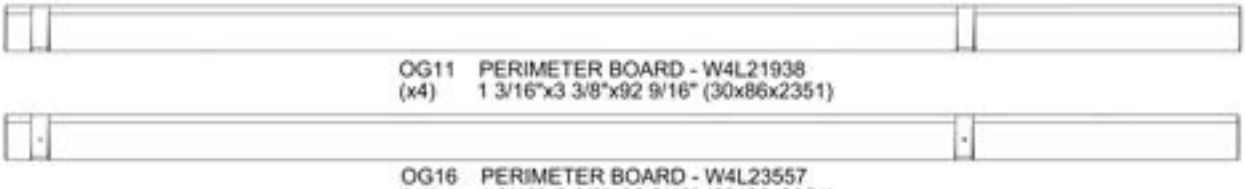

OG11 (x4) PERIMETER BOARD - W4L21938
1 3/16"x3 3/8"x92 9/16" (30x86x2351)


OG16 (x4) PERIMETER BOARD - W4L23557
1 3/16"x3 3/8"x92 9/16" (30x86x2351)

- ALIGN GROOVE IN PERIMETER BOARDS WITH BOTH FRONT WALL AND BACK WALL ASSEMBLIES.
- STARTING WITH AN OG11 BOARD, WORK UPWARDS STACKING BOARDS IN THE ORDER SHOWN.
- ATTACH EACH OG16 WITH SCREWS BEFORE THE NEXT BOARD IS INSTALLED.

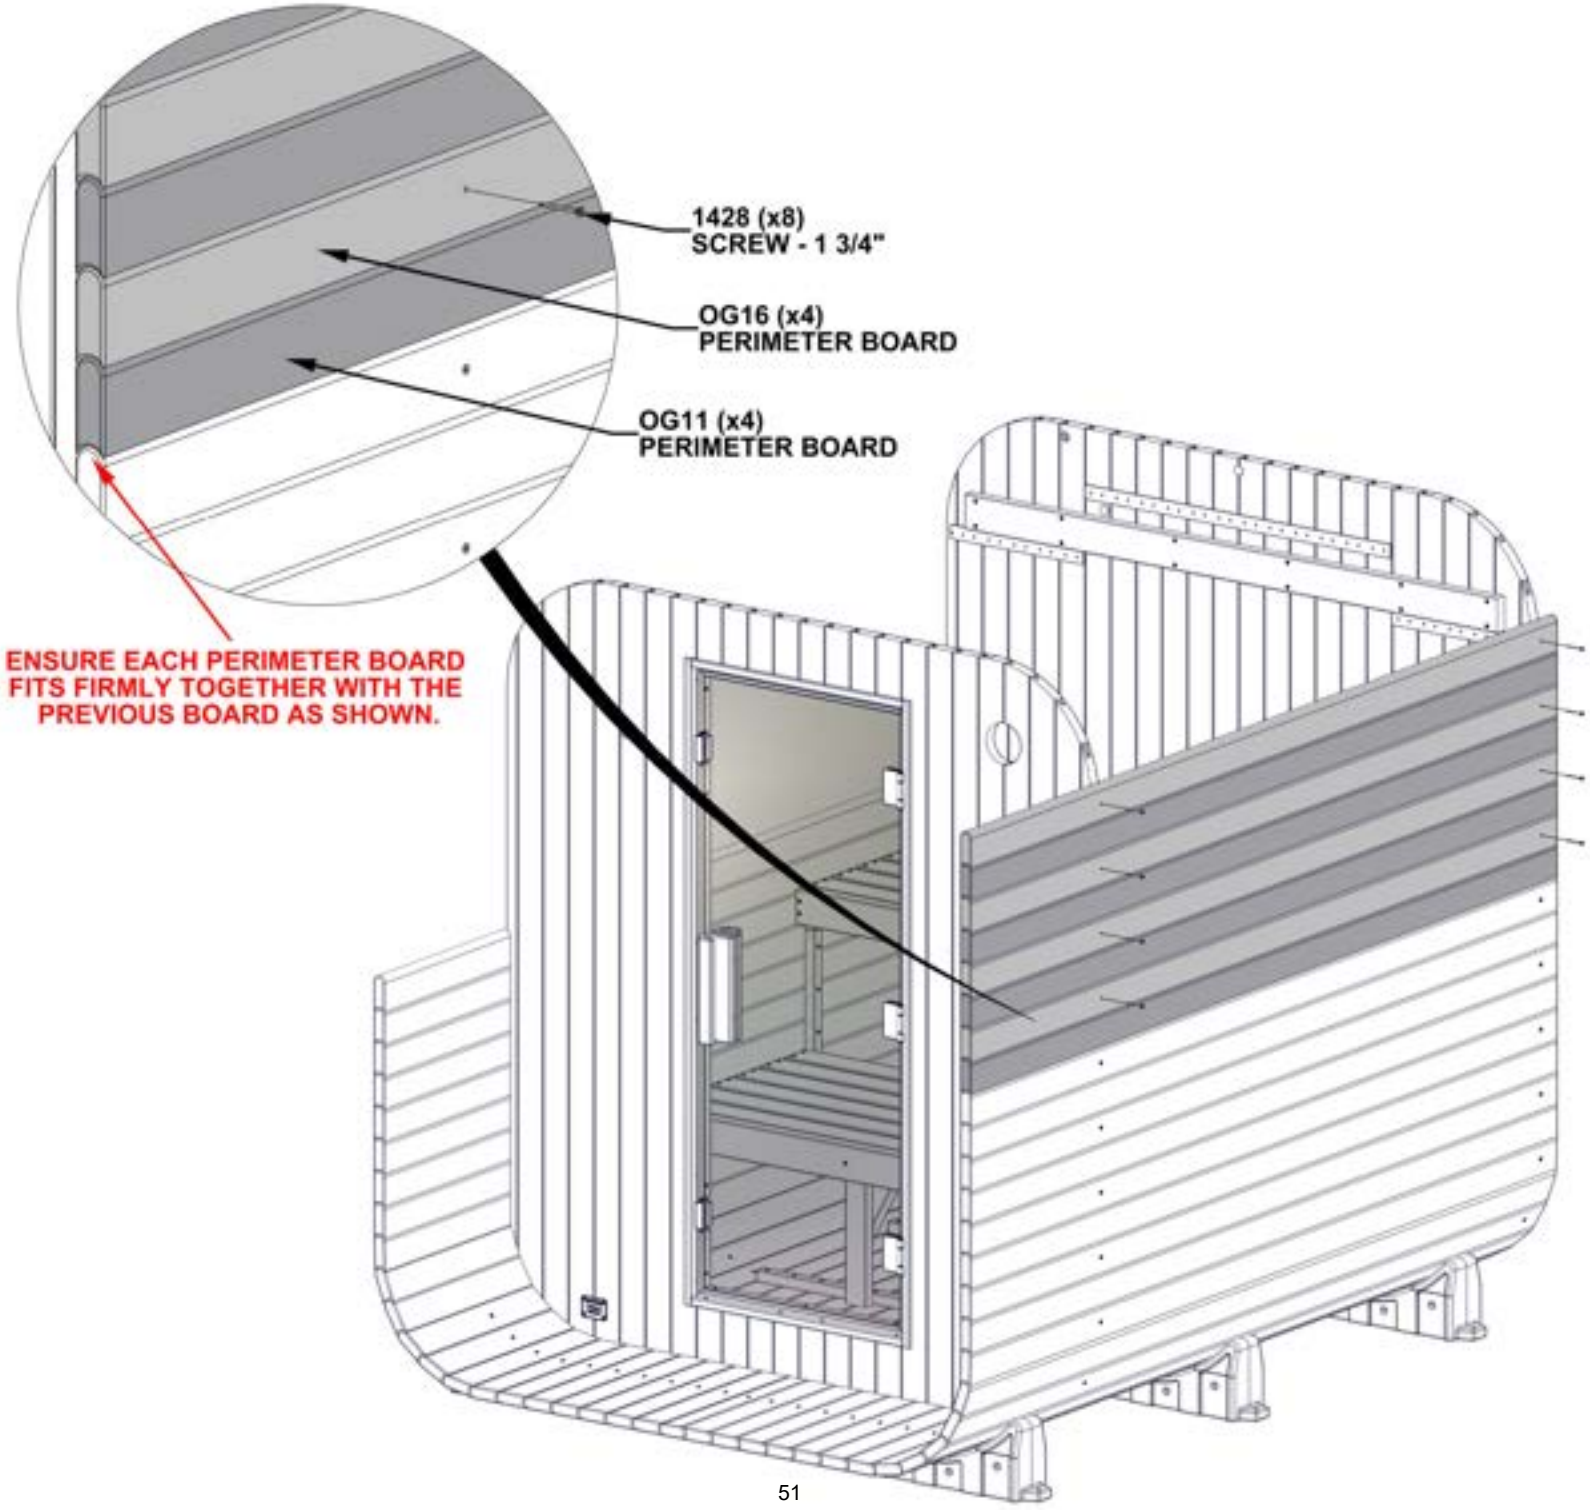

STEP 34 - SAUNA ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
8	H101428	SCREW TFH 8X1 3/4 SS-BLK

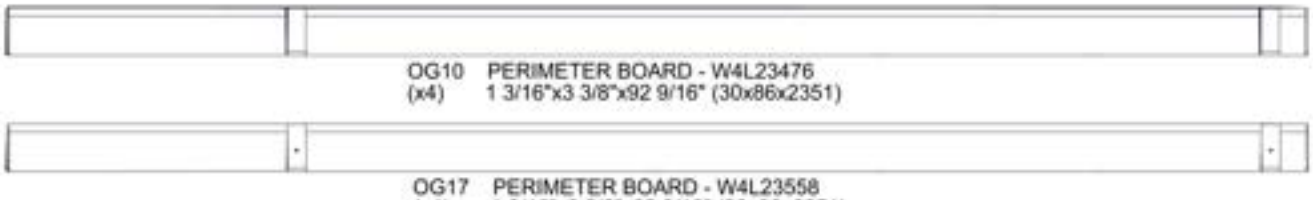

OG10 (x4) PERIMETER BOARD - W4L23476
1 3/16"x3 3/8"x92 9/16" (30x86x2351)

OG17 (x4) PERIMETER BOARD - W4L23558
1 3/16"x3 3/8"x92 9/16" (30x86x2351)

- ALIGN GROOVE IN PERIMETER BOARDS WITH BOTH FRONT WALL AND BACK WALL ASSEMBLIES.
- STARTING WITH AN OG10 BOARD, WORK UPWARDS STACKING BOARDS IN THE ORDER SHOWN.
- ATTACH EACH OG17 WITH SCREWS BEFORE THE NEXT BOARD IS INSTALLED.

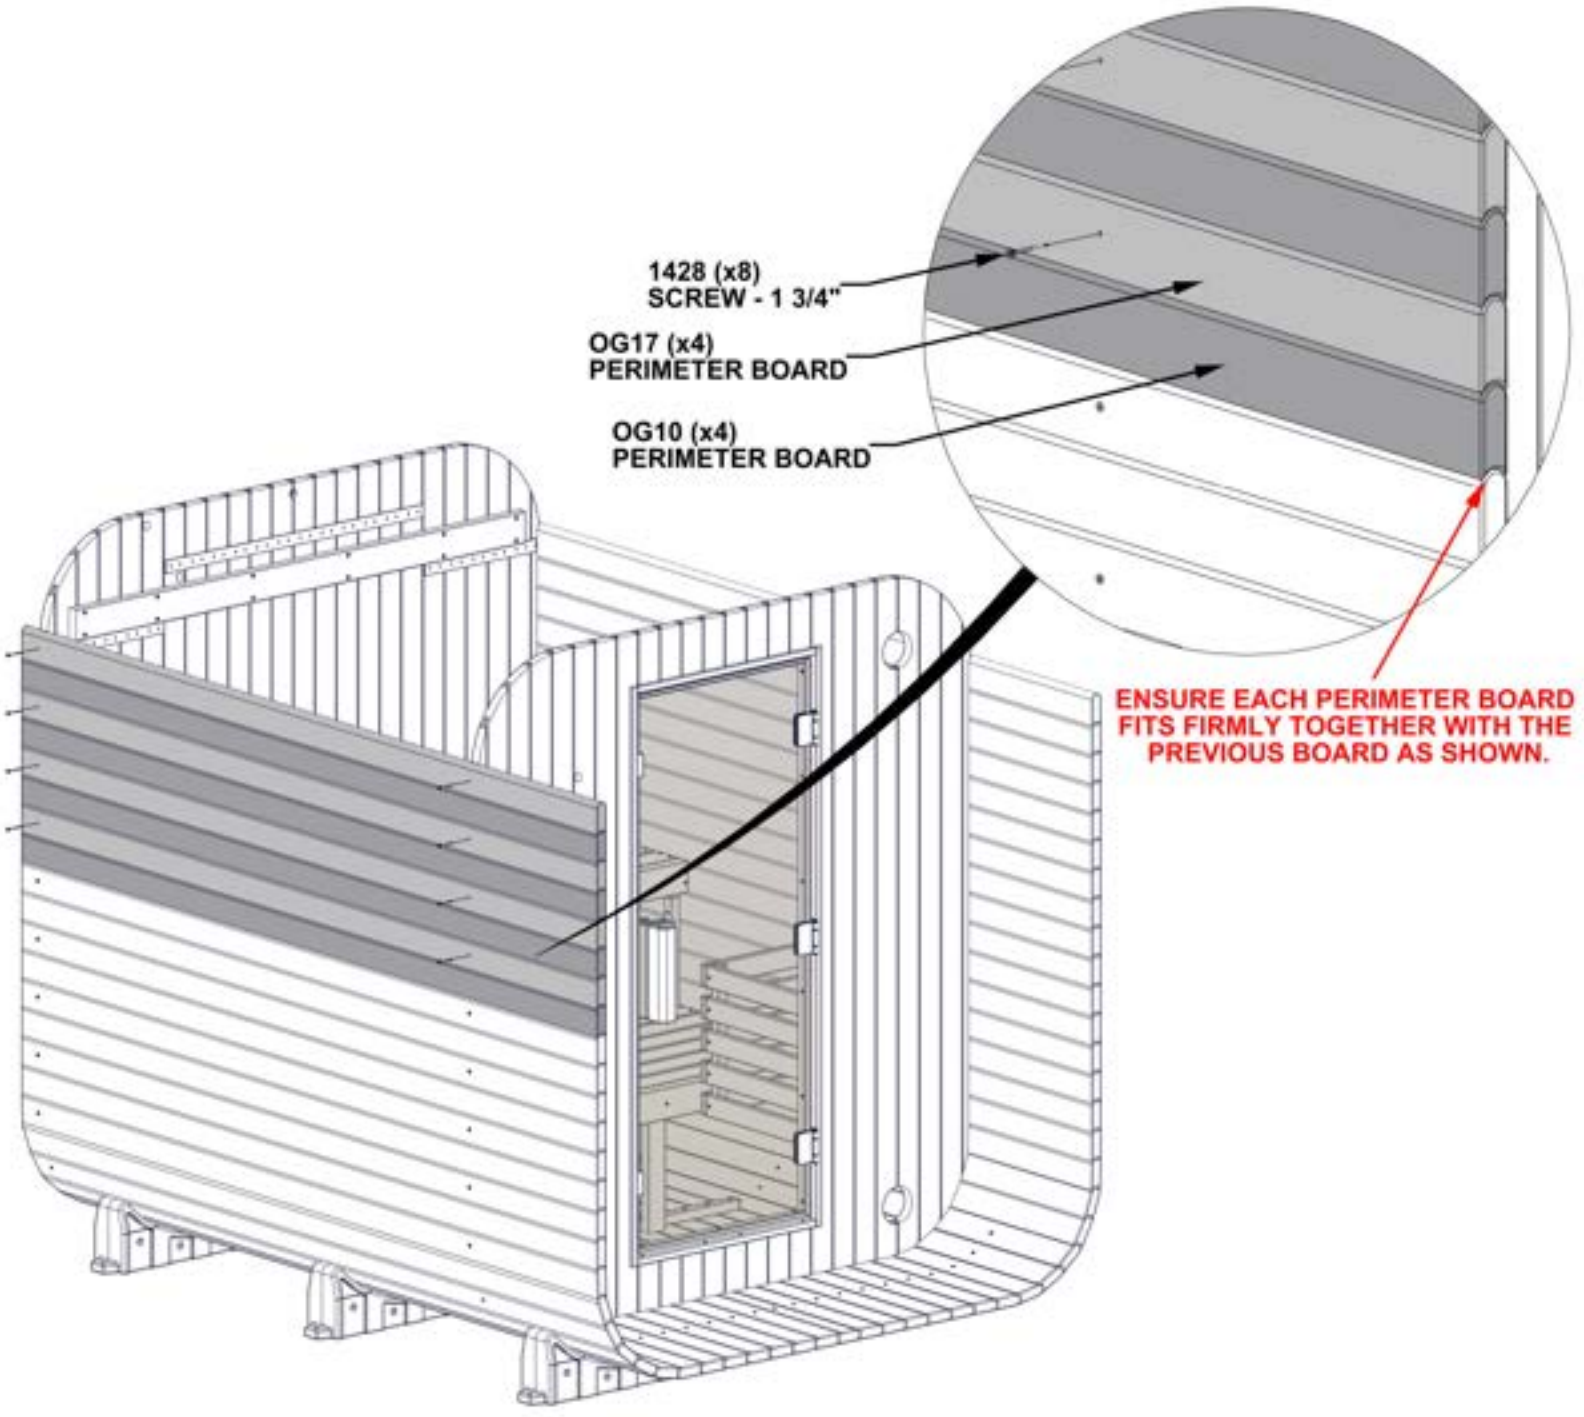

STEP 35 - SAUNA ASSEMBLY




OG10 PERIMETER BOARD - W4L23476
(x12) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)



OG11 PERIMETER BOARD - W4L21938
(x12) 1 3/16"x3 3/8"x92 9/16" (30x86x2351)

- A ROPE OR STRAP IS SUGGESTED TO BE LOOSELY TIED/ATTACHED AROUND THE SAUNA TO HELP HOLD BOARDS IN PLACE.
- ALIGN GROOVE IN PERIMETER BOARDS WITH BOTH FRONT WALL AND BACK WALL ASSEMBLIES.
- WORKING UPWARDS, STACK PERIMETER BOARDS UP BOTH SIDES.
- FASTEN ONE OR TWO OF THE PERIMETER BOARDS TO THE WALLS WITH A SMALL NAIL TO HOLD IN PLACE.

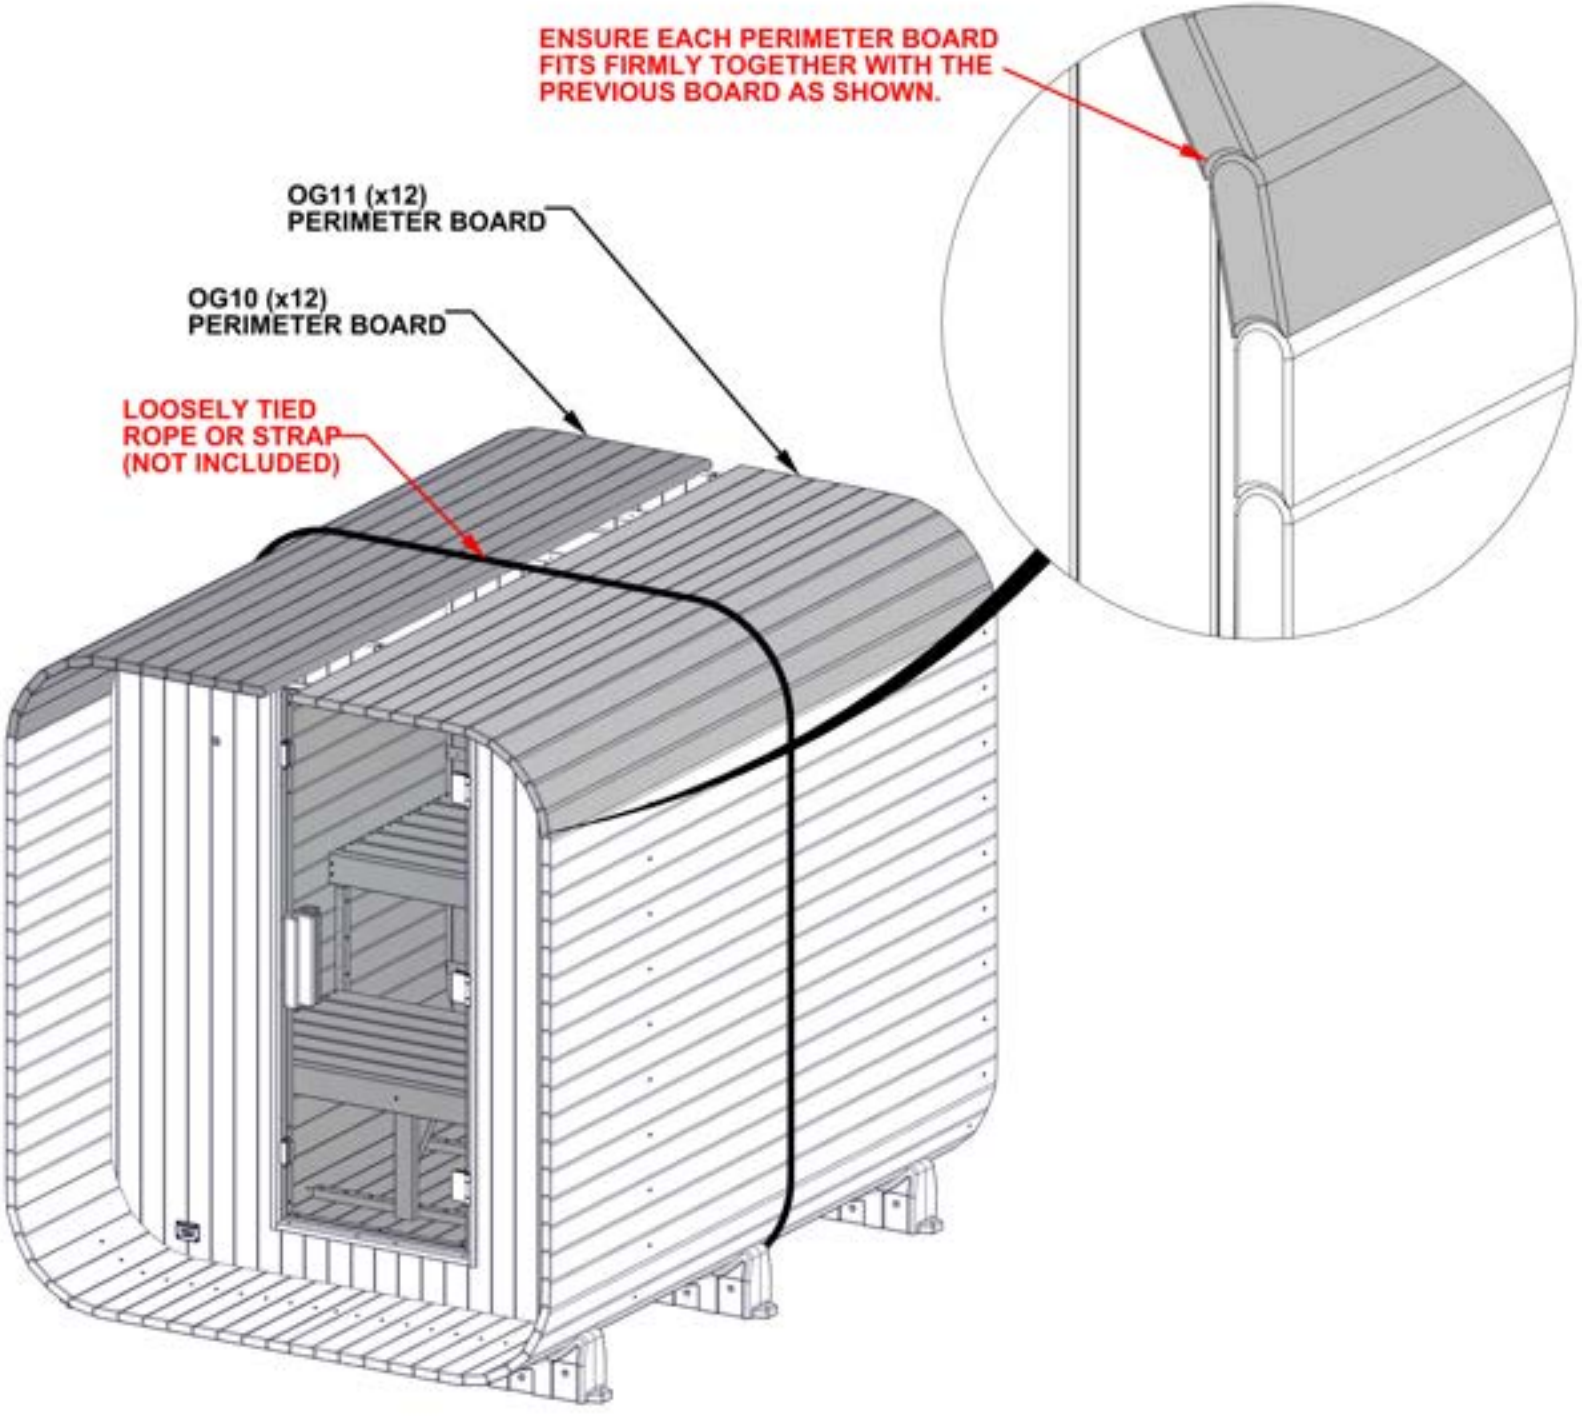


STEP 36 - SAUNA ASSEMBLY



BS01 (x1) BOARD SPACER KIT - W2A05412




OR05 (x1) PERIMETER BOARD - W4L23477
1 3/16"x1 13/16"x92 9/16" (30x46x2351)



OR06 (x1) PERIMETER BOARD - W4L23478
1 3/16"x1 13/16"x92 9/16" (30x46x2351)

- **INSTALL OR05 AND OR06 AS SHOWN ENSURING THEY FIT FIRMLY TOGETHER WITH PREVIOUSLY INSTALLED BOARDS.**
- **IT IS CRITICAL THE BOARDS FIT TIGHTLY TOGETHER.**
- **USE THE BOARD SPACER KIT AS NEEDED TO ACHIEVE A TIGHT FIT.**
- **FILL ANY GAP LEFT BETWEEN OR05 AND OR06 WITH A PROPERLY SIZED SPACER BOARD FROM THE SPACER KIT.**
- **IF THE GAP IS NOT BIG ENOUGH TO FIT OR05 AND OR06, USE THE NARROWER PERIMETER BOARDS IN THE SPACER KIT.**

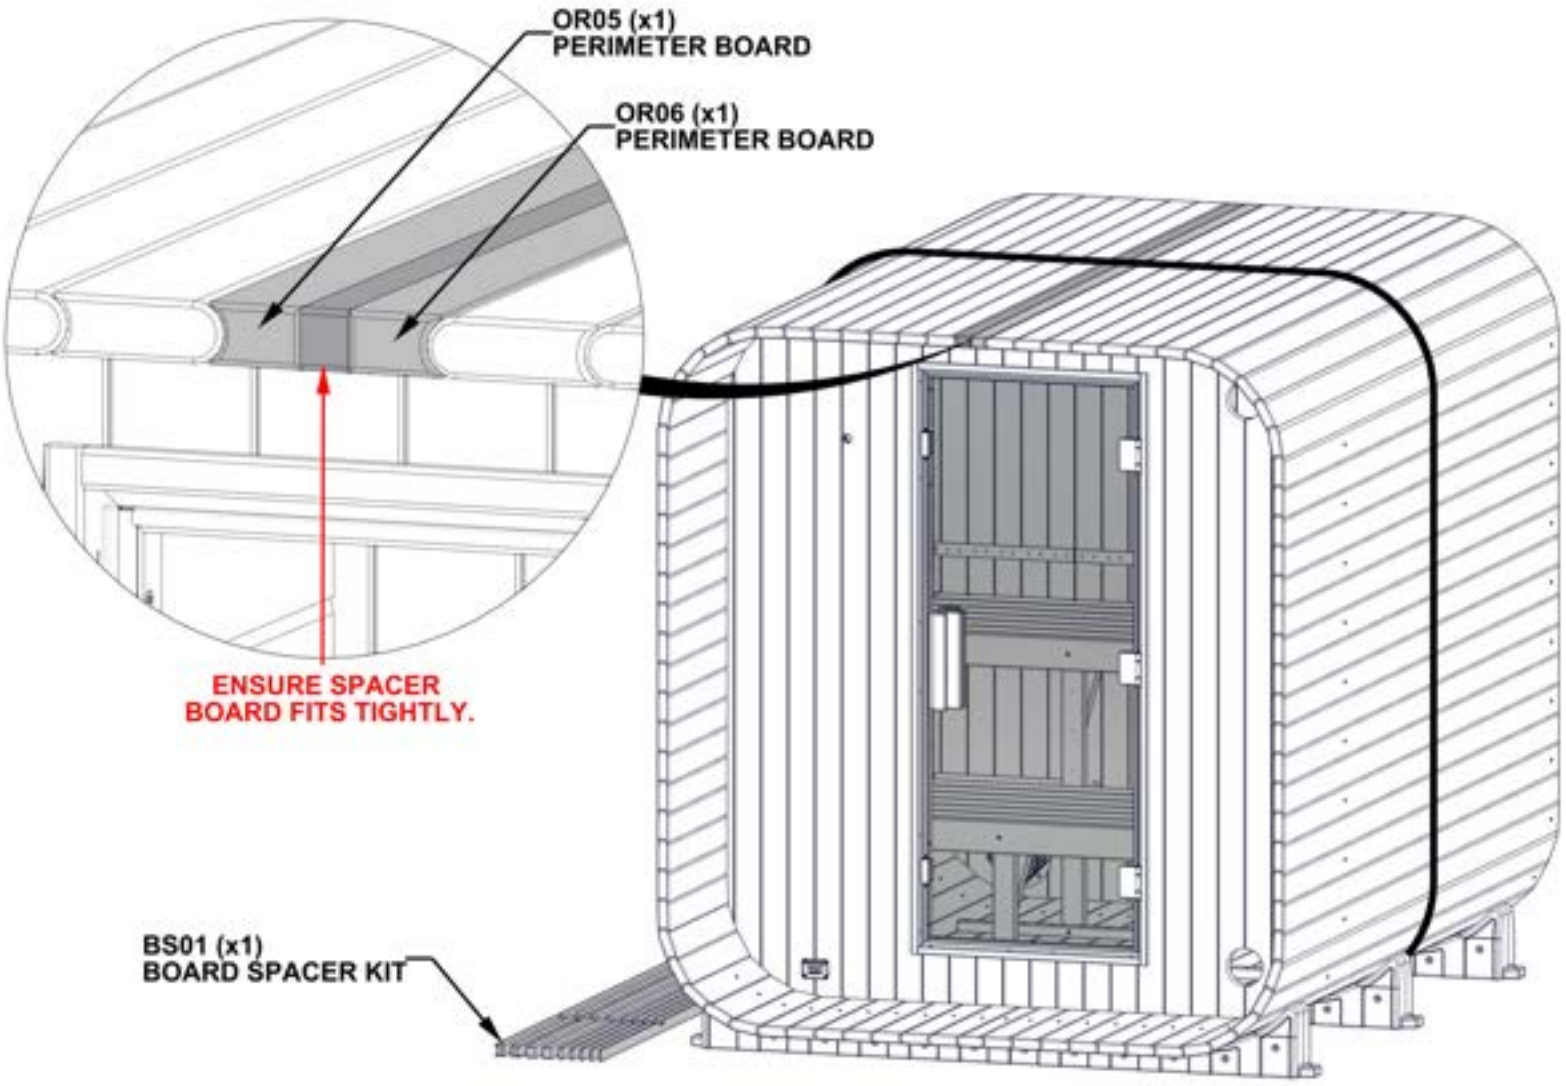

STEP 37 - STRAPPING ASSEMBLY




A4M05671 STRAPPING CINCH
(x4)



A4M05662 STRAPPING
(x4)

- WRAP STRAPPING AROUND SAUNA AS SHOWN.
- POSITION TWO STRAPS TO COVER THE SCREWS INSTALLED IN STEPS 9 AND 10.
- FRONT STRAP WILL BE 2" [50mm] FROM THE FRONT/BACK EDGE OF THE SAUNA, AND FOURTH STRAP WILL BE LOCATED 51 1/16" [1297mm] FROM THE FRONT STRAP AS SHOWN. OTHERWISE STRAPPING MAY INTERFERE WITH ROOF SHEET SCREWS.
- INSERT STRAPPING CINCH INSERTS INTO THE EYES ON STRAPPING.
- INSERT THE ALL THREAD THROUGH THE INSERTS AND CONNECT HARDWARE AS SHOWN.
- BEFORE TIGHTENING, VERIFY STRAPPING IS PROPERLY POSITIONED AND STRAIGHT.
- THE STRAPPING CINCHES CAN BE EITHER ALIGNED OR STAGGERED BASED ON PERSONAL PREFERENCE.
- TIGHTEN ALL NUTS EVENLY.
- REMOVE ROPE/STRAP IF USED FROM PREVIOUS STEP.

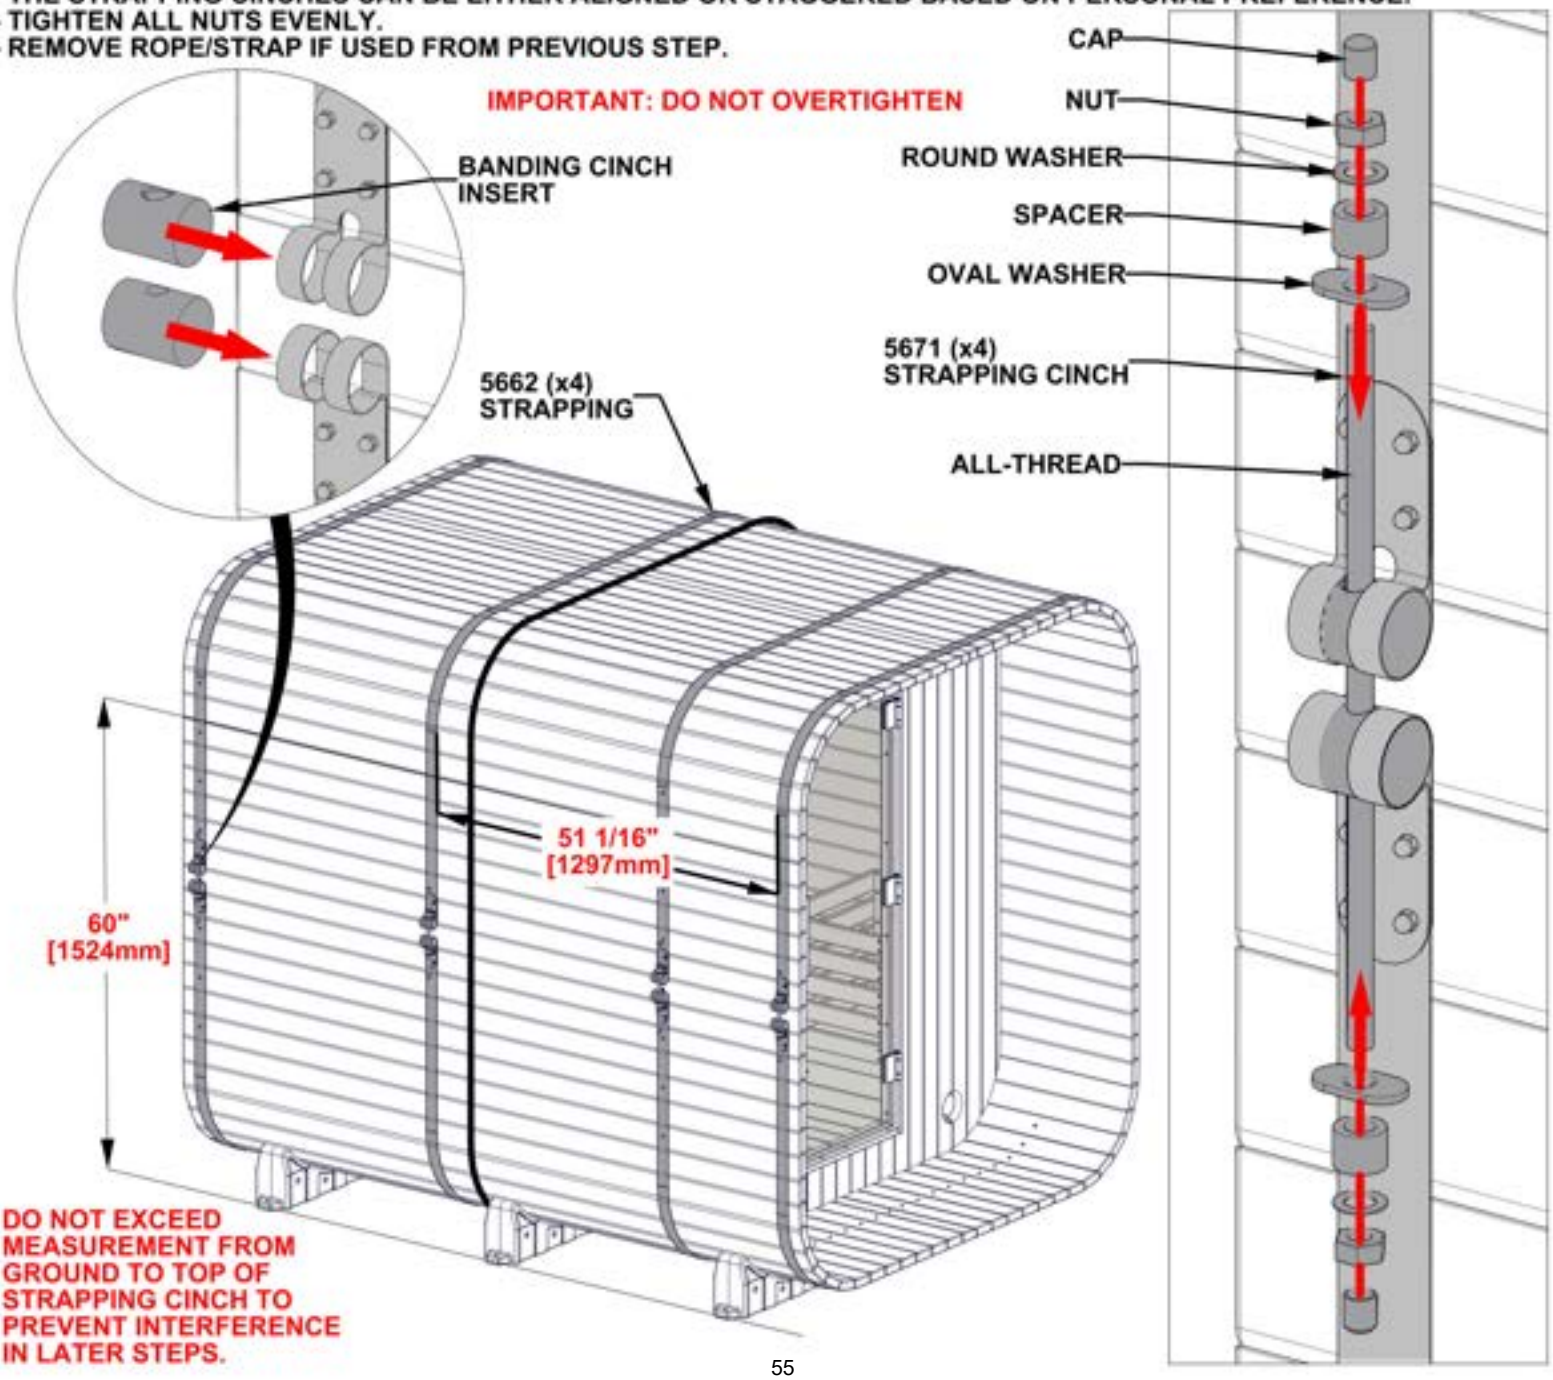


STEP 38 - VENT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H101426	SCREW TFH 8X1 1/4 SS-BLK




A4M05592 VENT ASSEMBLY
(x1)

- BEFORE ATTACHING VENT COVER, UNSCREW ADJUSTABLE VENT COVER FROM VENT BASE INSERT.
- ONCE VENT BASE INSERT IS ATTACHED, SCREW ADJUSTABLE VENT COVER BACK IN.

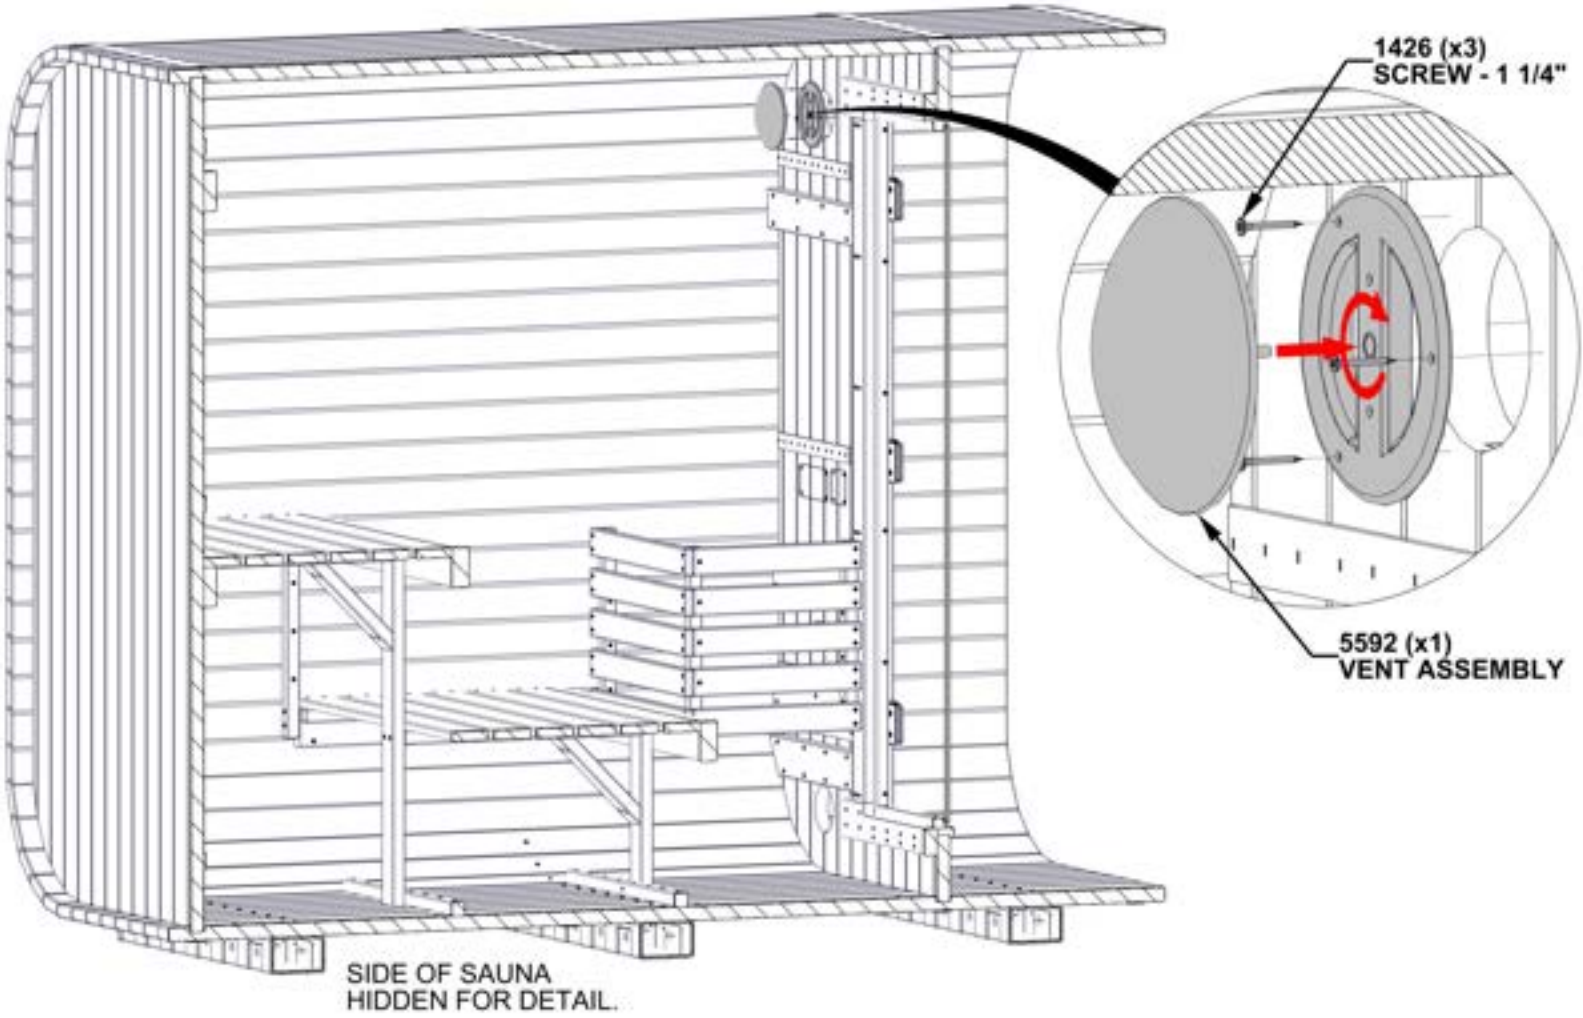

STEP 39 - VENT ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
6	H101438	SCREW TWH 8x3/4 SS-BLK

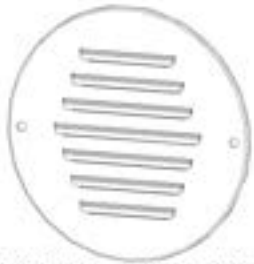



A4M05285 VENT COVER
(x2)



A4M07415 VENT COVER
(x1)

- INSERT 5285 VENT COVERS INTO FRONT WALL PANEL HOLES AND ATTACH AS SHOWN.
- CENTER 7415 VENT COVER OVER BACK WALL PANEL HOLE AND ATTACH AS SHOWN.

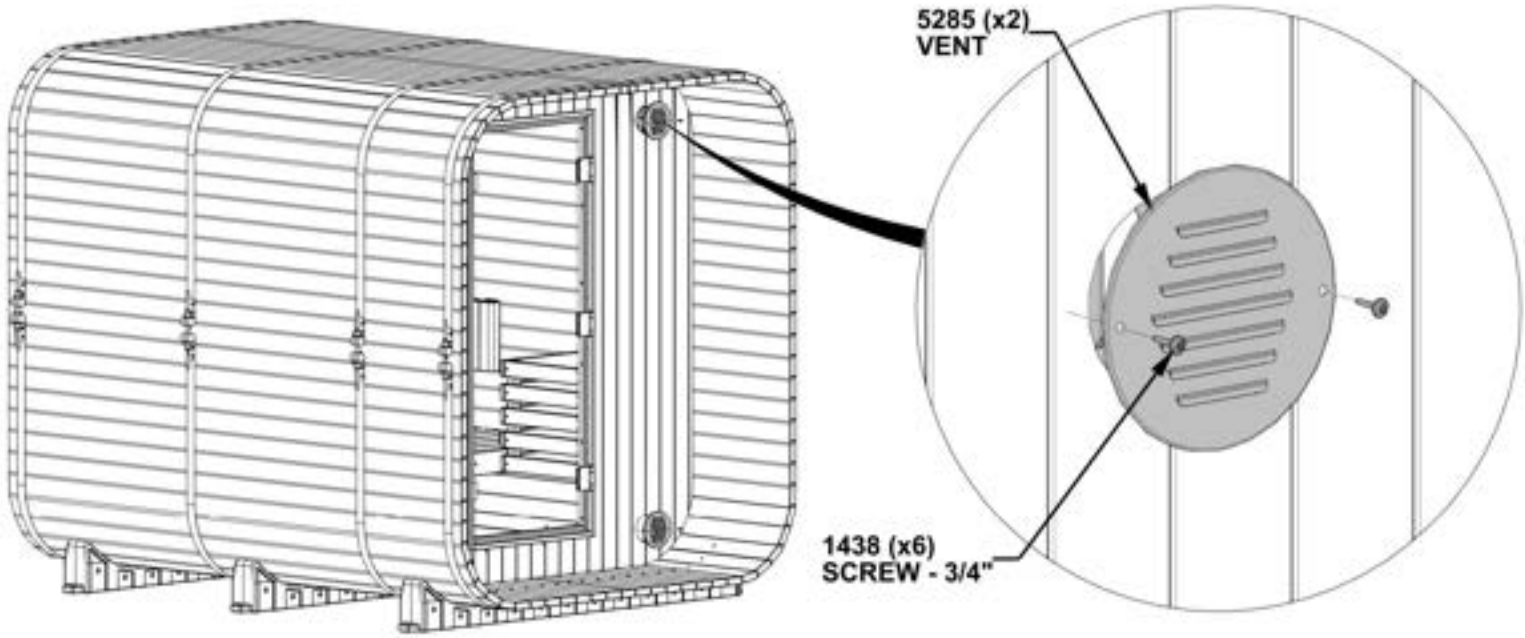

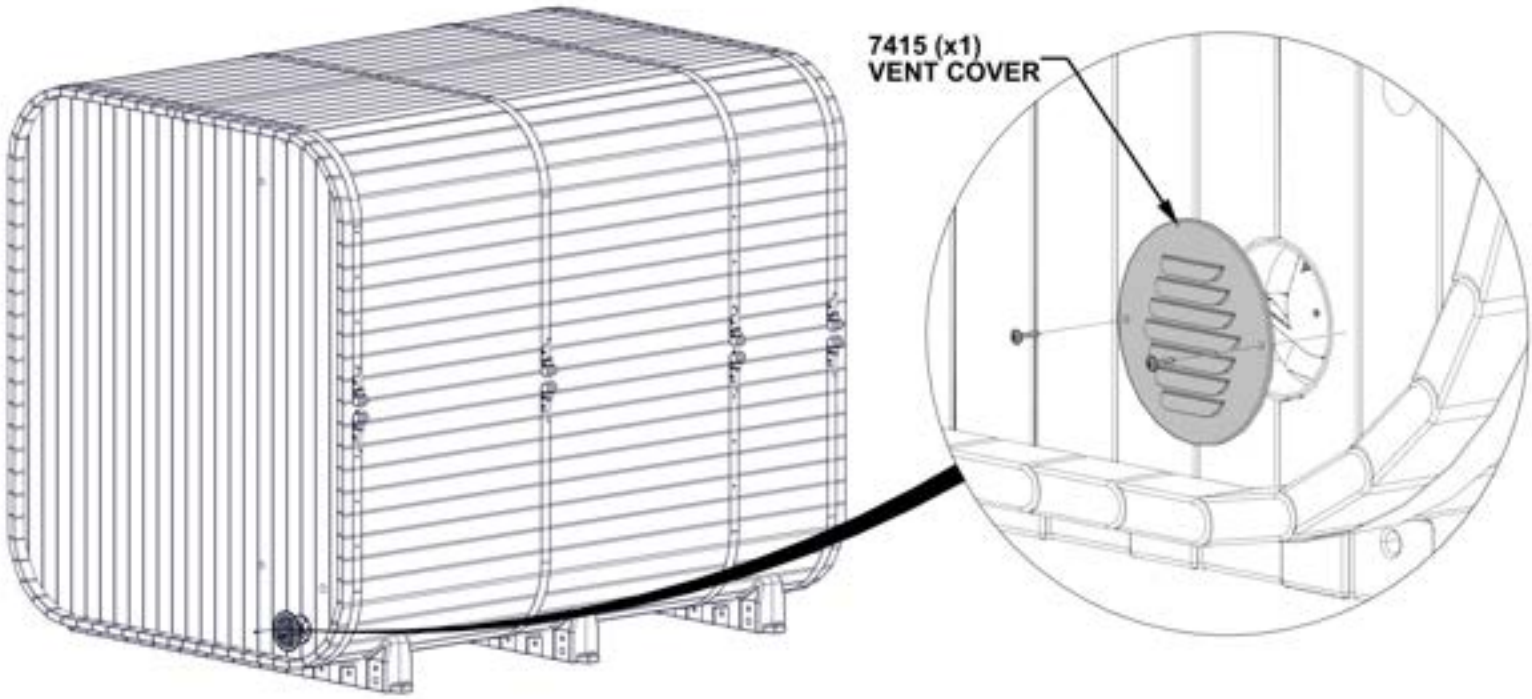

STEP 40 - TRIM ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
22	H101429	SCREW TFH 8X2 SS-BLK



NR01 (x1) TRIM - W4L22033
13/16"x2 3/8"x44 1/2" (20x60x1130)




NG02 (x2) TRIM - W4L22032
13/16"x3 1/8"x9 9/16" (20x80x243)




NR02 (x2) TRIM - W4L22034
13/16"x2 3/8"x4 1/4" (20x60x108)

- CENTER NR01 BOARD ON SAUNA FRONT.
- ENSURE NOTCH IS FLUSH WITH TOP OF SAUNA AS SHOWN AND ATTACH.
- ALIGN NG02 AND NR02 BOARDS WITH NR01 AND ATTACH.

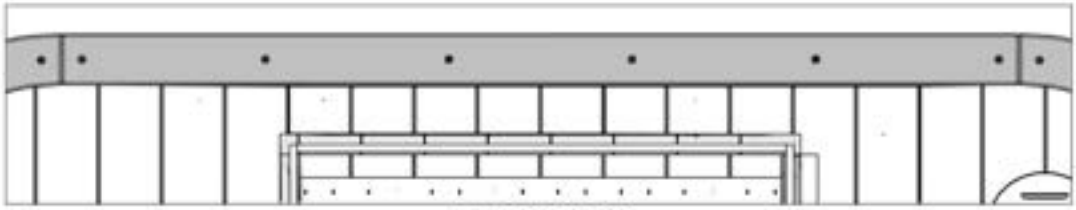

FRONT VIEW

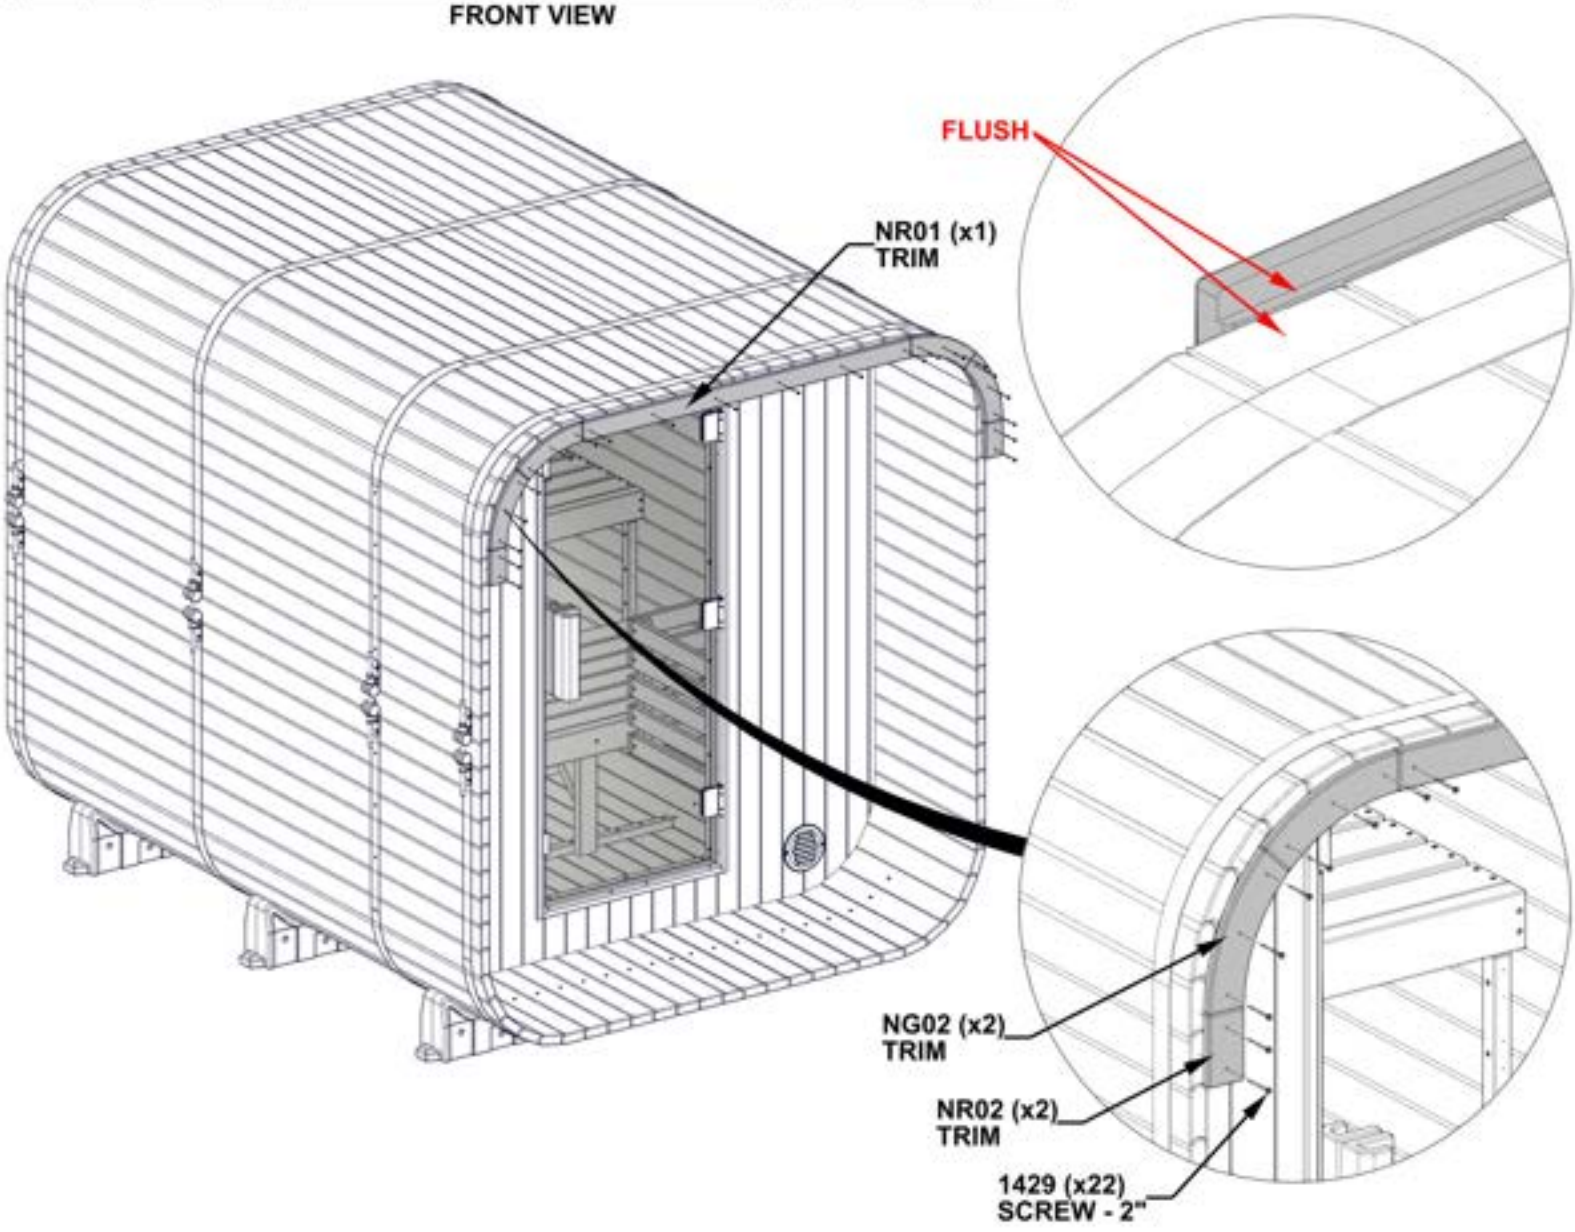


STEP 41 - ROOF ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
40	H101480	SCREW SELF TAPPING #9x3/4 BLK



A4M05664 29GA SHEETING
(x5)

- WARNING: USE GLOVES WHEN HANDLING STEEL SHEETING.
- IMPORTANT: REMOVE BLUE FILM BEFORE INSTALLATION.
- INSTALL SHEETS STARTING WITH THE TOP MIDDLE SHEET AS SHOWN.
- ENSURE THAT THE SHEET IS CENTERED ON TOP OF THE SAUNA.
- CONTINUE INSTALLING SHEETS ON THE RIGHT SIDE OF SAUNA ENSURING CORRECT OVERLAP.
- AFTER THE FIRST 3 SHEETS HAVE BEEN INSTALLED, INSTALL THE 2 REMAINING LEFT SHEETS.
- IMPORTANT: EACH UPPER SHEET MUST OVERLAP THE LOWER SHEET. THIS IS CRITICAL TO AVOID LEAKING.

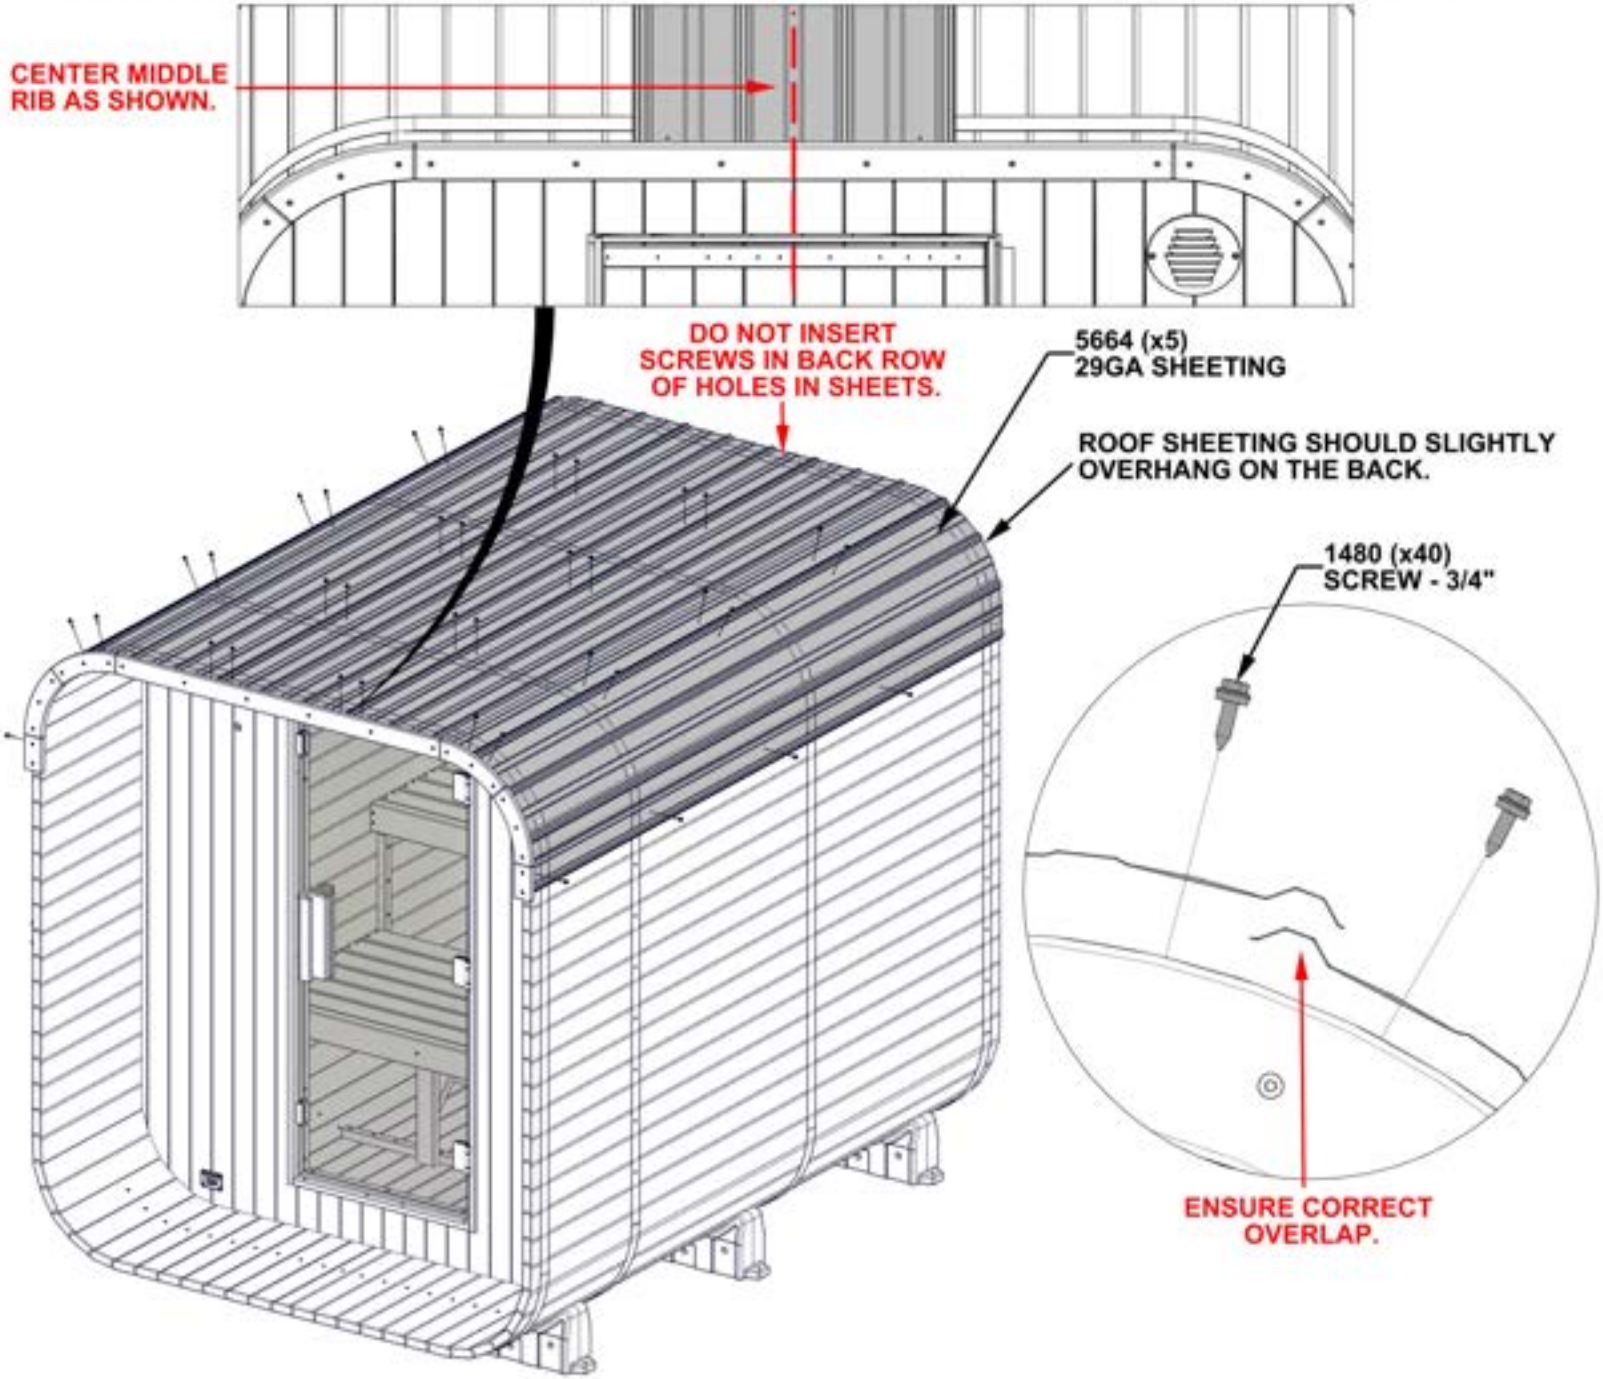

STEP 42 - DRIP EDGE ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
10	H101480	SCREW SELF TAPPING #9x3/4 BLK




A4M07213 DRIP EDGE
(x2)




A4M07214 DRIP EDGE
(x1)

- WARNING: USE GLOVES WHEN HANDLING STEEL SHEETING.
- IMPORTANT: REMOVE BLUE FILM BEFORE INSTALLATION.
- ENSURE 7214 IS OVERLAPPED OVER 7213 TO SHED WATER
- SLIDE DRIP EDGE UNDER ROOF SHEETS AND ATTACH AS SHOWN.
- SLOTS IN DRIP EDGE WILL ALIGN WITH HOLES IN ROOF SHEETS.

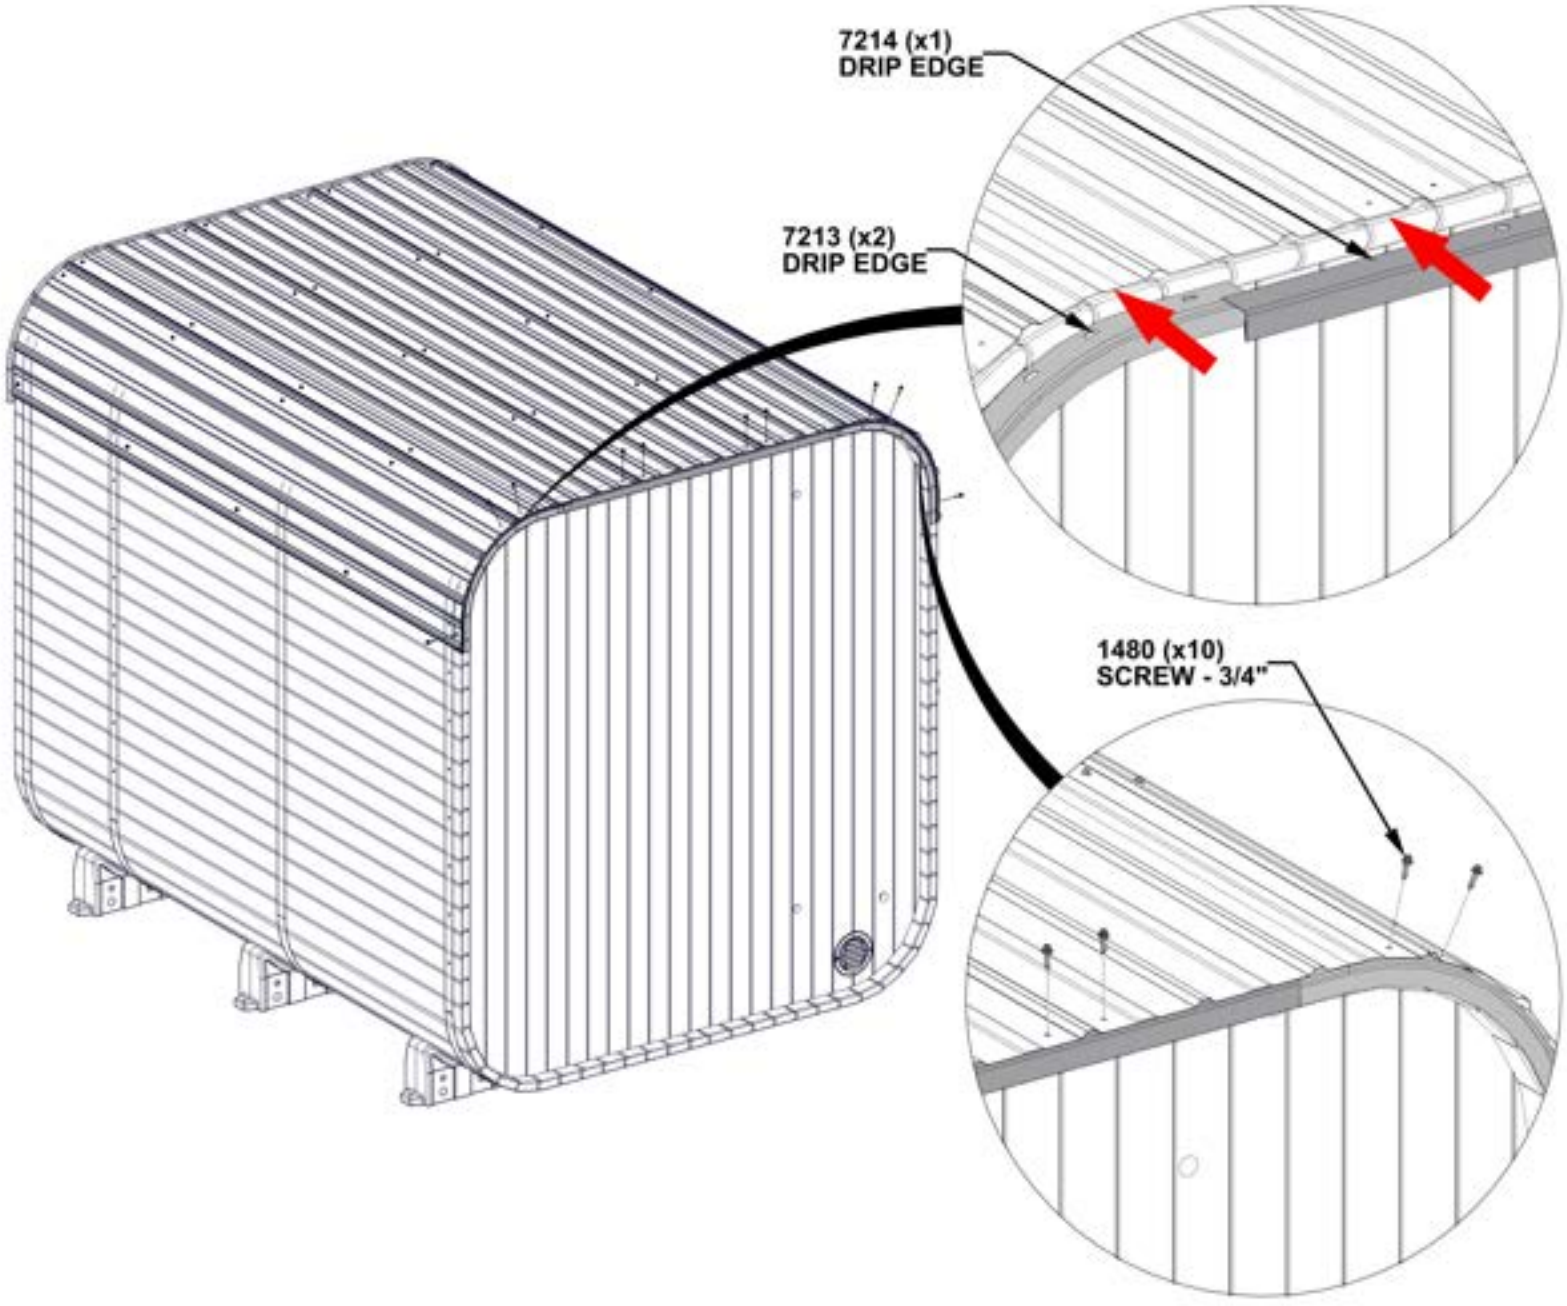


STEP 43 - LIGHT ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
4	H101437	SCREW TWH 8x5/8 SS-BLK

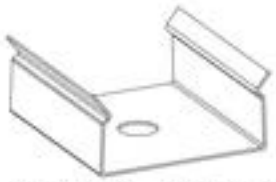

A6P01493-04 LIGHT CLIP
(x4)

- ATTACH LIGHT CLIPS IN APPROXIMATE LOCATIONS SHOWN.
- USE DIMENSIONS GIVEN BETWEEN LIGHT CLIPS AND CENTER ON BOARDS.

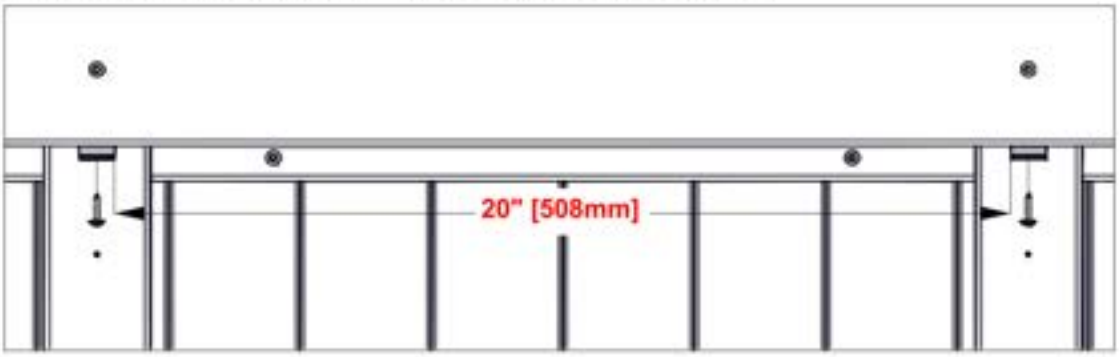

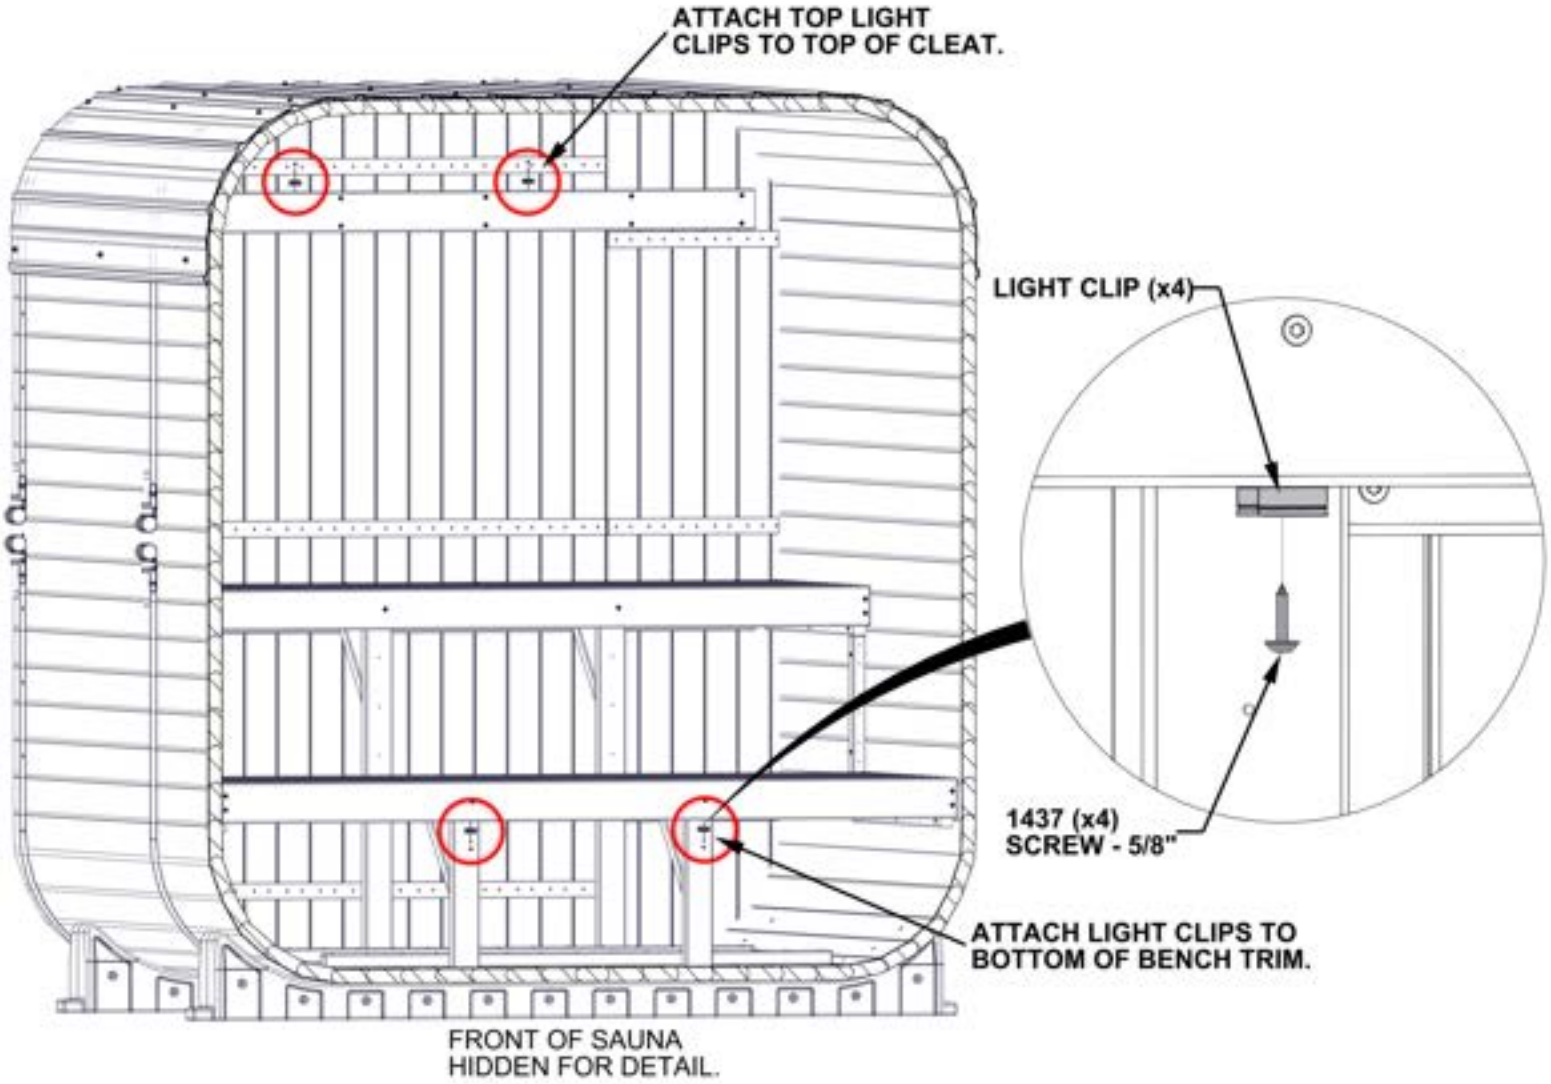


STEP 44 - LIGHT ASSEMBLY




A6P01691 LED LIGHT
(x2)

- BEFORE CLIPPING LIGHTS INTO PLACE, RUN CORDS THROUGH CORRESPONDING THROUGH HOLES IN BACK WALL.
- SNAP LED LIGHTS INTO LIGHT CLIPS.

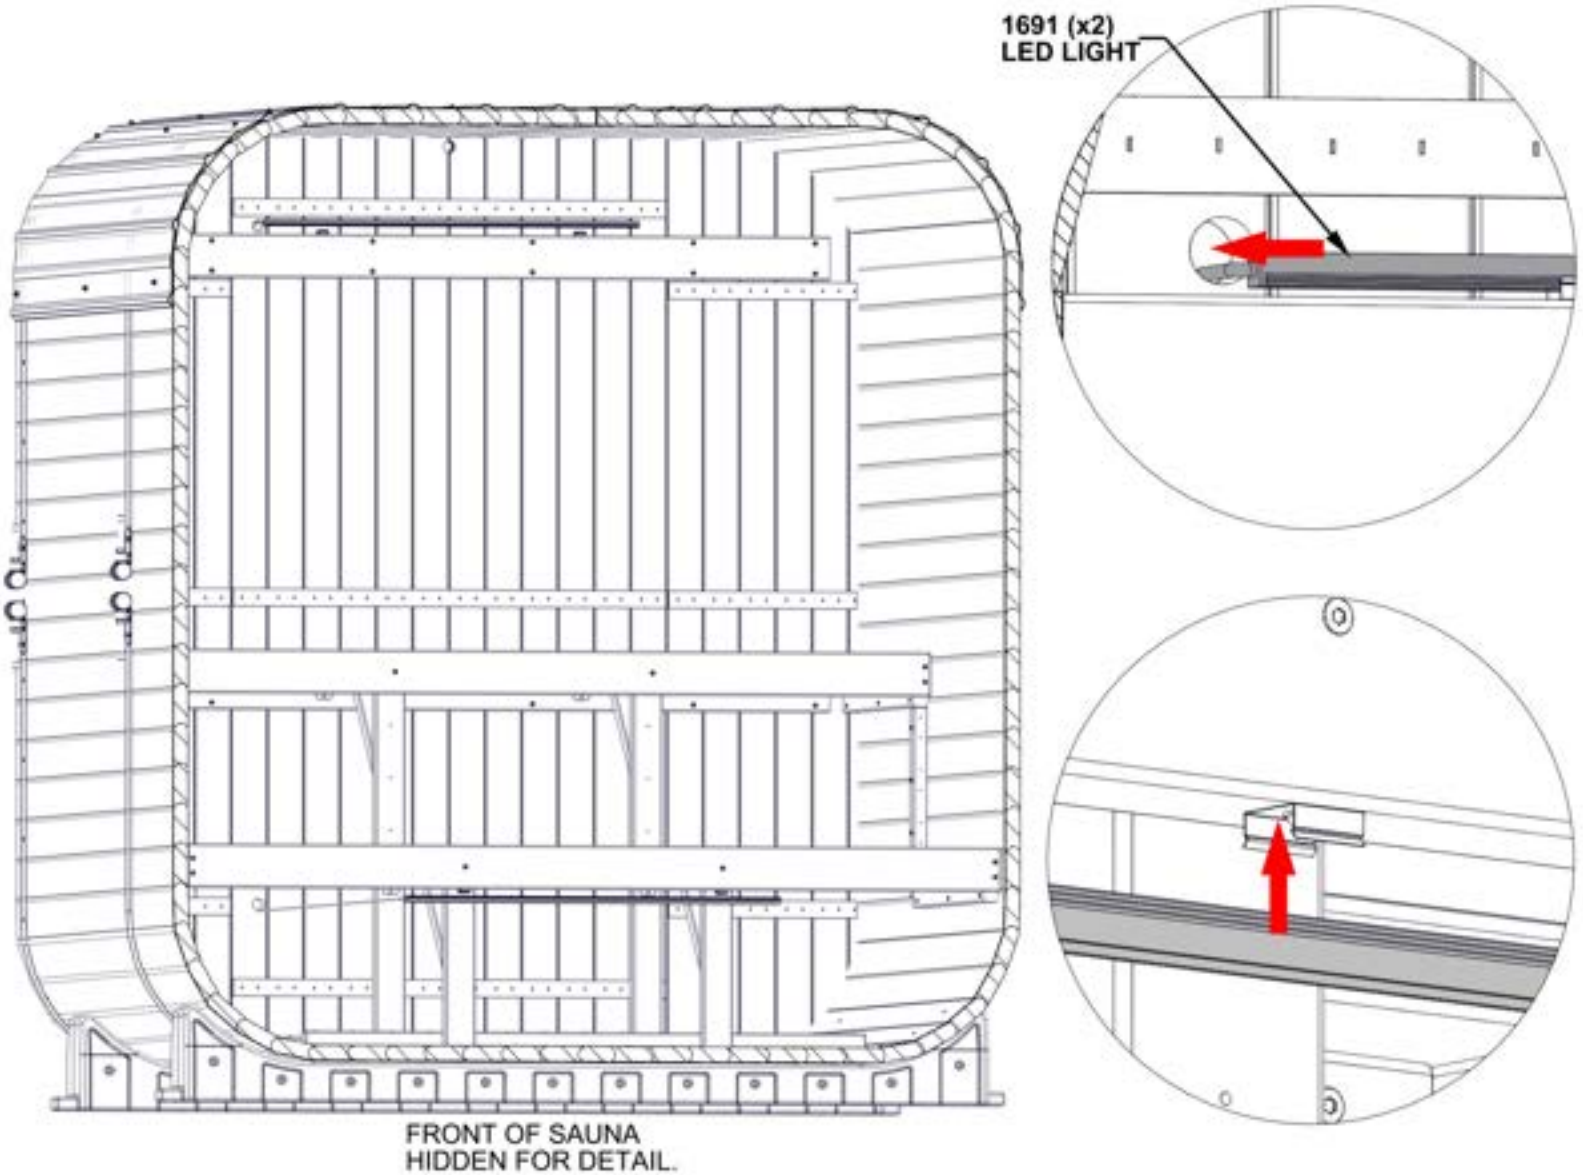


STEP 45 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
18	H101428	SCREW TFH 8X1 3/4 SS-BLK



NG01 (x3) SLAT - W4L21949
13/16"x3 3/8"x65 3/4" (20x86x1670)

- ALIGN THROUGH HOLES IN SLATS WITH PILOT HOLES IN CLEATS AND UPRIGHTS.

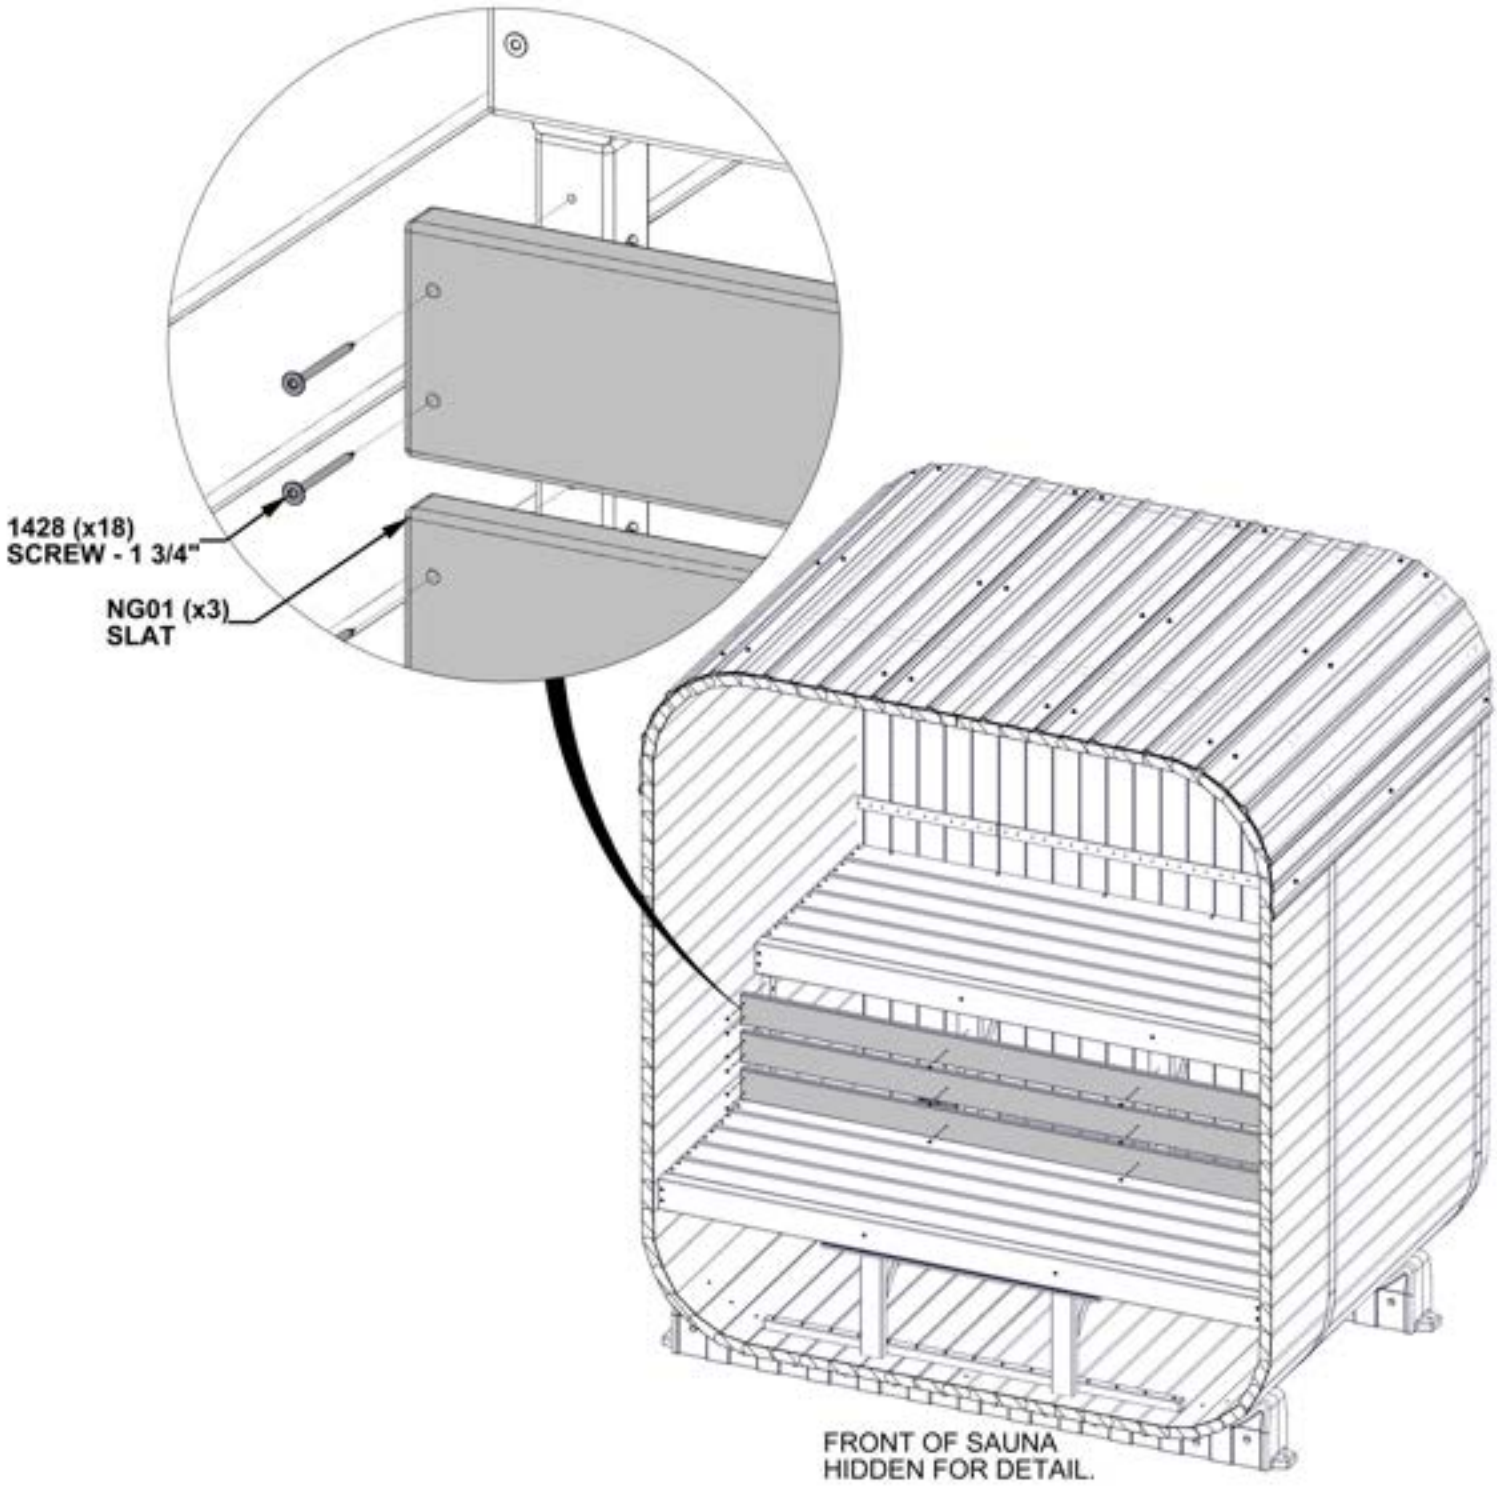


STEP 46 - TEMPERATURE SENSOR ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H101440	SCREW TWH 8x1 SS-BLK




OG15 (x1) WIREWAY BOARD - W4L23536
1 3/16"x3 3/8"x35 7/16" (30x86x900)

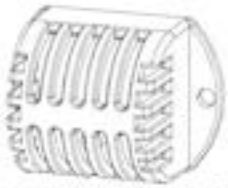

A6P01714 (x1) TEMPERATURE SENSOR


- RUN CORD THROUGH HOLE IN OG15 AND ATTACH AS SHOWN.

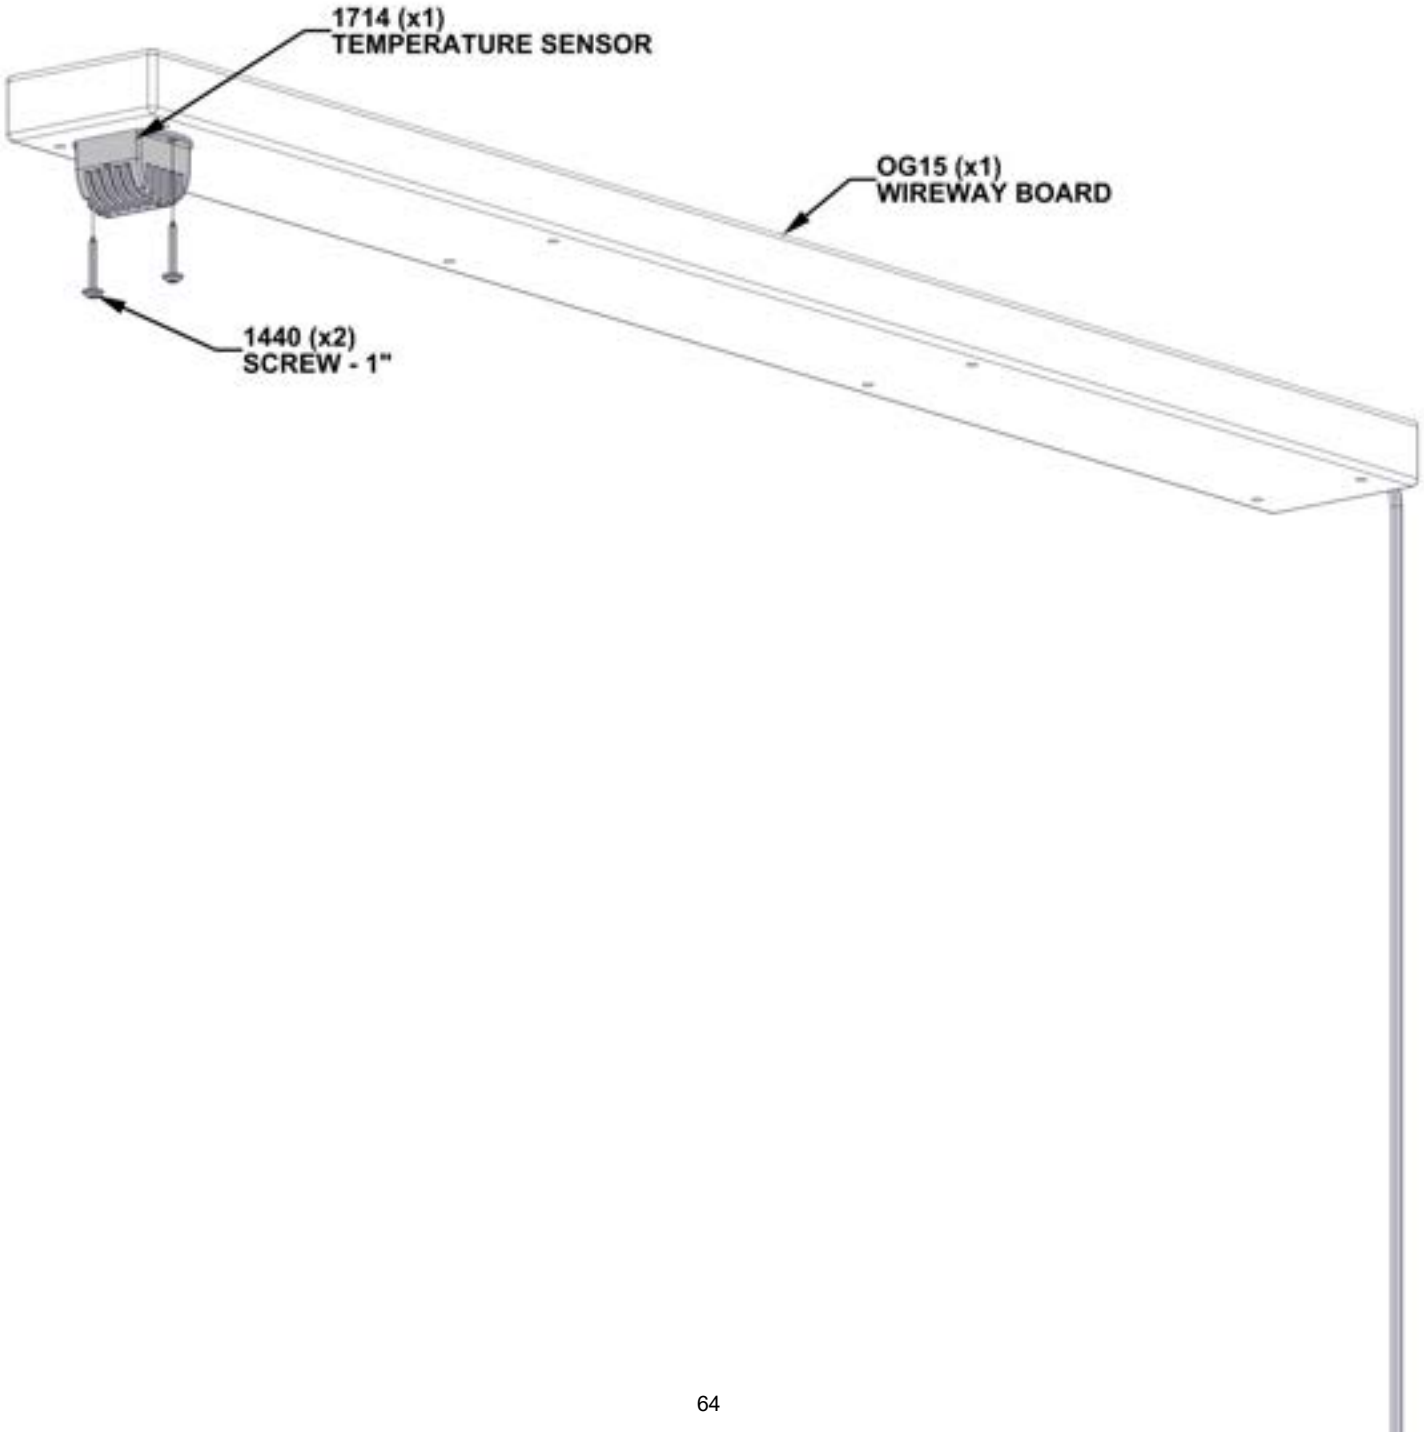

STEP 47 - TEMPERATURE SENSOR INSTALLATION

QTY	PART NUMBER	DESCRIPTION
8	H101429	SCREW TFH 8X2 SS-BLK

- RUN SENSOR CORD OUT THE TOP CENTER HOLE IN THE BACK WALL.
- CENTER WIREWAY BOARD OVER HOLE AND ENSURE IT IS FLUSH AGAINST THE BACK WALL.
- ATTACH ASSEMBLY AS SHOWN.

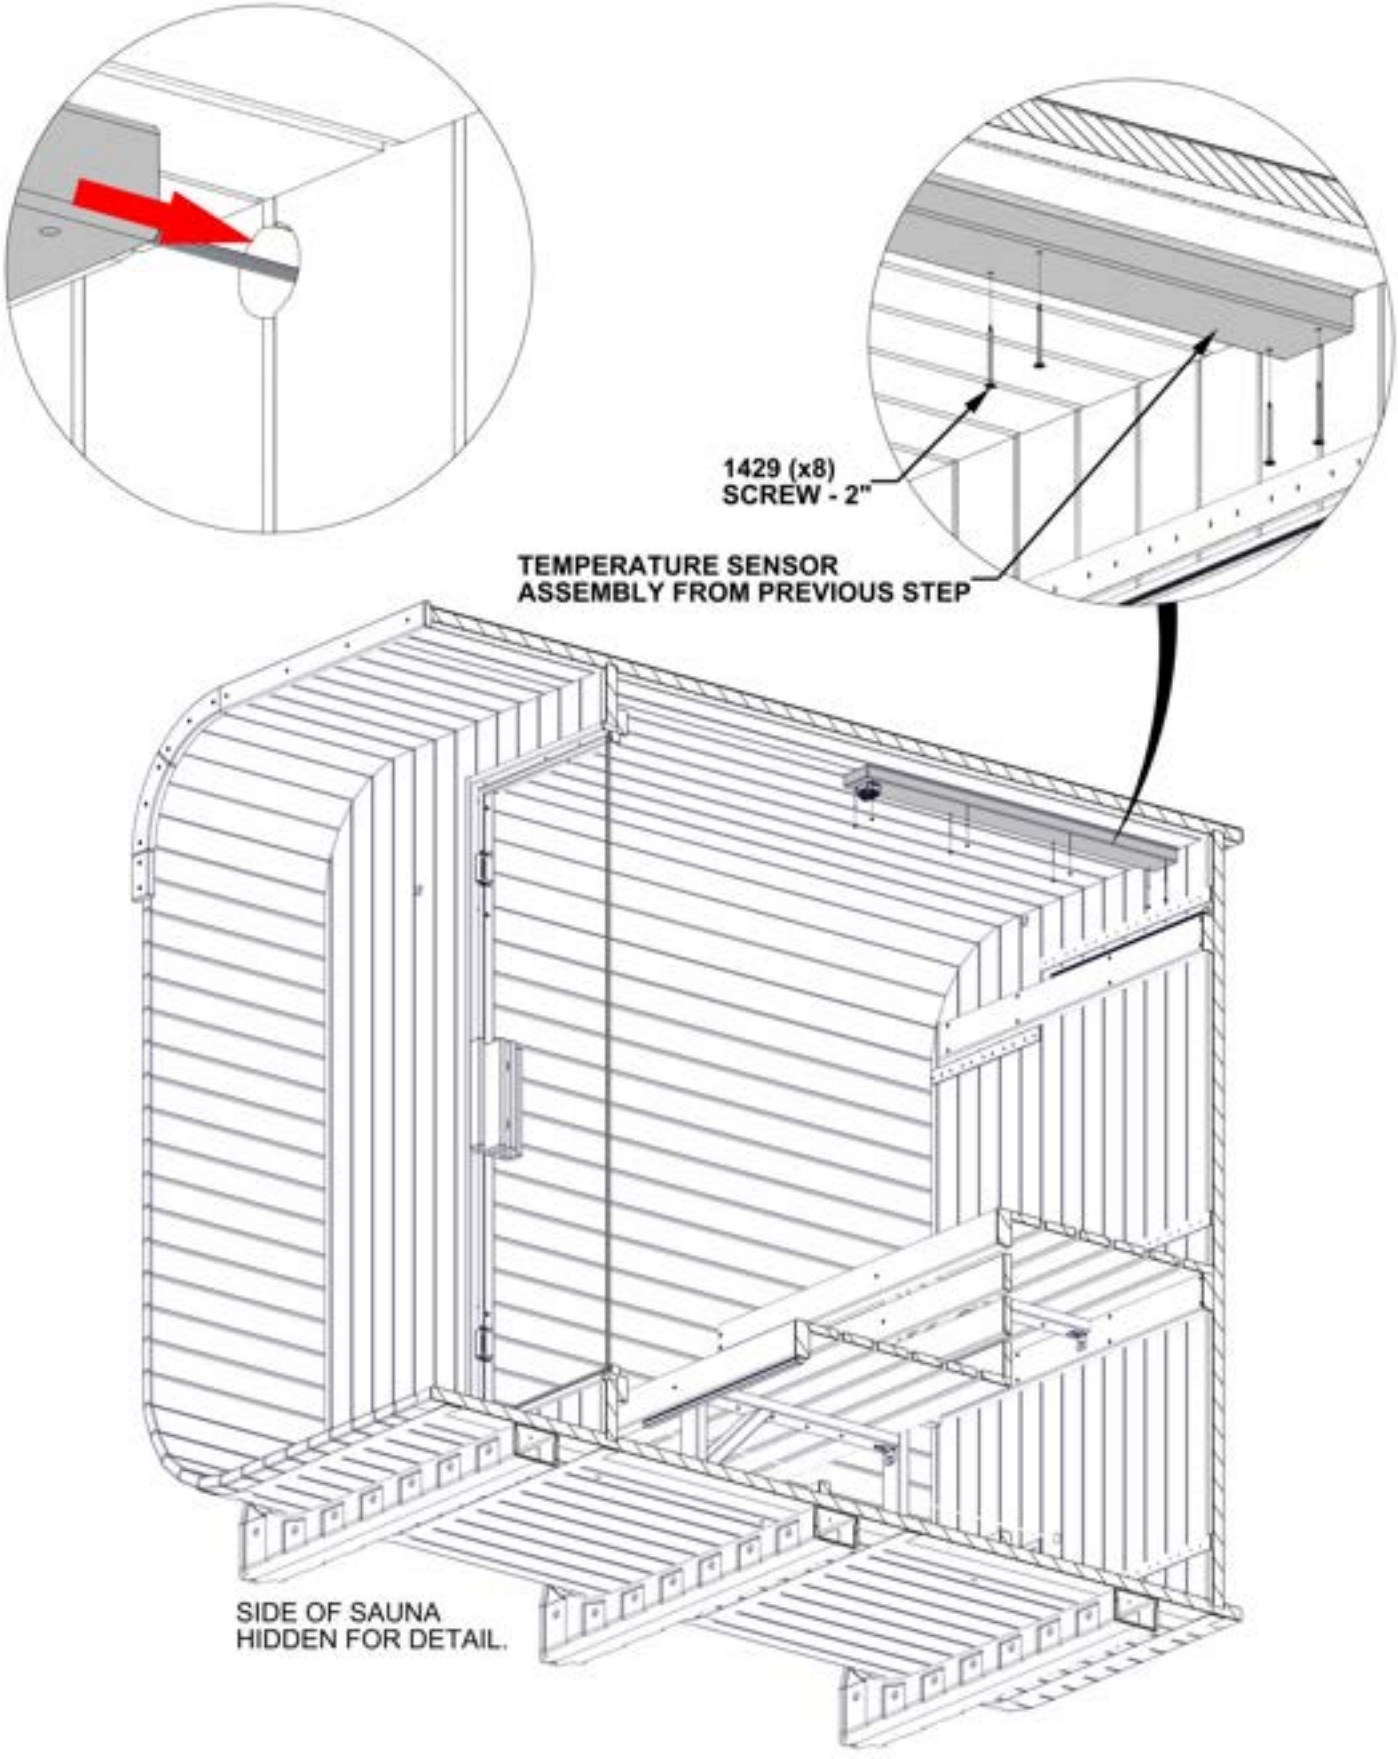

STEP 48 - CONTROL PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
2	H100627	SCREW PFH 6x3/4 BLK




A4M05590-03 (x1) CONTROL PANEL MOUNTING BRACKET



A6P01467 (x1) SILICONE GROMMET 25mm


- CENTER MOUNTING BRACKET SLIGHTLY OVER CUTOUT IN WALL PANEL AND ATTACH AS SHOWN.
- INSERT GROMMET.

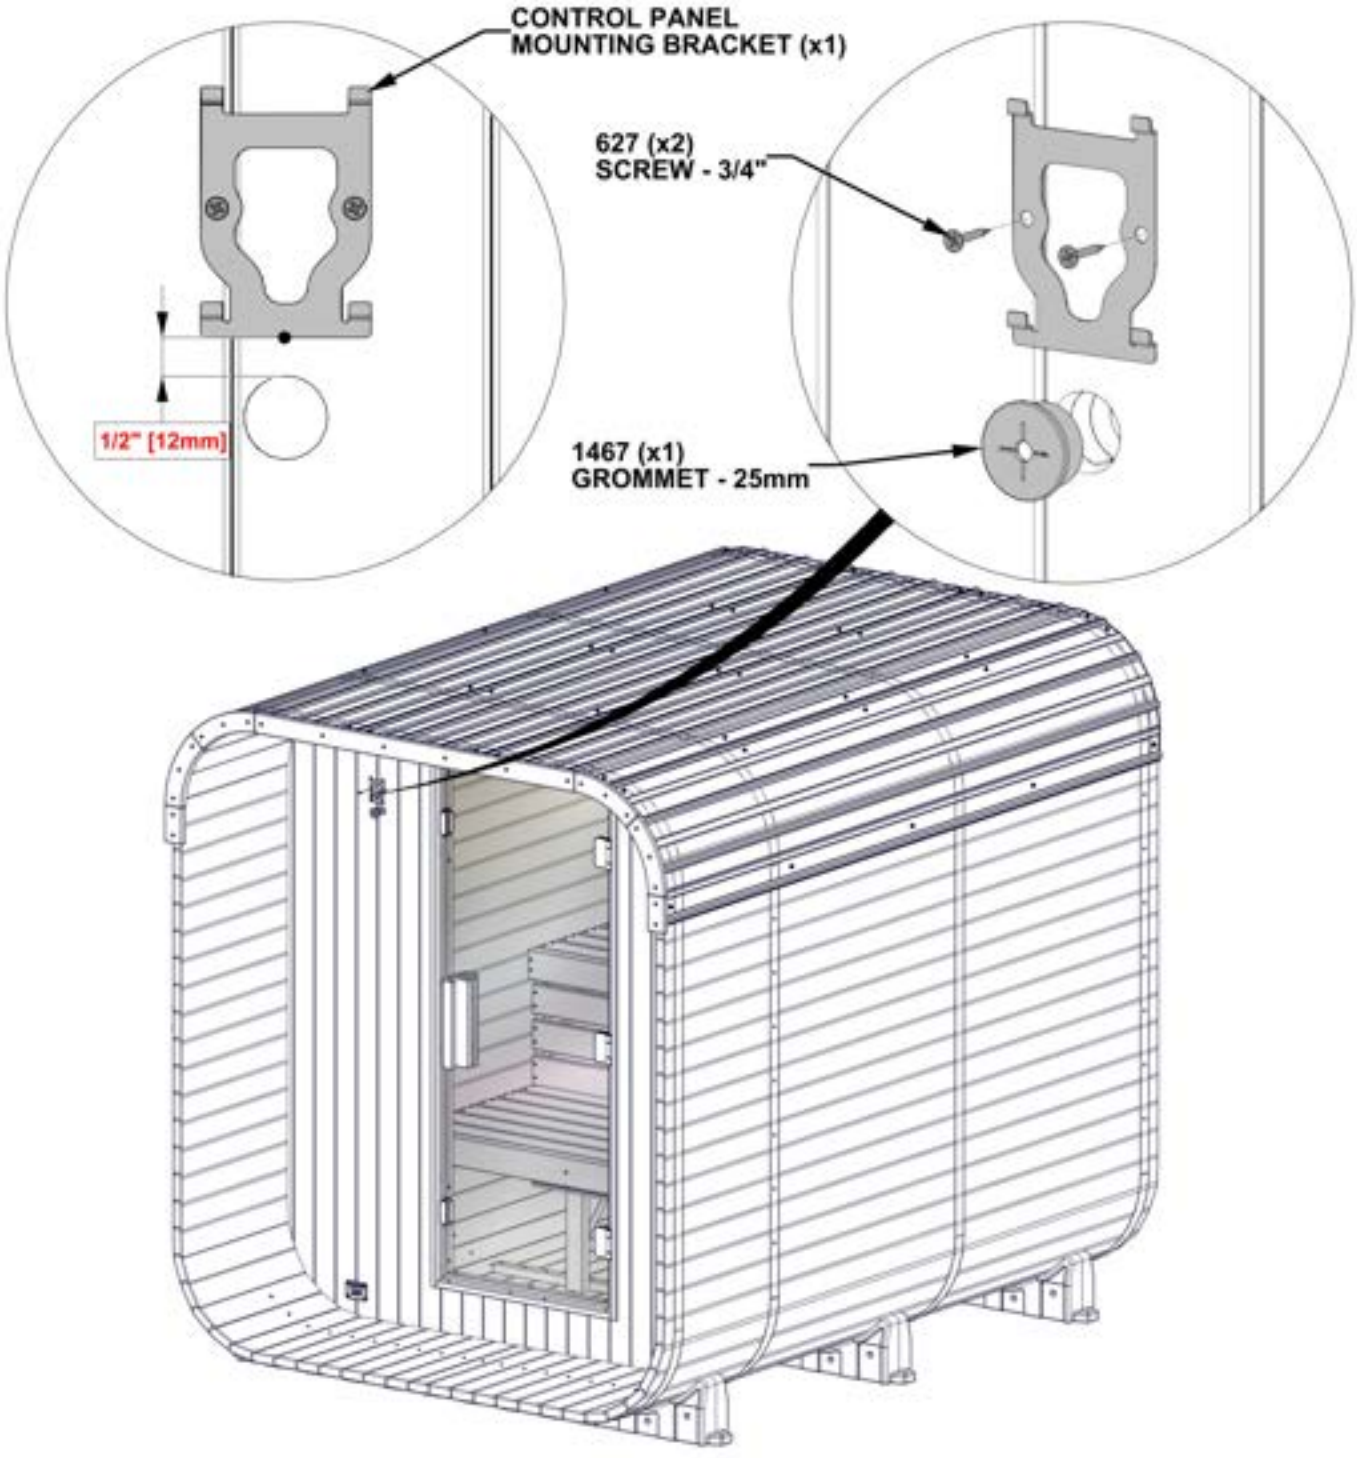

STEP 49 - CONTROL PANEL INSTALLATION




A4M07172 (x1) SCREEN CONTROLLER

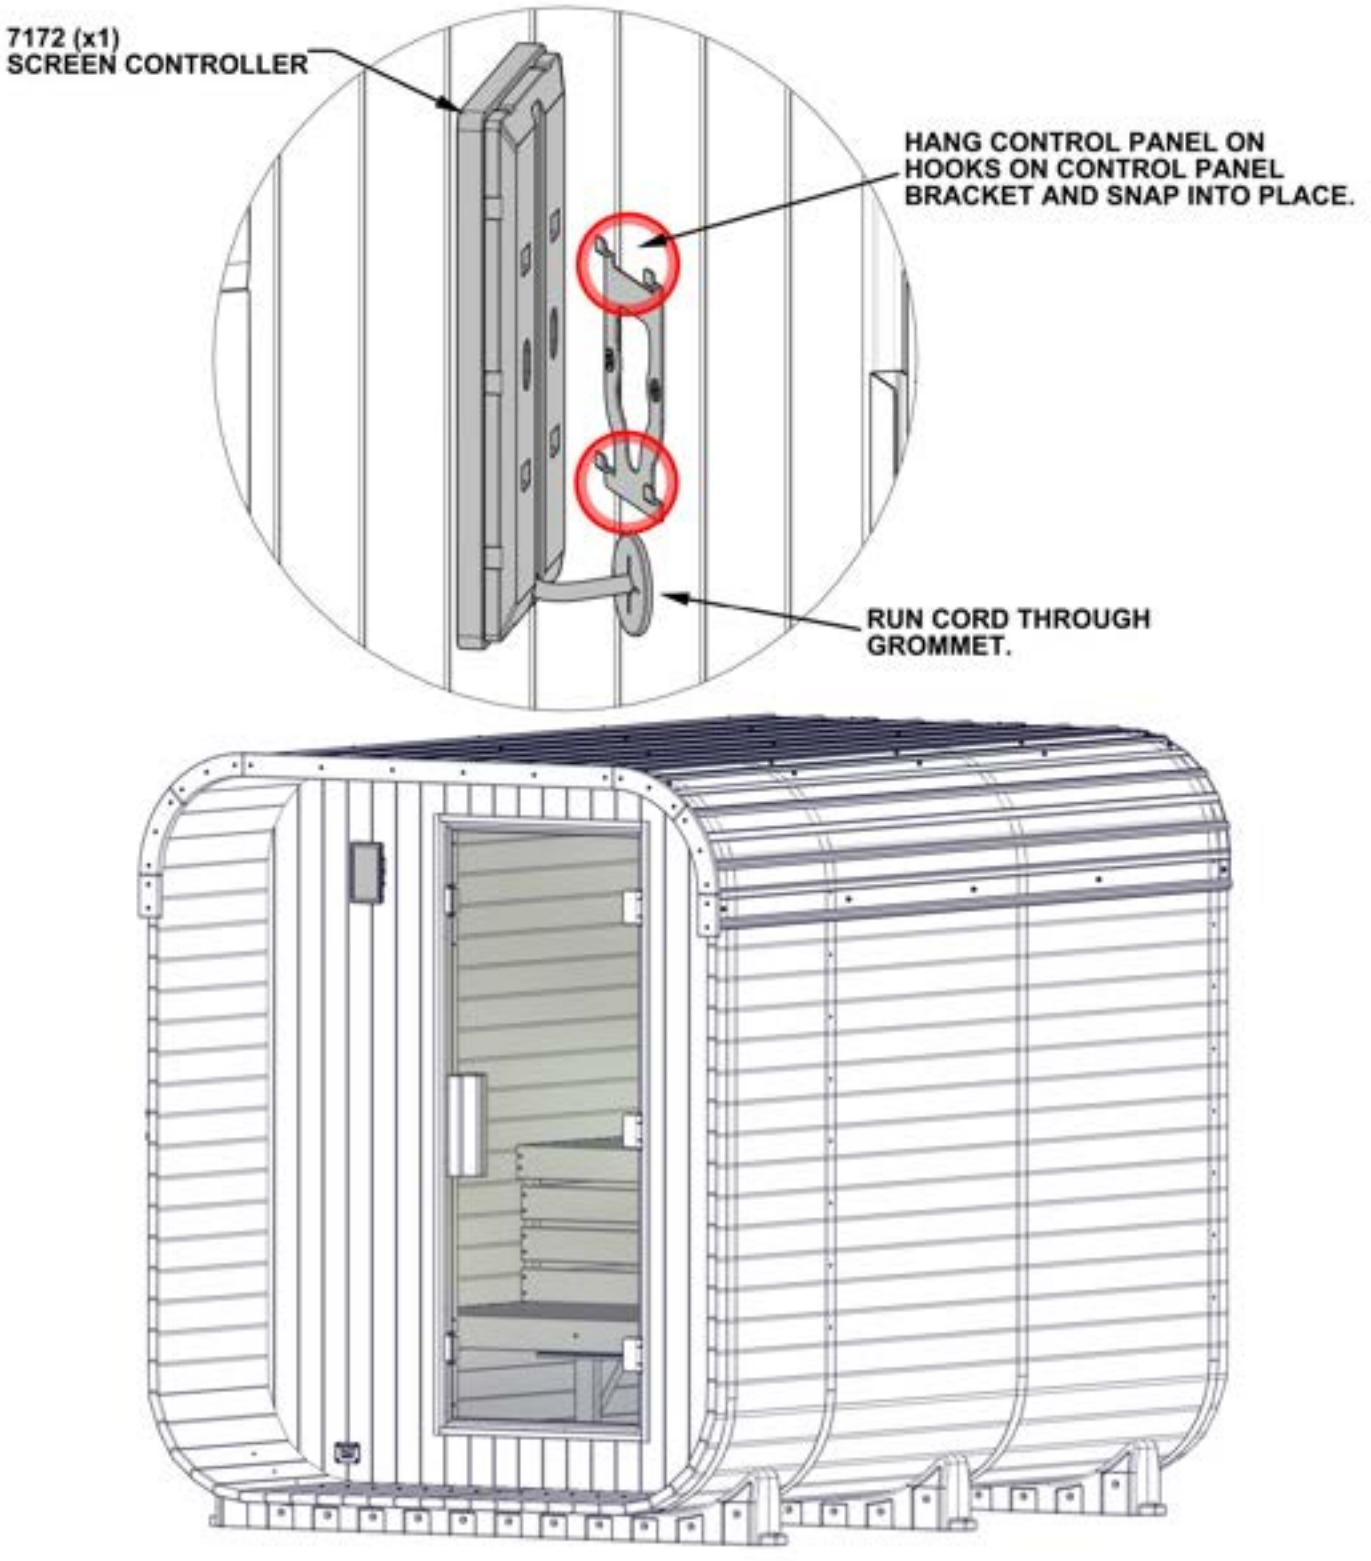


STEP 50 - CONTROL PANEL ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101428	SCREW TFH 8X1 3/4 SS-BLK

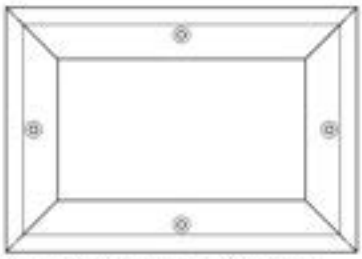

TF01 (x1) TRIM FRAME - W2A04797
7/8"x5 9/16"x8 1/16" (22x142x204)

- PLACE TRIM FRAME ON CONTROL PANEL ENSURING IT SEATS AROUND THE CONTROL PANEL AND ATTACH AS SHOWN.
- DO NOT OVERTIGHTEN SCREWS.

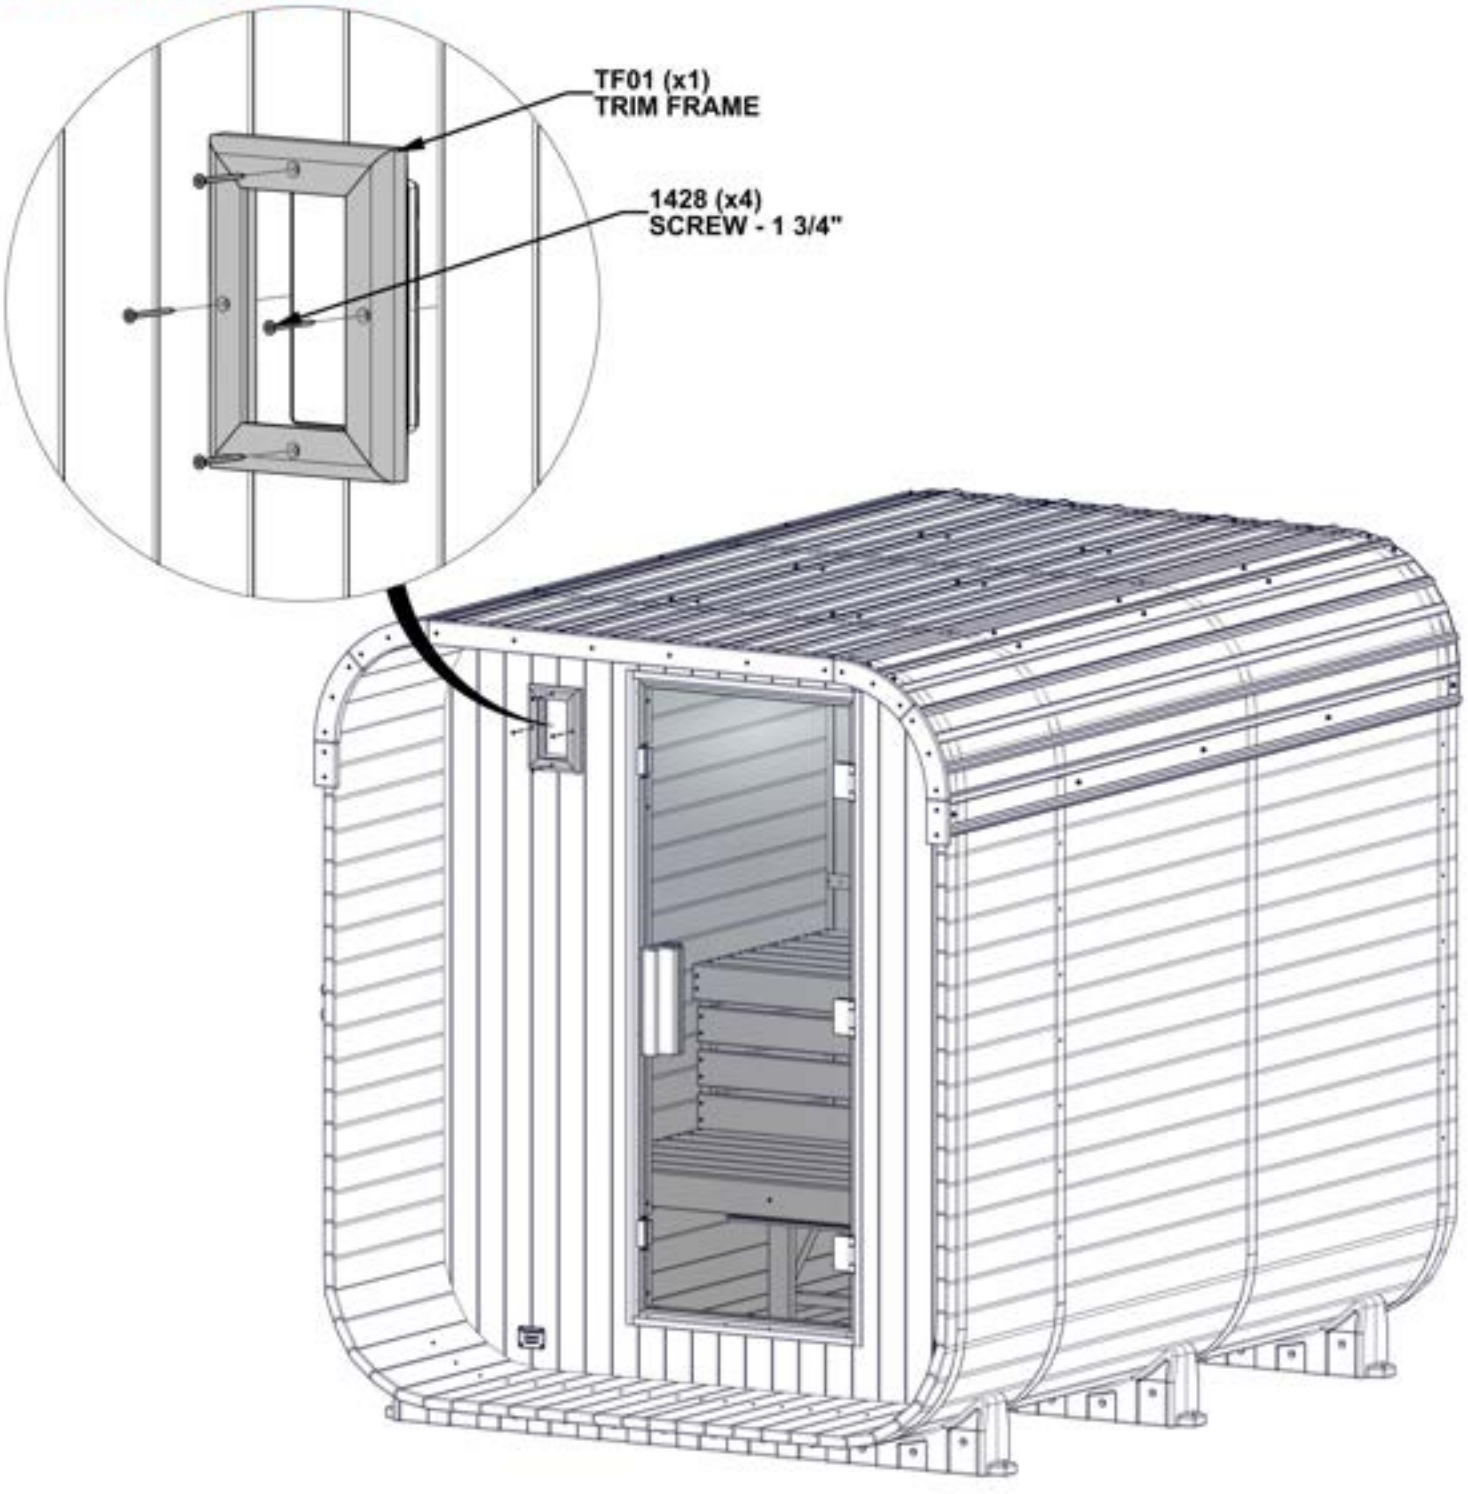

STEP 51 - WIREWAY ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101429	SCREW TFH 8X2 SS-BLK




A4M05590-10 WIRING HARNESS
(x1)



OG08 WIREWAY BOARD - W4L22040
(x1) 1 3/16"x3 3/8"x14 7/16" (30x86x367)

- CONNECT WIRING HARNESS TO CORD FROM STEP 49.
- HOLD CONNECTED CORDS UP TO THE TOP OF THE SAUNA, CENTER WIREWAY BOARD OVER HOLE IN FRONT WALL, AND ATTACH BOARD AS SHOWN.
- BE CAUTIOUS WHEN INSERTING SCREWS TO PREVENT PINCHING OR PENETRATING CORDS.

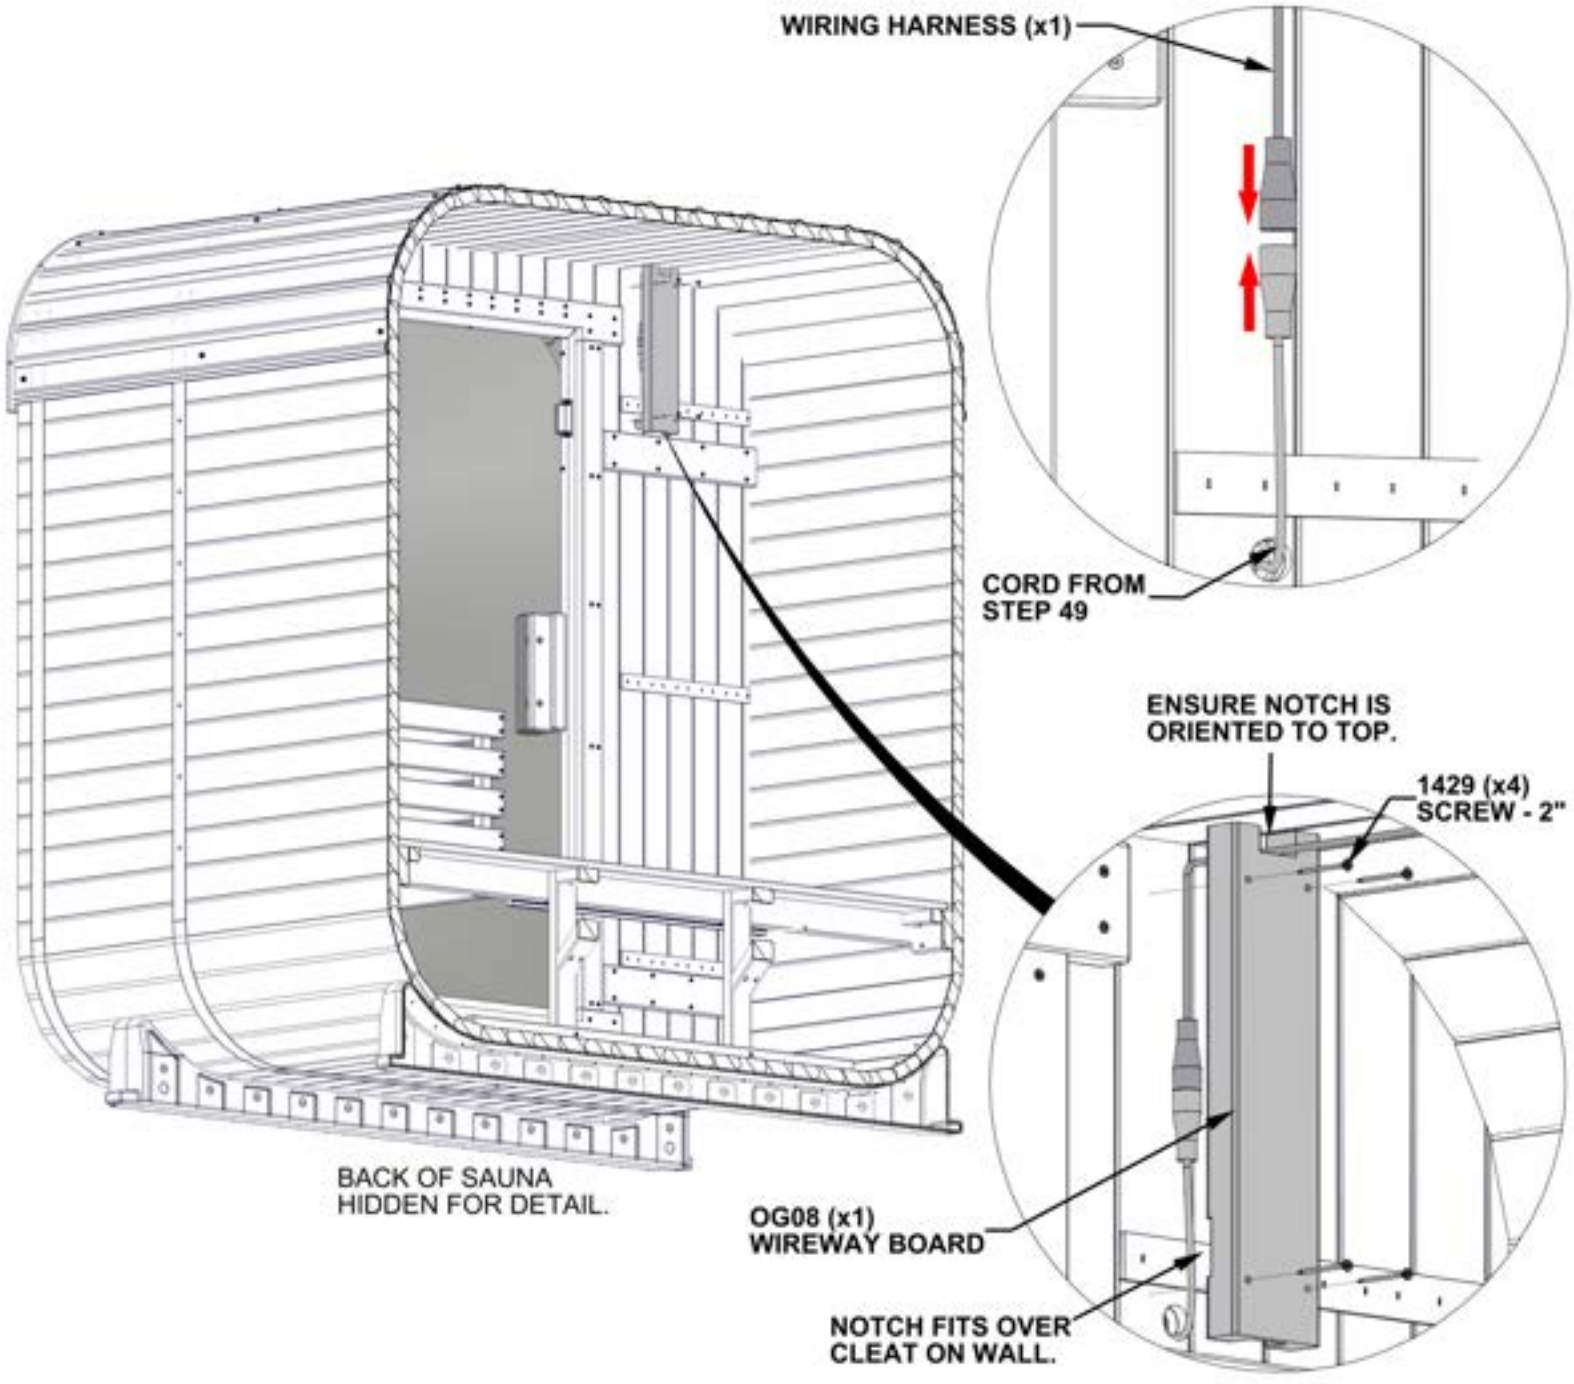


STEP 52 - WIREWAY ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
12	H101429	SCREW TFH 8X2 SS-BLK



OG14 (x1) WIREWAY BOARD - W4L23535
1 3/16"x3 3/8"x66 13/16" (30x86x1697)

- RUN CORD FROM PREVIOUS STEP OUT BACK HOLE AND ENSURE IT RESTS IN THE TOP OF THE WIREWAY BOARD AS BOARD IS PUT INTO POSITION.
- ALIGN WITH PREVIOUSLY INSTALLED WIREWAY BOARD IN THE FRONT, AND CENTERED OVER THE BACK HOLE AS SHOWN.
- ATTACH AS SHOWN.
- BE CAUTIOUS WHEN INSERTING SCREWS TO PREVENT PINCHING OR PENETRATING CORDS.

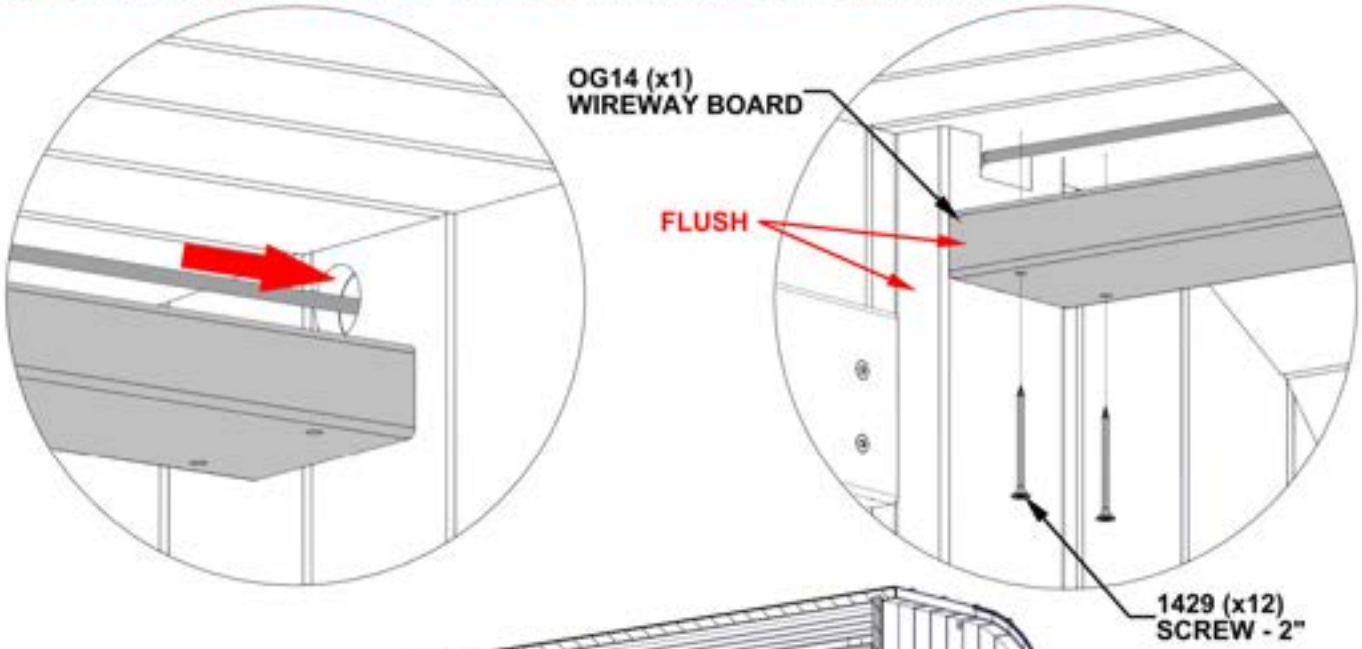

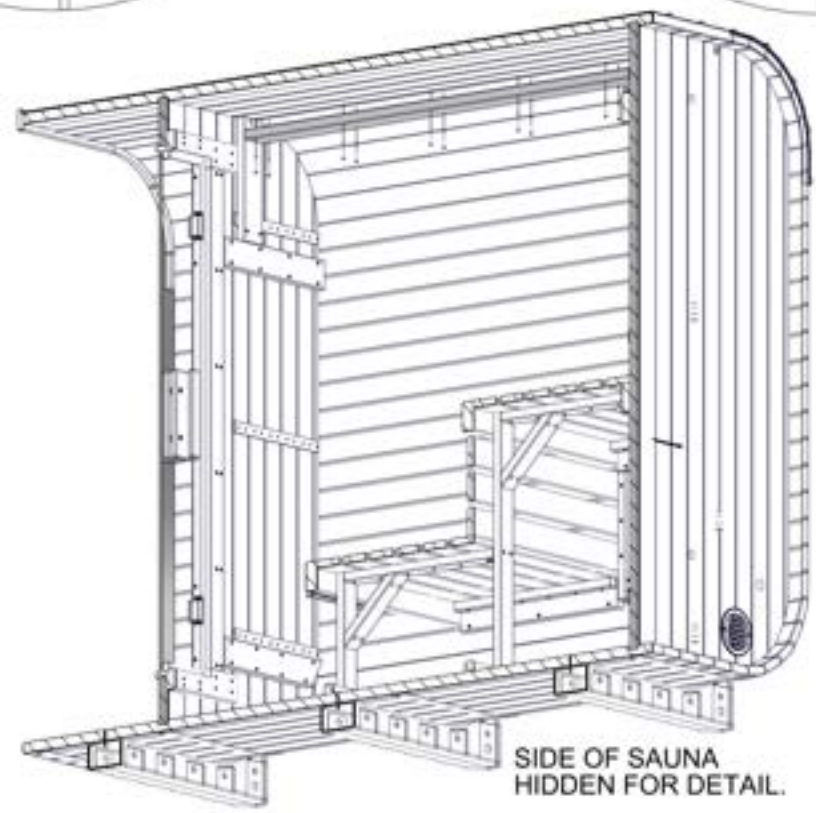


STEP 53 - CONTROL PANEL INSTALLATION


QTY	PART NUMBER	DESCRIPTION
3	H101440	SCREW TWH 8x1 SS-BLK





A4M07170 (x1) CONTROL BOX

- REMOVE COVER PLATE FROM CONTROL PANEL BOX.
- POSITION CONTROL PANEL BOX IN APPROXIMATE LOCATION 4 1/4" ABOVE THE THROUGH HOLE AS SHOWN.
- REATTACH COVER PLATE.
- ATTACH PROVIDED ANTENNA TO CONTROL BOX.

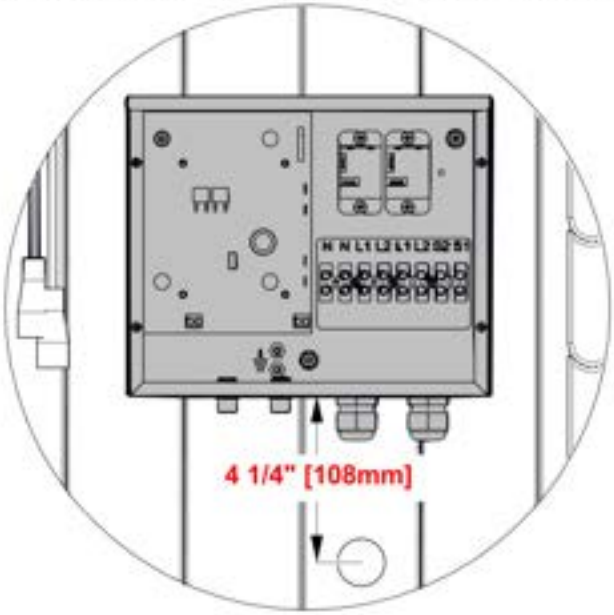

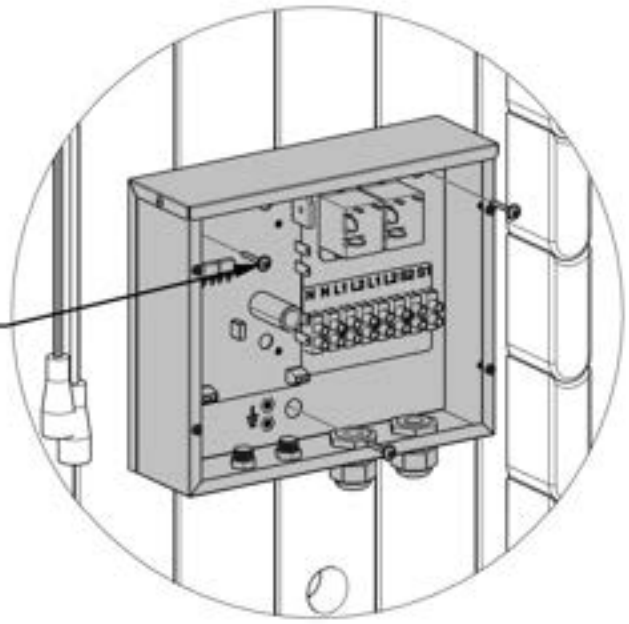

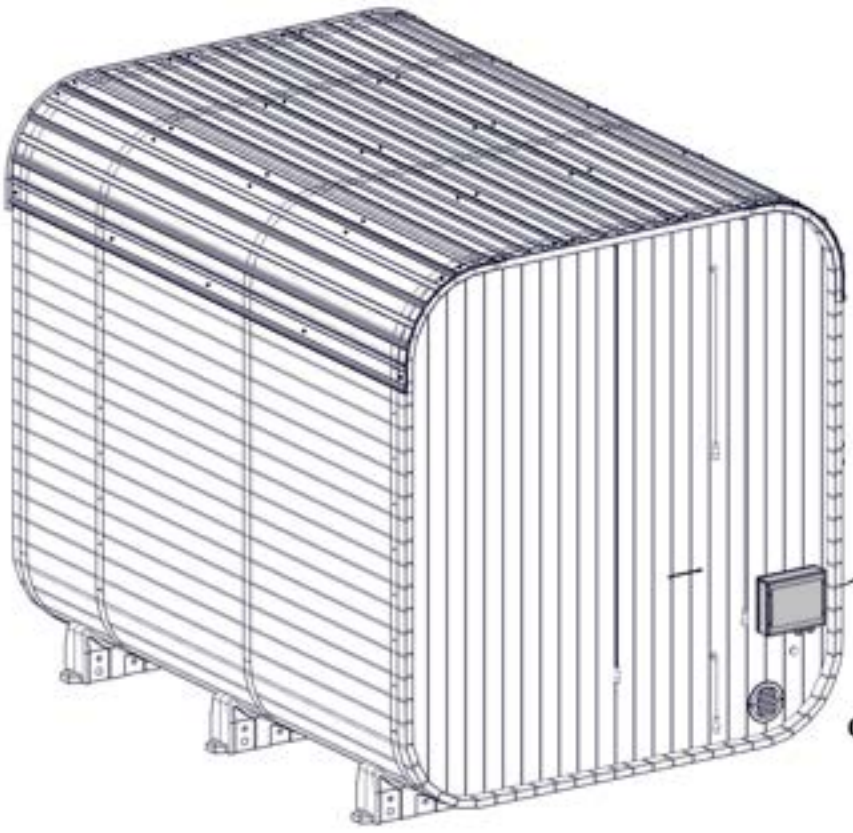

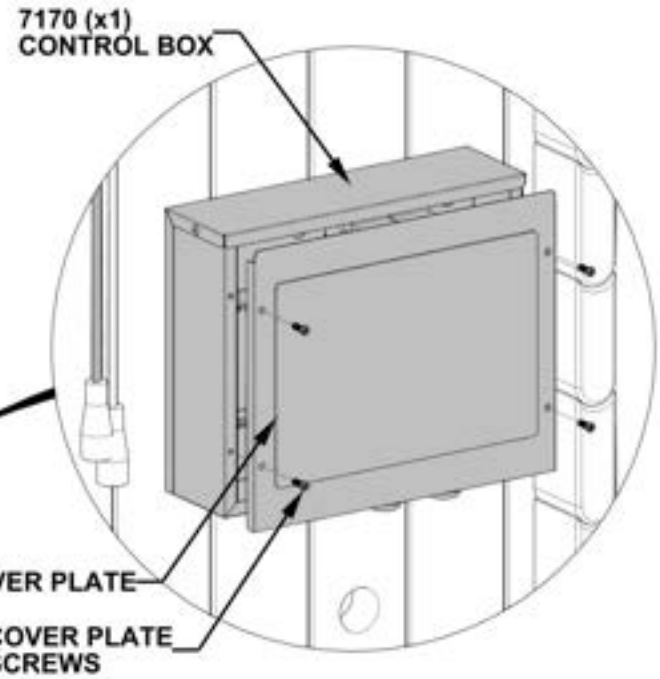


STEP 54 - GROMMET INSTALLATION




A6P01467 (x4) SILICONE GROMMET 25mm

- SLIDE GROMMET OVER LIGHT POWER CORDS AND INSERT INTO HOLES IN BACK WALL.

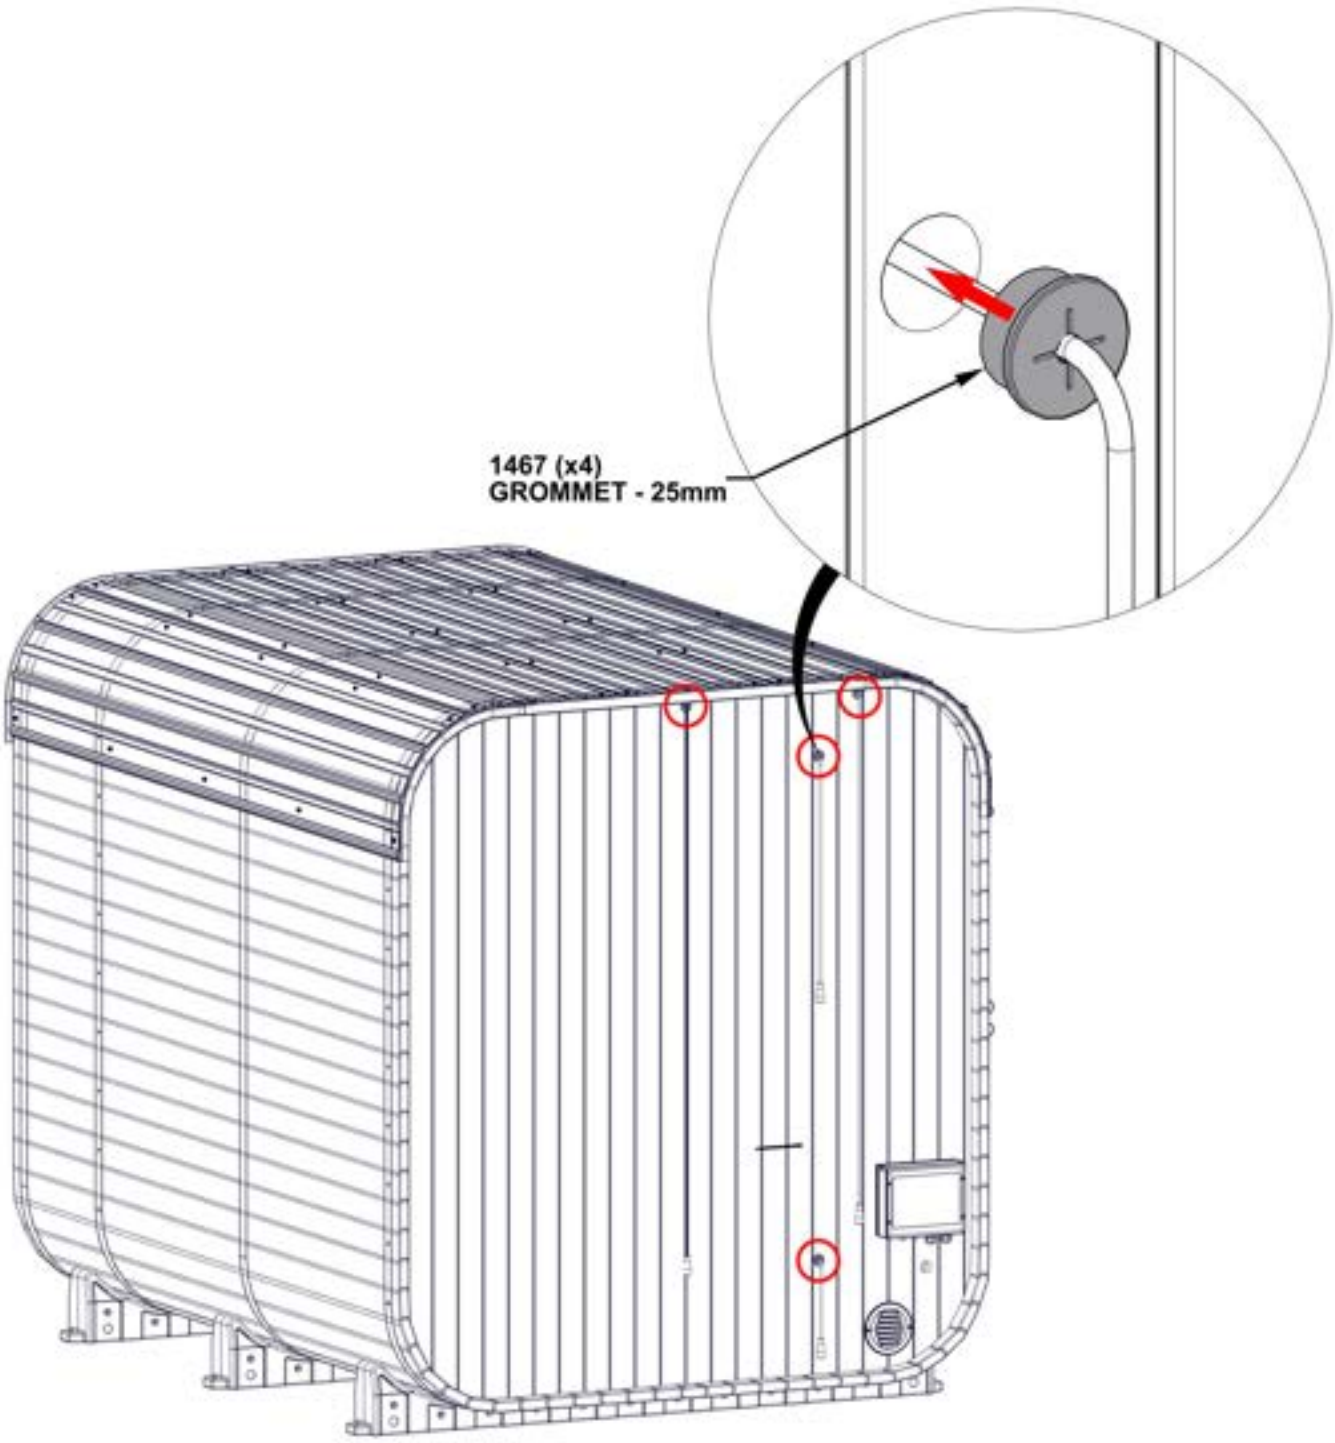

STEP 55 - ELECTRICAL

QTY	PART NUMBER	DESCRIPTION
5	H101409	SCREW PPH 4x1/2 BLK

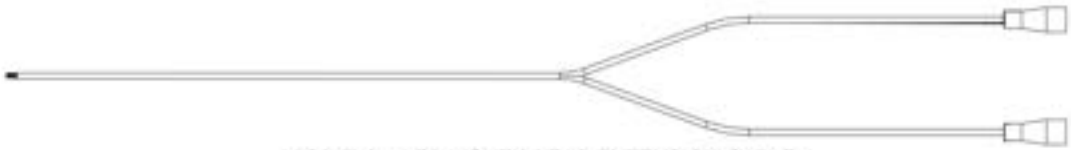


A6P01713 LED LIGHT 2-LEAD EXTENSION CABLE
(x1)



A6P01448 ZIP CABLE TIE
(x5)

- ATTACH BOTH LIGHT CORDS TO 1713 AND PLUG INTO THE CONTROL BOX.
- USE ZIP CABLE TIES TO ORGANIZE ALL WIRING ON BACK OF SAUNA.

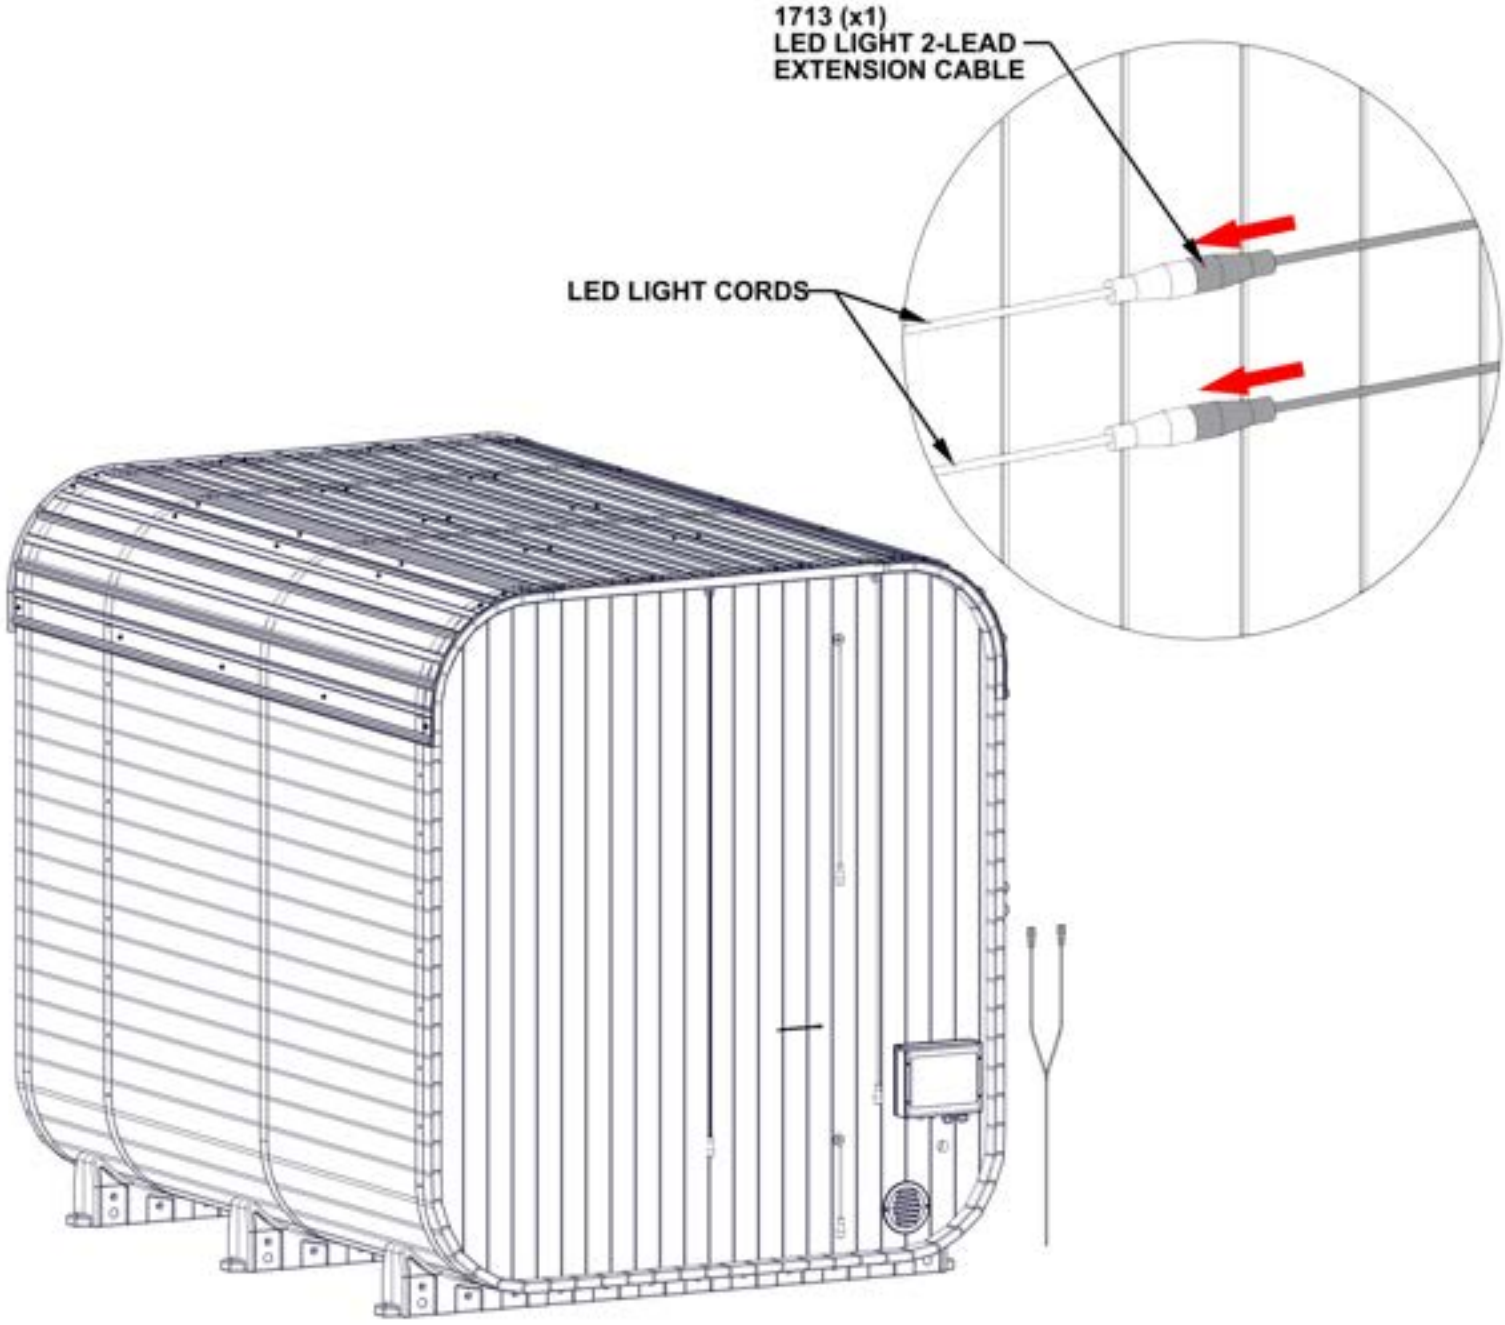


STEP 56 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
12	H101429	SCREW TFH 8X2 SS-BLK




OG13 (x2) SEAT CLEAT - W4L21940
1 3/16"x3 3/8"x19 1/8" (30x86x486)

- FLUSH OG13 BOARDS AGAINST WALL AND USE DIMENSIONS SHOWN, ATTACH AS SHOWN.
- DIMENSIONS ARE TAKEN FROM THE TOP OF THE FLOOR.

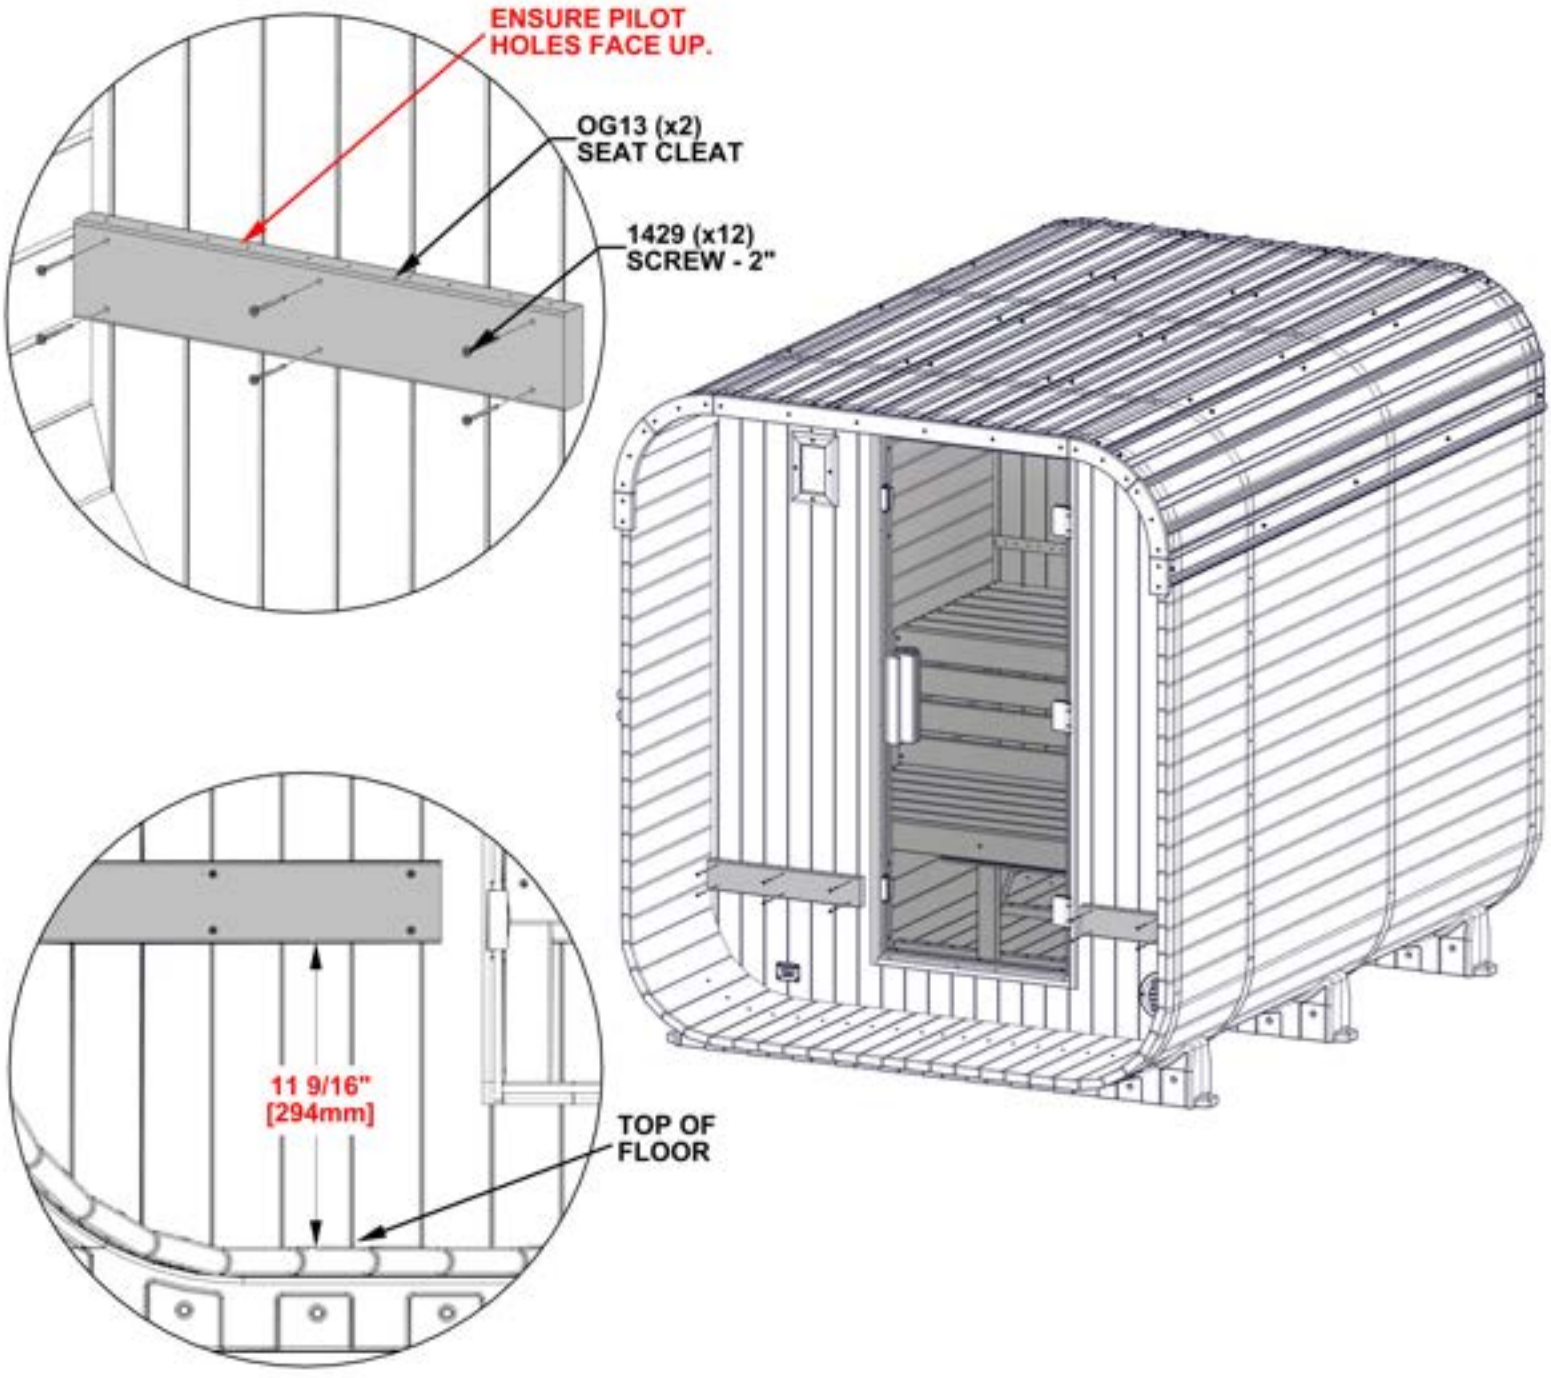

STEP 57 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H101429	SCREW TFH 8X2 SS-BLK
2	H101431	SCREW TFH 8X2 1/2 SS-BLK

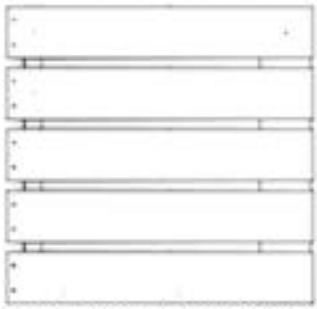


BA04 (x1) BENCH ASSEMBLY - W2A04825
1 15/16"x17 15/16"x19 3/4" (50x456x502)



OR04 (x1) SEAT UPRIGHT - W4L21941
1 3/16"x3 3/8"x14 15/16" (30x86x380)

1) INSTALL BENCH BRACE OR04 TO BENCH ASSEMBLY. (DETAIL 'A').
2) PUSH THE BENCH WITH BENCH BRACE BOARD AGAINST THE WALL UNTIL IT MAKES CONTACT WITH THE SIDEWALL.
3) CHECK THE ALIGNMENT OF THE HOLES AT THE END OF THE BENCH WITH THE PILOT HOLES ON THE CLEAT MOUNTED TO THE WALL. (DETAIL 'B')
4) LEVEL THE BENCH BOTH FRONT-TO-BACK AND SIDE-TO-SIDE: THEN ATTACH TO SIDEWALL AS SHOWN. (DETAIL 'C')

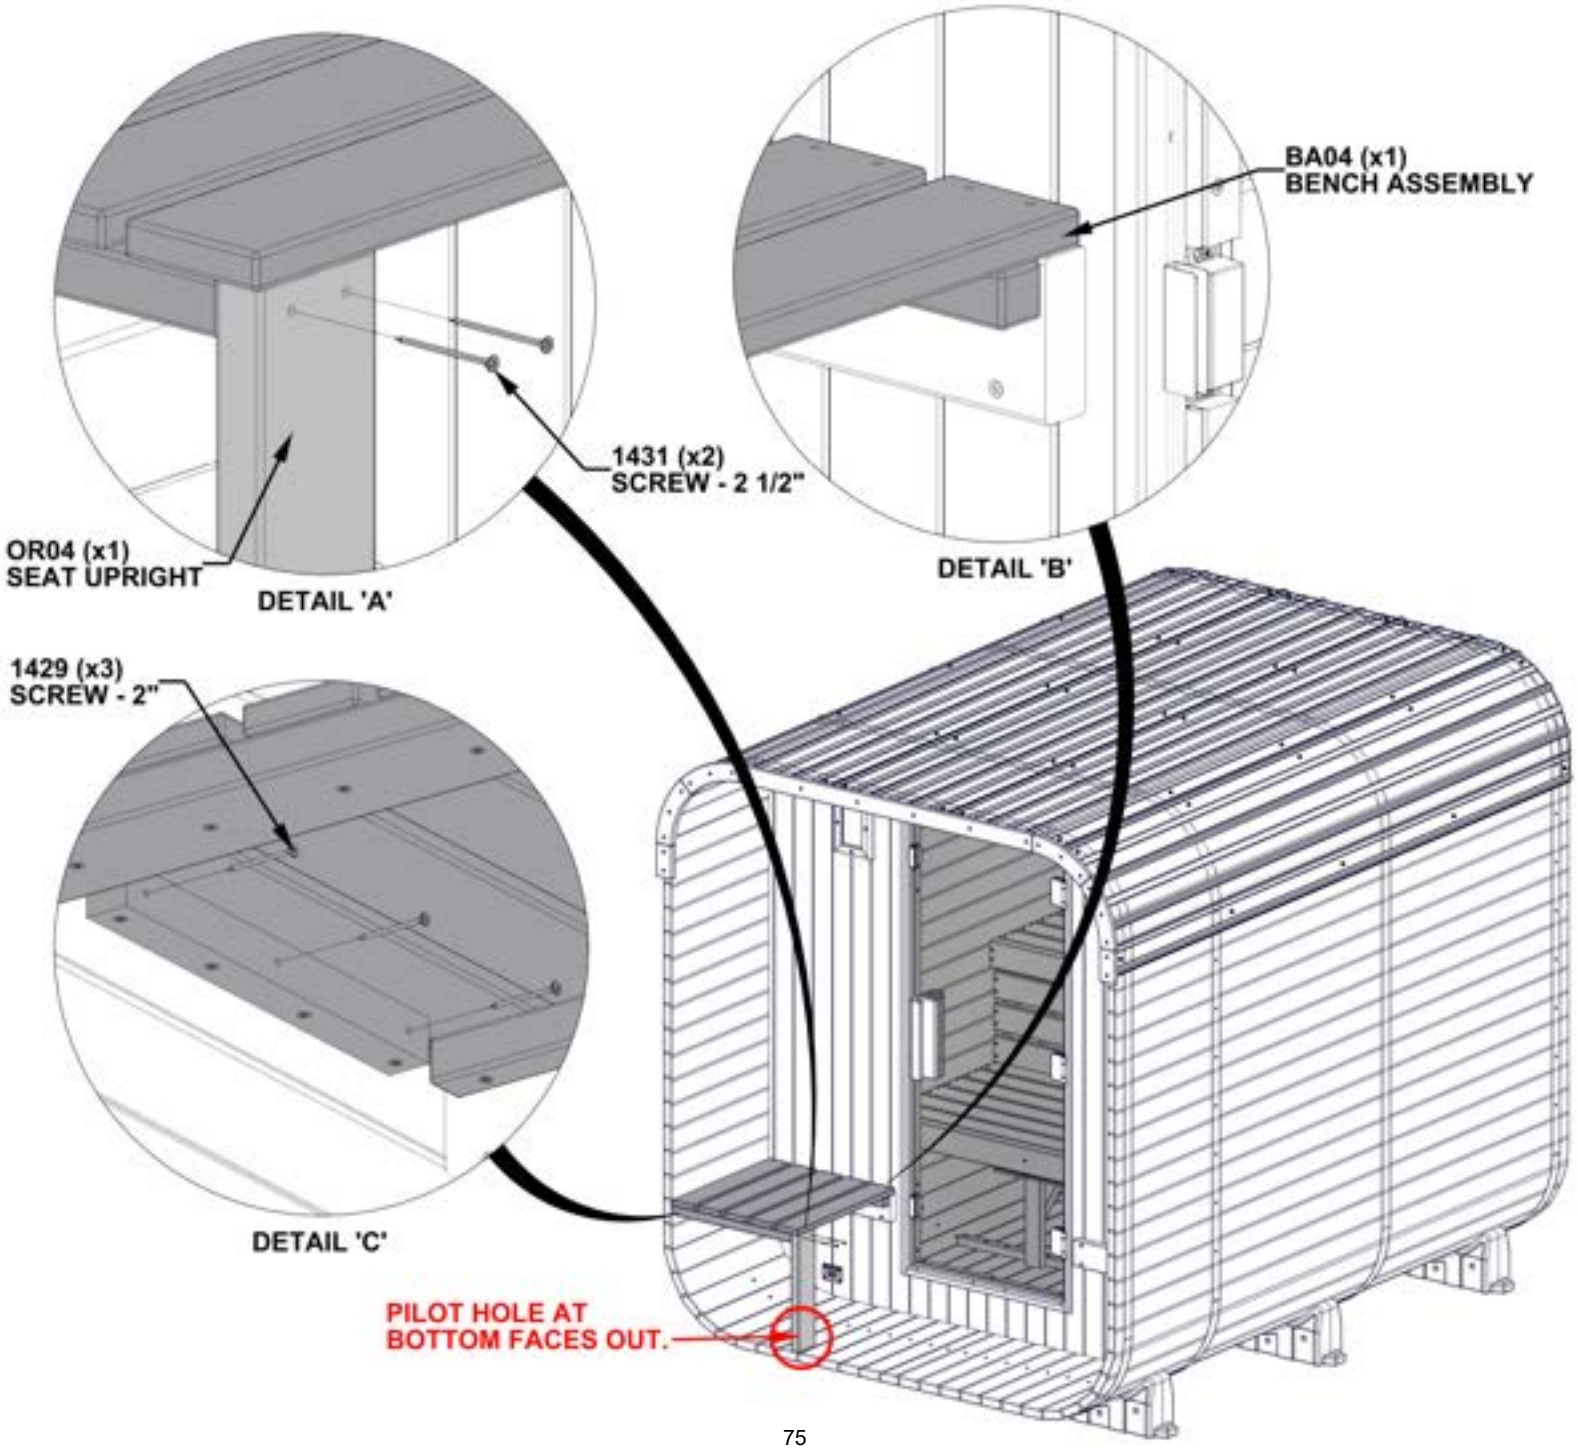

STEP 58 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
3	H101429	SCREW TFH 8X2 SS-BLK
2	H101431	SCREW TFH 8X2 1/2 SS-BLK




BA03 (x1) BENCH ASSEMBLY - W2A04824
1 15/16"x19 1/8"x19 3/4" (50x486x502)



OR04 (x1) SEAT UPRIGHT - W4L21941
1 3/16"x3 3/8"x14 15/16" (30x86x380)

1) INSTALL BENCH BRACE OR04 TO BENCH ASSEMBLY. (DETAIL 'A').
2) PUSH THE BENCH WITH BENCH BRACE BOARD AGAINST THE WALL UNTIL IT MAKES CONTACT WITH THE SIDEWALL.
3) CHECK THE ALIGNMENT OF THE HOLES AT THE END OF THE BENCH WITH THE PILOT HOLES ON THE CLEAT MOUNTED TO THE WALL. (DETAIL 'B')
4) LEVEL THE BENCH BOTH FRONT-TO-BACK AND SIDE-TO-SIDE: THEN ATTACH TO SIDEWALL AS SHOWN. (DETAIL 'C')

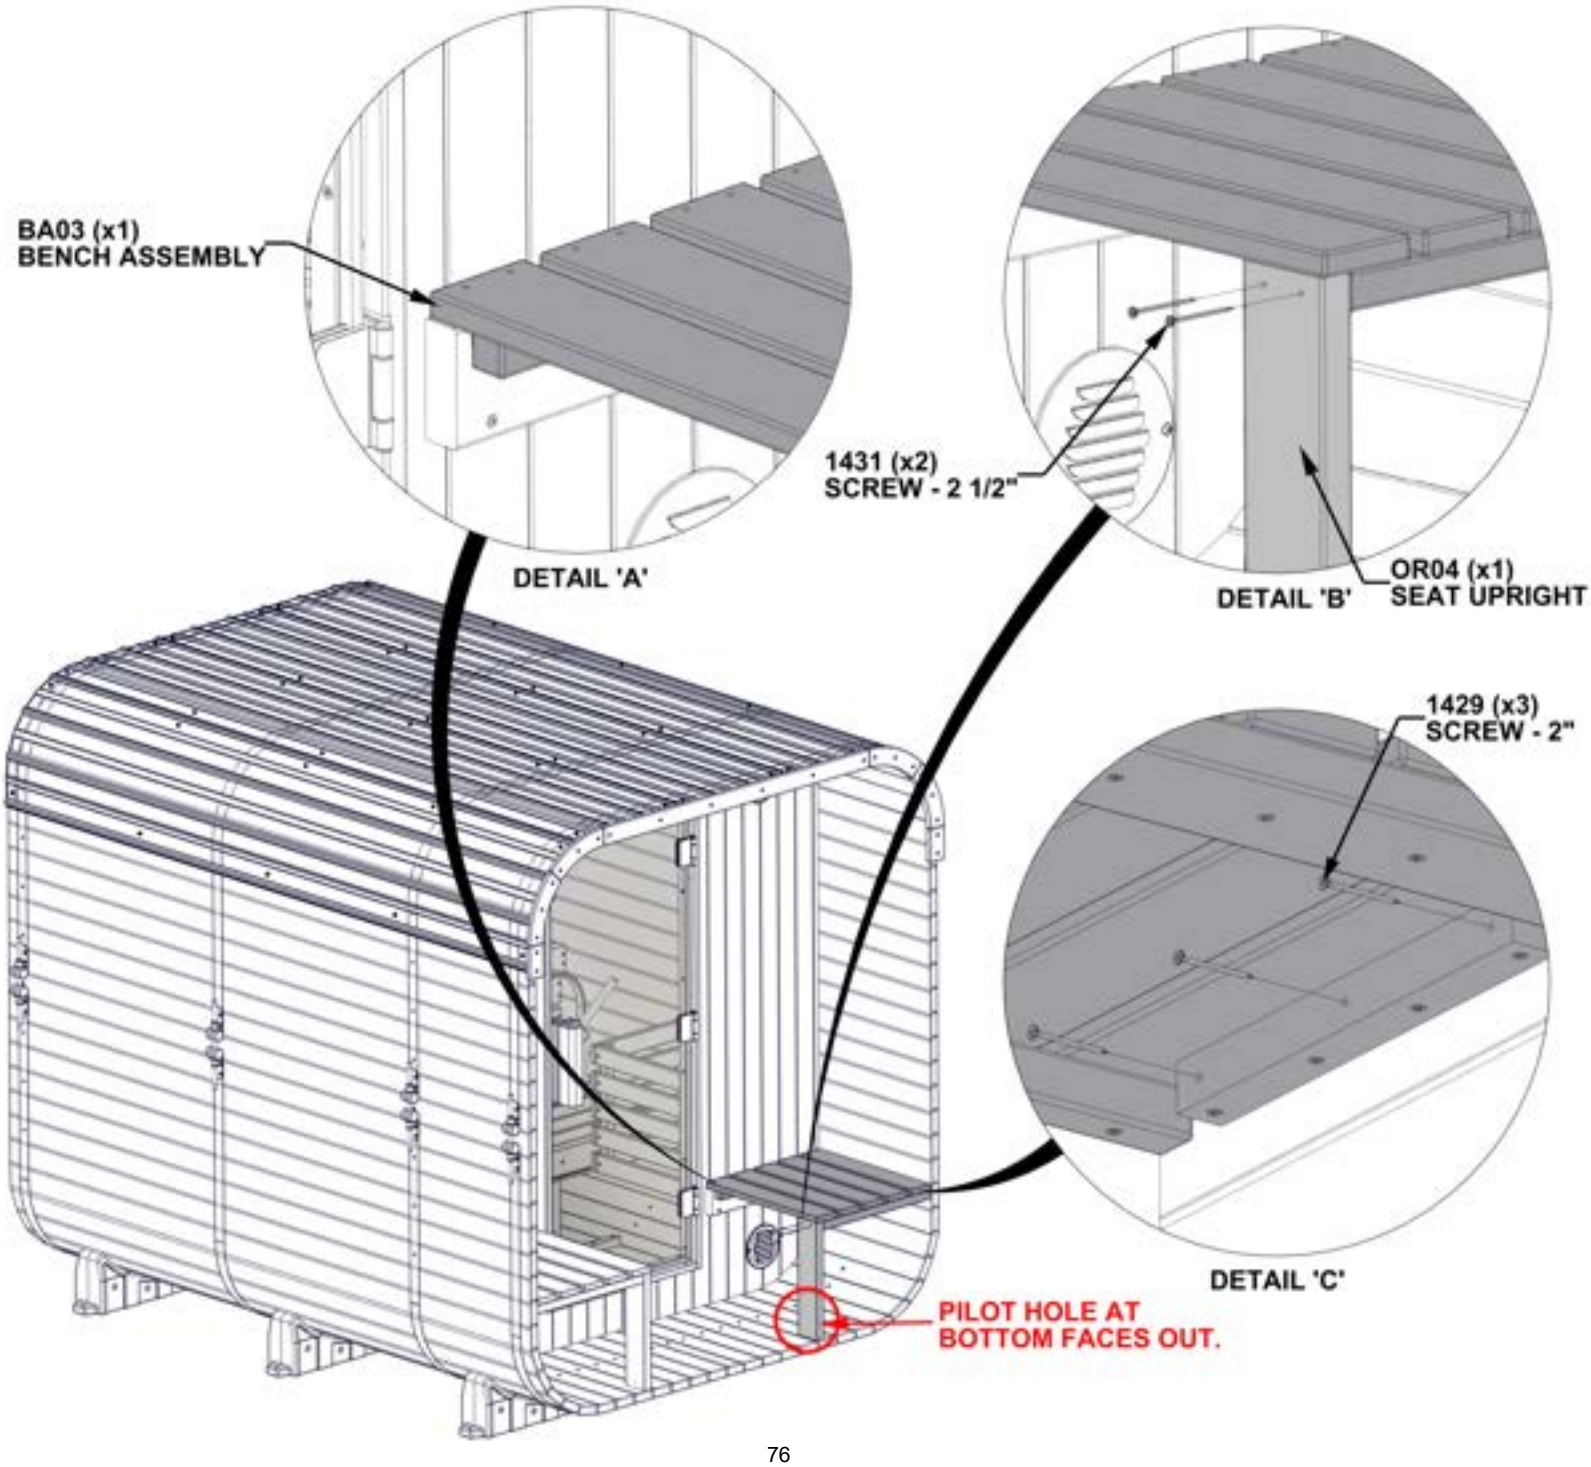


STEP 59 - BENCH ASSEMBLY

QTY	PART NUMBER	DESCRIPTION
4	H101438	SCREW TWH 8x3/4 SS-BLK



A4M00555 L BRACKET BLK
(x2)


- CHECK BOTH BENCH UPRIGHTS ARE STILL SQUARE AND LEVEL.
- ALIGN BRACKETS WITH PILOT HOLES IN BACKS OF UPRIGHTS AND ATTACH AS SHOWN.

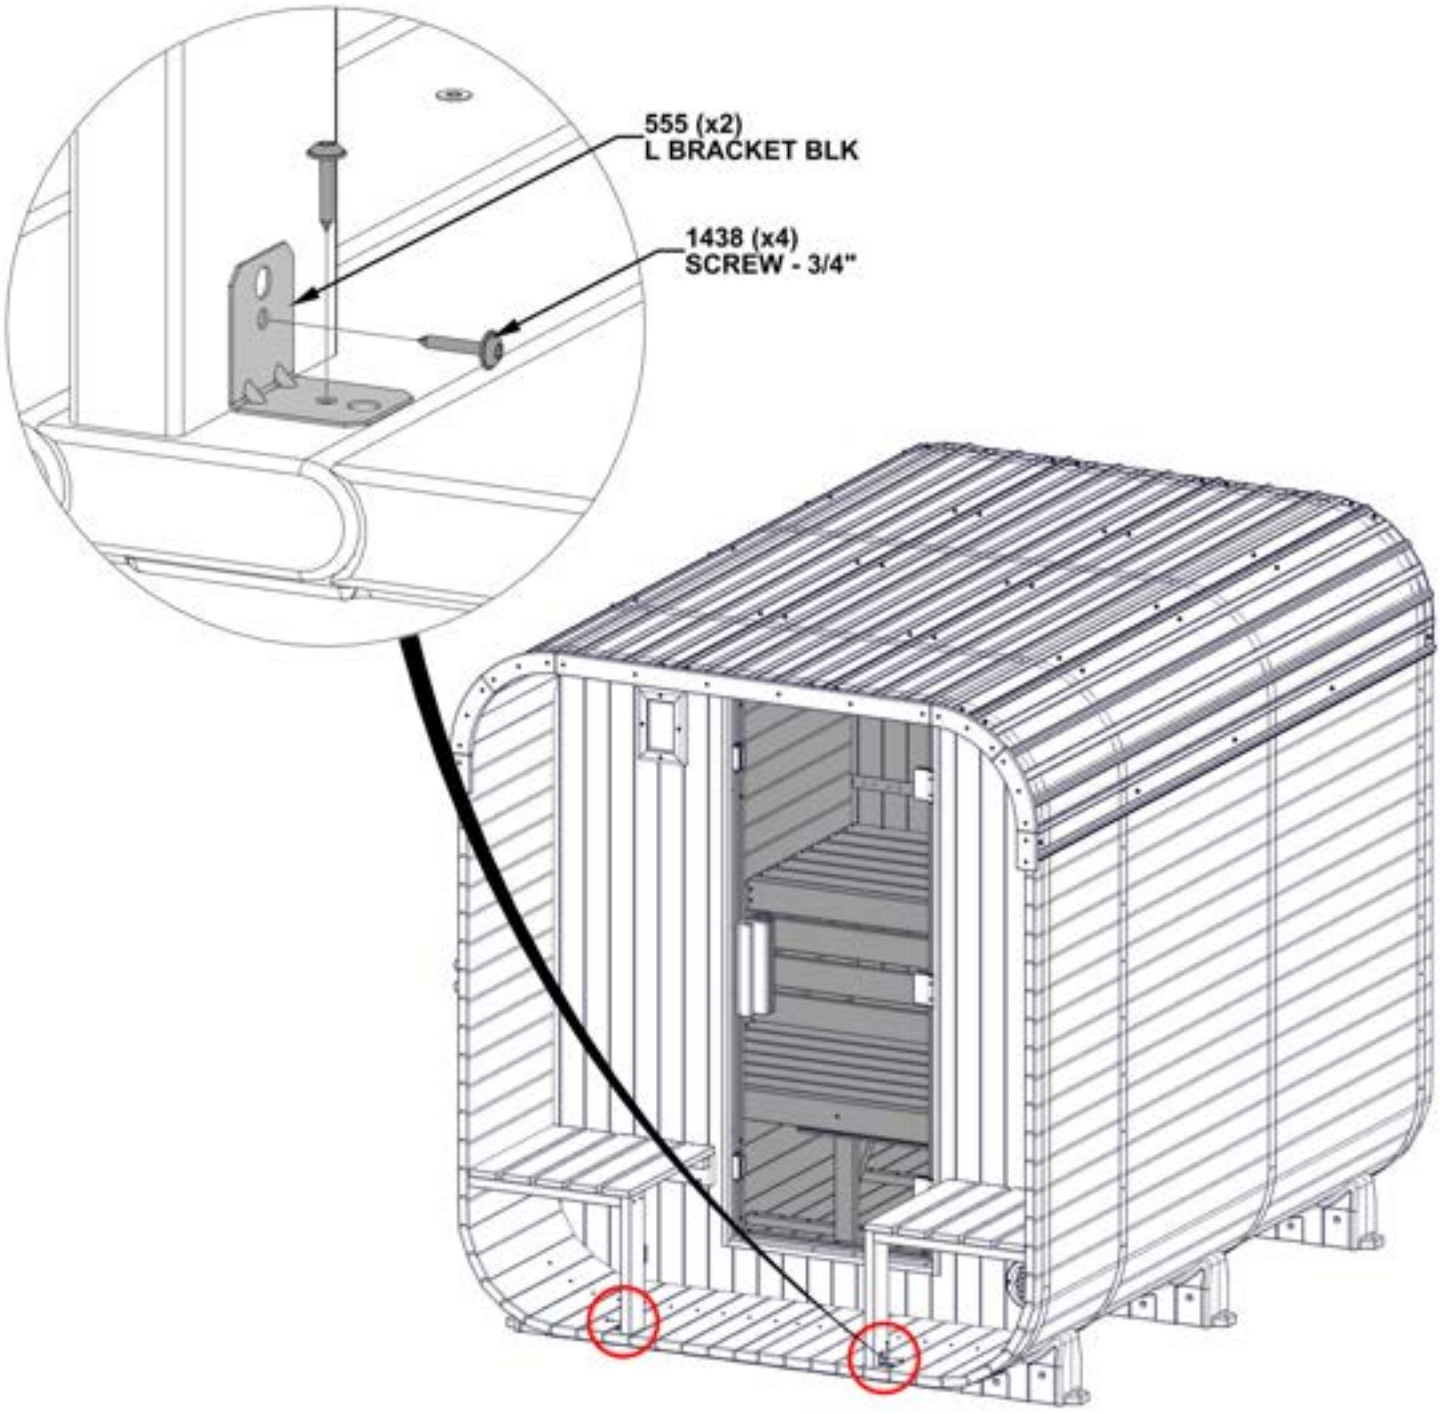

STEP 60 - BENCH ASSEMBLY


QTY	PART NUMBER	DESCRIPTION
20	H101428	SCREW TFH 8X1 3/4 SS-BLK

- ENSURE THROUGH HOLES ARE ALIGNED WITH PILOT HOLES AND ATTACH AS SHOWN.

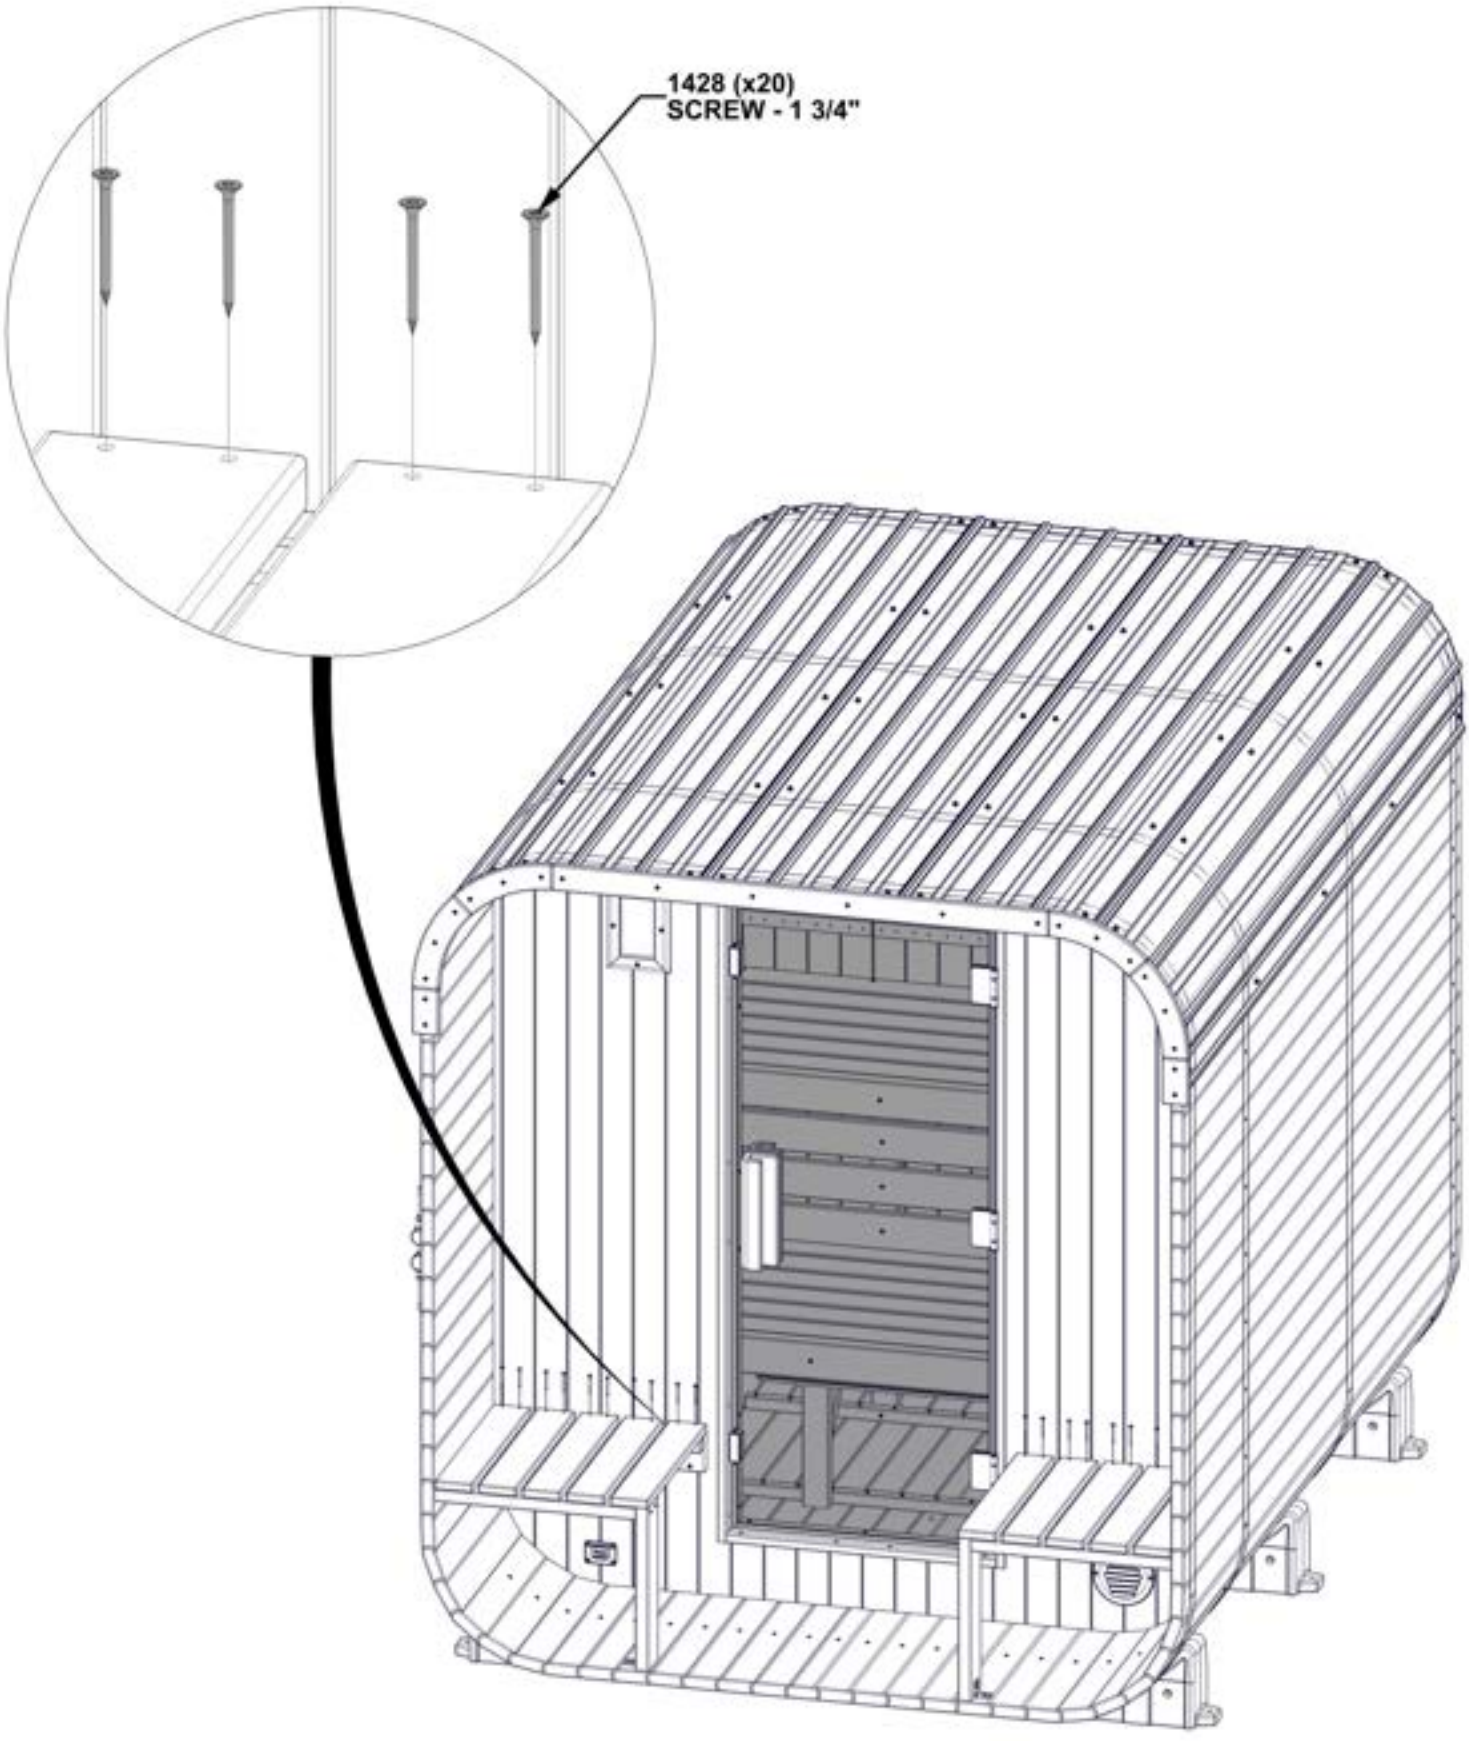


STEP 61 - HYGROMETER INSTALLATION

QTY	PART NUMBER	DESCRIPTION
1	H101424	SCREW TFH 8X1 SS-BLK

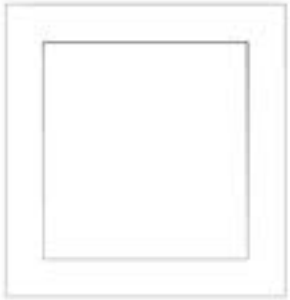

A6P01698 (x1) HYGROMETER

- INSERT SCREW INTO SIDE WALL IN APPROXIMATE LOCATION SHOWN AND HANG HYGROMETER ON IT.

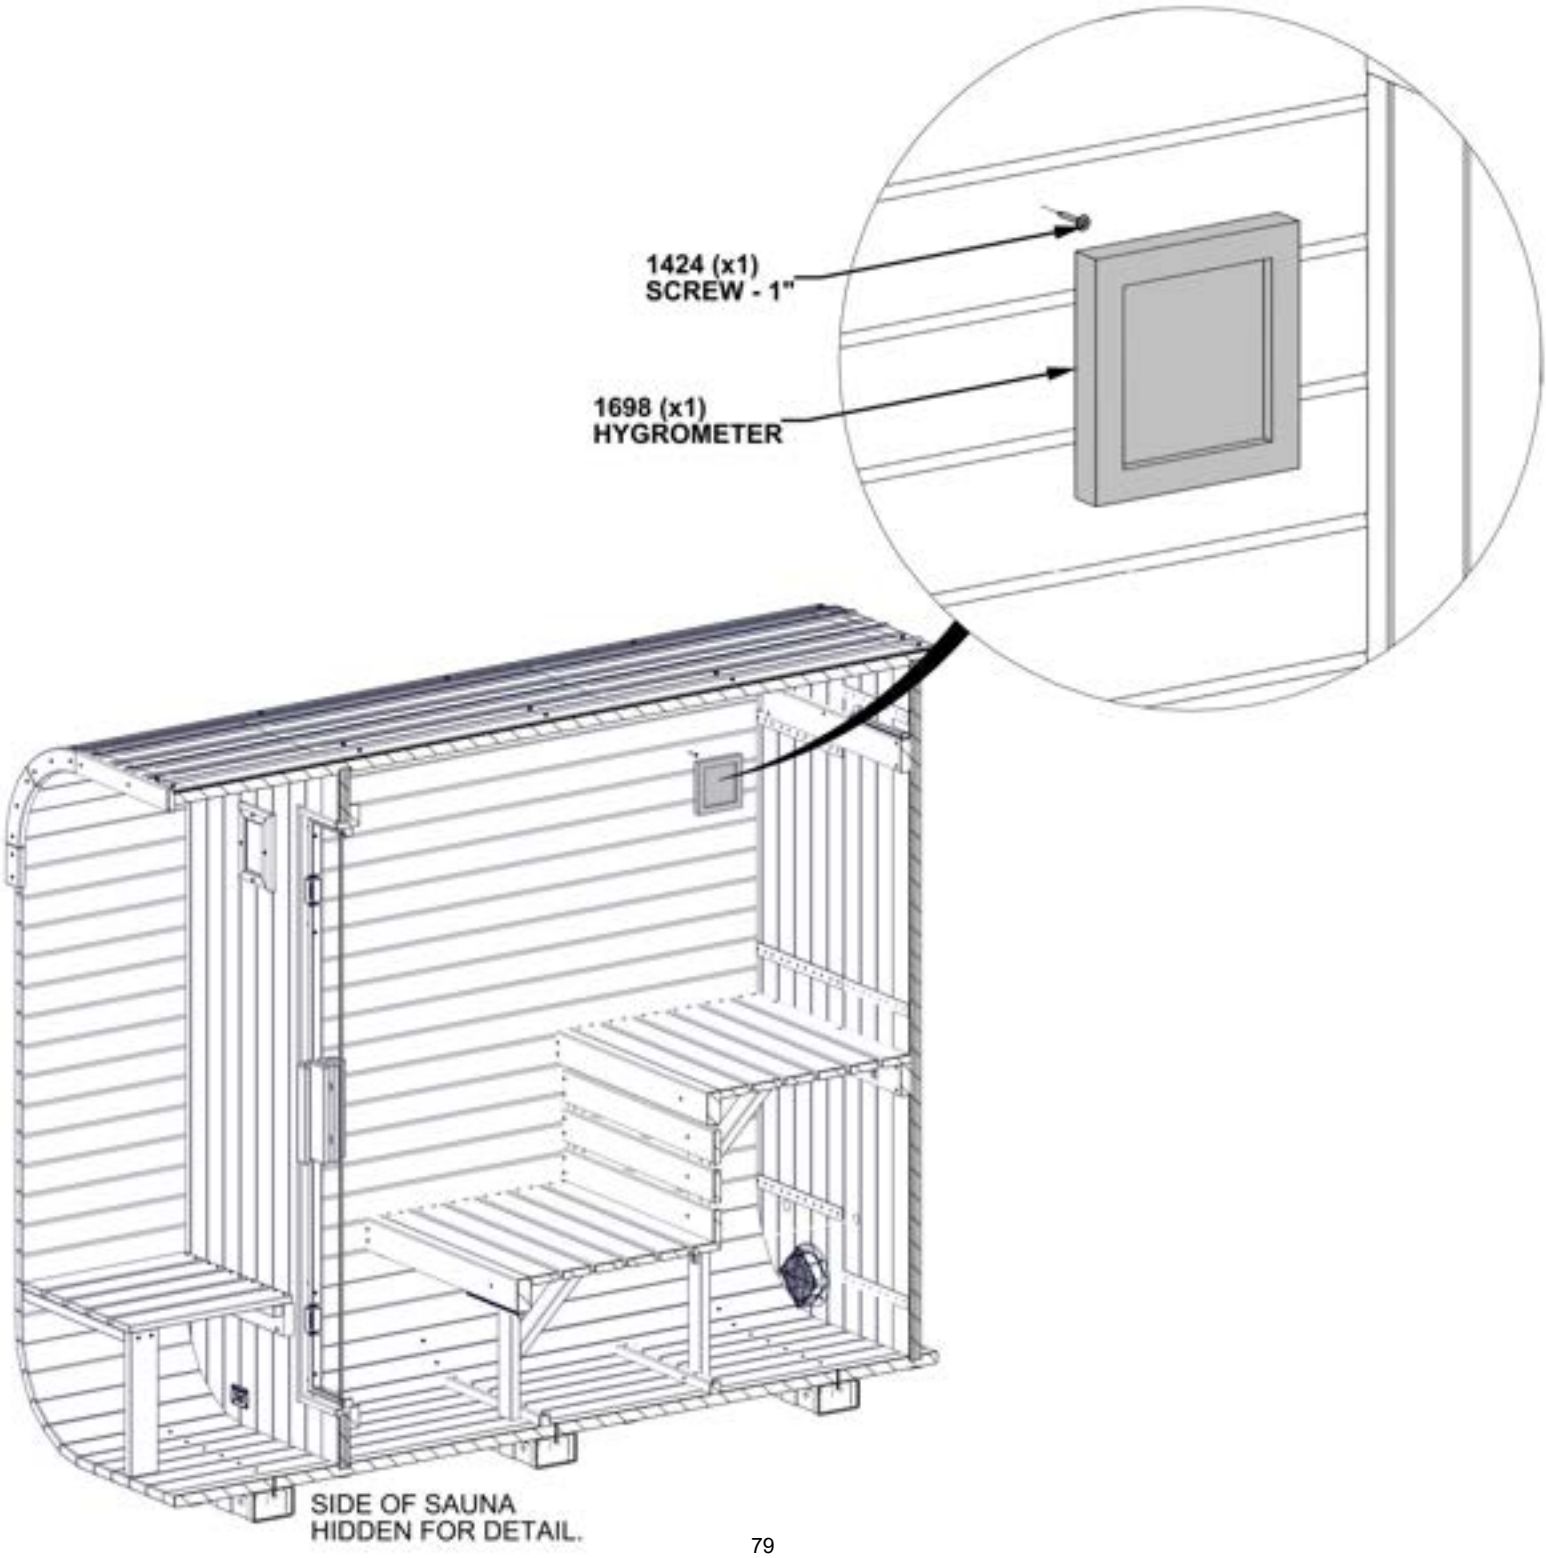


STEP 62 - TOWEL HANGER INSTALLATION


QTY	PART NUMBER	DESCRIPTION
4	H101423	SCREW TFH 8X7/8 SS-BLK




A4M05672 (x2) TOWEL HANGER

- INSTALL TOWEL HANGERS AT ANY DESIRED LOCATION ON THE RIGHT SIDE.
- HOWEVER, DO NOT INSTALL SCREWS AT THE SEAMS OF PANEL BOARDS.

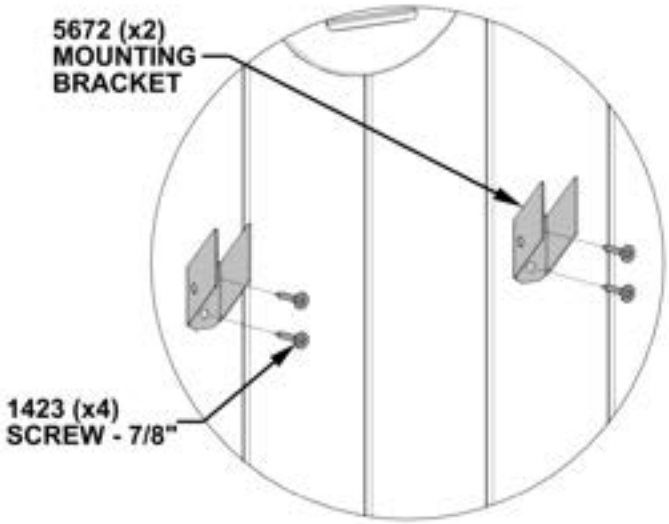

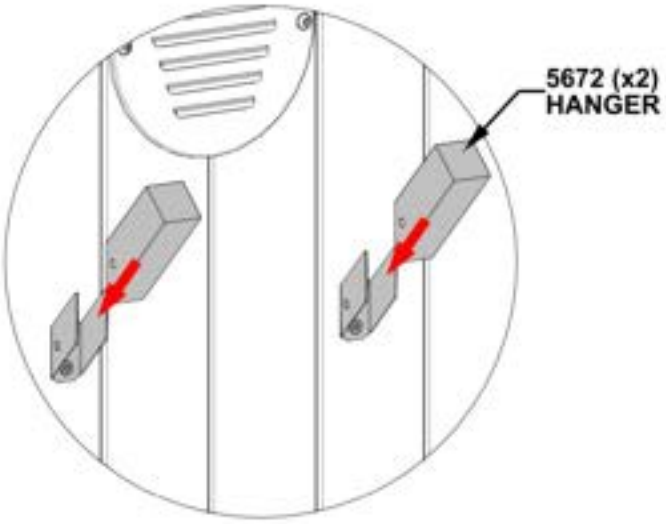

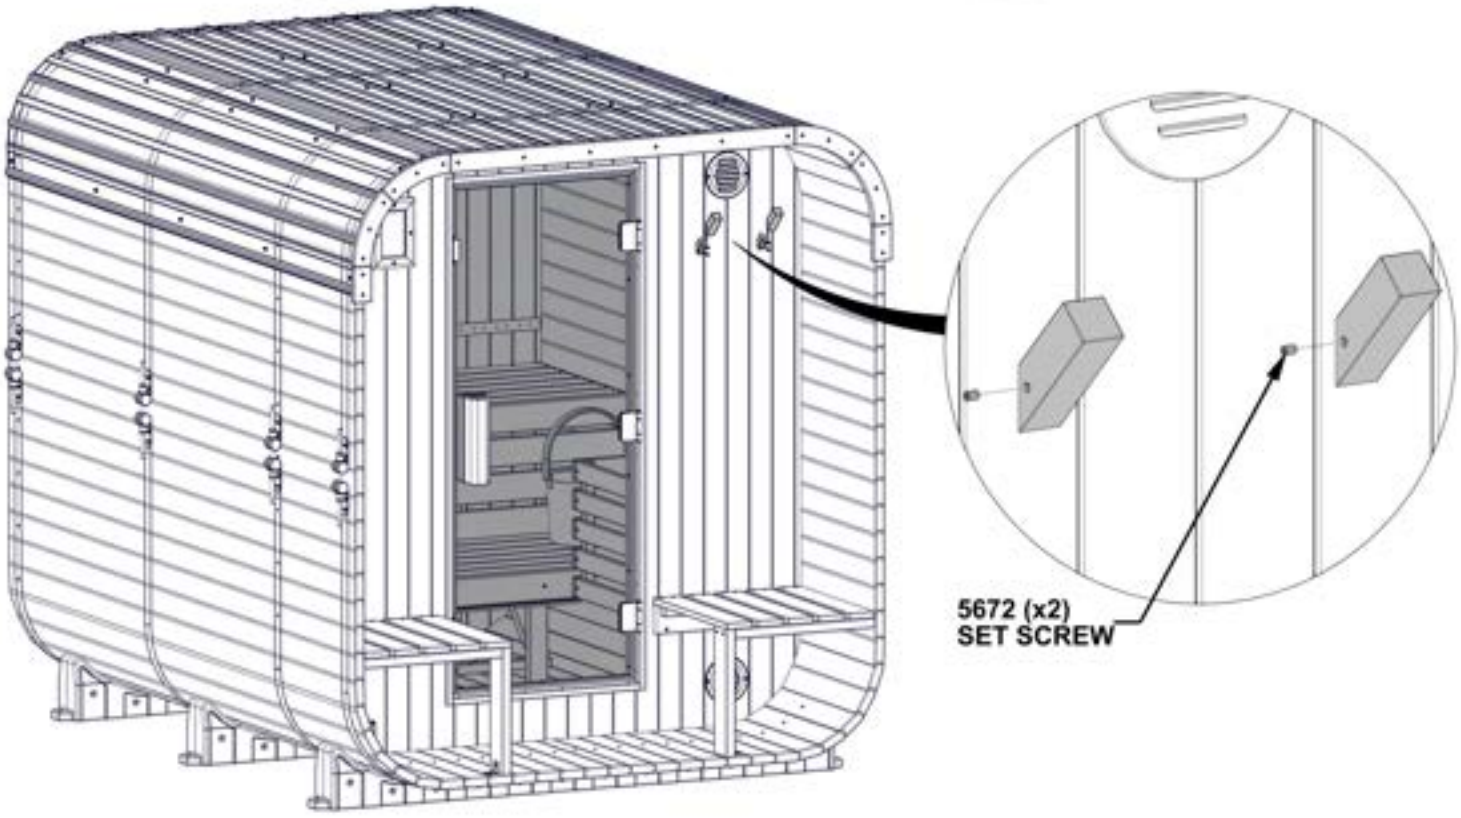


STEP 63 - HEATER INSTALLATION



A4M07271 HEATER 9KW
(x1)

- CAUTION: IMPROPER INSTALLATION OF THE HEATER COULD CAUSE HEATER TO FALL CAUSING BURNS OR OTHER INJURIES.
- DANGER! TURN OFF POWER TO THE HEATER AT THE BREAKER BEFORE BEGINNING INSTALLATION OR PERFORMING ANY MAINTENANCE. FAILURE TO TURN OFF THE POWER CAN RESULT IN ELECTROCUTION AND EVEN DEATH.
- LICENSED ELECTRICIAN REQUIRED FOR HEATER INSTALLATION - SEE HEATER INSTRUCTIONS.
- HANG HEATER ONTO SCREWS, ENSURING ALL 8 SCREWS ARE ALIGNED INTO THE SLOTS IN THE HEATER AS SHOWN.

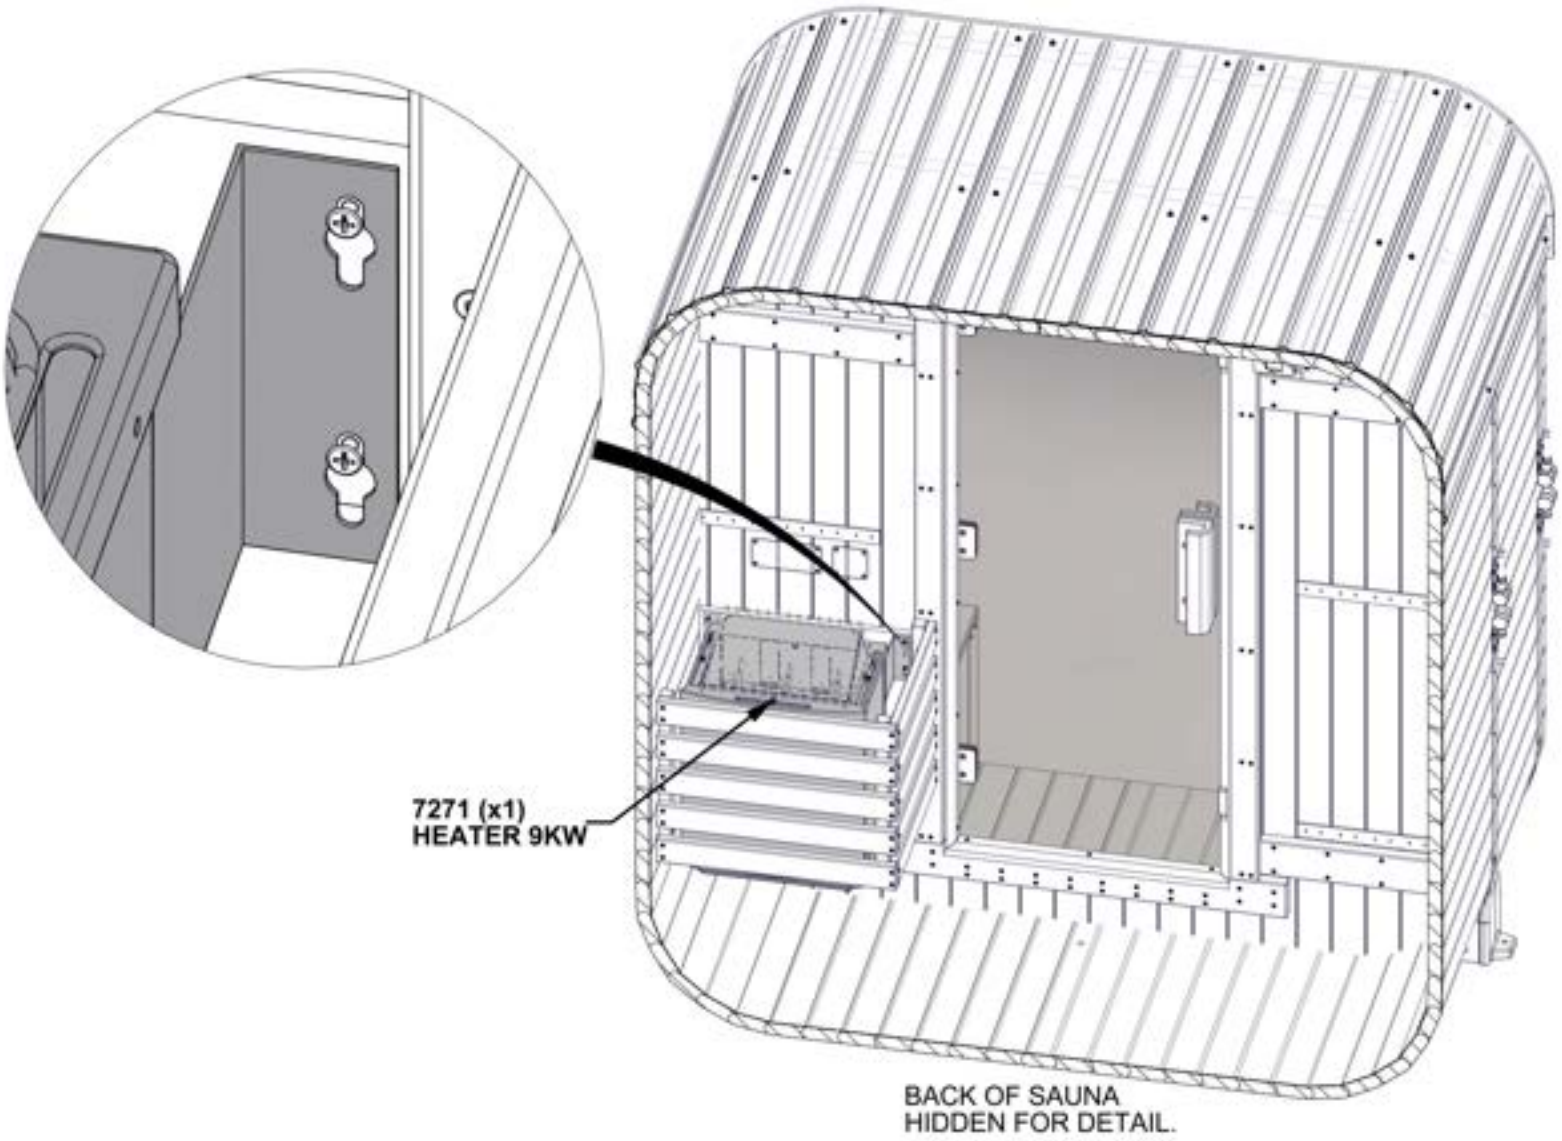


STEP 64 - FLASHING INSTALLATION

QTY	PART NUMBER	DESCRIPTION
3	H101480	SCREW SELF TAPPING #9x3/4 BLK



A4M06935 FLASHING
(x1)

- CENTER FLASHING OVER THE CONTROL BOX AND ATTACH AS SHOWN

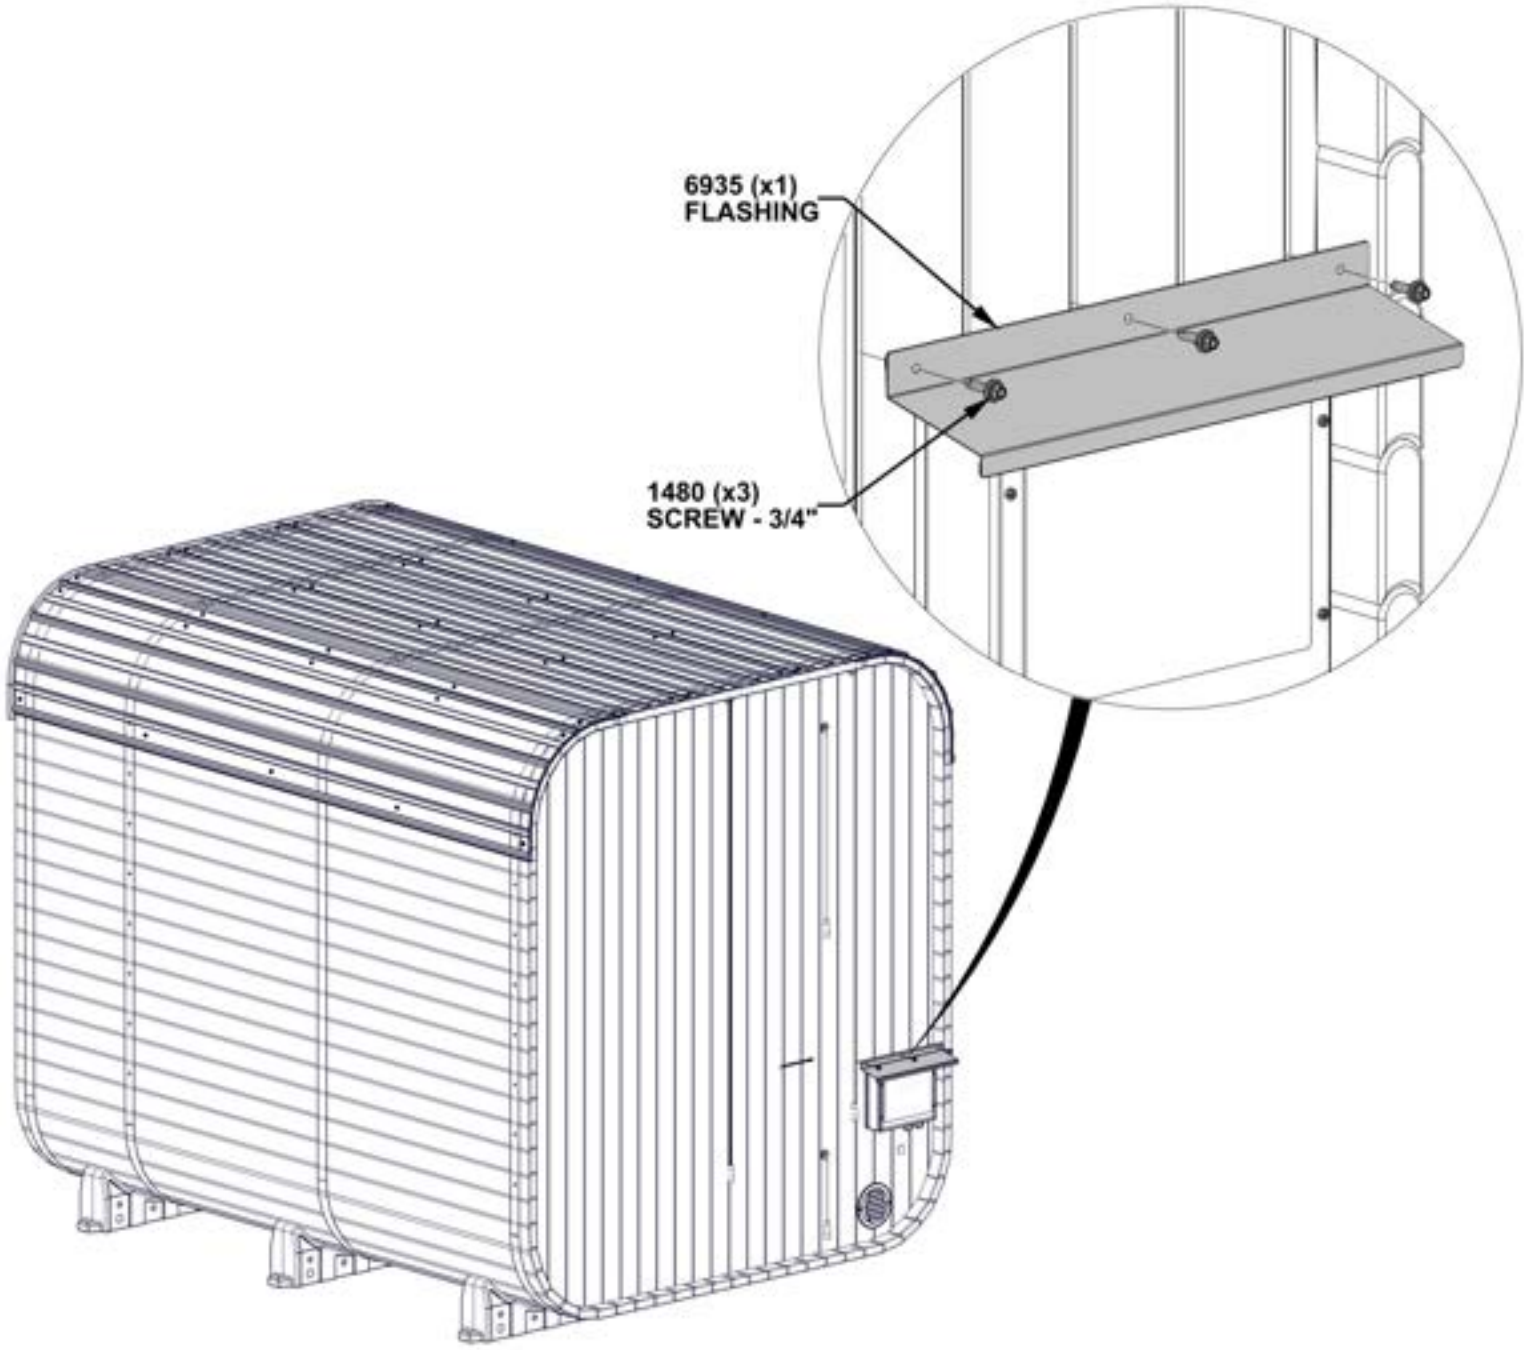

STEP 65 - ELECTRICAL

QTY	PART NUMBER	DESCRIPTION
5	H101409	SCREW PPH 4x1/2 BLK



A6P01468 (x1) 30mm SILICON GROMMET




A6P01733 (x1) SAUNA POWER WIRE



A6P01448 (x5) ZIP CABLE TIE

- USE PROVIDED GROMMET FOR POWER WIRE.
- SEE HEATER INSTRUCTIONS FOR INSTALLATION.
- WILL NEED TO REMOVE CONDUIT FITTING TO FEED SAUNA POWER WIRE THROUGH GROMMET.
- USE ZIP TIES TO SECURE AND ORGANIZE POWER WIRE.

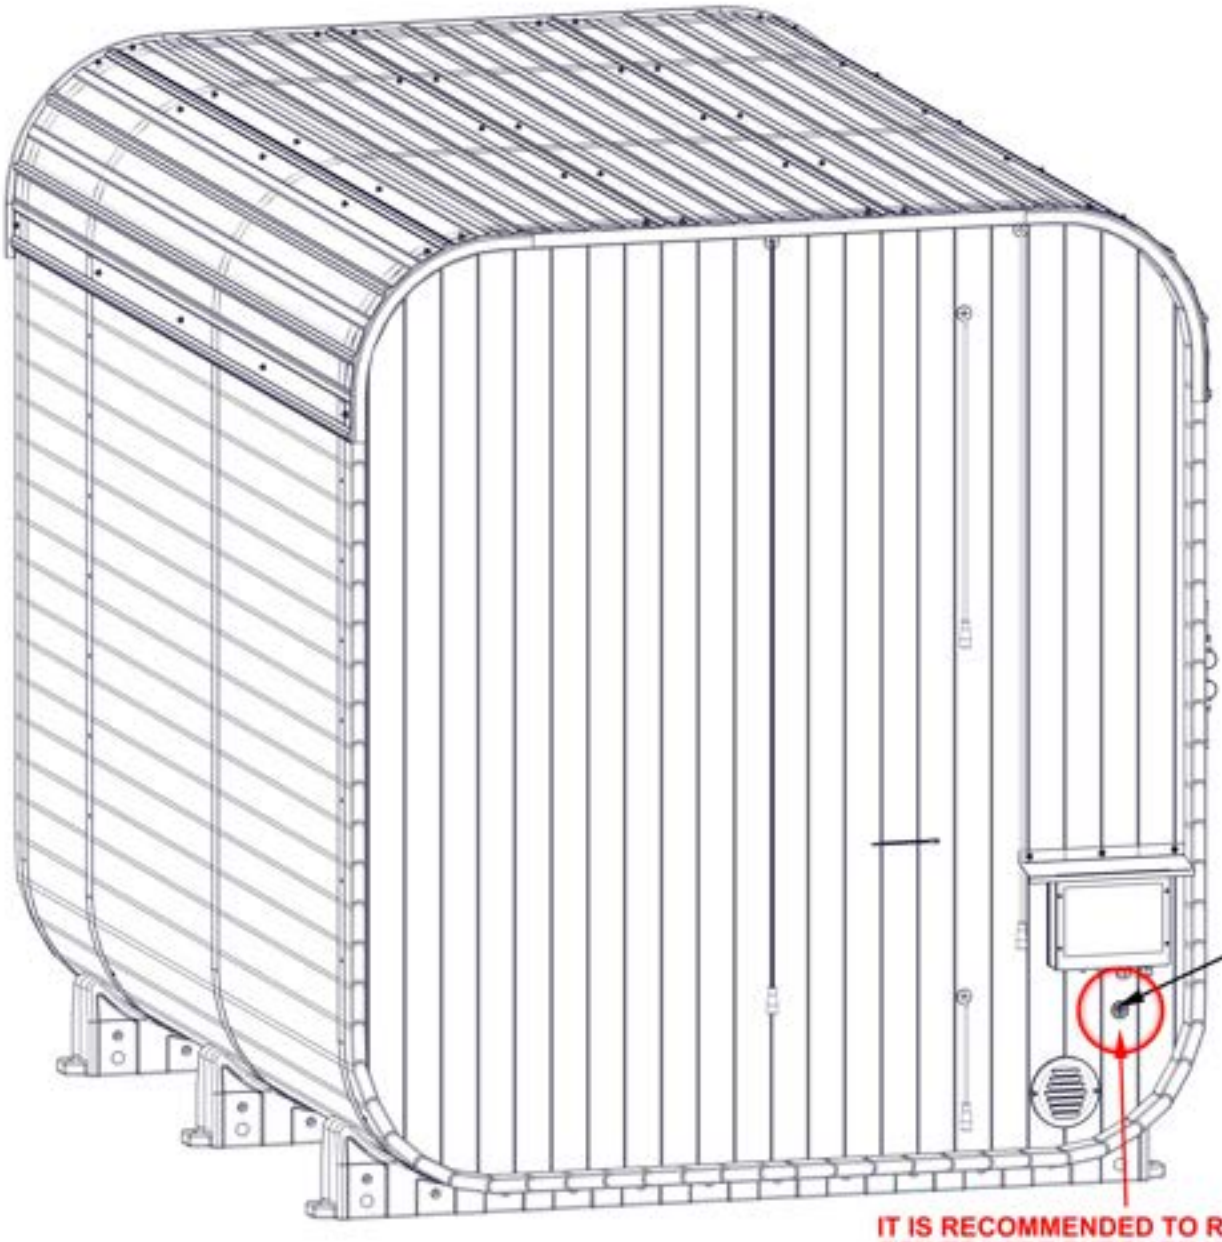

STEP 66 - CLEANING

ONCE THE ASSEMBLY IS COMPLETE, SWEEP AND VACUUM THE INSIDE OF THE SAUNA. WIPE DOWN THE ENTIRE SAUNA WITH A DAMP CLOTH TO REMOVE ANY REMAINING DIRT, DUST, AND DEBRIS.

DO NOT USE CHEMICAL-BASED CLEANING AGENTS INSIDE THE SAUNA.

