

PBF (FLUSH) PRE-CONSTRUCTION BOARD INSTALLATION GUIDE


PBF Pre-construction Board Installation guide




- 1** Before installing the PBF pre-construction board, we recommend securing two horizontal studs, at PBF board height, between the vertical studs of the chosen installation location to add additional support.



- 2** After this has been done, ensure that the board is level before fully securing it to the wall studs.

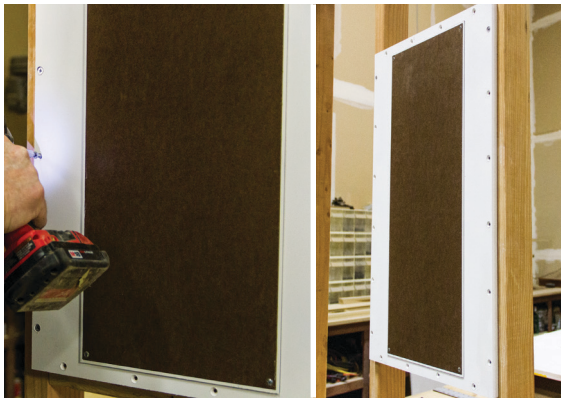


- 3** Once the board has been properly leveled, fasten the PBF board to the vertical and horizontal studs.

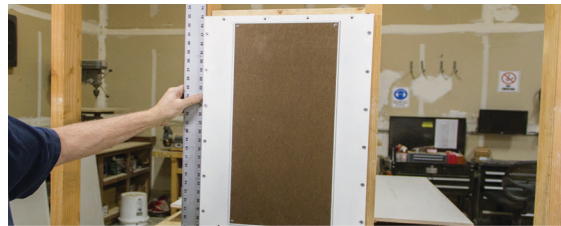

- 4** Measure the PBF board and make an outline of the board on a new panel of sheet rock.



- 5** Cut along the traced path to make a frame for the pre-construction board.

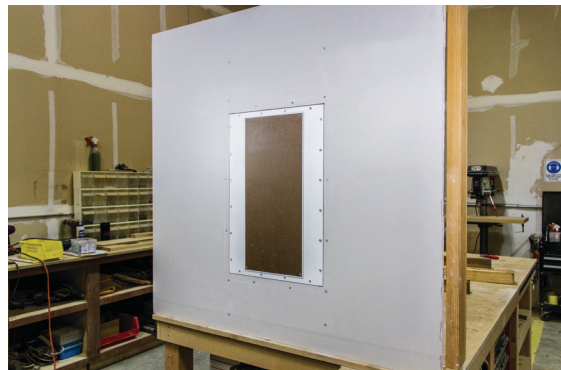

- 6** Lay the frame panel of sheet rock over the PBF board and fasten the frame to studs of the wall.

PBF PRECONSTRUCTION BOARD INSTALLATION GUIDE




- 7** Now, cover the seams around the board with mesh tape, and begin the mudding process. Make sure to apply mud up to the lip of the PBF board.



- 8** After you finish the mudding process, the inner plug can now be removed and sanding can be performed to remove any unwanted surface features.



- 9** Mount the speaker bracket to the wall, and begin the speaker installation process.

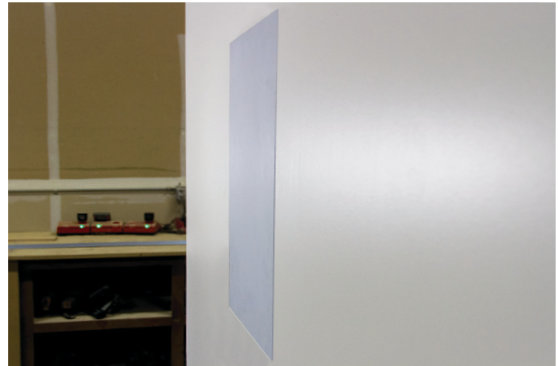

- 10** After the speaker installation is completed, the grille will be flush with the wall.

