




Quality Gloves Since 1975

塑料针应用 (1对)

HANGTAG ASSEMBLY INSTRUCTIONS - PLASTIC PIN APPLICATION (1 PAIR)

STEP 1:

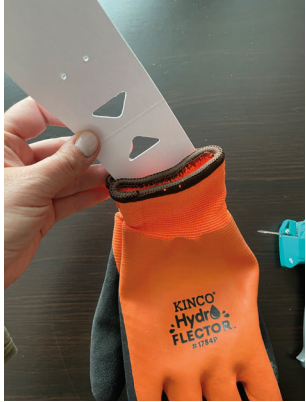

在两个折痕处弯曲吊牌的桥接部分，将手套对放在一起（右手放在顶部，左手放在底部，手掌朝外），然后将吊牌的背面插入左手手套的袖口。中文翻译

Bend the bridge of the hangtag at both creases, place the glove pairs together (right hand on top and left on bottom with palm-side out) and insert the back of the hangtag into the cuff of the left glove.


STEP 2:



将吊牌正面折叠在顶部手套上，将手套移动到吊牌顶部三角形开口的顶部。中文翻译

Fold the front of the hangtag over the top glove, move the gloves to the top of the triangle opening at the top of the hangtag.

STEP 3:

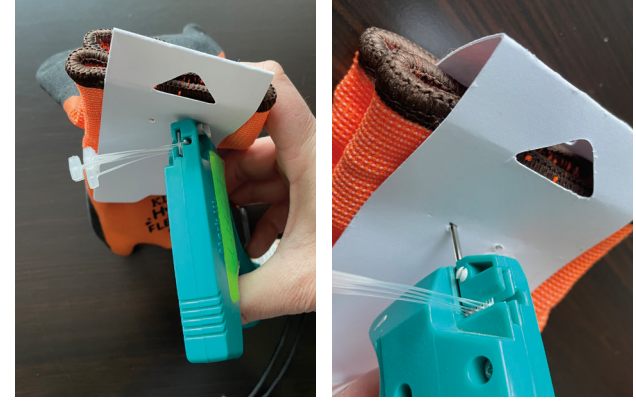

将丹尼森枪的针头穿过吊牌正面的钻孔、穿过两只手套和吊牌背面的钻孔。对第二个钻孔重复上述步骤。在每个钻孔中插入两个销钉。中文翻译

Insert the needle of the denison gun through the drill hole on the front of the hangtag, through both gloves, and through the drill hole on the back of the hangtag. Repeat for the second drill hole. Insert two pins in each drill hole.

STEP 4:



确保两个销钉穿过每个钻孔和两个手套，以便所有零件都牢固连接。中文翻译

Ensure two pins go through each drill hole and through both gloves so all parts are attached securely.

FINISHED ASSEMBLY



侧视图

Side view

背视图

Back view