

ROCKFORD UPHOLSTERED CANOPY QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

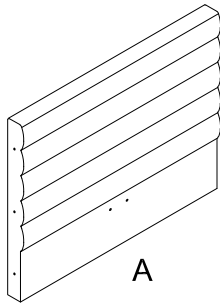

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		6 PCS
2	FLAT WASHER (5/16")		6 PCS
3	LOCK WASHER (5/16")		6 PCS
4	ALLEN KEY (5/16")		1 PC

BOX#2

B. FOOTBOARD

1 PC

C. SLAT ROLL


1 SET

D. SHORT CROSSBAR


2 PCS

E. CENTER SLAT SUPPORT CLEAT


2 PCS

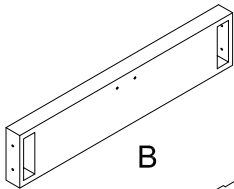

B

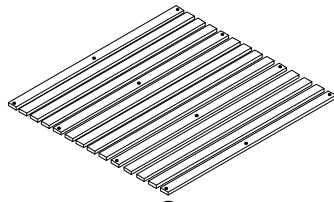

C

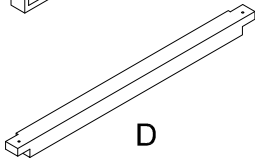

D



E

HARDWARE KIT PACKED IN BOX #2

5	ALLEN BOLT (5/16"x 5-1/2")		4 PCS
6	THREADED BOLT (5/16"x 3-1/2")		12 PCS
7	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
9	FLAT WASHER (5/16")		20 PCS
10	FLAT WASHER (1/4")		4 PCS
11	LOCK WASHER (5/16")		20 PCS
12	LOCK WASHER (1/4")		4 PCS
13	HEX NUT (5/16")		12 PCS
14	PHILLIPS SCREW (M4 x 32mm)		10 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		6 PCS

BOX#3

F. SIDE RAIL

2 PCS

G. LONG CROSSBAR


2 PCS

H. SUPPORT LEG


4 PCS

I. CENTER SLAT SUPPORT

1 PC

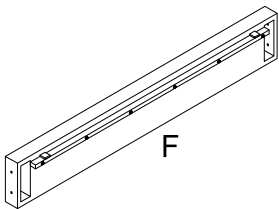


F

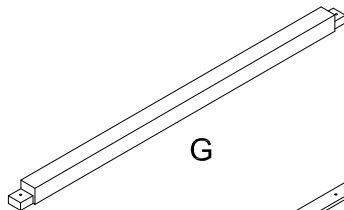

G




H

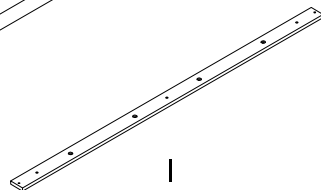

I

FULLY ASSEMBLED

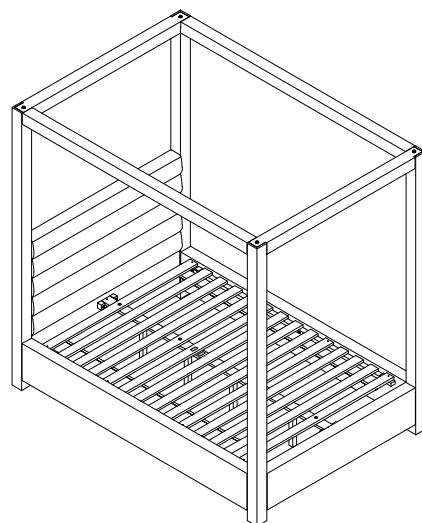

BOX#4

J. LEFT HEADBOARD POST


1 PC

K. RIGHT HEADBOARD POST

1 PC

L. FOOTBOARD POST

2 PCS






J



K



L




ROCKFORD UPHOLSTERED CANOPY QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 1:

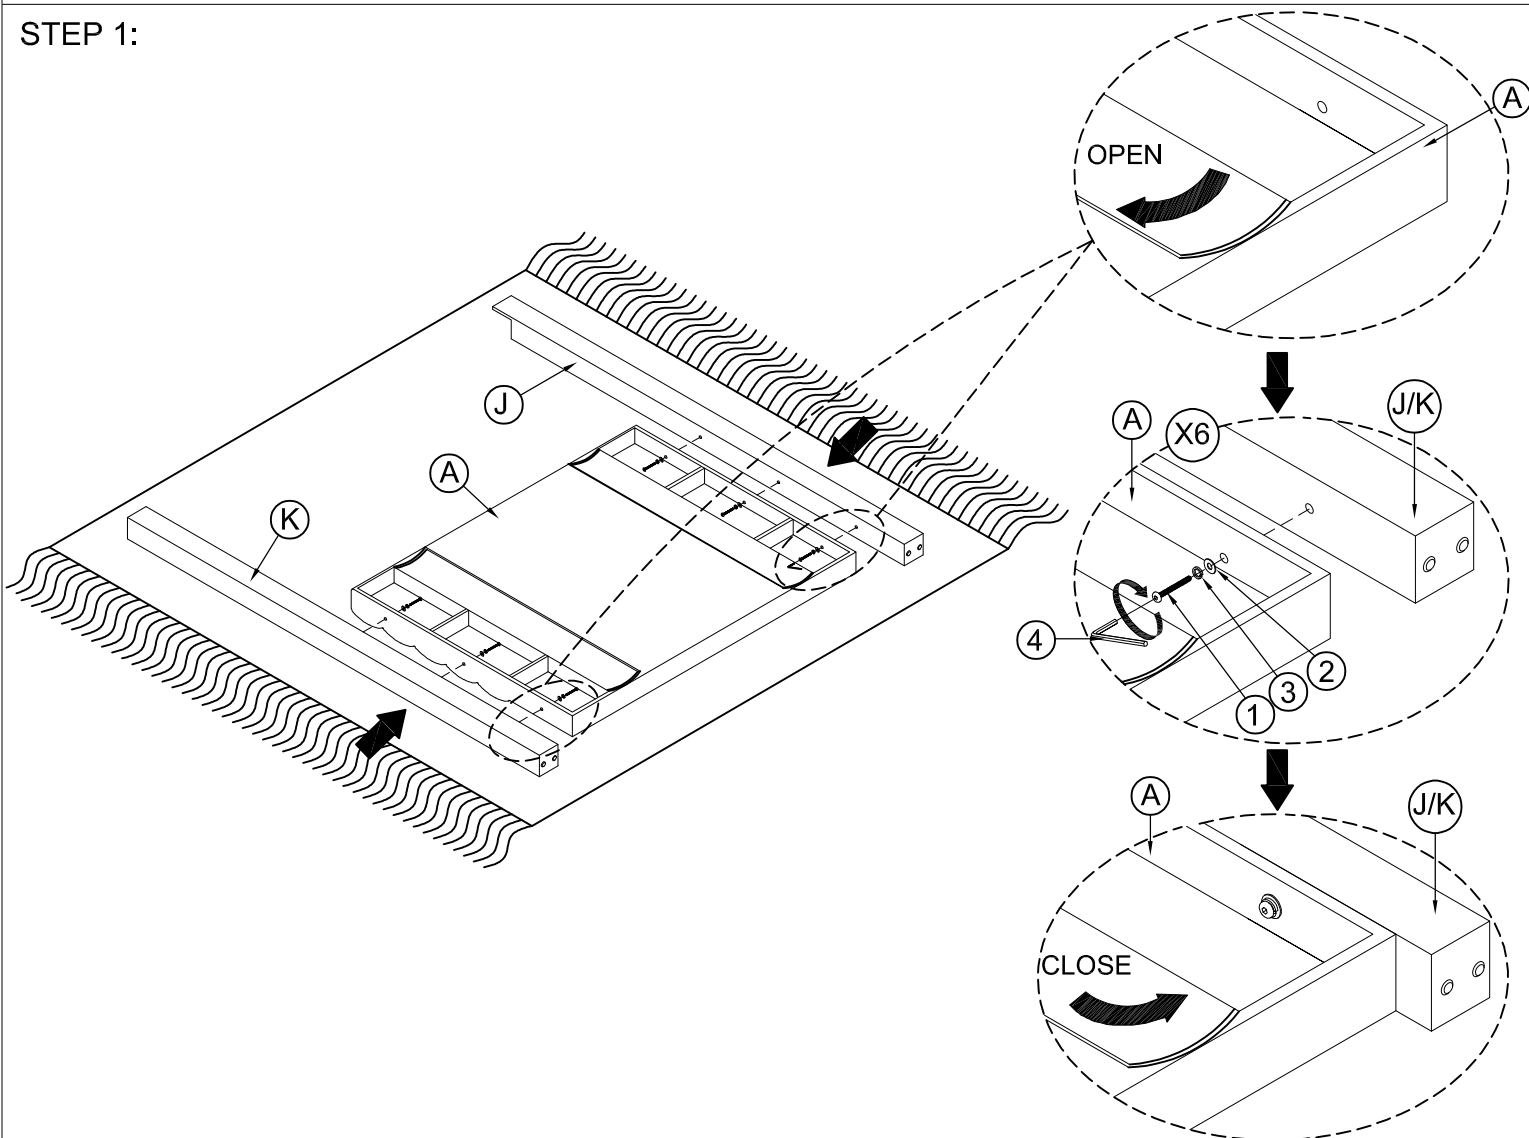

STEP 2:

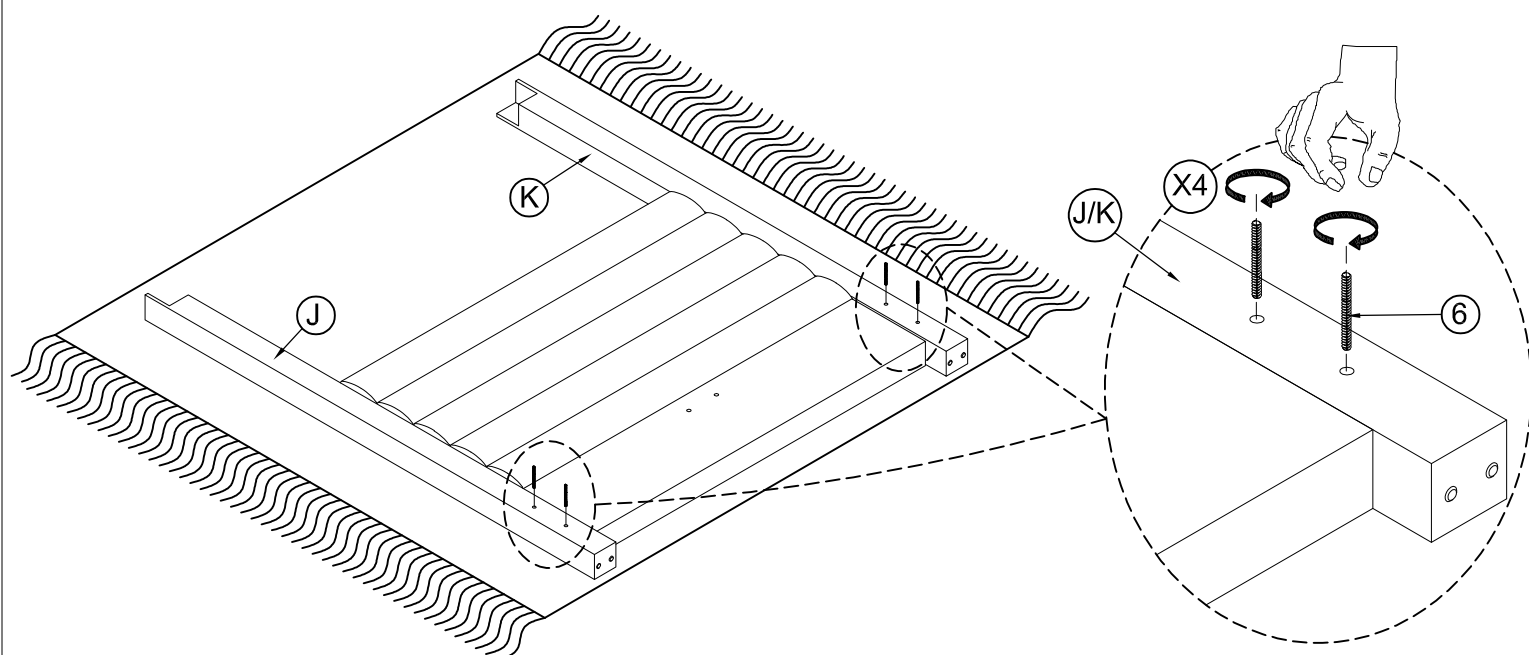

MODUS
FURNITURE

STEP 3:

This diagram illustrates the third step of the assembly process. It shows a perspective view of the cabinet's front panel, which has a wavy, textured edge. Two long, thin metal strips, labeled 'L', are positioned horizontally across the panel. A circular inset provides a magnified view of the attachment process. In this inset, a hand is shown using a screwdriver to tighten a screw into a pre-drilled hole in the metal strip. The strip is labeled 'L'. Another label 'X8' indicates that there are eight such screws to be installed. The inset also shows the screw being driven into the panel, with a circular arrow indicating the direction of rotation. The main view shows the strips being attached to the front panel, with the wavy edge of the panel visible on the right side.

STEP 4:


The diagram illustrates the final step of the assembly process. It shows a door being moved into position against a frame. A callout shows the door being closed. A detailed inset shows the door being opened, revealing the internal mechanism with parts labeled B, L, X4, 6, 9, 11, 13, 16, and 17. The inset also shows the door being closed.

ROCKFORD UPHOLSTERED CANOPY QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 5:

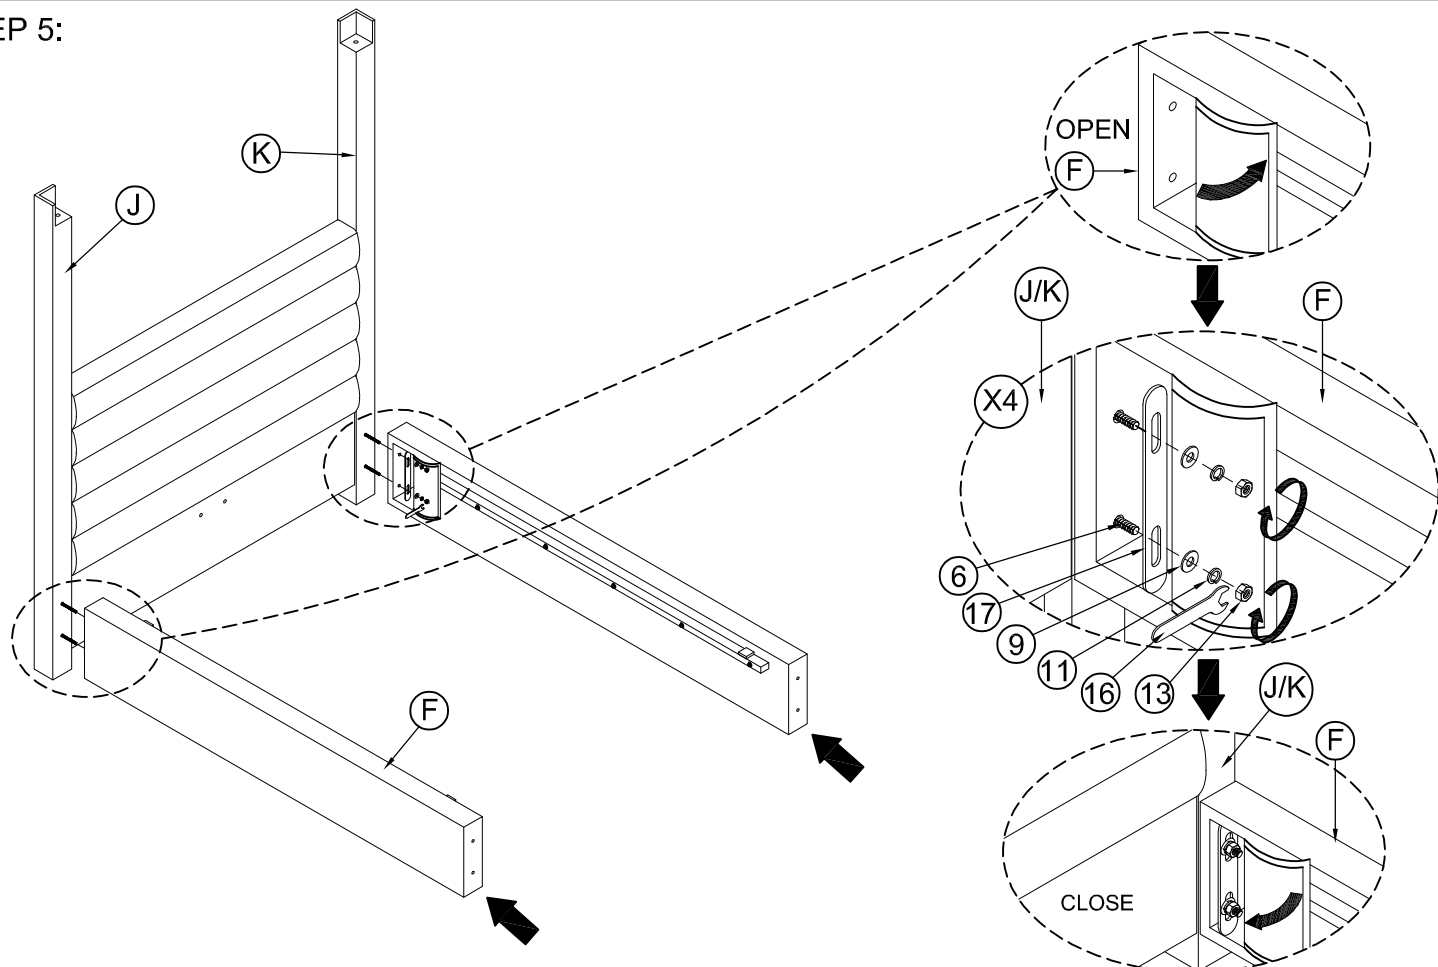

STEP 6:

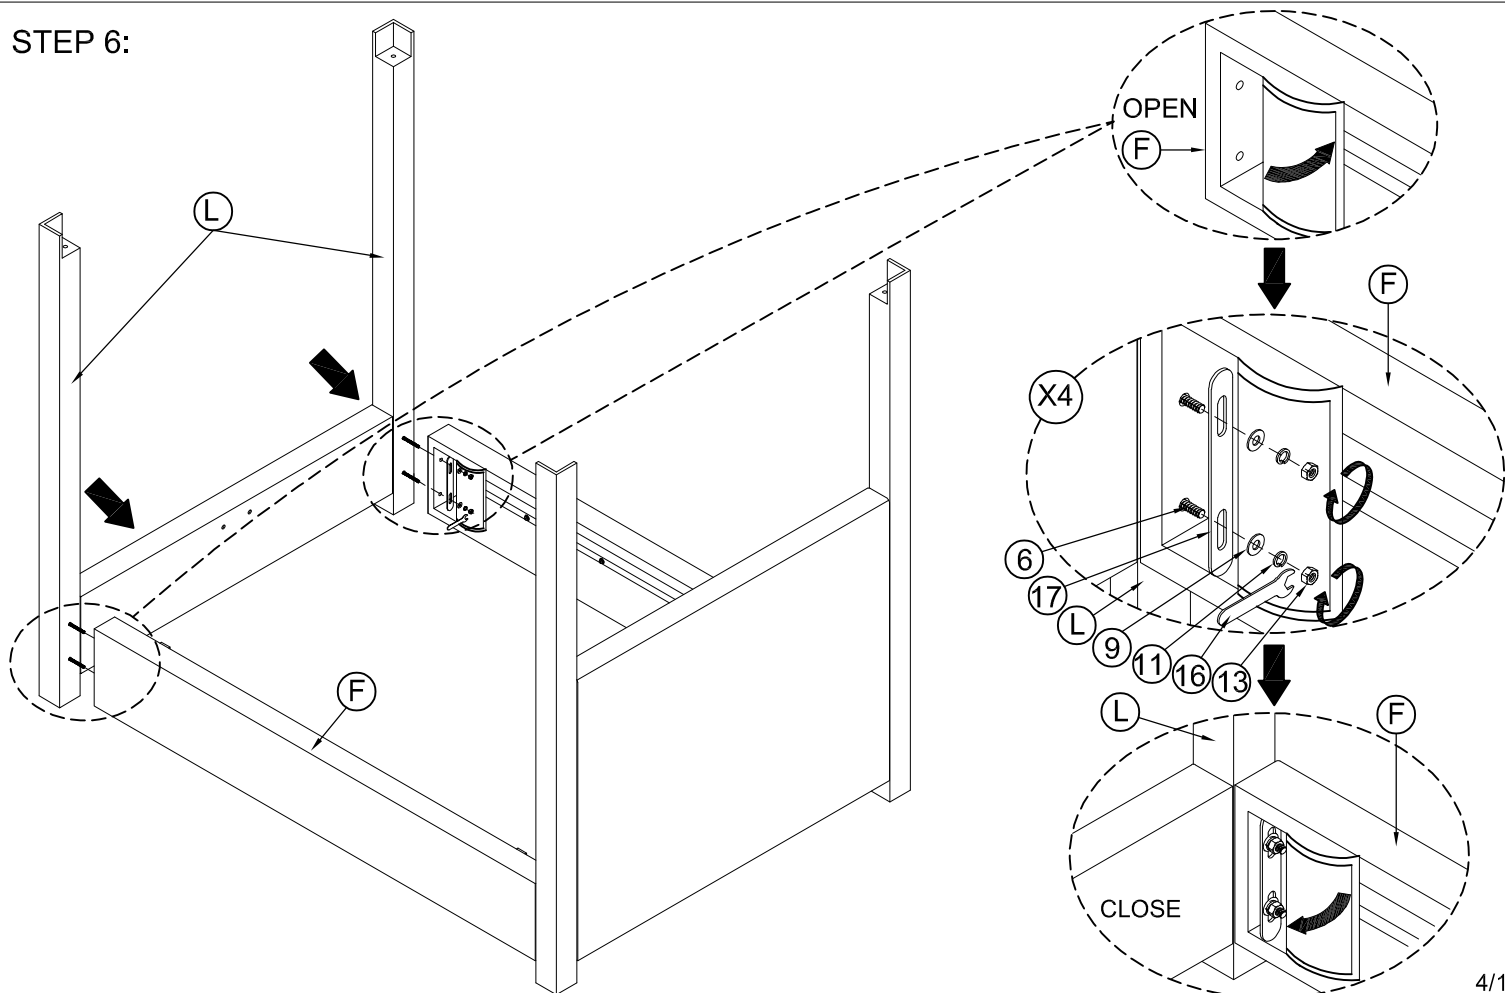


ROCKFORD UPHOLSTERED CANOPY QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 7:

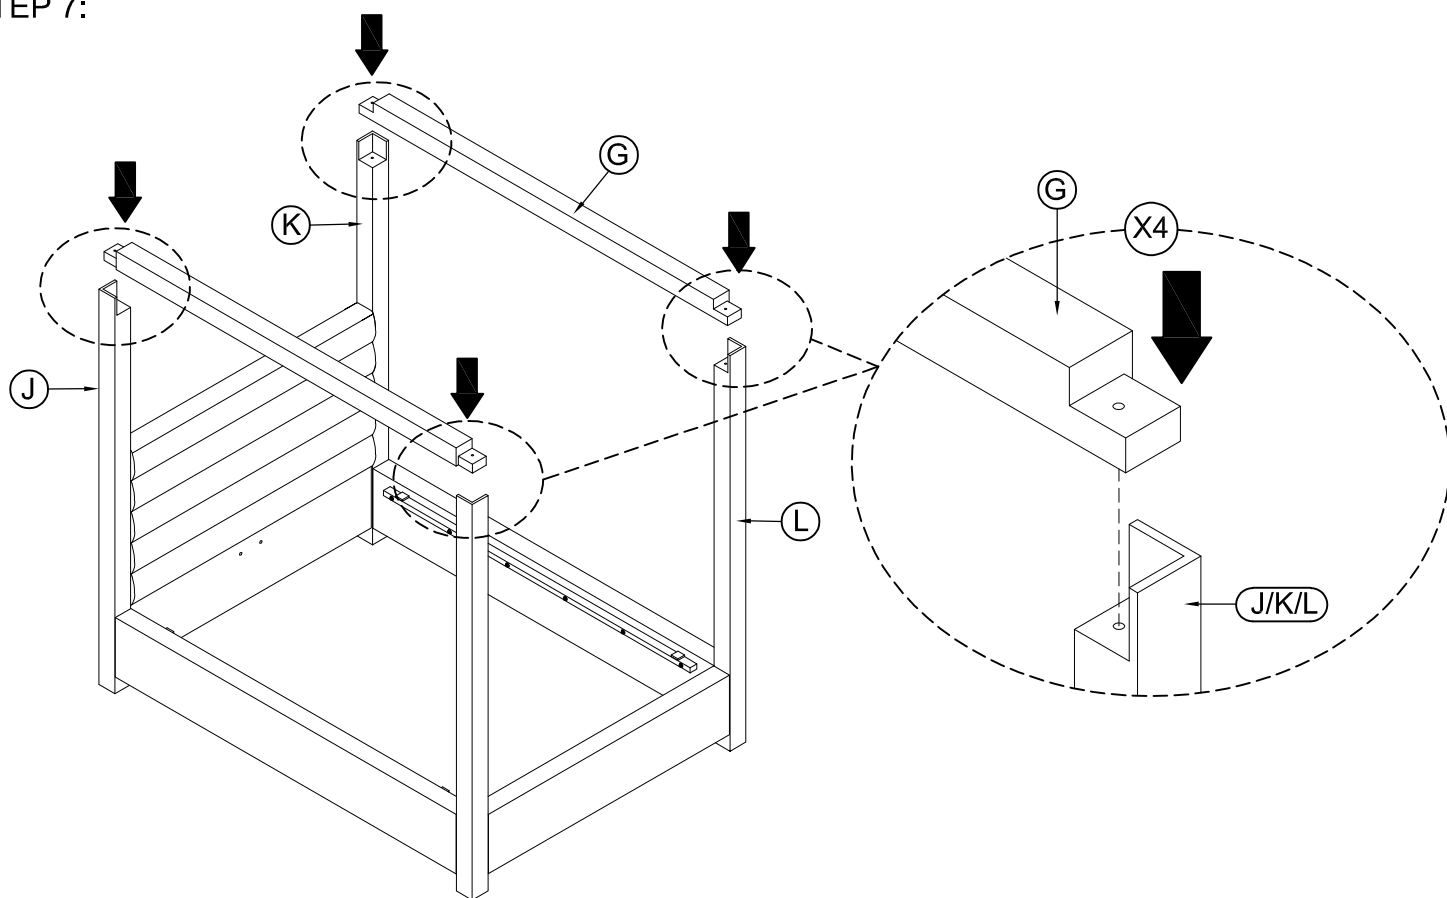

STEP 8:

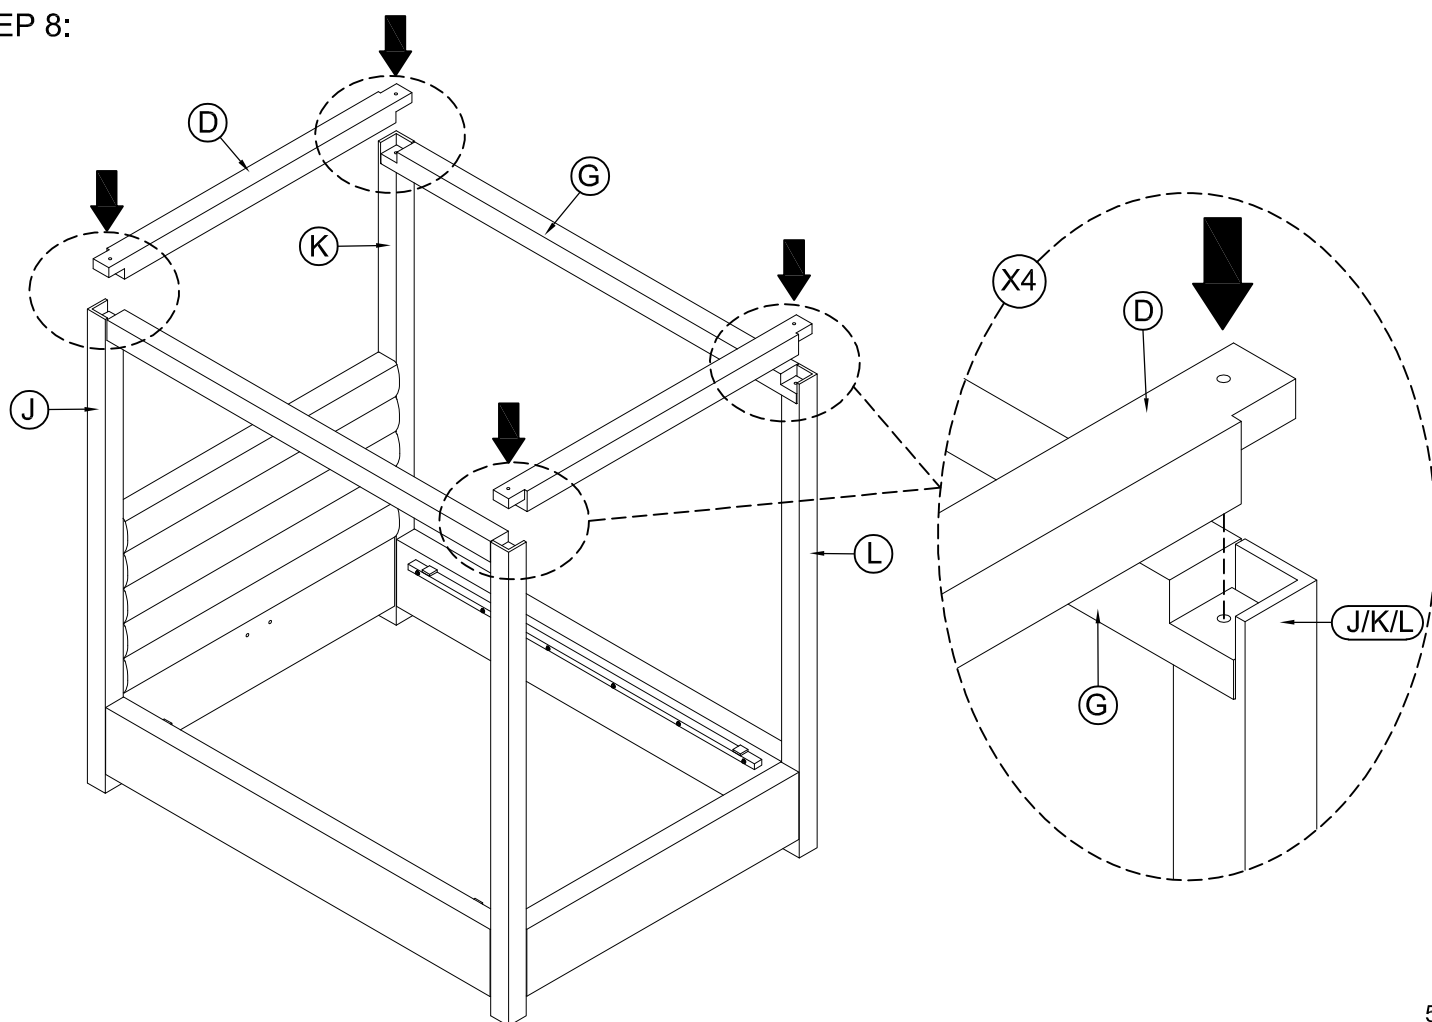


ROCKFORD UPHOLSTERED CANOPY QUEEN BED

ASSEMBLY INSTRUCTIONS




STEP 9:

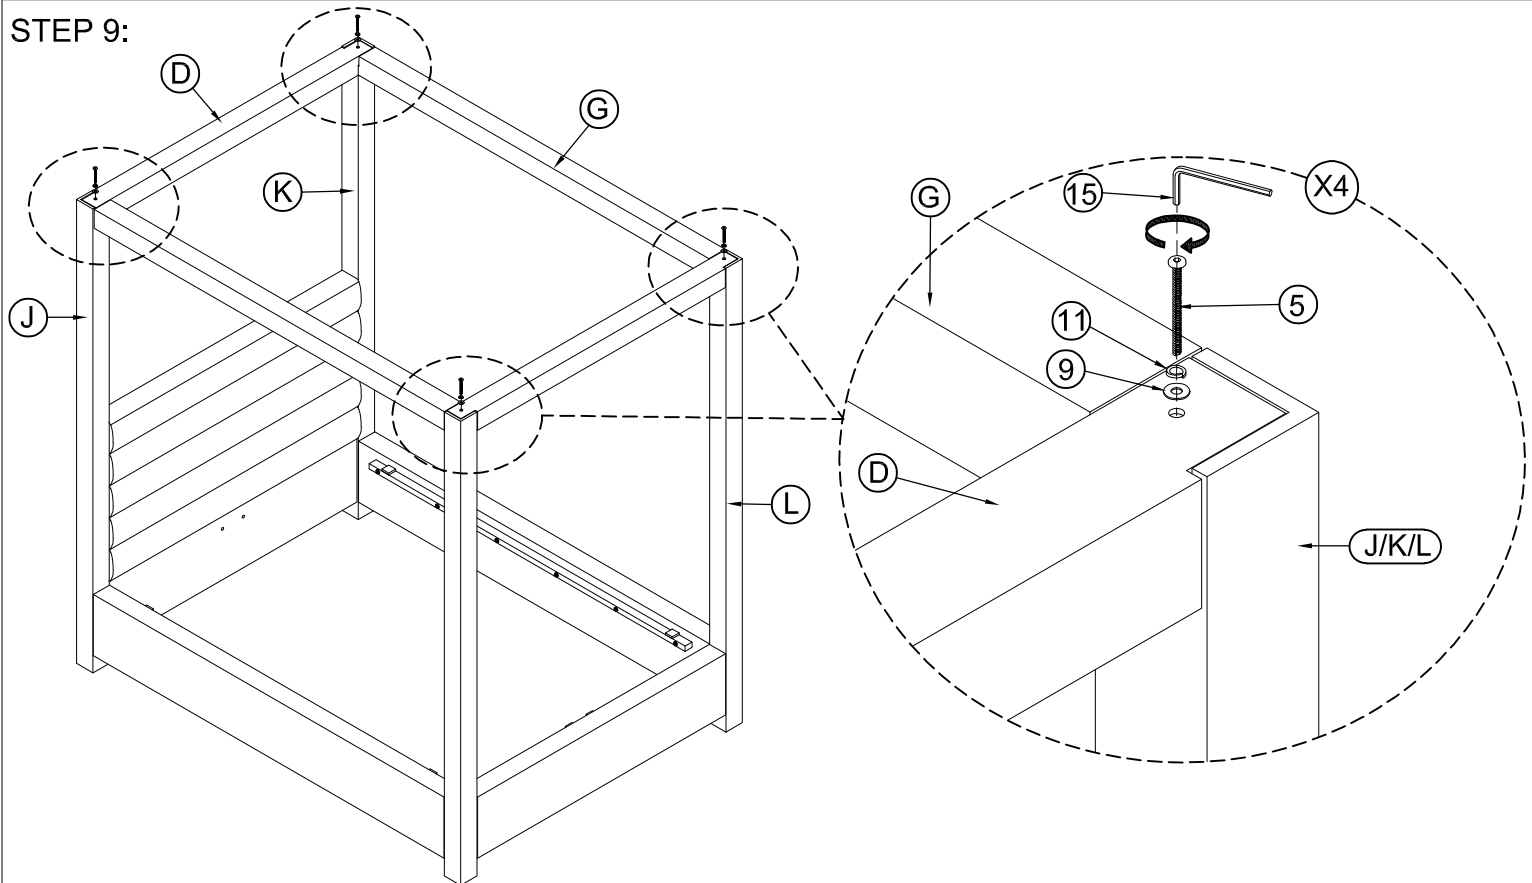

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 10-14 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 10.

STEP 10:

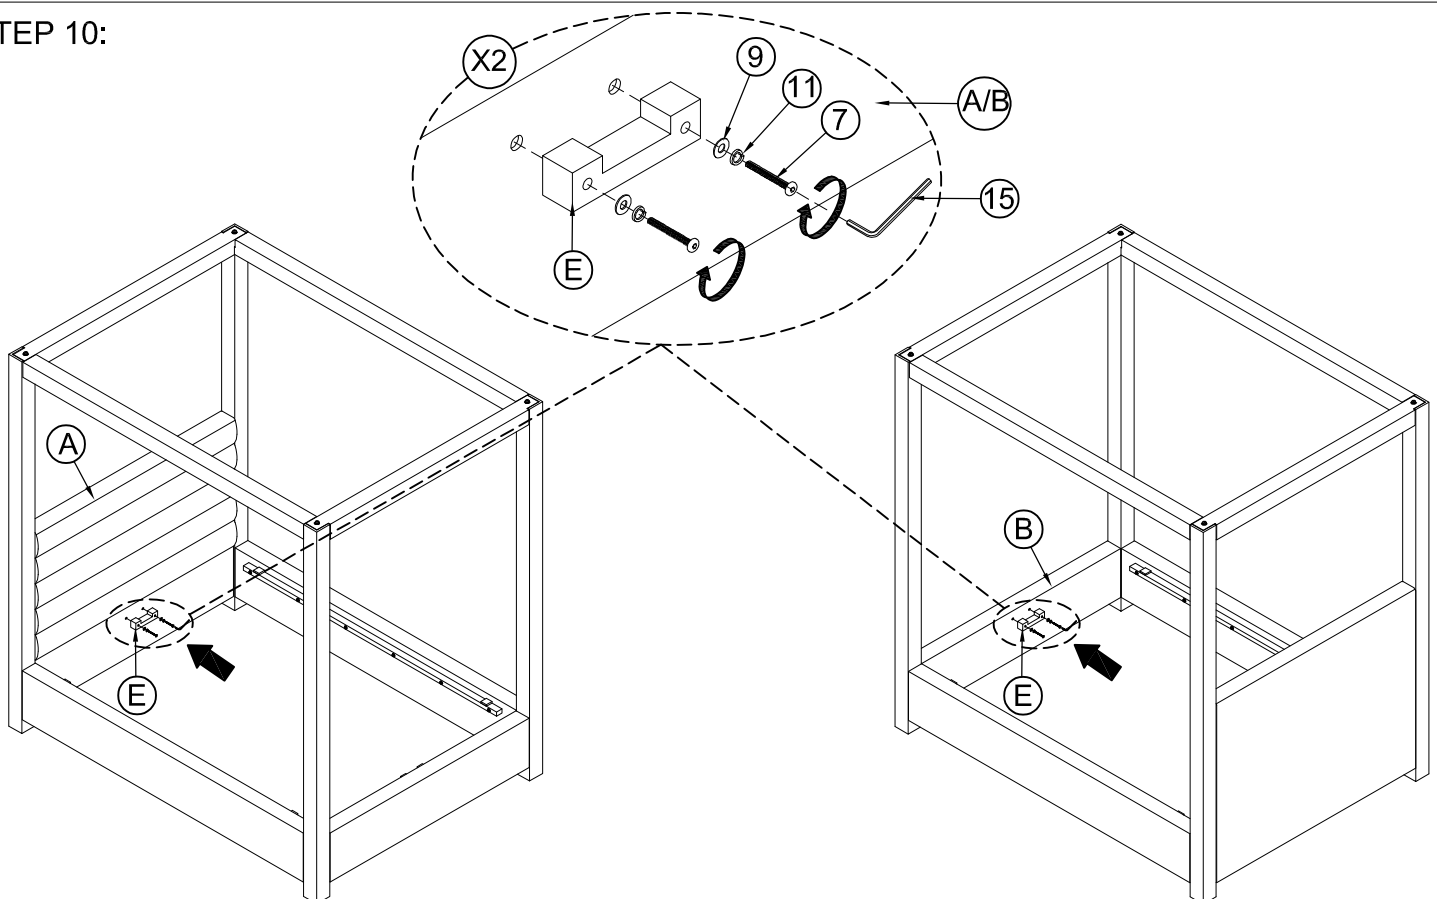


ROCKFORD UPHOLSTERED CANOPY QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 11:

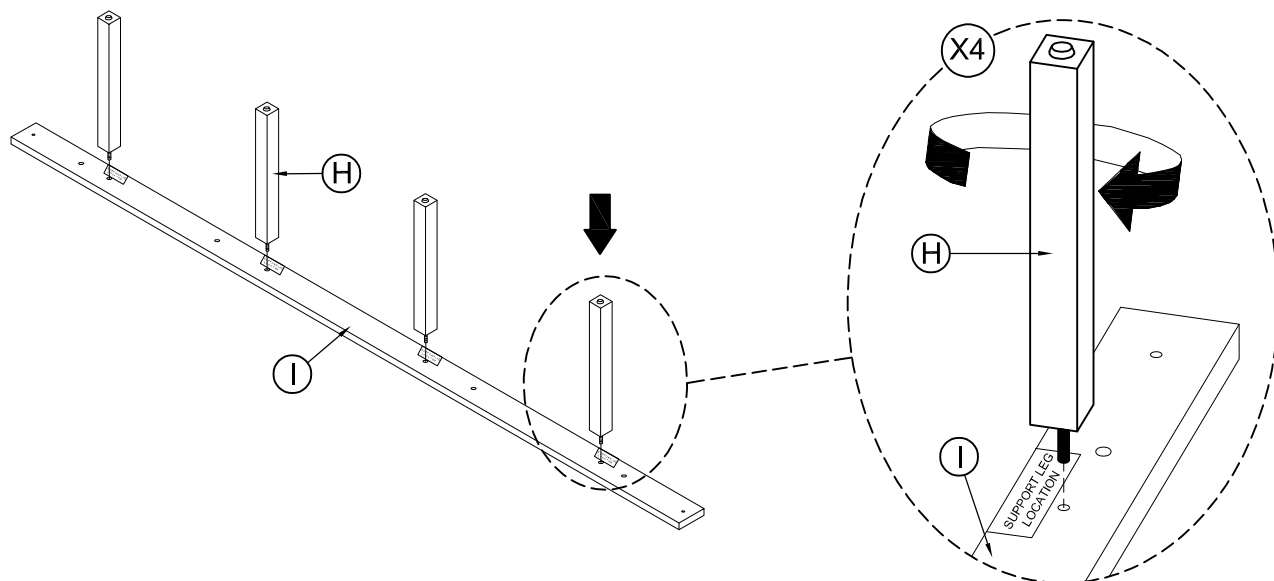

STEP 12:

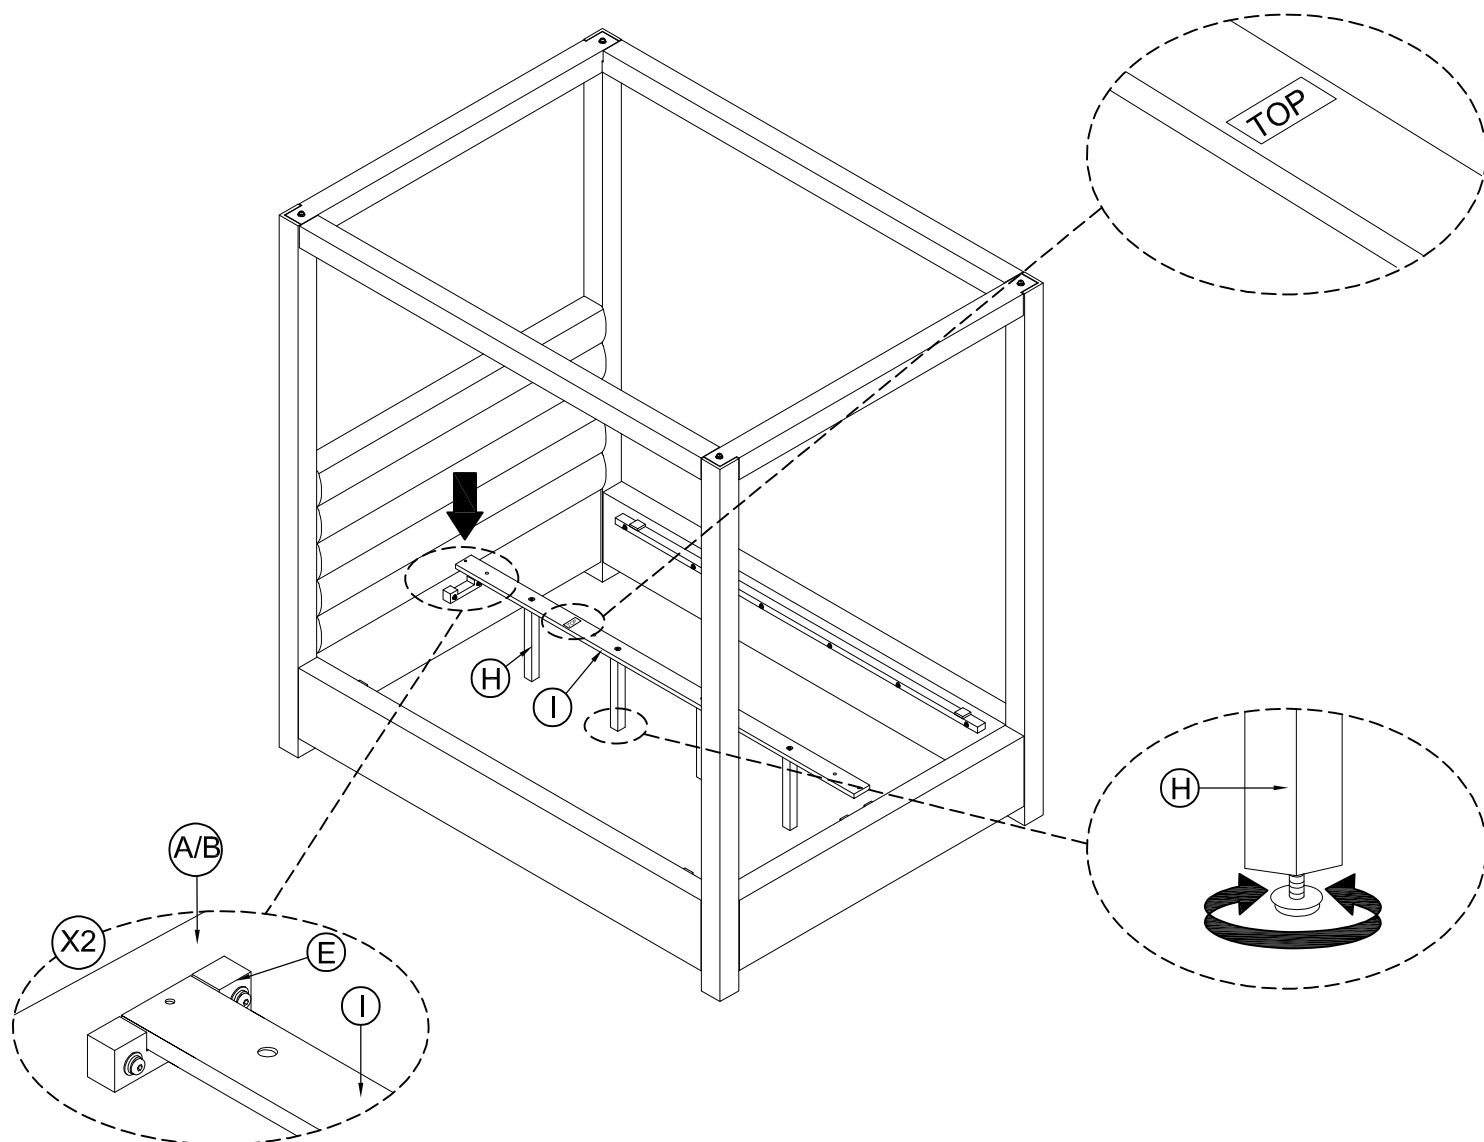


ROCKFORD UPHOLSTERED CANOPY QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 13:

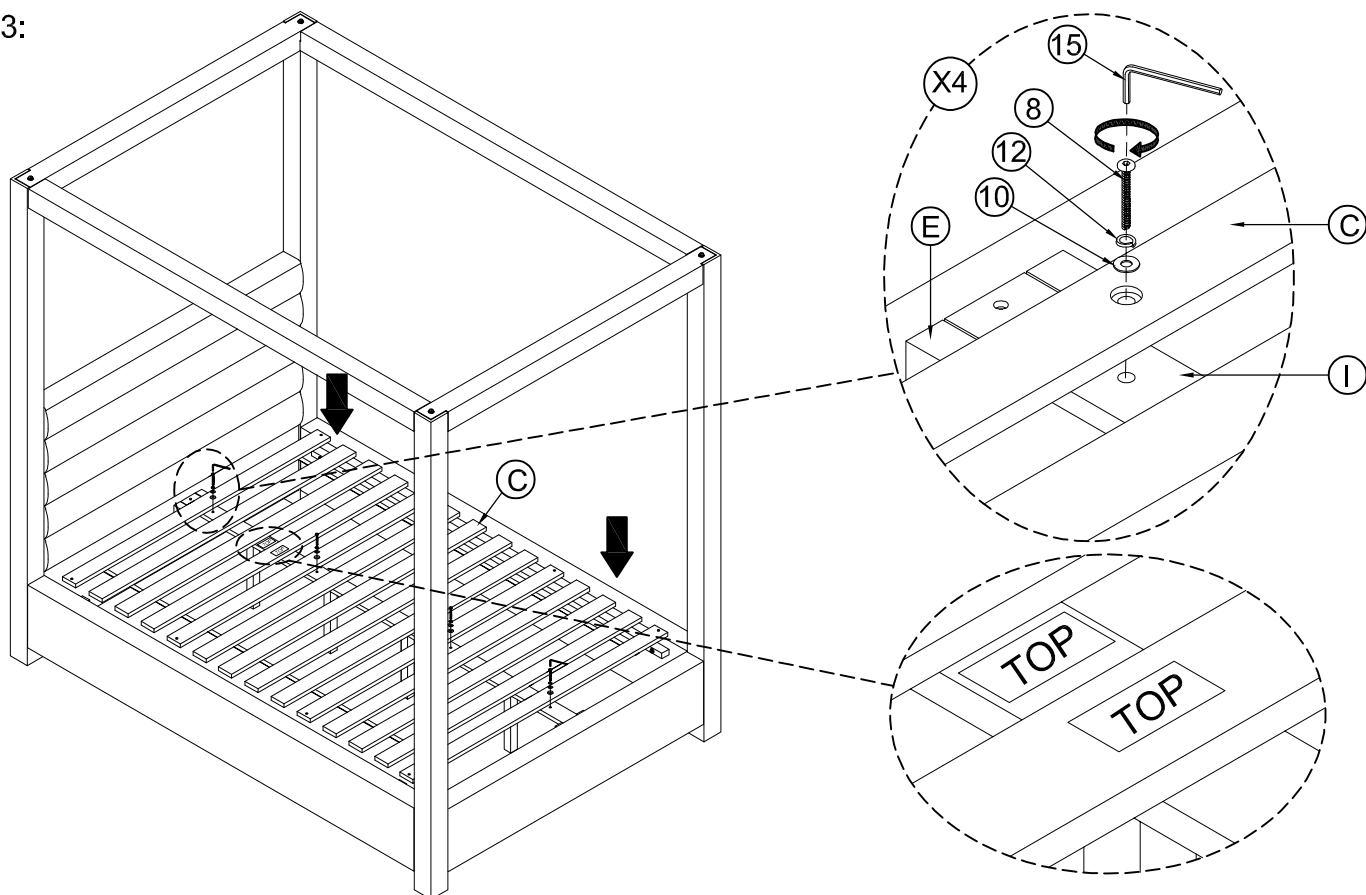


STEP 14:

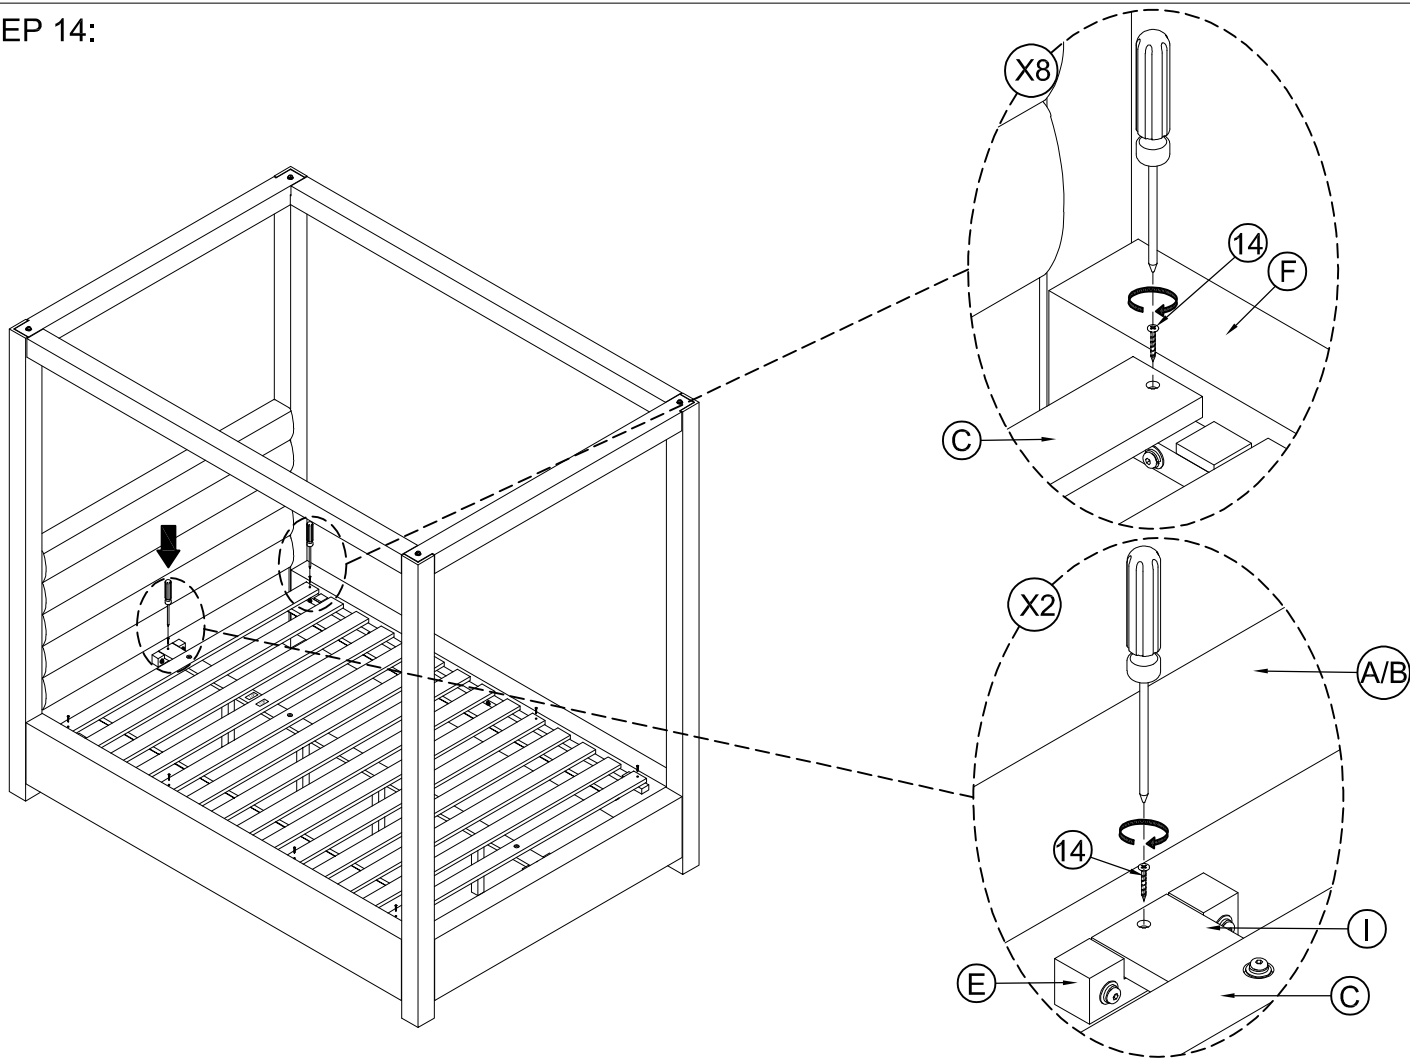

ROCKFORD UPHOLSTERED CANOPY QUEEN BED

ASSEMBLY INSTRUCTIONS

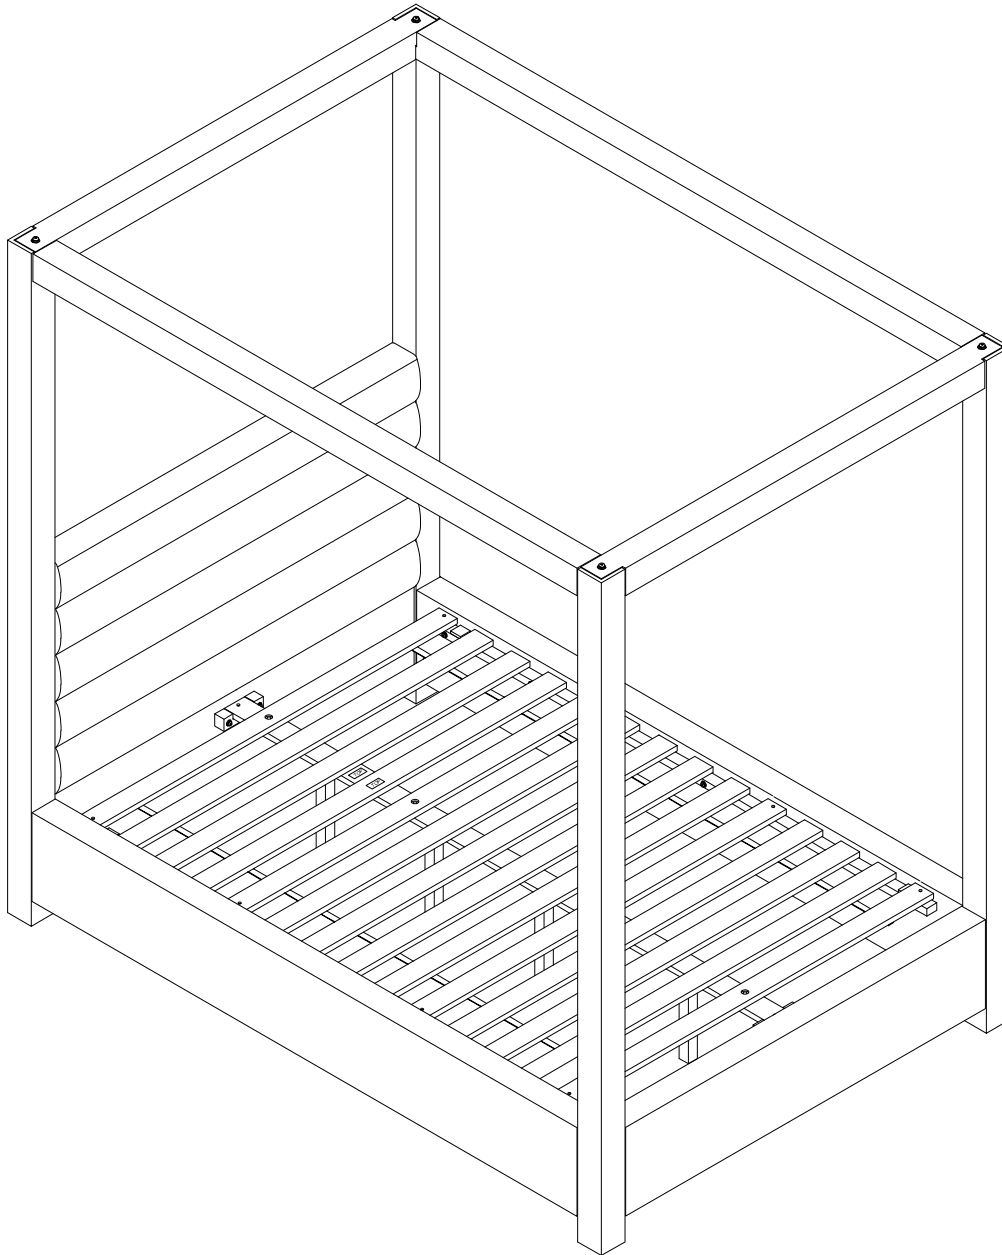


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKFORD UPHOLSTERED CANOPY QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
E. CENTER SLAT SUPPORT CLEAT	2 PCS
H. SUPPORT LEG	4 PCS
I. CENTER SLAT SUPPORT	1 PC

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

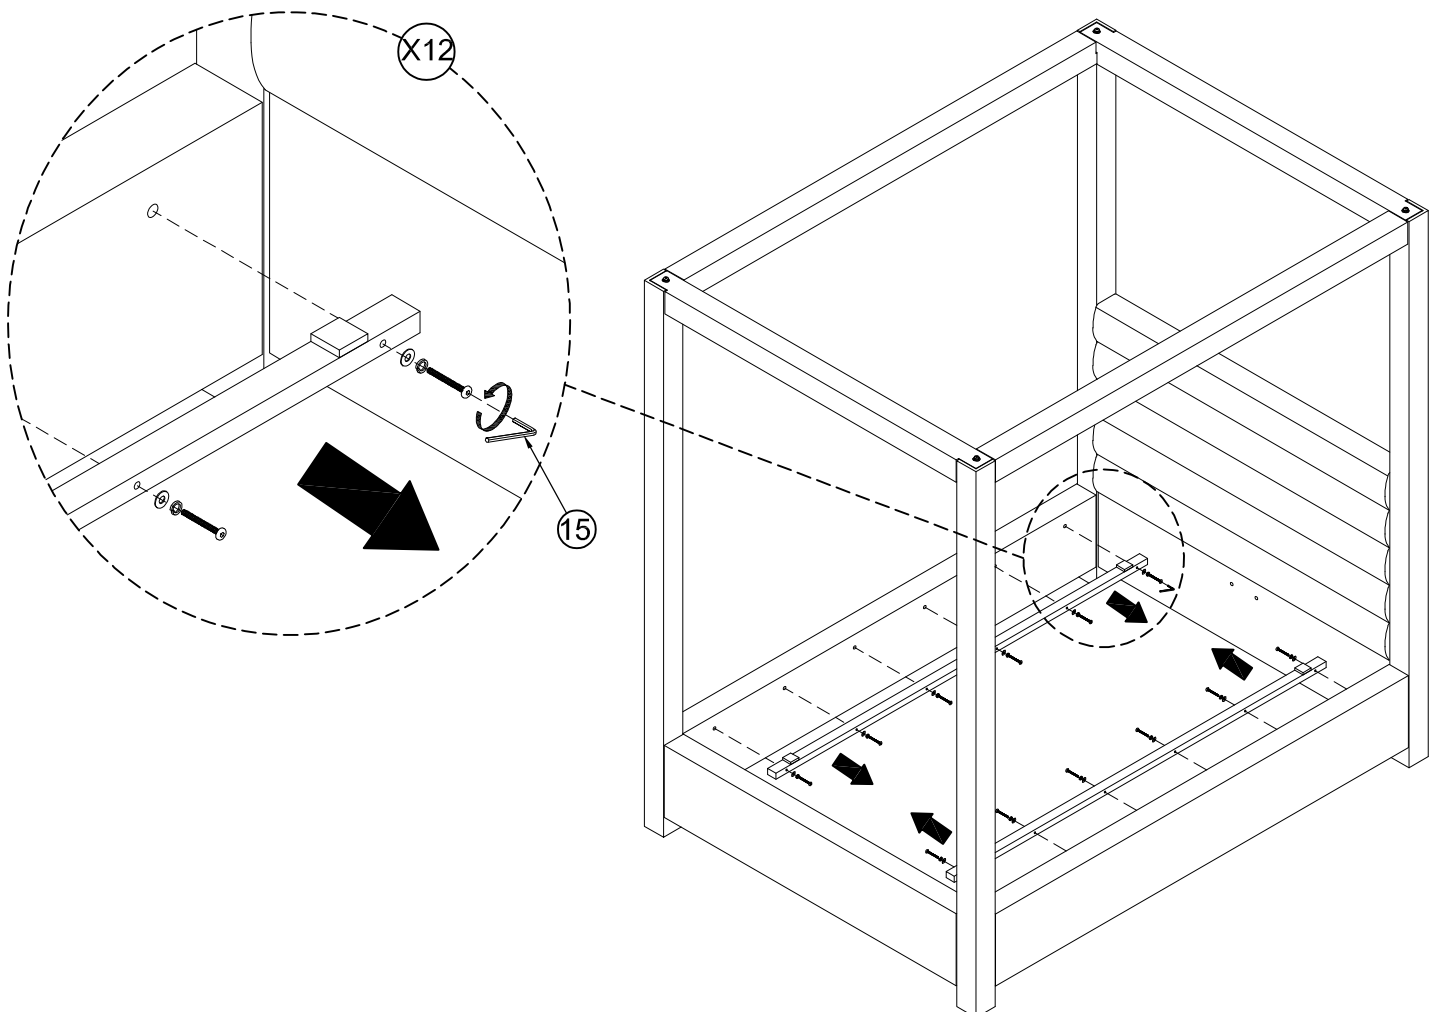

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ROCKFORD UPHOLSTERED CANOPY KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

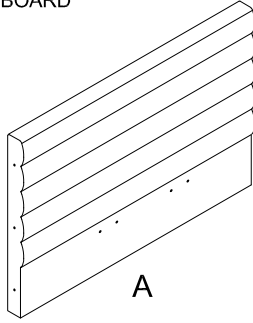

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		6 PCS
2	FLAT WASHER (5/16")		6 PCS
3	LOCK WASHER (5/16")		6 PCS
4	ALLEN KEY (5/16")		1 PC

BOX#2

B. FOOTBOARD

1 PC

C. SLAT ROLL


1 SET

D. SHORT CROSSBAR

2 PCS


E. CENTER SLAT SUPPORT CLEAT

4 PCS

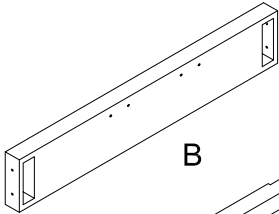

B

D

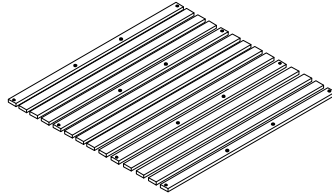

C

E

HARDWARE KIT PACKED IN BOX #2

5	ALLEN BOLT (5/16"x 5-1/2")		4 PCS
6	THREADED BOLT (5/16"x 3-1/2")		12 PCS
7	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
9	FLAT WASHER (5/16")		24 PCS
10	FLAT WASHER (1/4")		8 PCS
11	LOCK WASHER (5/16")		24 PCS
12	LOCK WASHER (1/4")		8 PCS
13	HEX NUT (5/16")		12 PCS
14	PHILLIPS SCREW (M4 x 32mm)		12 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		6 PCS

BOX#3

F. SIDE RAIL

2 PCS

G. LONG CROSSBAR


2 PCS

H. SUPPORT LEG

8 PCS


I. CENTER SLAT SUPPORT

2 PCS

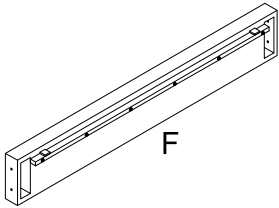

F


H

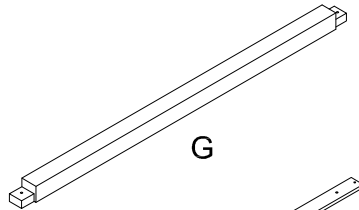

G

I

FULLY ASSEMBLED

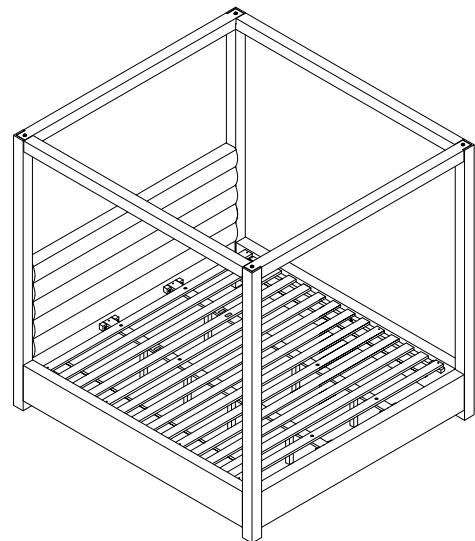

BOX#4

J. LEFT HEADBOARD POST


1 PC

K. RIGHT HEADBOARD POST

1 PC

L. FOOTBOARD POST

2 PCS



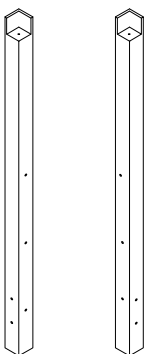


J

K



L




ROCKFORD UPHOLSTERED CANOPY KING BED


ASSEMBLY INSTRUCTIONS



STEP 1:

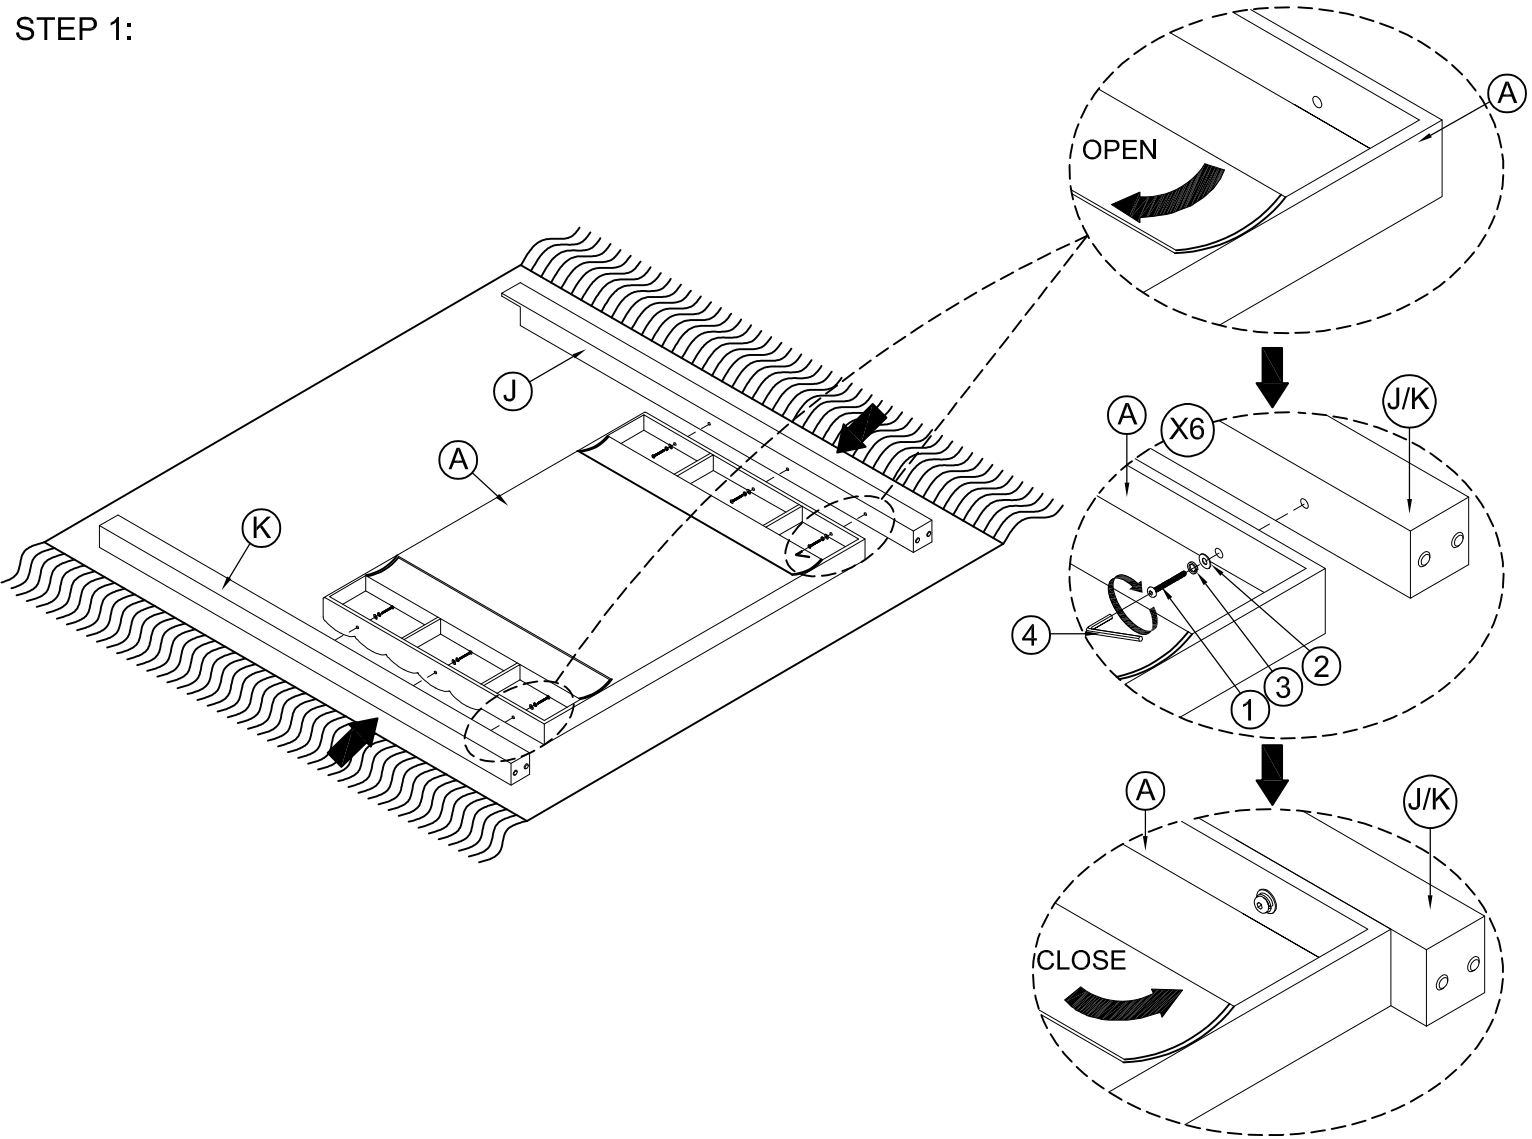

STEP 2:

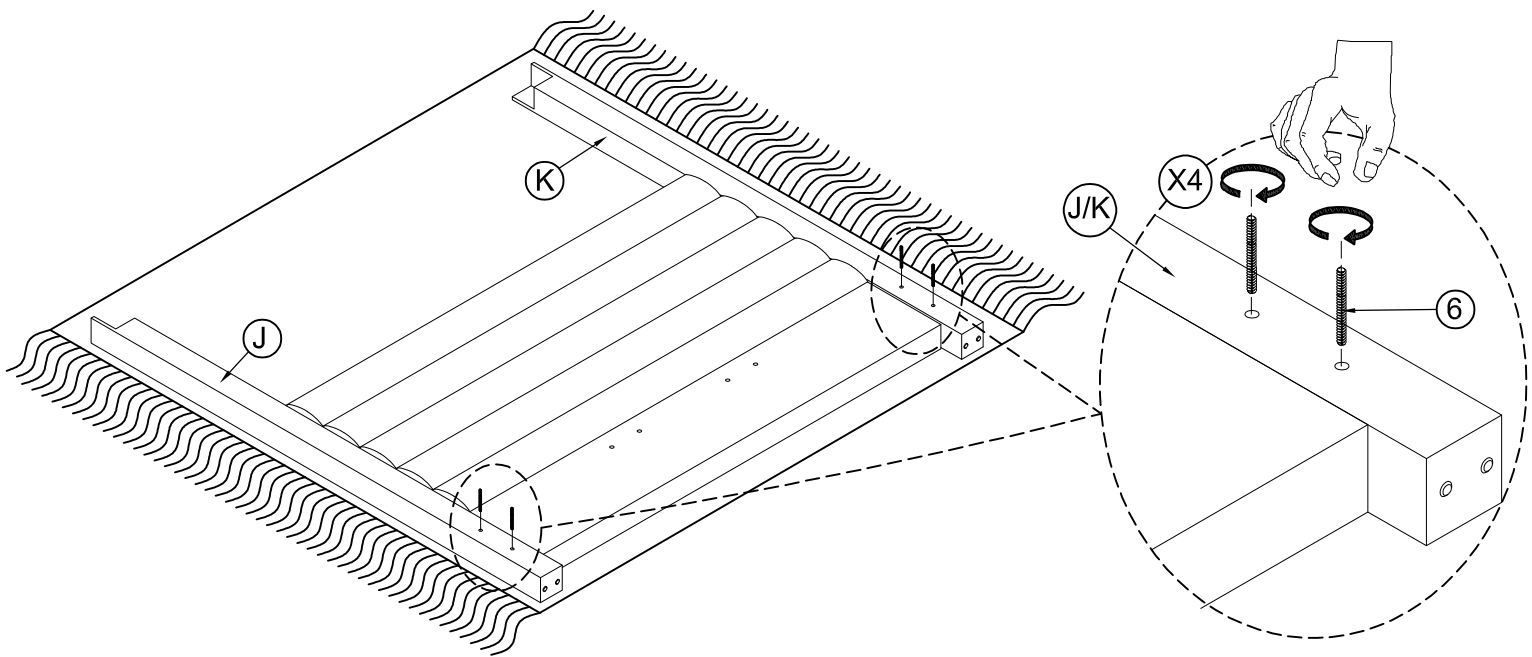

MODUS
FURNITURE

STEP 3:

This diagram illustrates the third step of the assembly process. It shows a perspective view of the cabinet's front panel, which has a wavy, textured edge. Two long, thin metal strips, labeled 'L', are positioned horizontally across the panel. A circular inset provides a magnified view of the attachment process. In this inset, a hand is shown using a screwdriver to tighten a screw into a pre-drilled hole in the metal strip. The strip is labeled 'L'. Another label '6' points to a specific hole in the strip. A label 'X8' indicates that there are eight such screws to be installed. The inset also shows the strip being attached to the front panel, which has a wavy edge. The main diagram shows the strips being attached to the front panel, which has a wavy edge. The inset shows a hand using a screwdriver to tighten a screw into a pre-drilled hole in the metal strip. The strip is labeled 'L'. Another label '6' points to a specific hole in the strip. A label 'X8' indicates that there are eight such screws to be installed. The inset also shows the strip being attached to the front panel, which has a wavy edge.

STEP 4:


The diagram illustrates the final assembly step. A vertical door panel is shown being moved into position against a wall bracket (B) and a horizontal support (L). A dashed circle highlights the hinge area. Three circular insets provide detailed views: 1. 'OPEN' position: Shows the door panel (B) being moved away from the wall bracket (L). 2. 'X4' detail: Shows the hinge mechanism with four screws (6) being tightened. 3. 'CLOSE' position: Shows the door panel (B) being moved back towards the wall bracket (L).

ROCKFORD UPHOLSTERED CANOPY KING BED


ASSEMBLY INSTRUCTIONS



STEP 5:

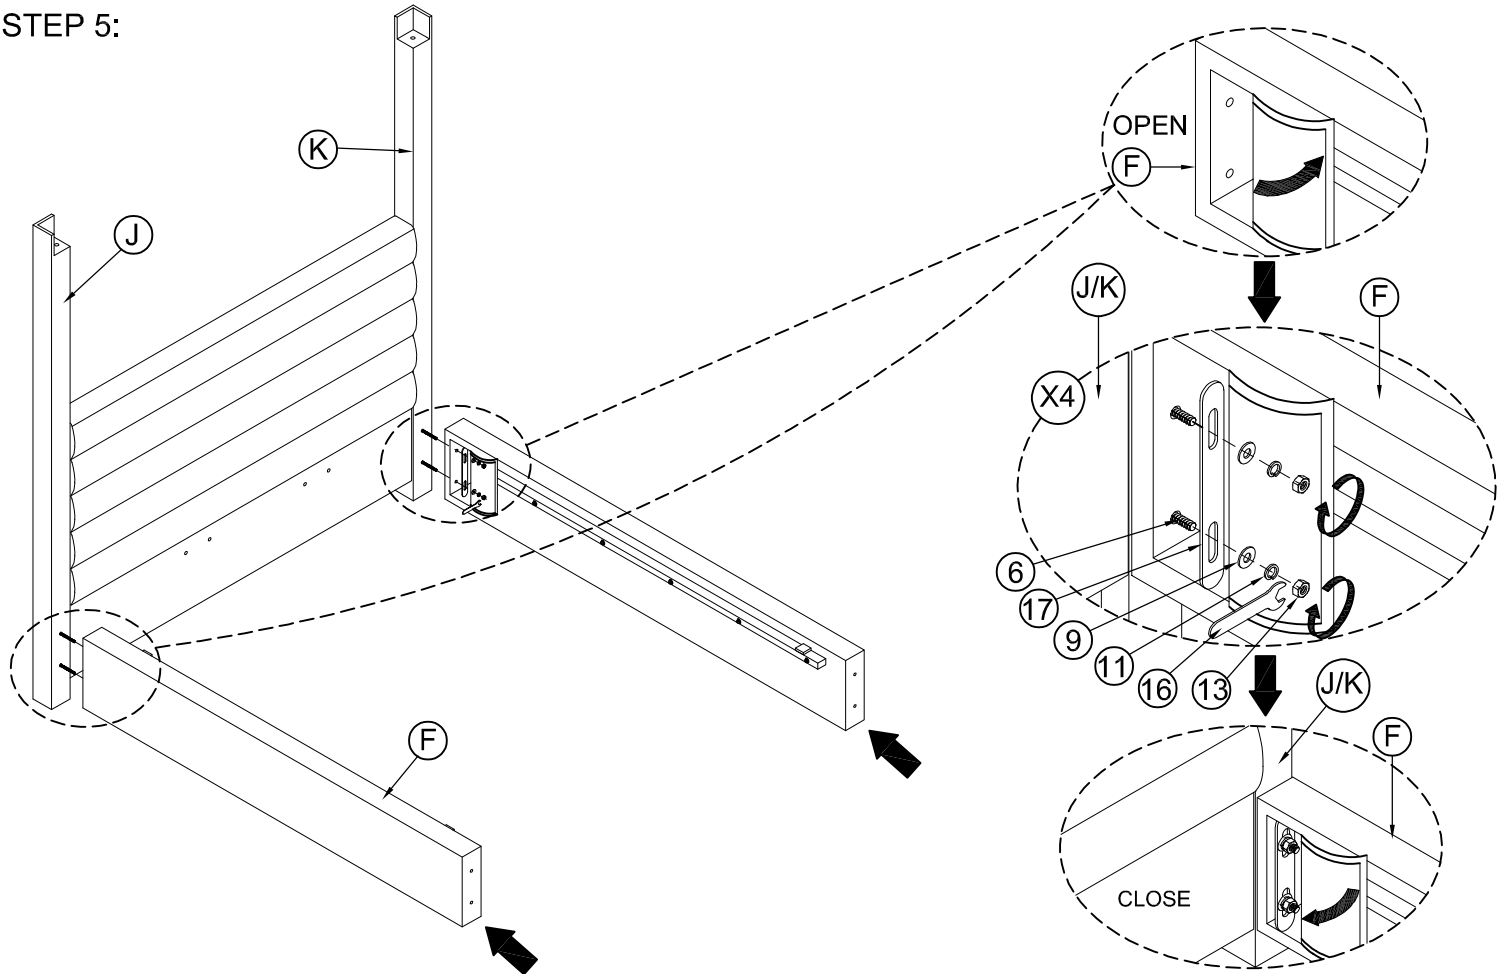

STEP 6:

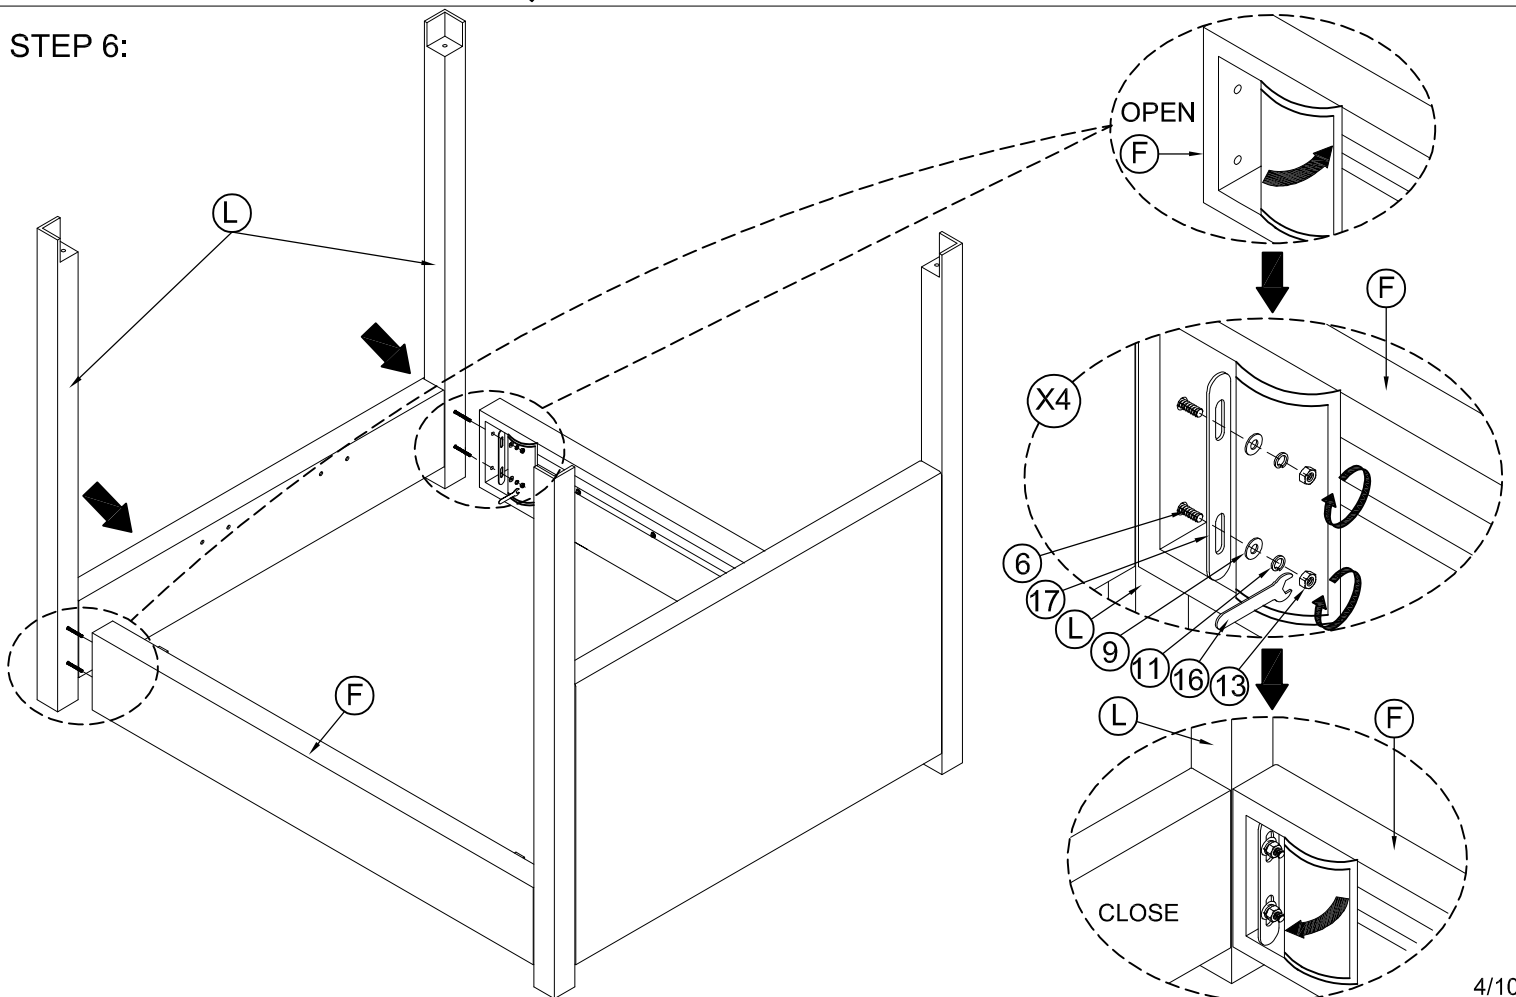


ROCKFORD UPHOLSTERED CANOPY KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

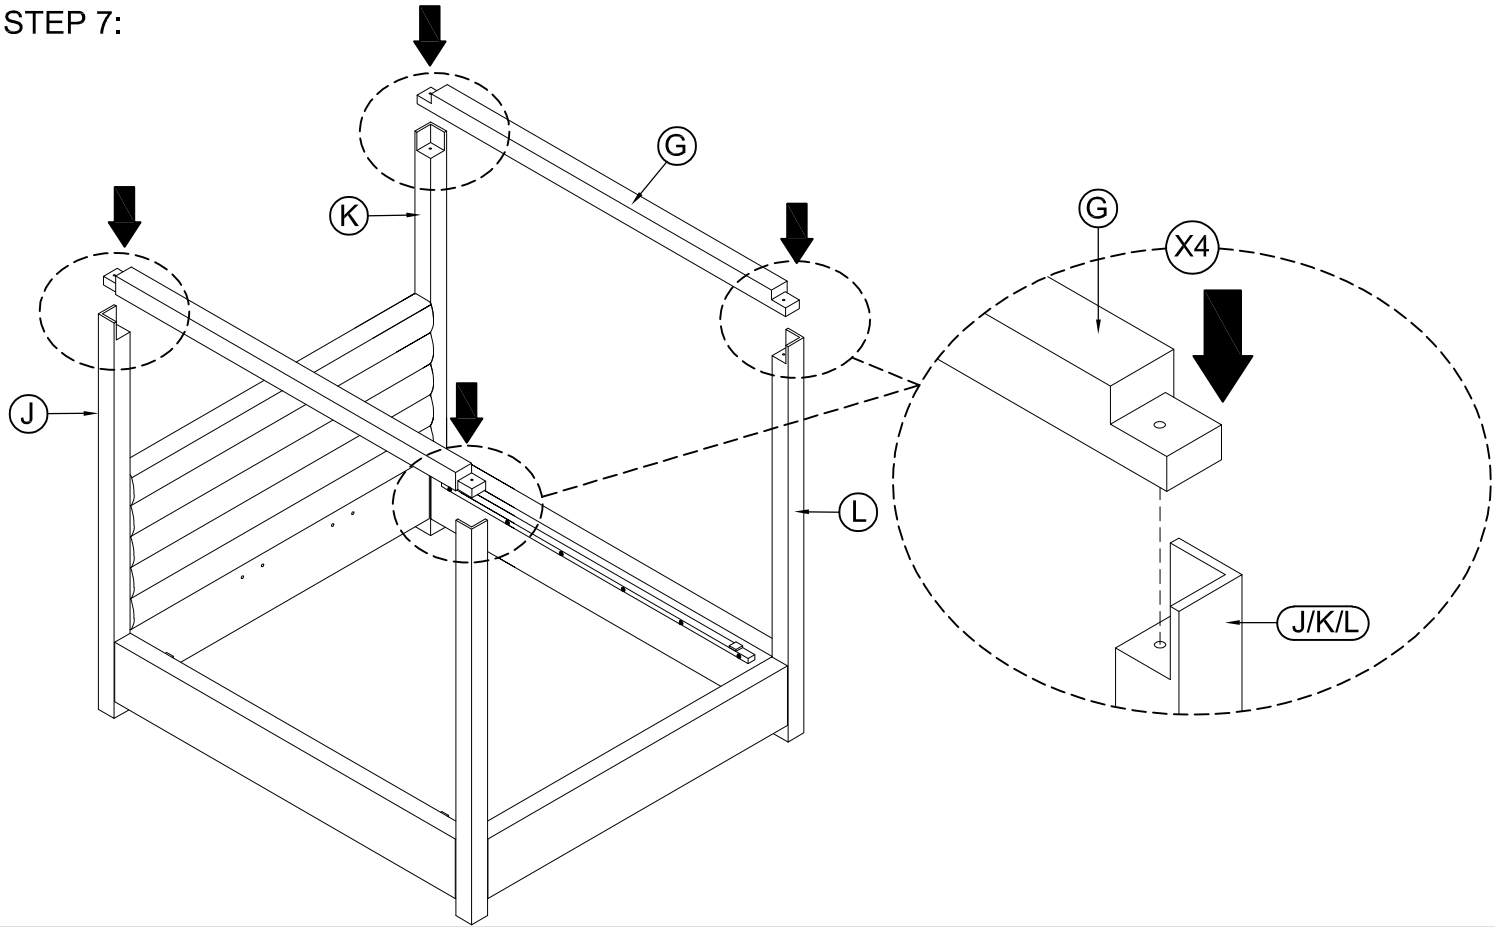

STEP 8:

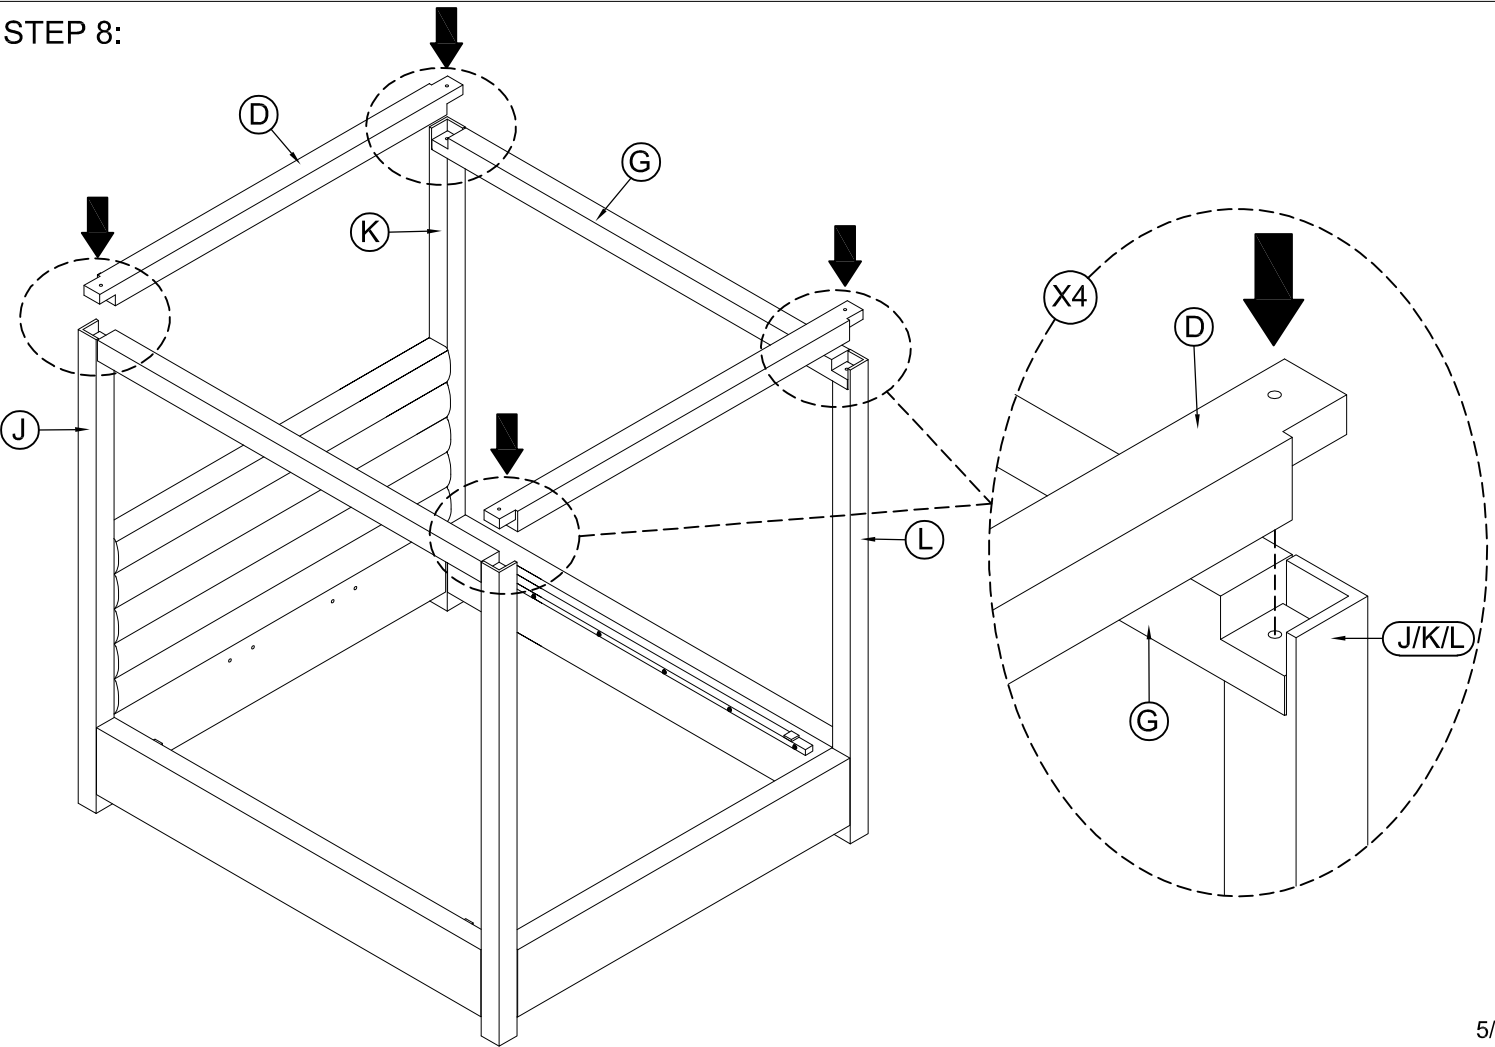


ROCKFORD UPHOLSTERED CANOPY KING BED

ASSEMBLY INSTRUCTIONS




STEP 9:

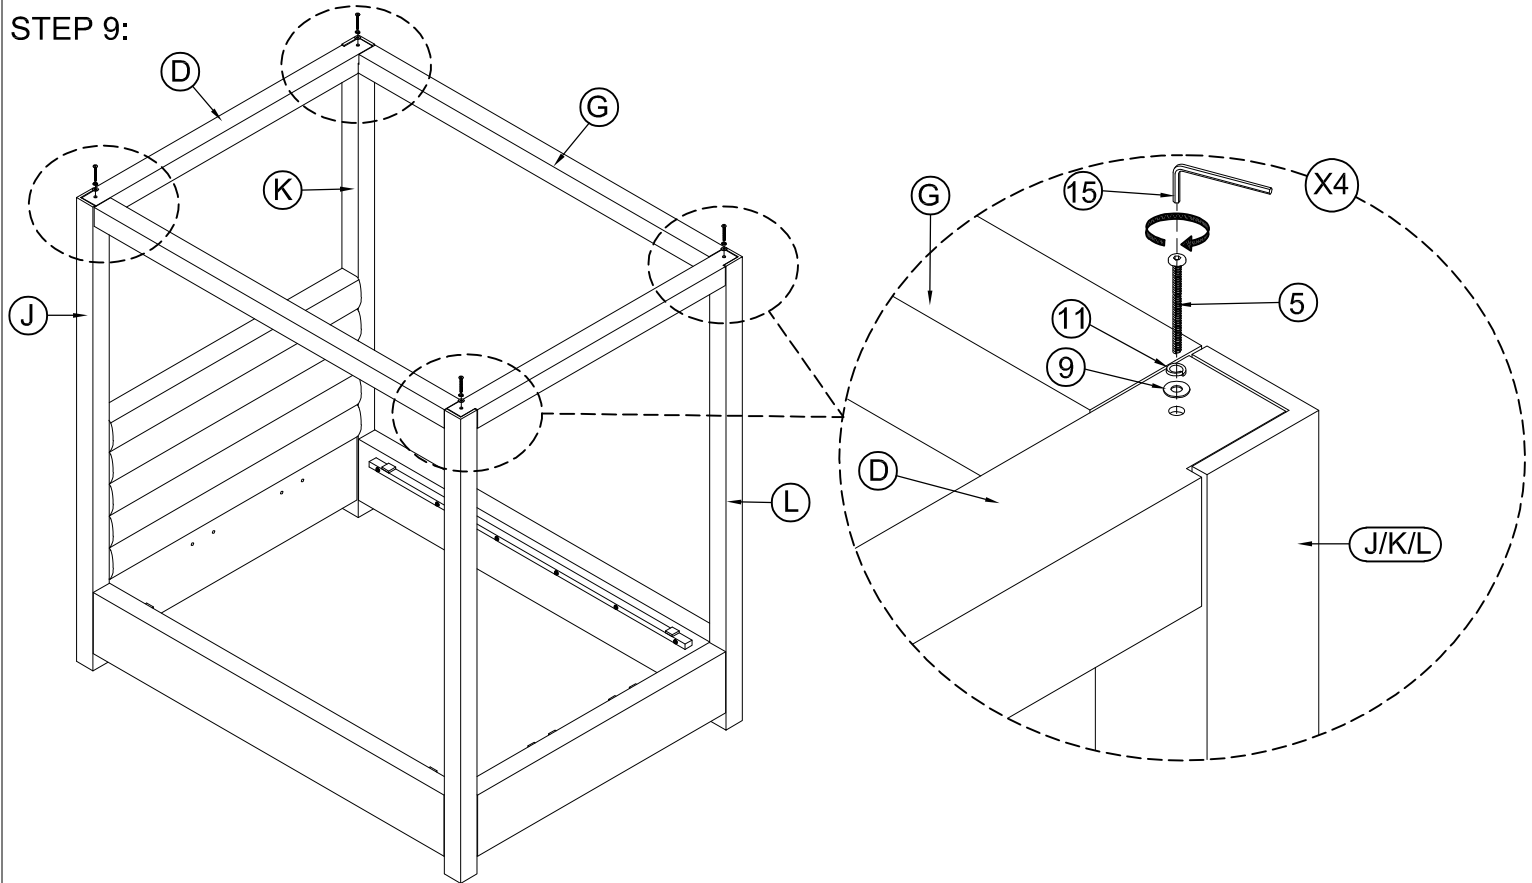

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 10-14 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 10.

STEP 10:

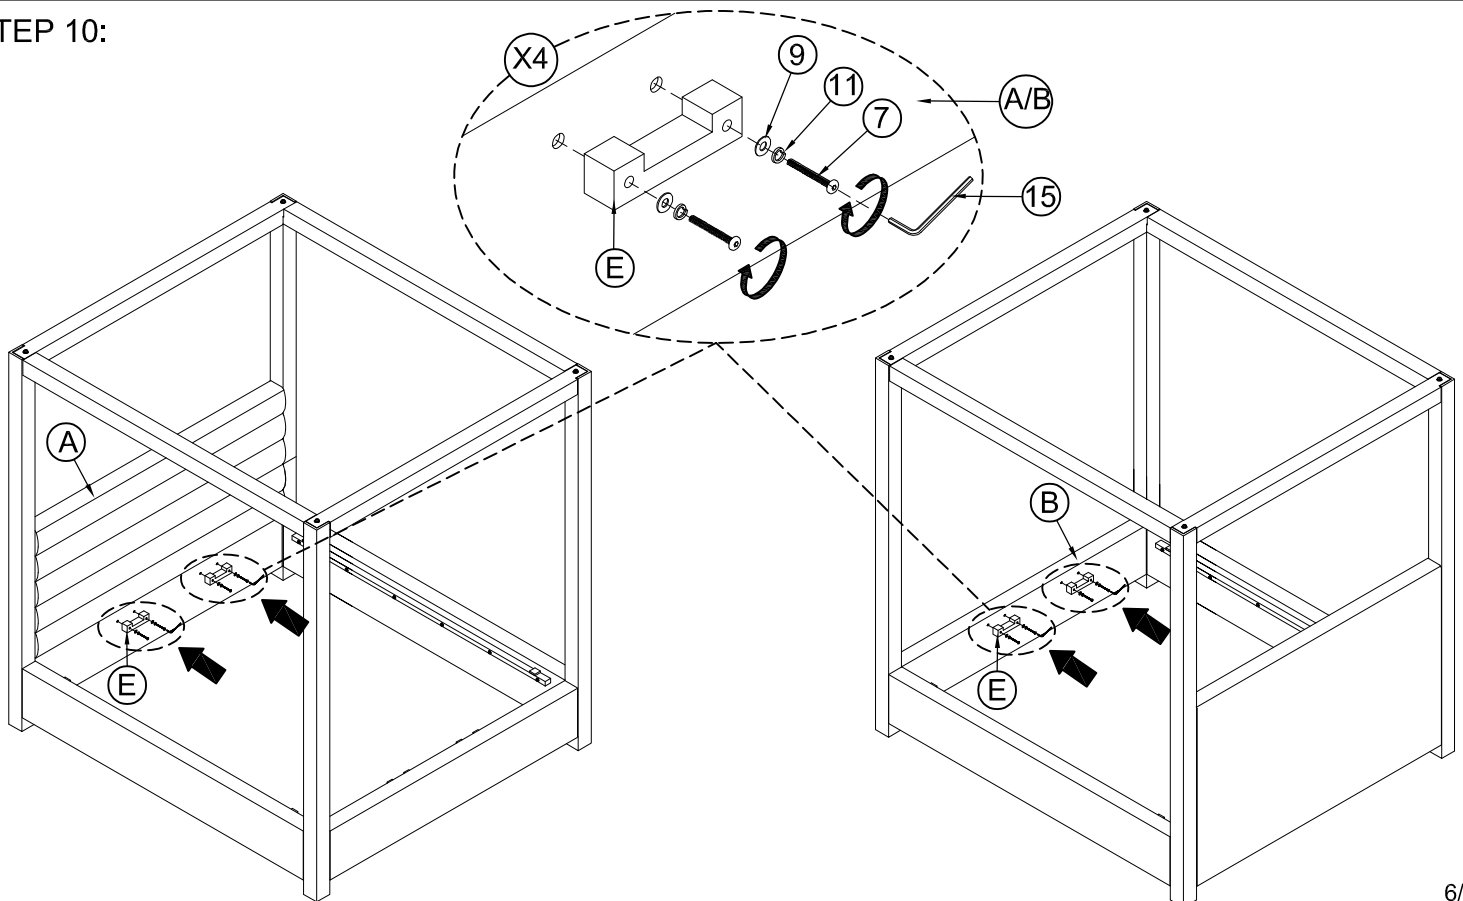


ROCKFORD UPHOLSTERED CANOPY KING BED


ASSEMBLY INSTRUCTIONS



STEP 11:

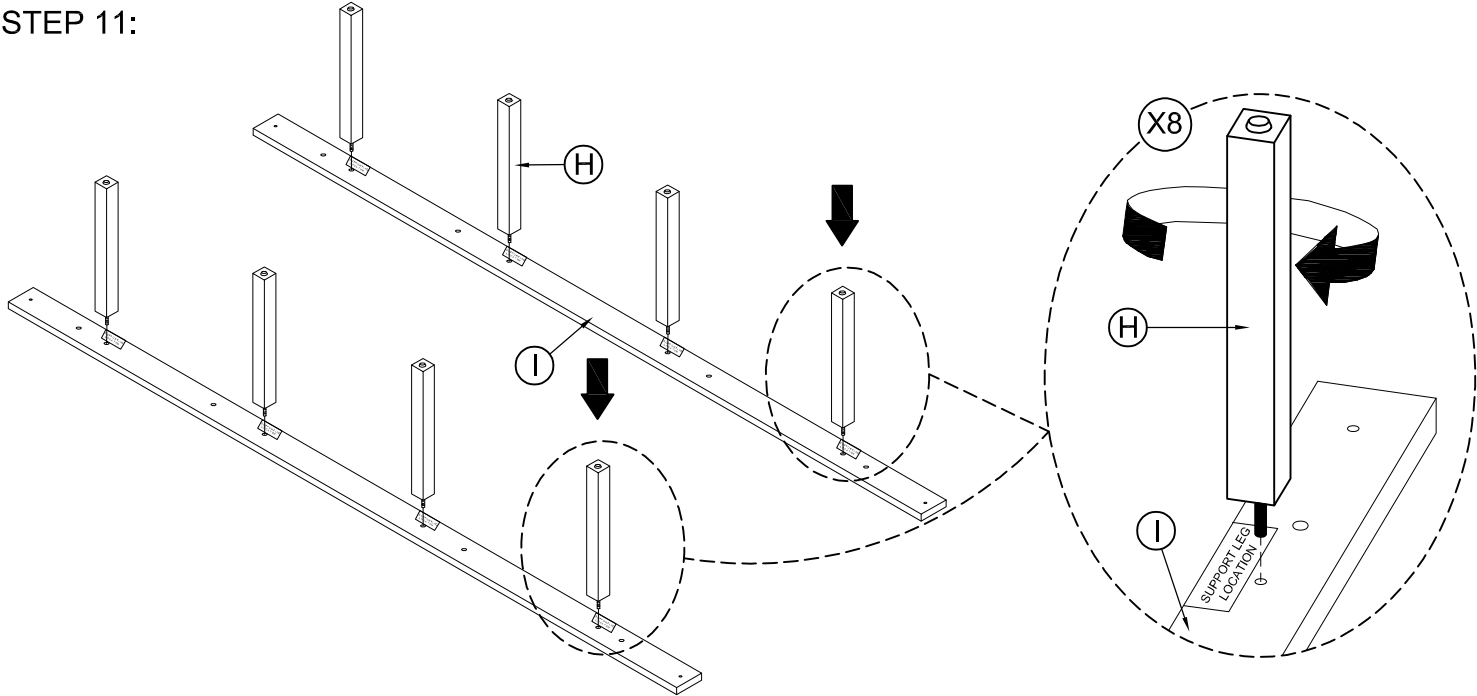

STEP 12:

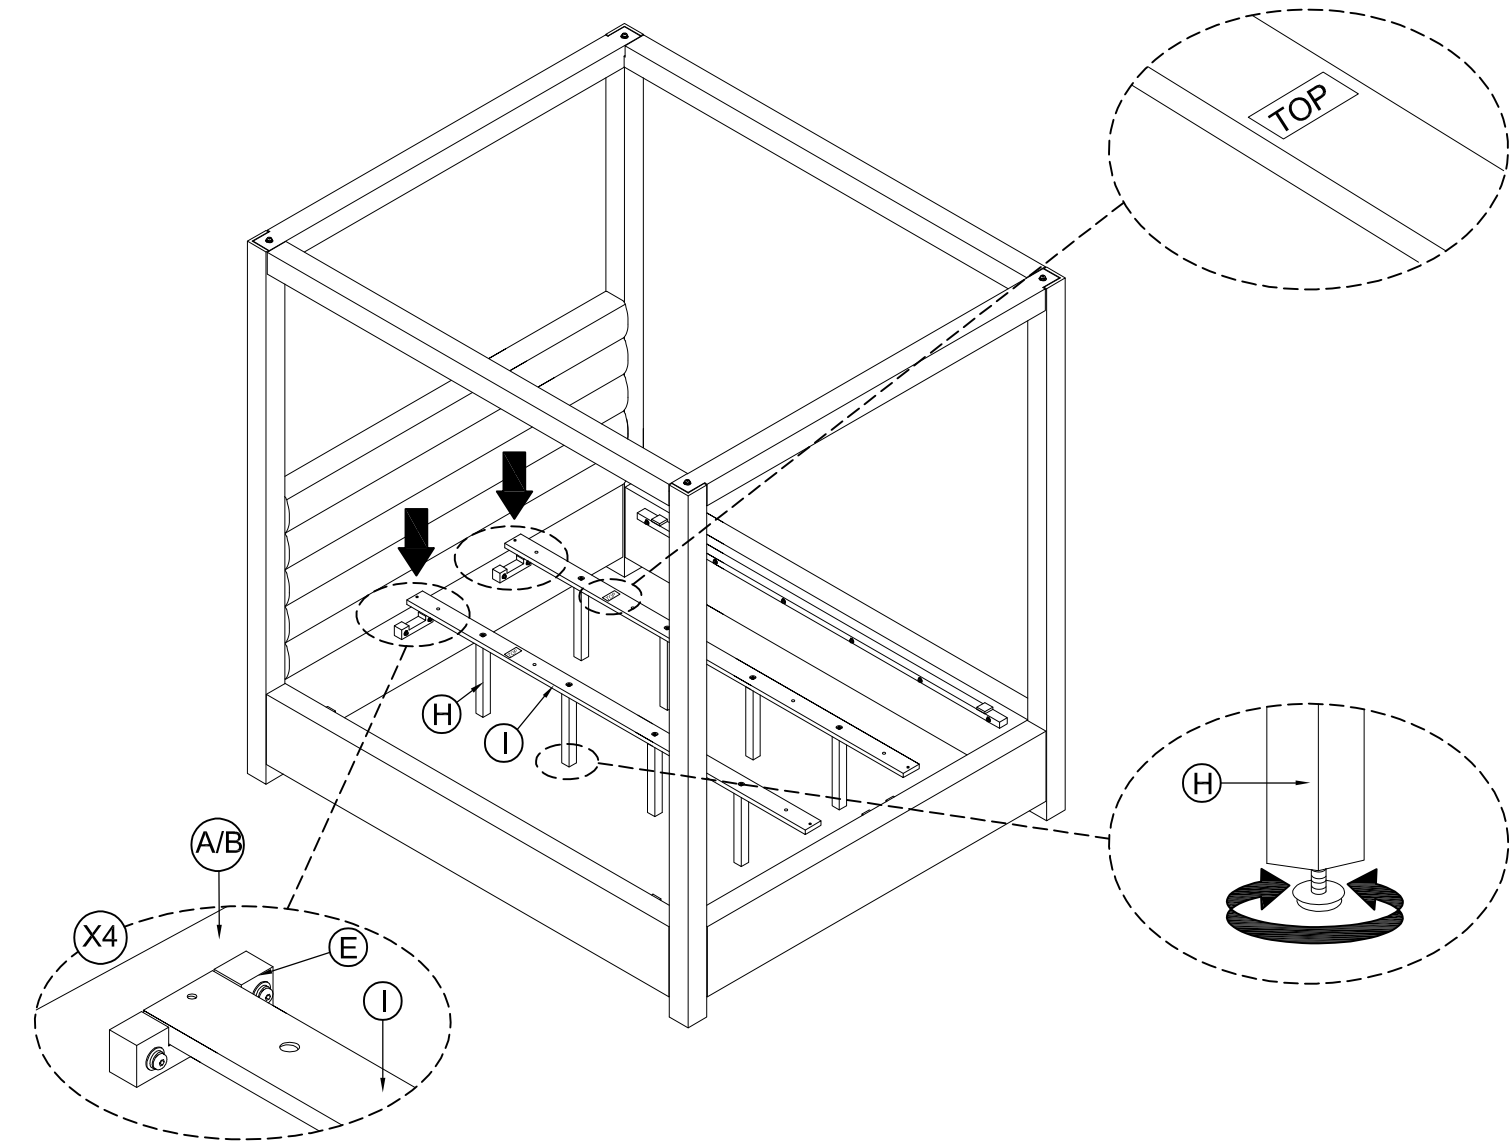


ROCKFORD UPHOLSTERED CANOPY KING BED


ASSEMBLY INSTRUCTIONS



STEP 13:

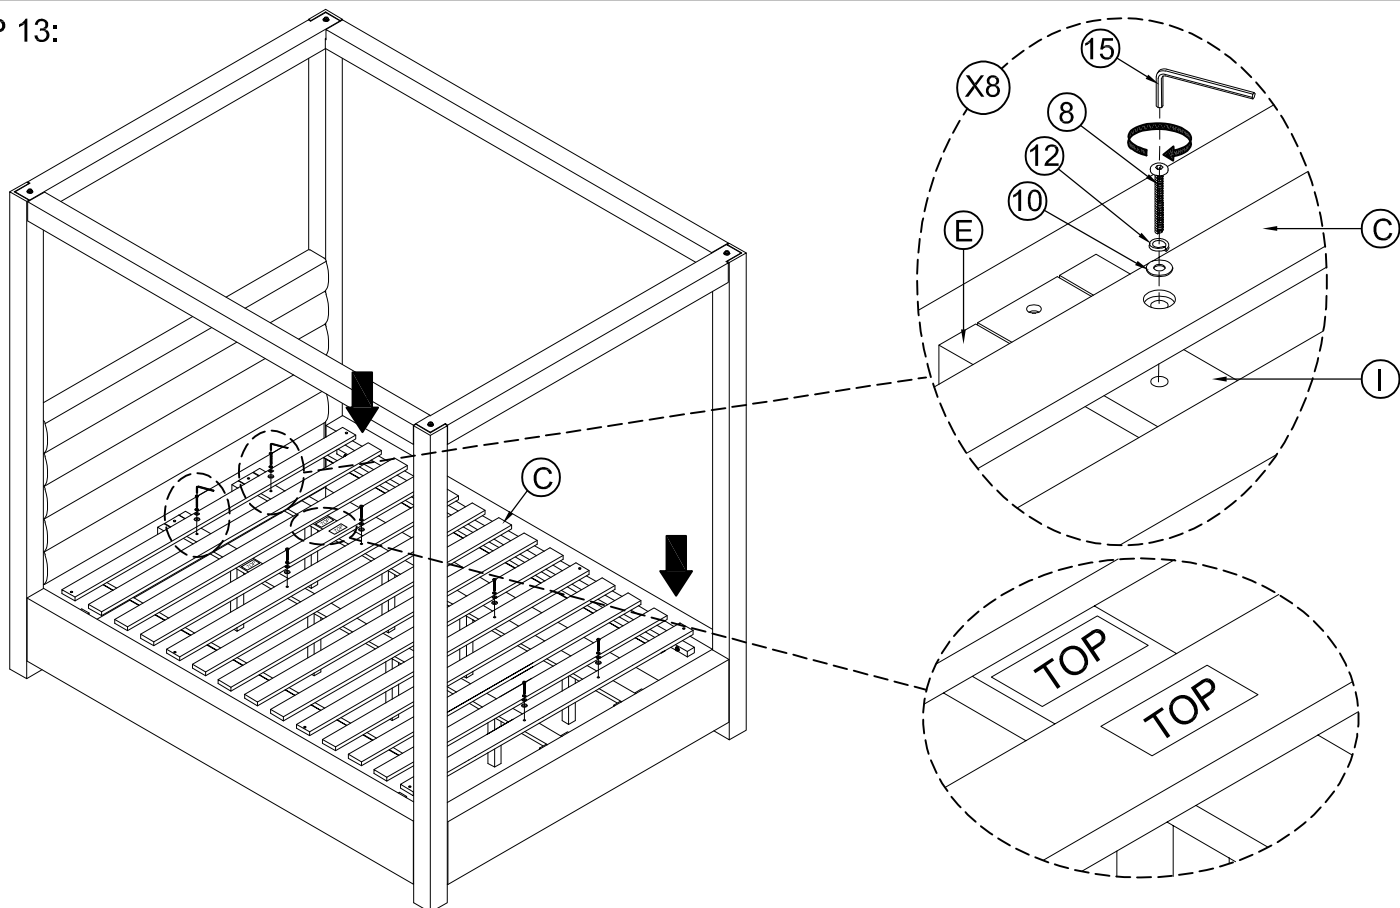


STEP 14:

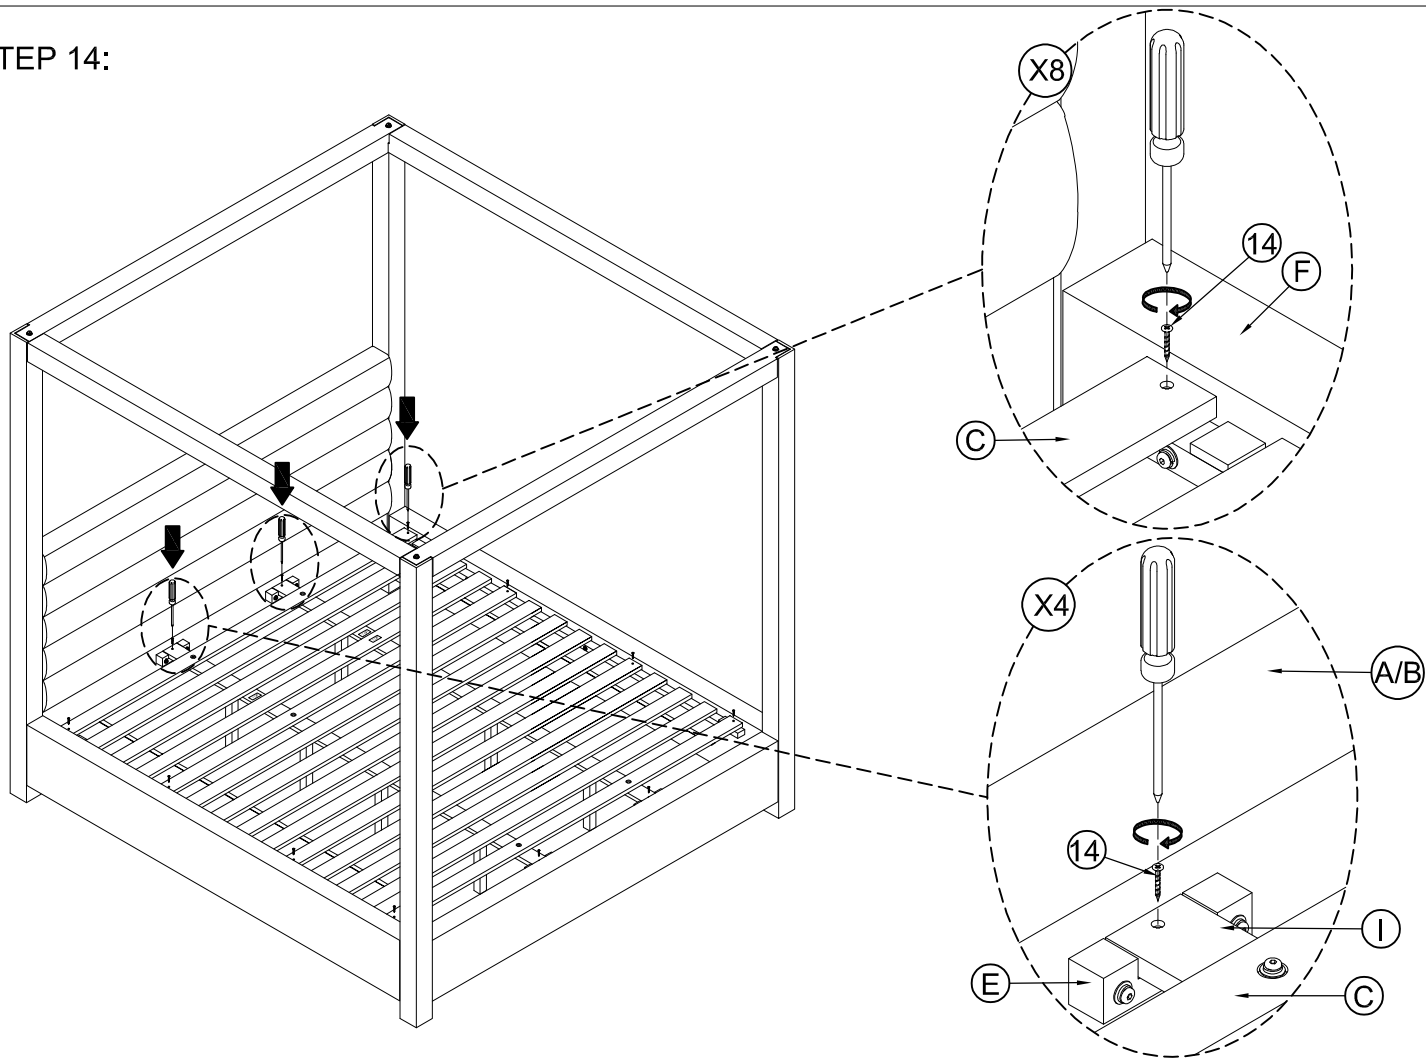

ROCKFORD UPHOLSTERED CANOPY KING BED

ASSEMBLY INSTRUCTIONS

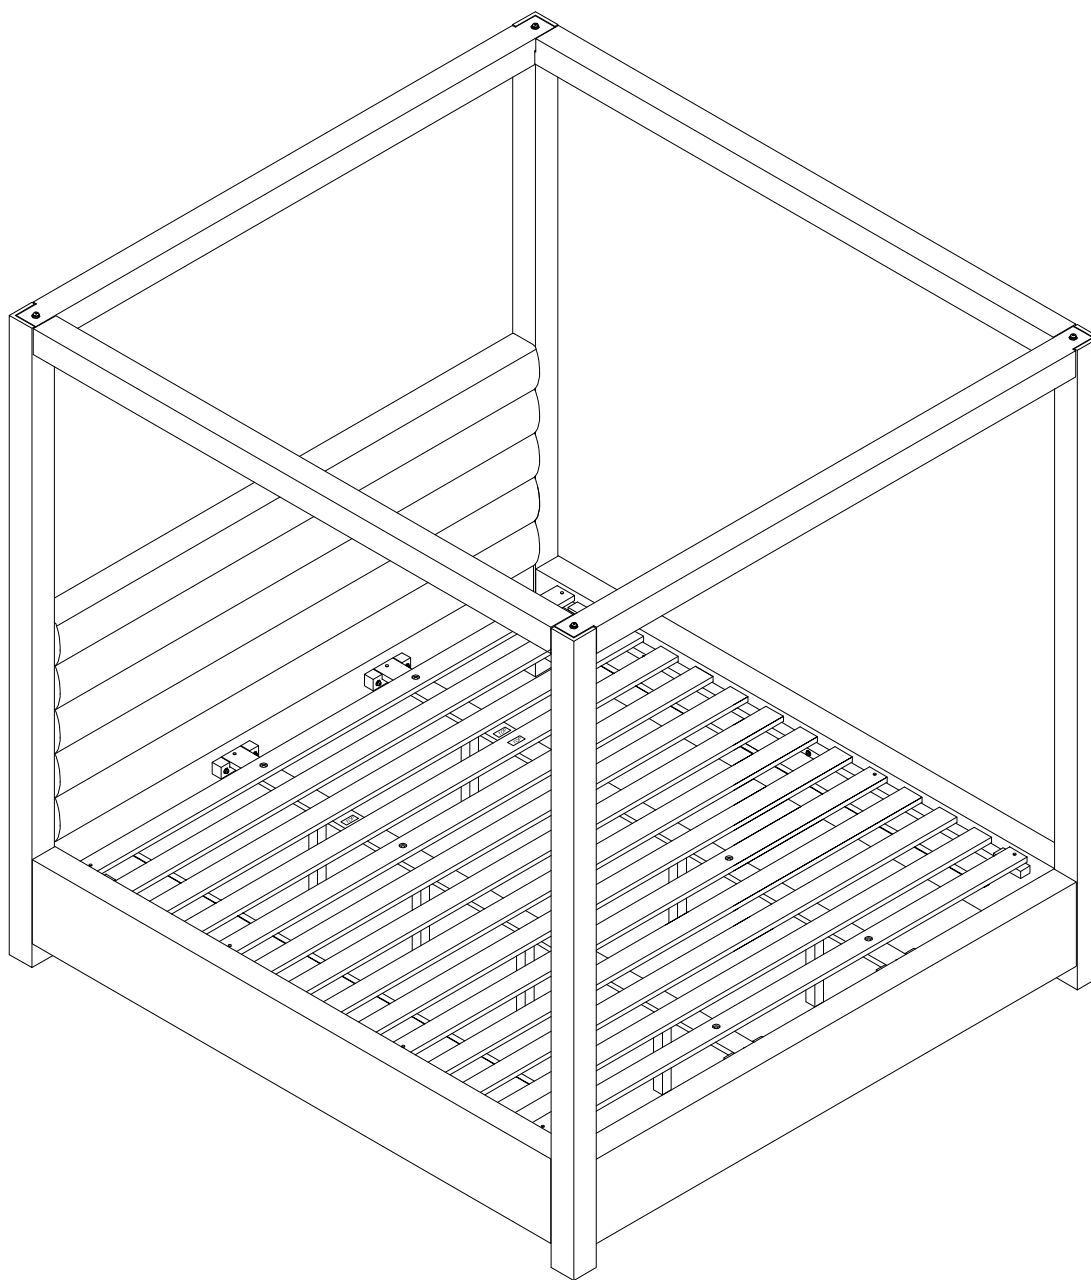


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKFORD UPHOLSTERED CANOPY KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
E. CENTER SLAT SUPPORT CLEAT	4 PCS
H. SUPPORT LEG	8 PCS
I. CENTER SLAT SUPPORT	2 PCS

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

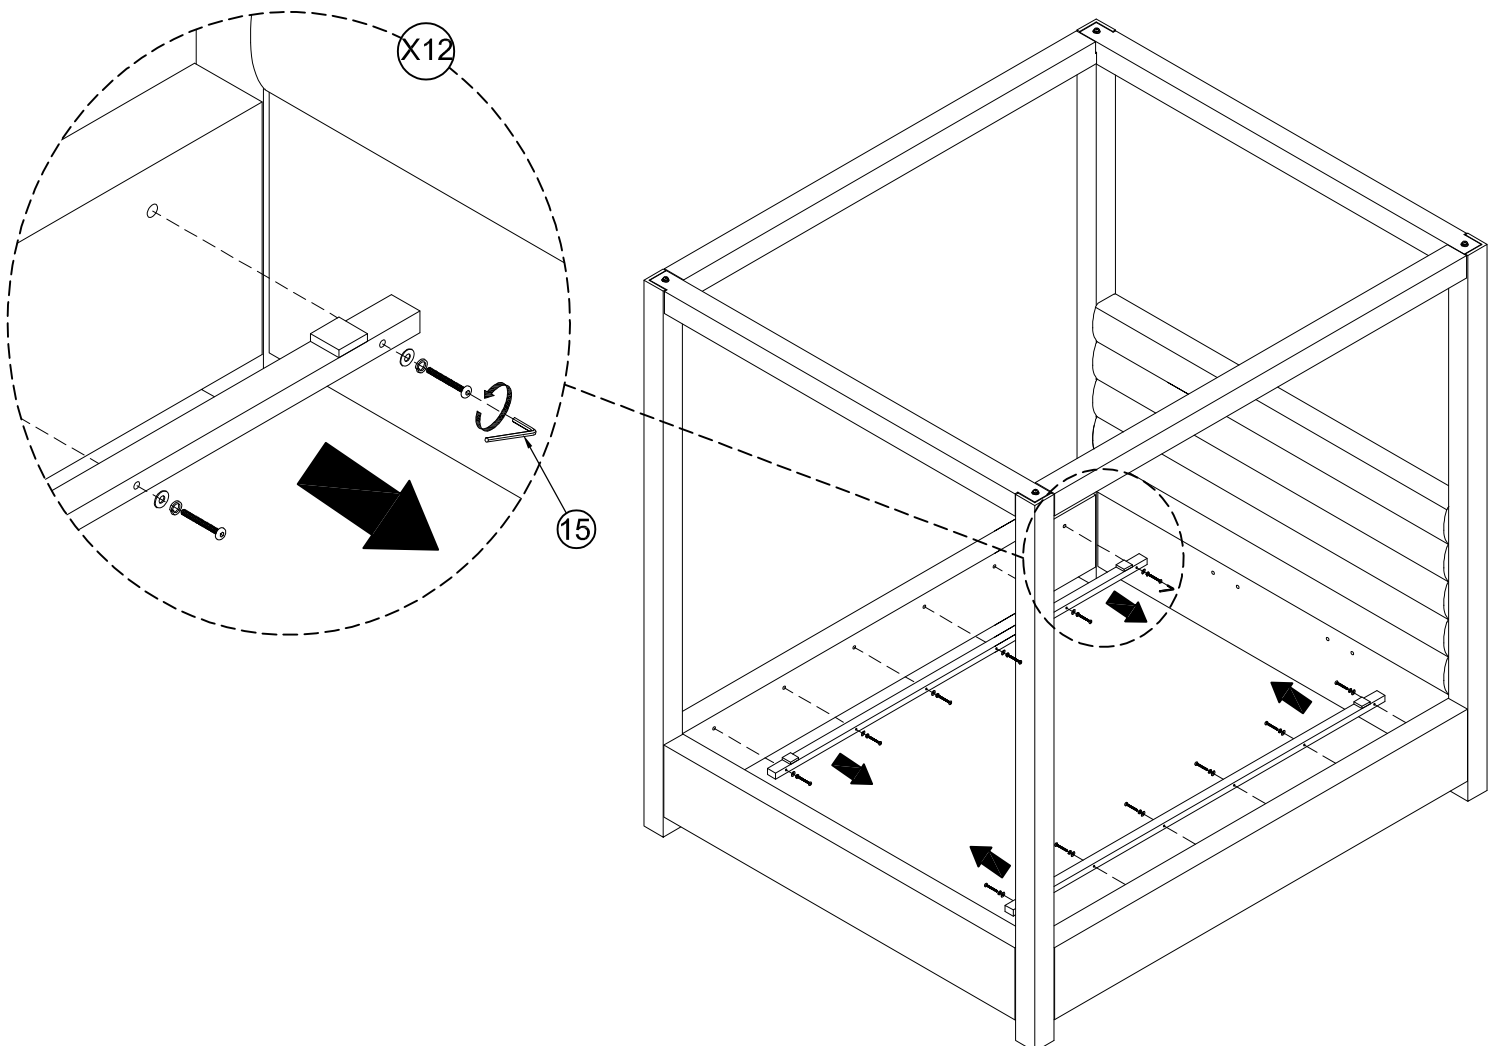

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ROCKFORD UPHOLSTERED CANOPY FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

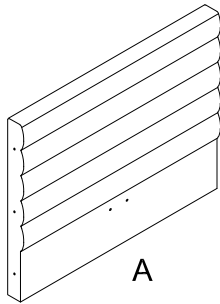

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (5/16"x 2")		6 PCS
2	FLAT WASHER (5/16")		6 PCS
3	LOCK WASHER (5/16")		6 PCS
4	ALLEN KEY (5/16")		1 PC

BOX#2

B. FOOTBOARD

1 PC

C. SLAT ROLL


1 SET

D. SHORT CROSSBAR


2 PCS

E. CENTER SLAT SUPPORT CLEAT


2 PCS

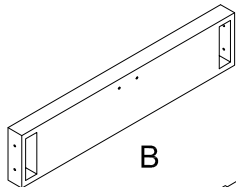


B

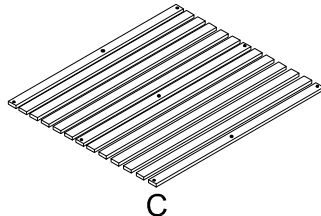

C

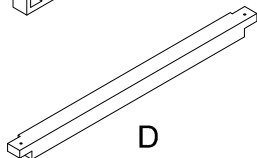

D



E

HARDWARE KIT PACKED IN BOX #2

5	ALLEN BOLT (5/16"x 5-1/2")		4 PCS
6	THREADED BOLT (5/16"x 3-1/2")		12 PCS
7	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
8	ALLEN BOLT (1/4"x 1-1/4")		3 PCS
9	FLAT WASHER (5/16")		20 PCS
10	FLAT WASHER (1/4")		3 PCS
11	LOCK WASHER (5/16")		20 PCS
12	LOCK WASHER (1/4")		3 PCS
13	HEX NUT (5/16")		12 PCS
14	PHILLIPS SCREW (M4 x 32mm)		8 PCS
15	ALLEN KEY (5/16")		1 PC
16	WRENCH		1 PC
17	CONNECTING BRACKET		6 PCS

BOX#3

F. SIDE RAIL

2 PCS

G. LONG CROSSBAR


2 PCS

H. SUPPORT LEG


4 PCS

I. CENTER SLAT SUPPORT

1 PC

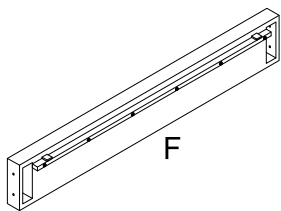


F

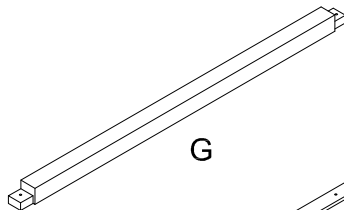

G




H

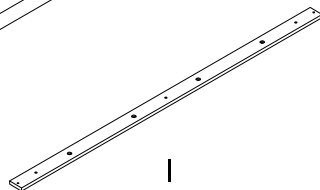

I

FULLY ASSEMBLED

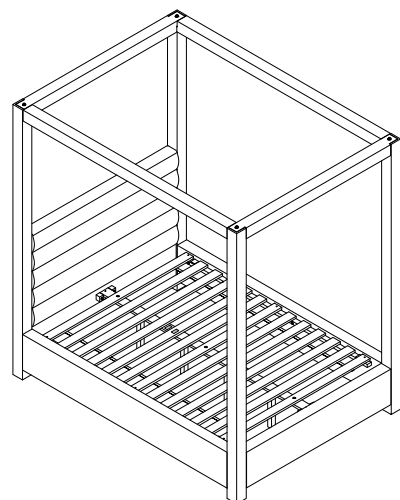

BOX#4

J. LEFT HEADBOARD POST


1 PC

K. RIGHT HEADBOARD POST

1 PC

L. FOOTBOARD POST

2 PCS






J



K




L




ROCKFORD UPHOLSTERED CANOPY FULL BED ASSEMBLY INSTRUCTIONS



STEP 1:

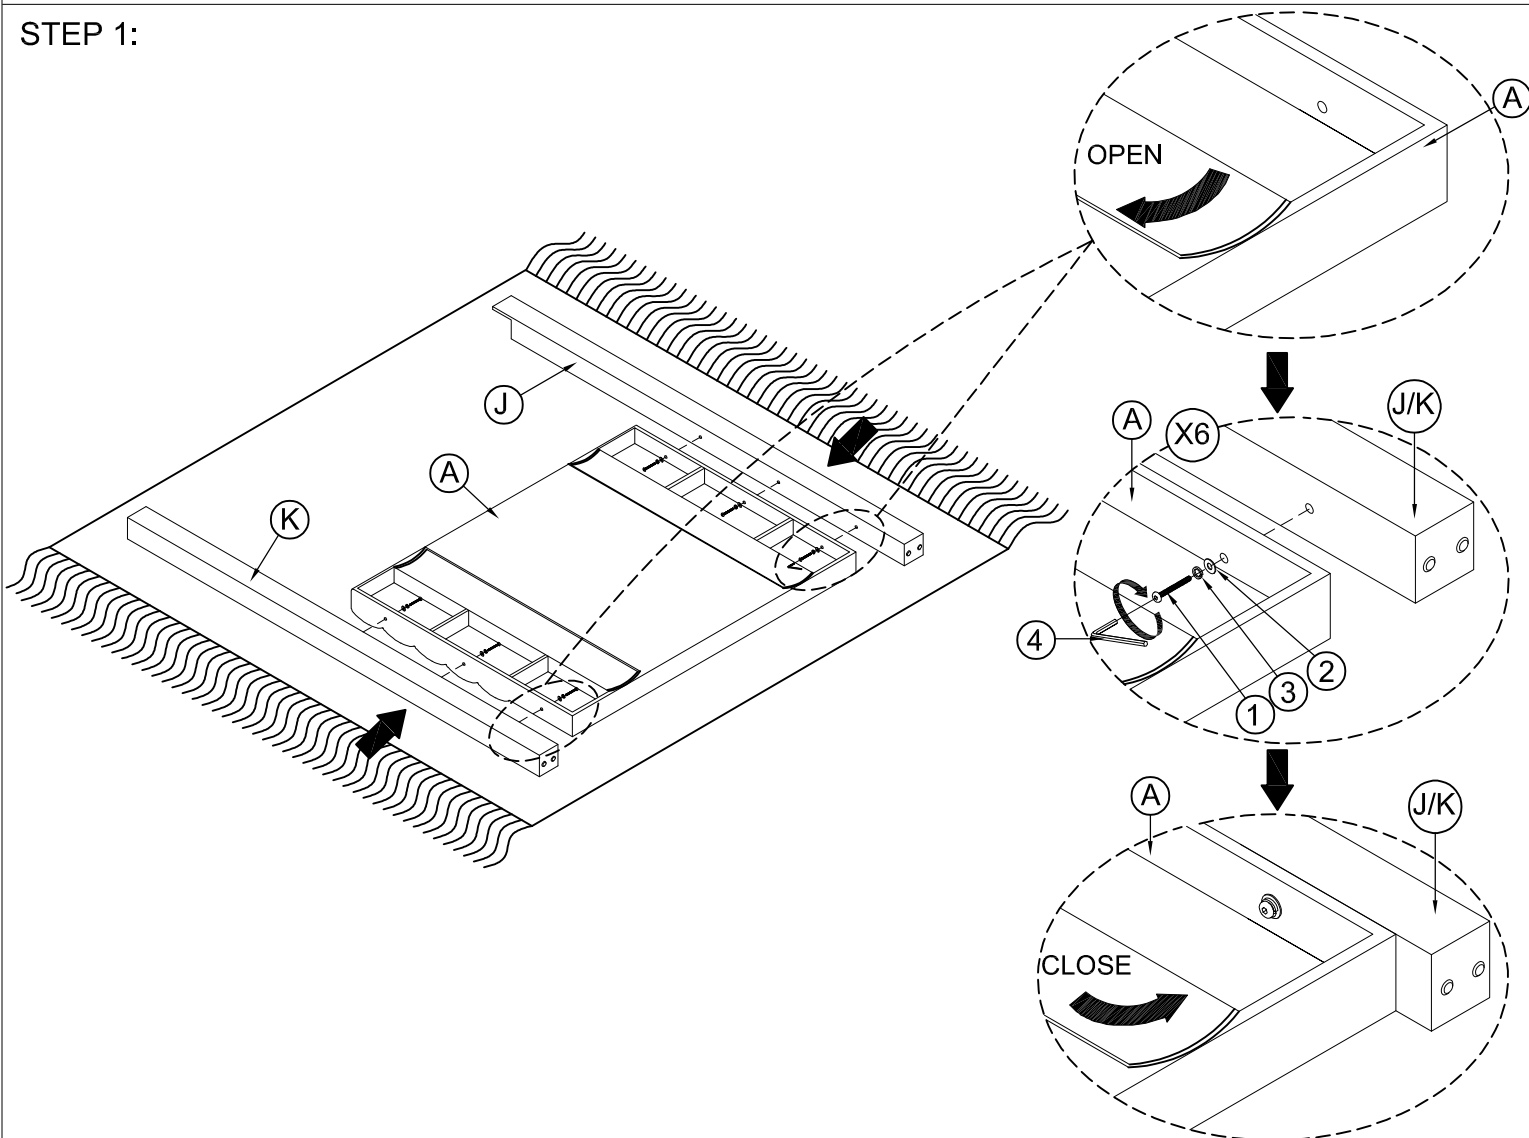


STEP 2:

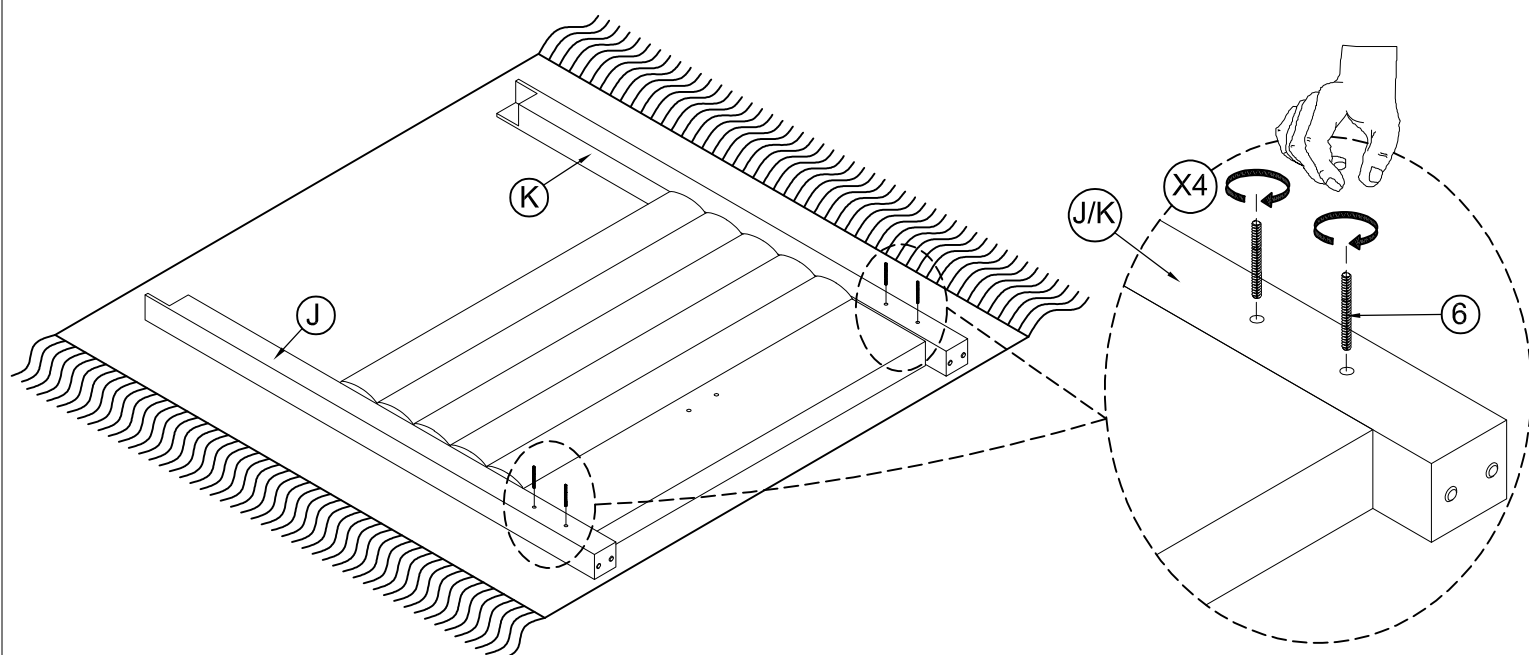


ROCKFORD UPHOLSTERED CANOPY FULL BED ASSEMBLY INSTRUCTIONS



STEP 3:

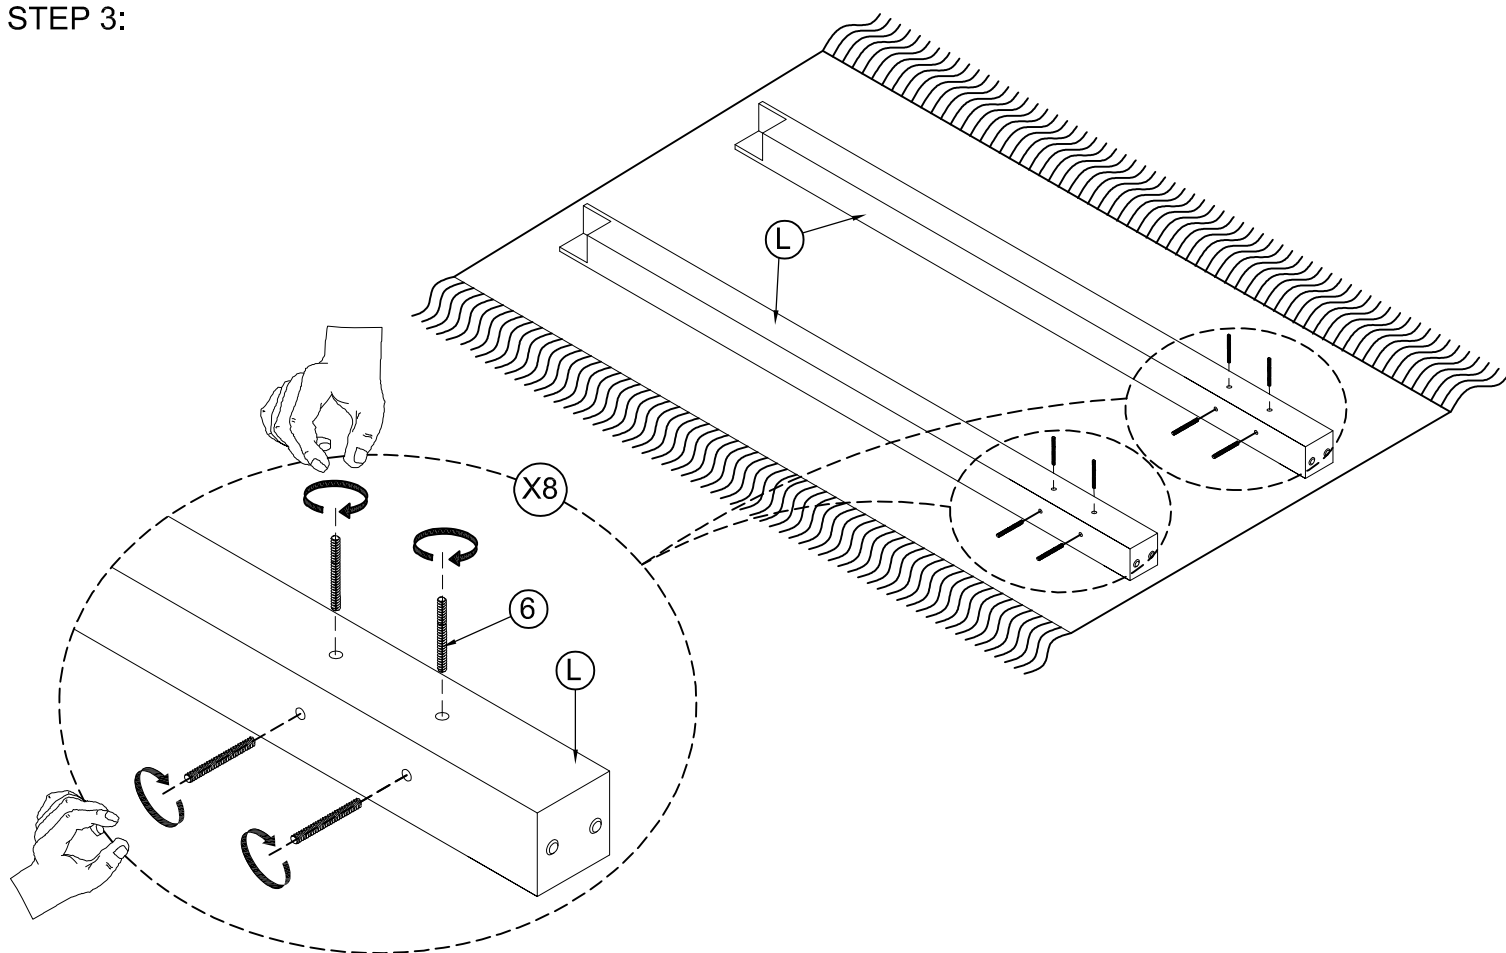

STEP 4:

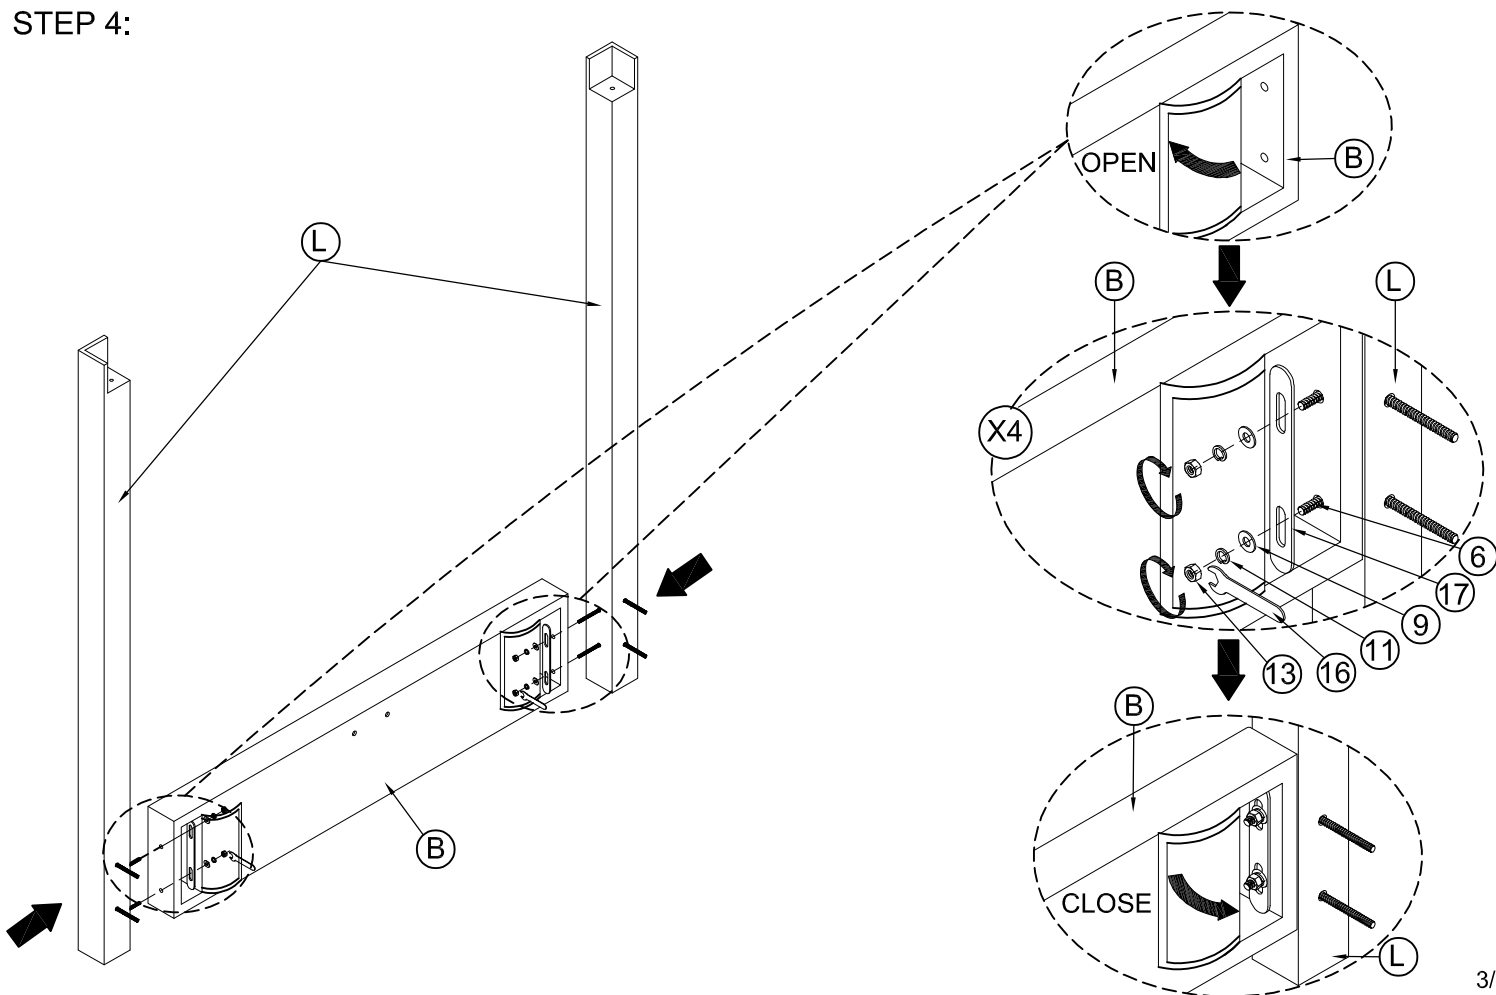

MODUS
FURNITURE

Diagram illustrating the assembly of the door to the frame (Step 5). The main diagram shows the door frame with a hinge (J) and a latch (K) being attached to a door panel (F). Two circular callouts provide detailed views of the hinge and latch assembly.

The top callout shows the 'OPEN' position of the door, with the hinge (J/K) and latch (F) components.


The bottom callout shows the 'CLOSE' position of the door, with the hinge (J/K) and latch (F) components. The bottom callout also includes a list of parts: 6, 17, 9, 11, 16, 13, and 10.

STEP 6:


Diagram illustrating Step 6: Attaching the front panel. The main diagram shows a partially assembled frame with a vertical post (L) being inserted into a horizontal rail (F). A circular inset shows a close-up of the post (L) being pushed into the rail (F). Another circular inset shows the front panel being attached to the rail (F) using screws (6, 17, 9, 11, 16, 13). A third circular inset shows the front panel being closed, with a curved arrow indicating the direction of movement. The text "OPEN" and "CLOSE" are used to indicate the panel's position.

ROCKFORD UPHOLSTERED CANOPY FULL BED ASSEMBLY INSTRUCTIONS

STEP 7:

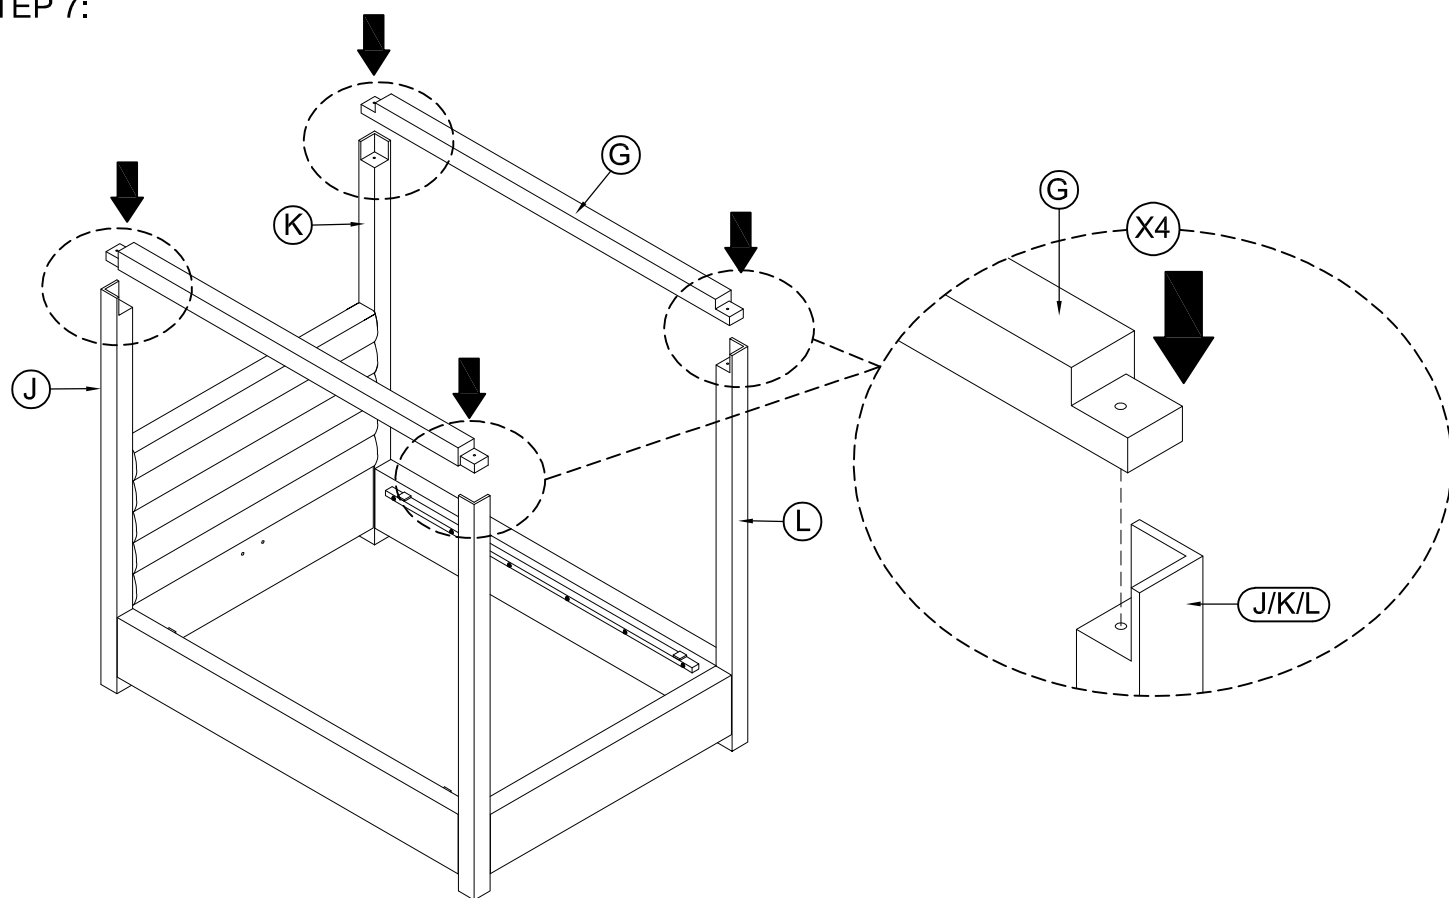

STEP 8:

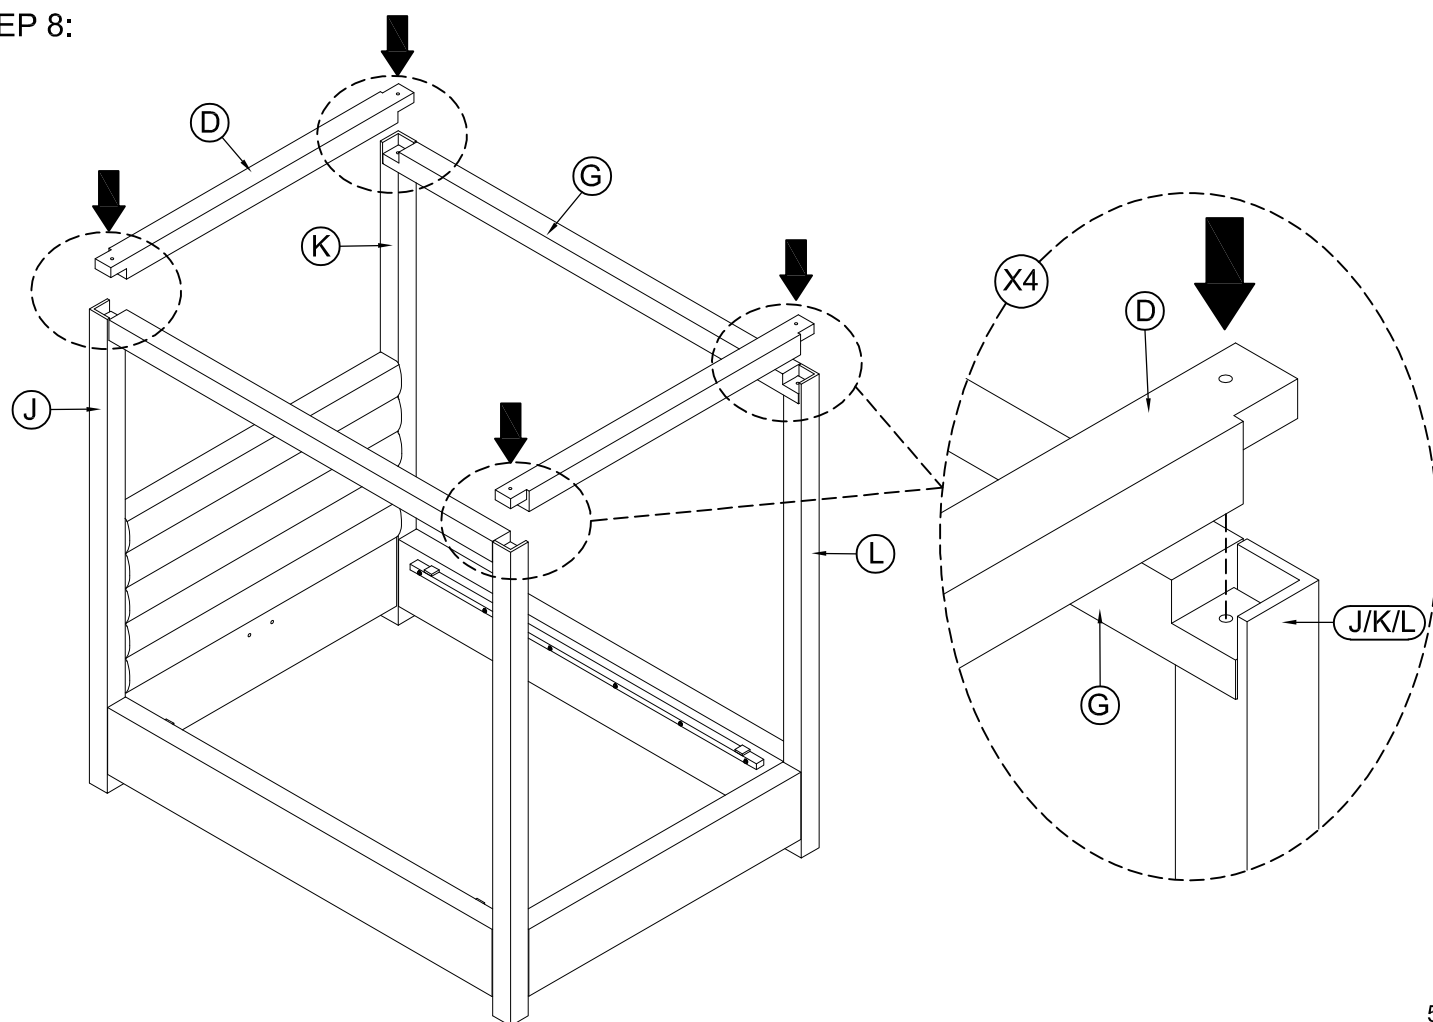


ROCKFORD UPHOLSTERED CANOPY FULL BED

ASSEMBLY INSTRUCTIONS




STEP 9:

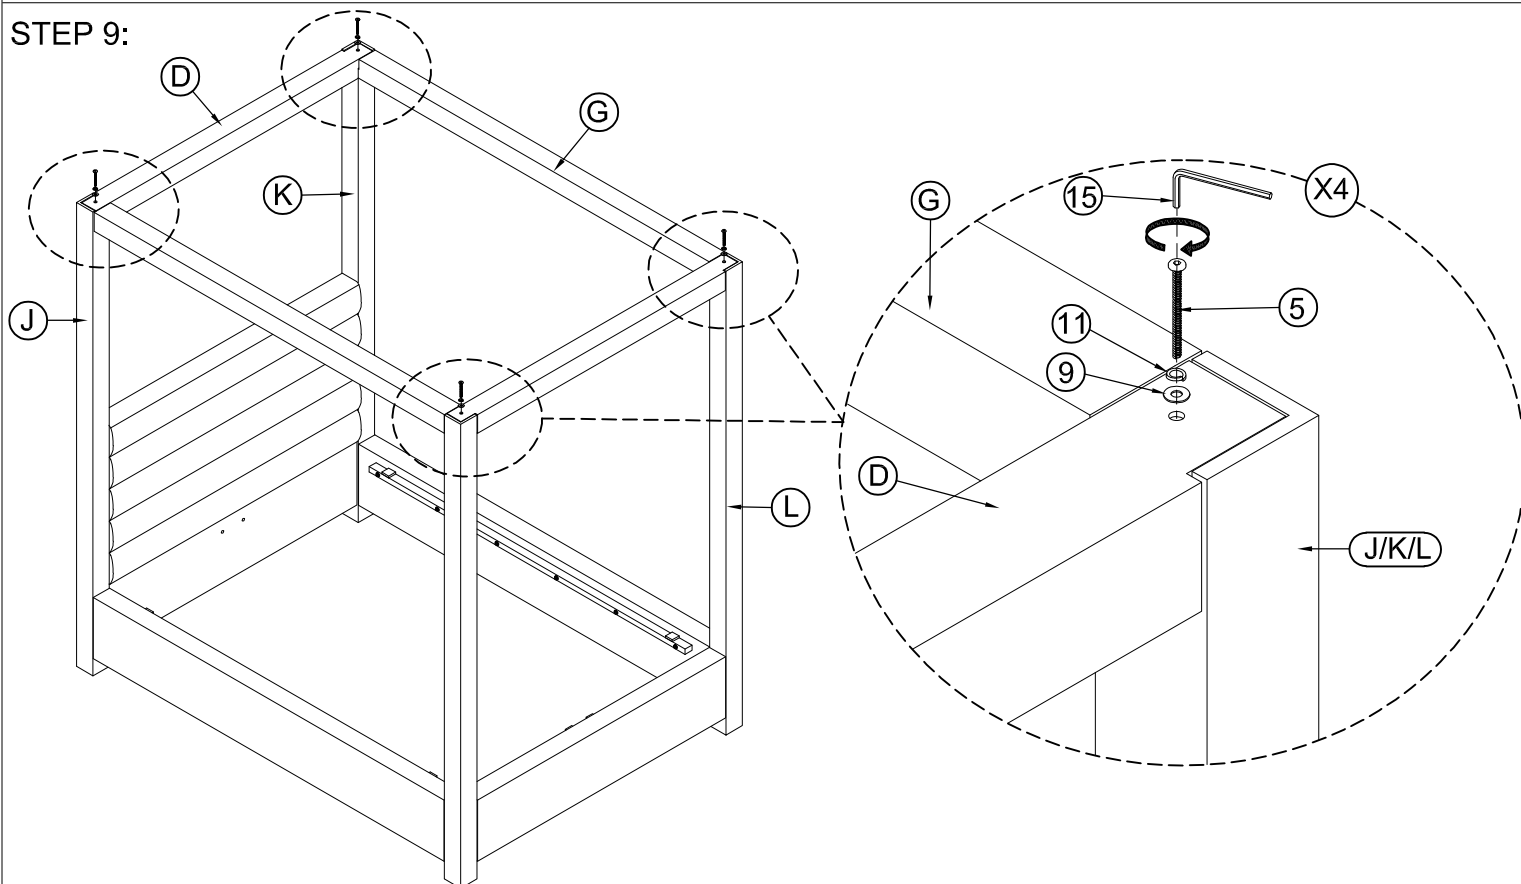

STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 10-14 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 10.


STEP 10:

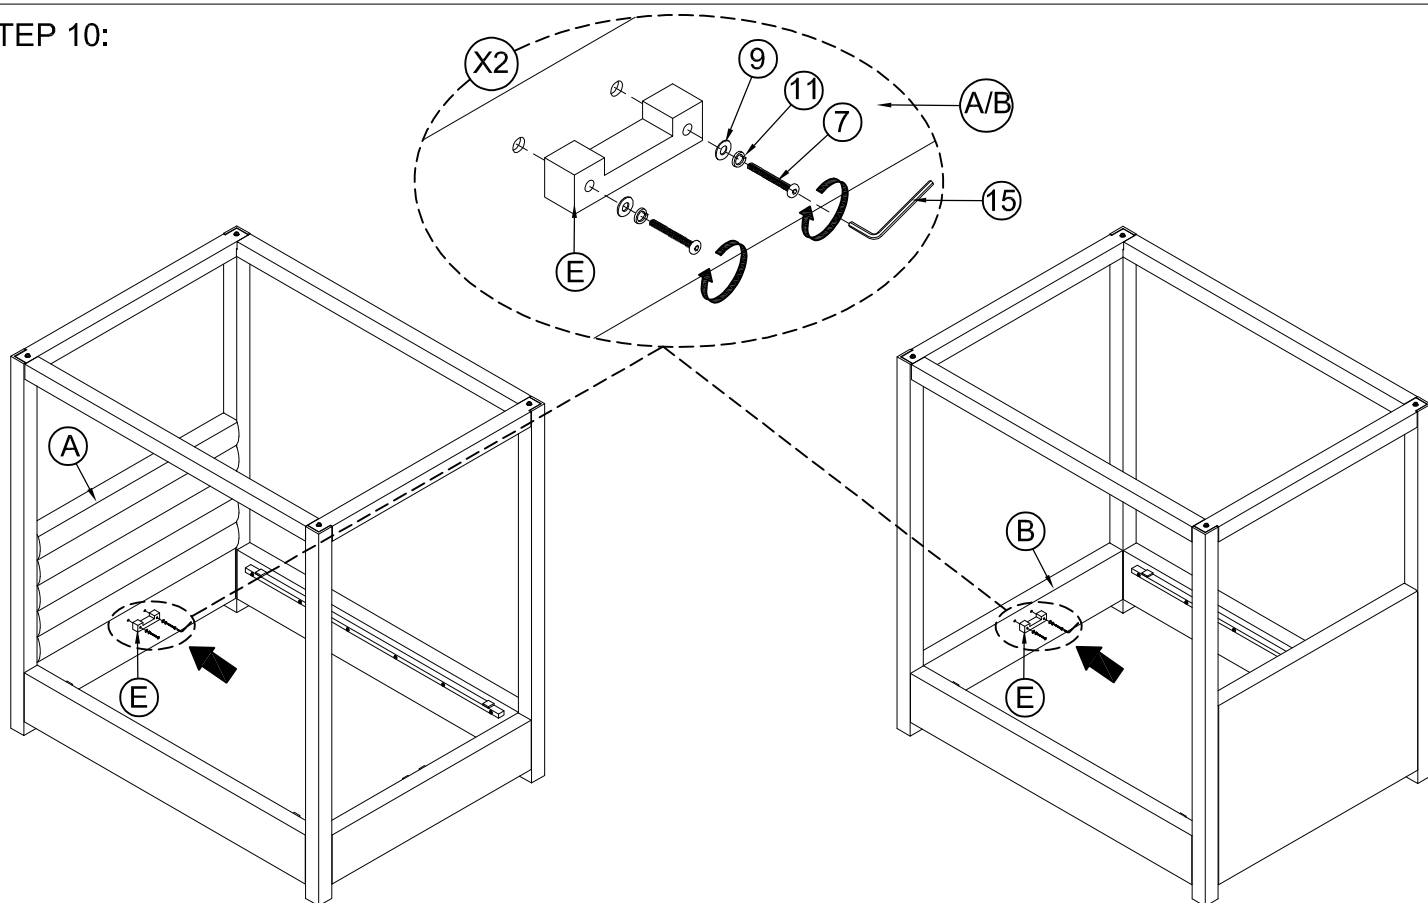


ROCKFORD UPHOLSTERED CANOPY FULL BED ASSEMBLY INSTRUCTIONS



STEP 11:

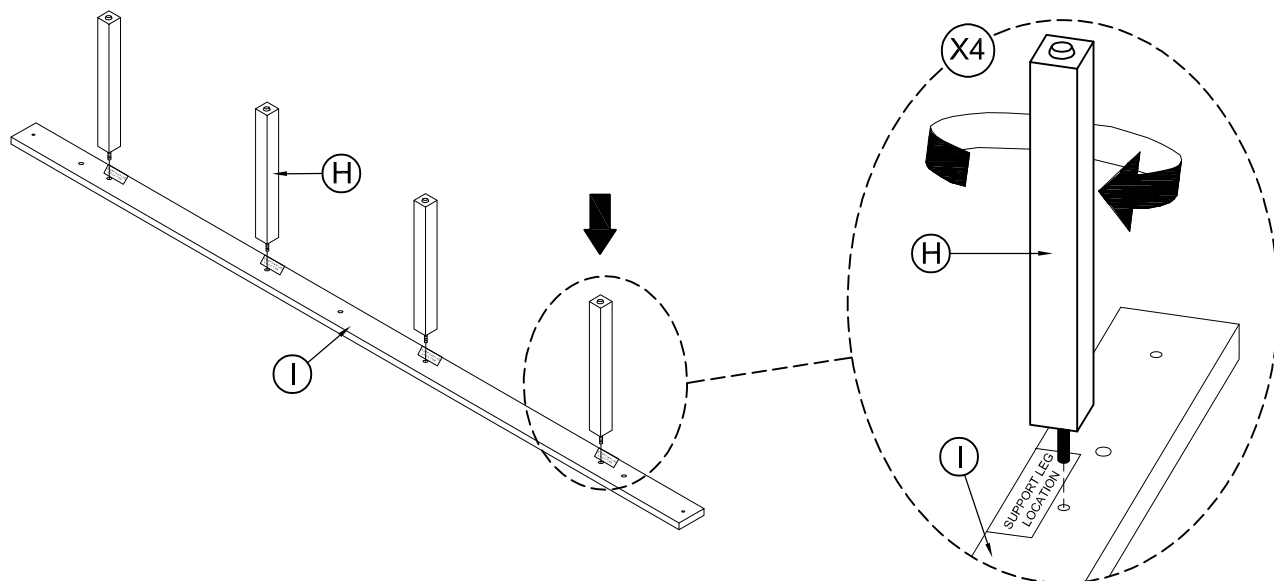

STEP 12:

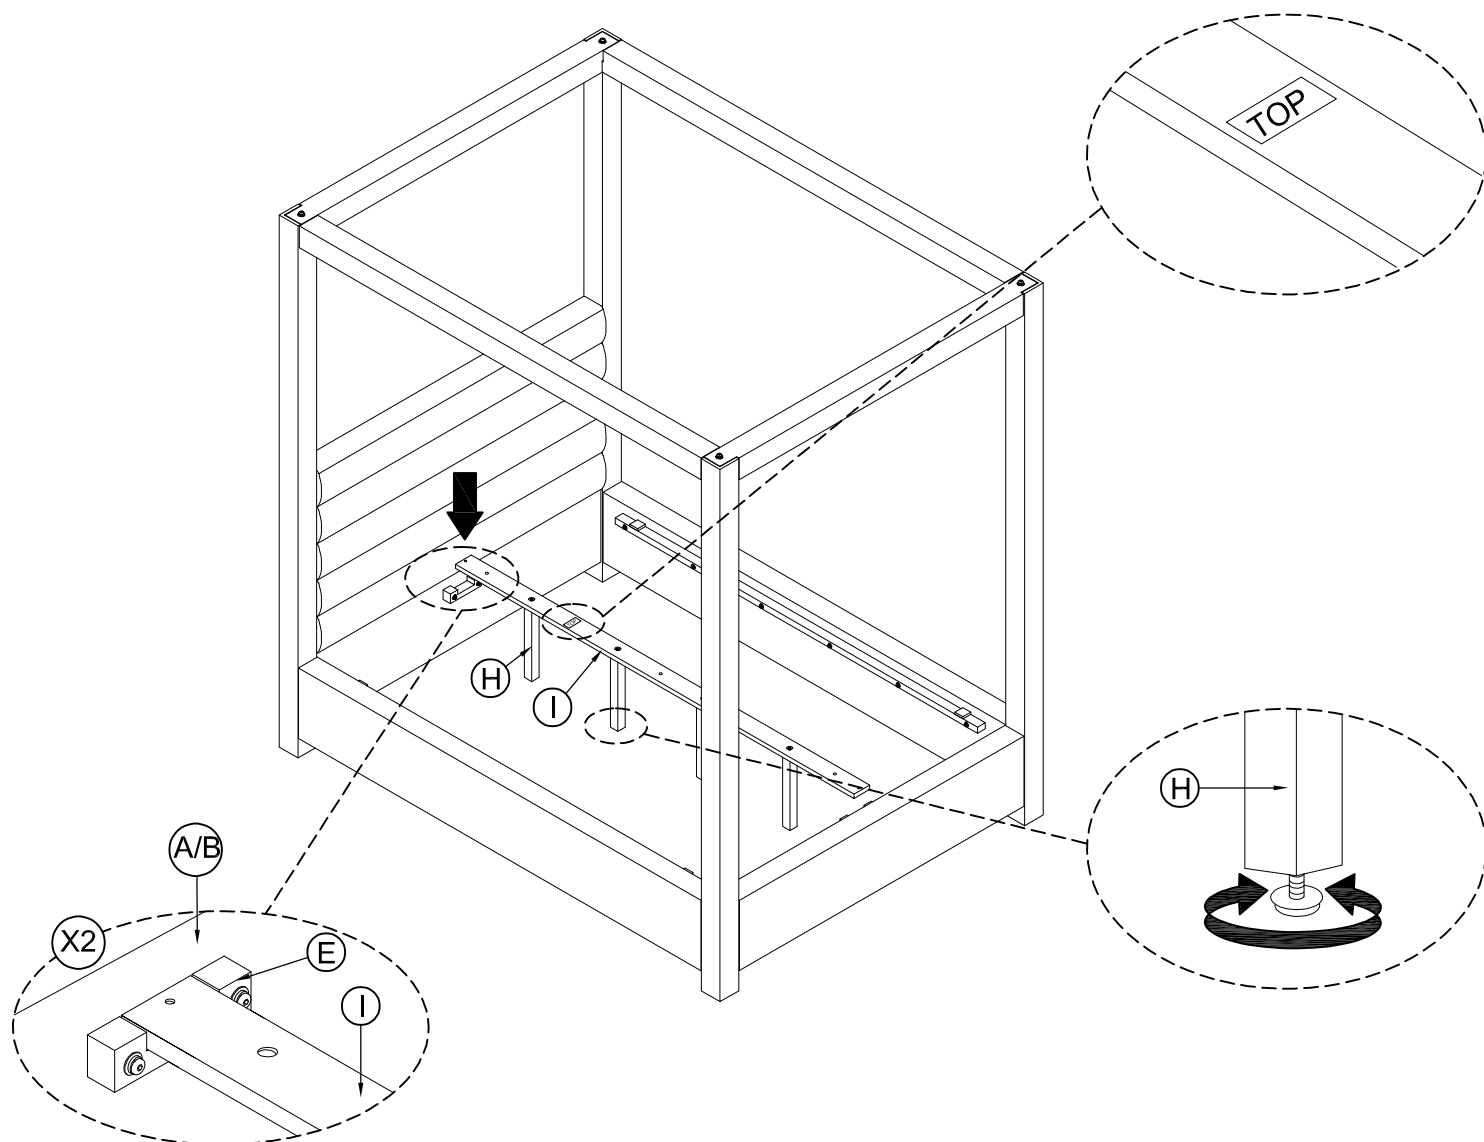


ROCKFORD UPHOLSTERED CANOPY FULL BED


ASSEMBLY INSTRUCTIONS




STEP 13:

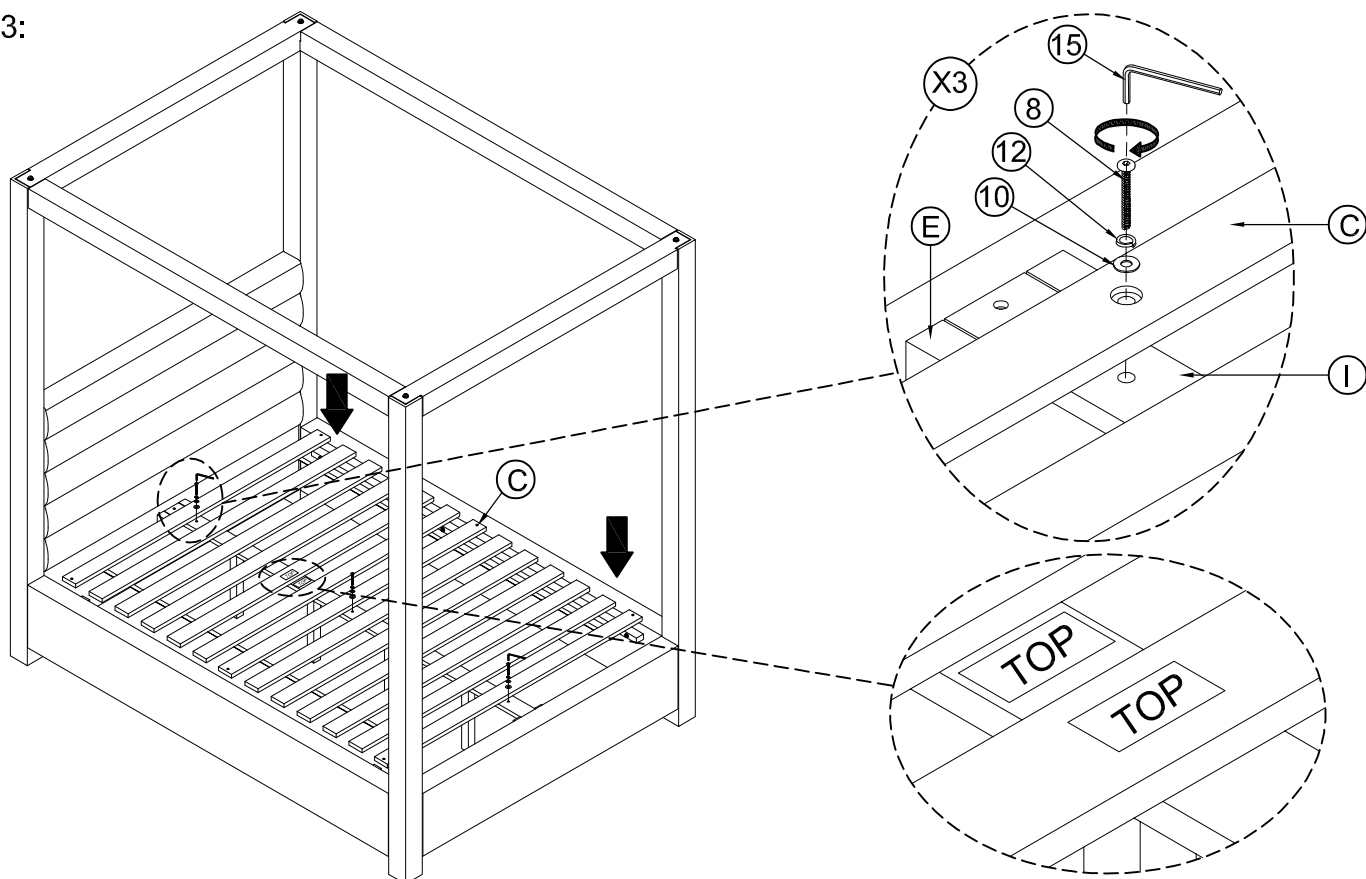

STEP 14:

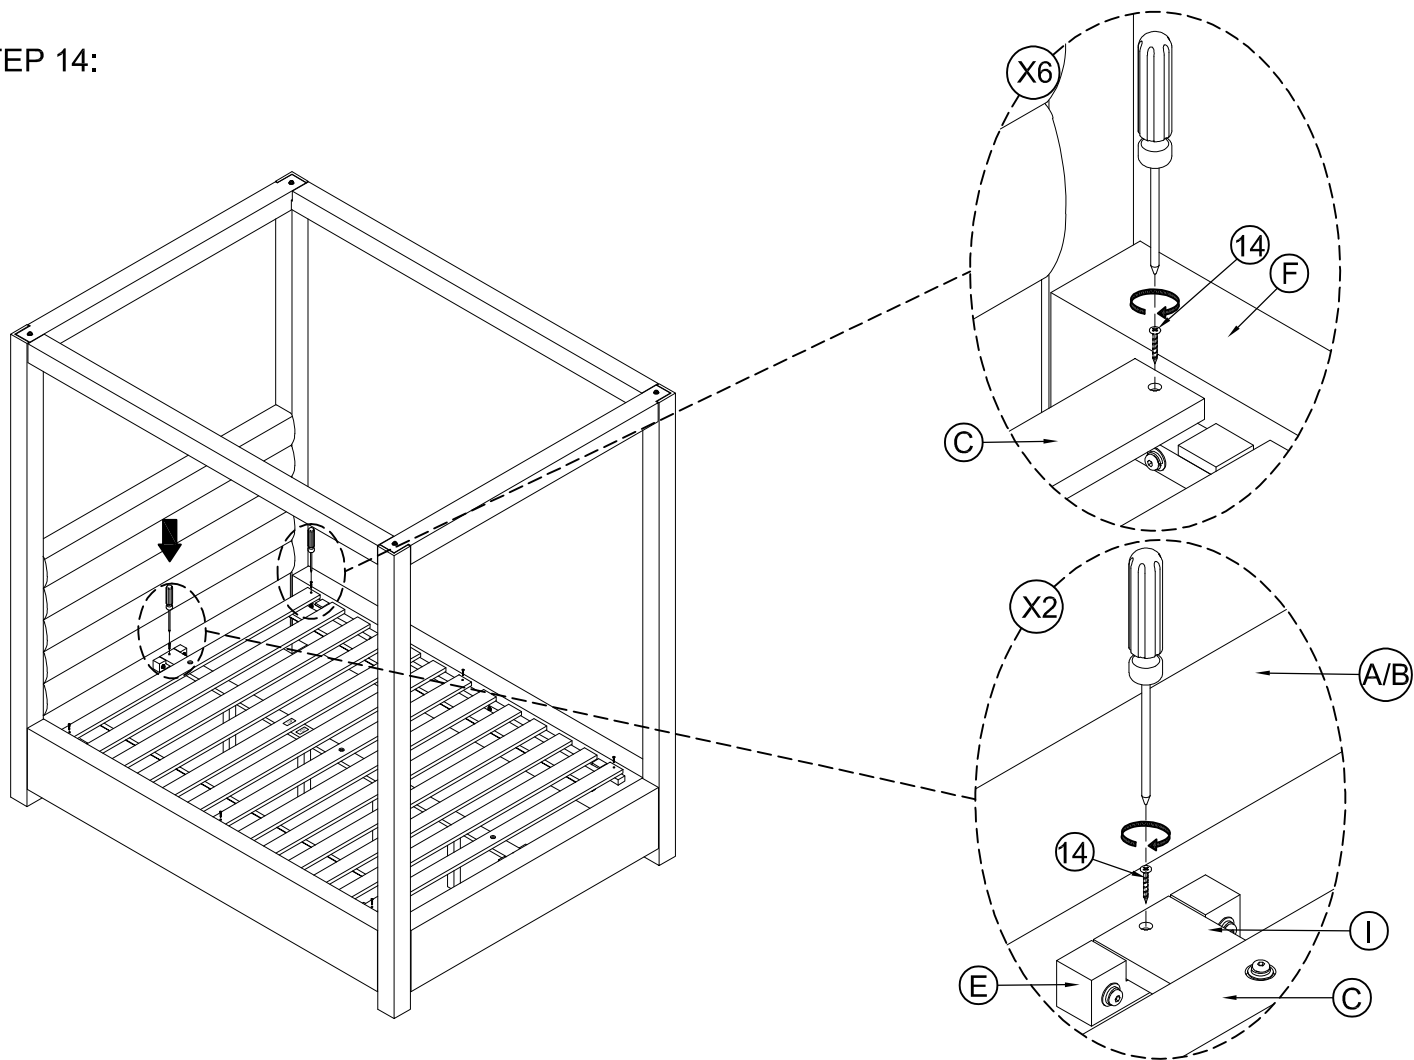

ROCKFORD UPHOLSTERED CANOPY FULL BED ASSEMBLY INSTRUCTIONS

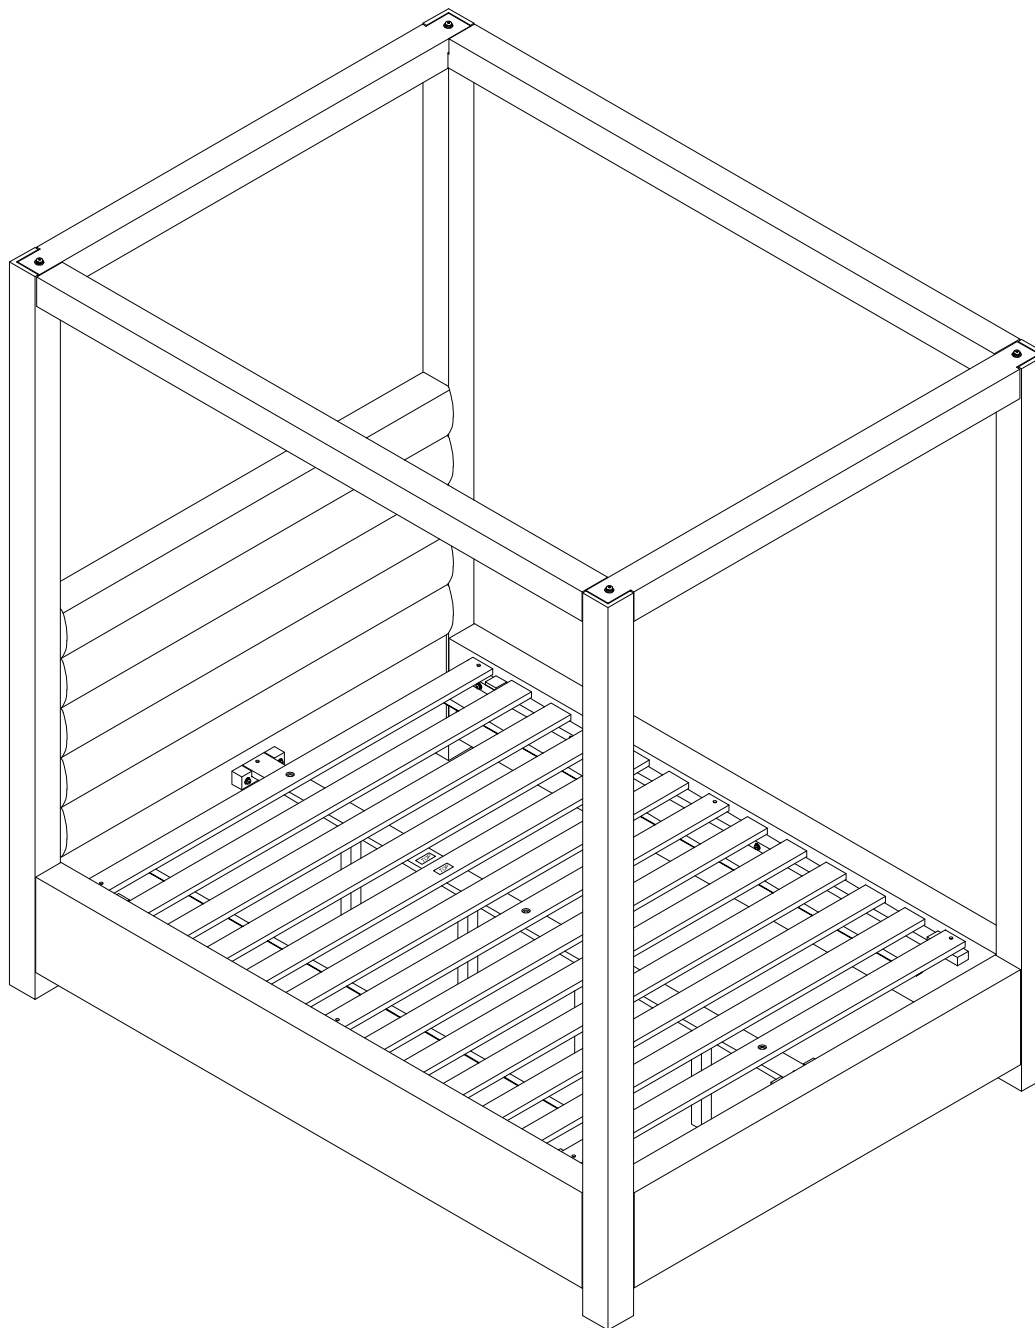


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKFORD UPHOLSTERED CANOPY FULL BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. SLAT ROLL	1 SET
E. CENTER SLAT SUPPORT CLEAT	2 PCS
H. SUPPORT LEG	4 PCS
I. CENTER SLAT SUPPORT	1 PC

STEP 1:

USE ALLEN KEY (15) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

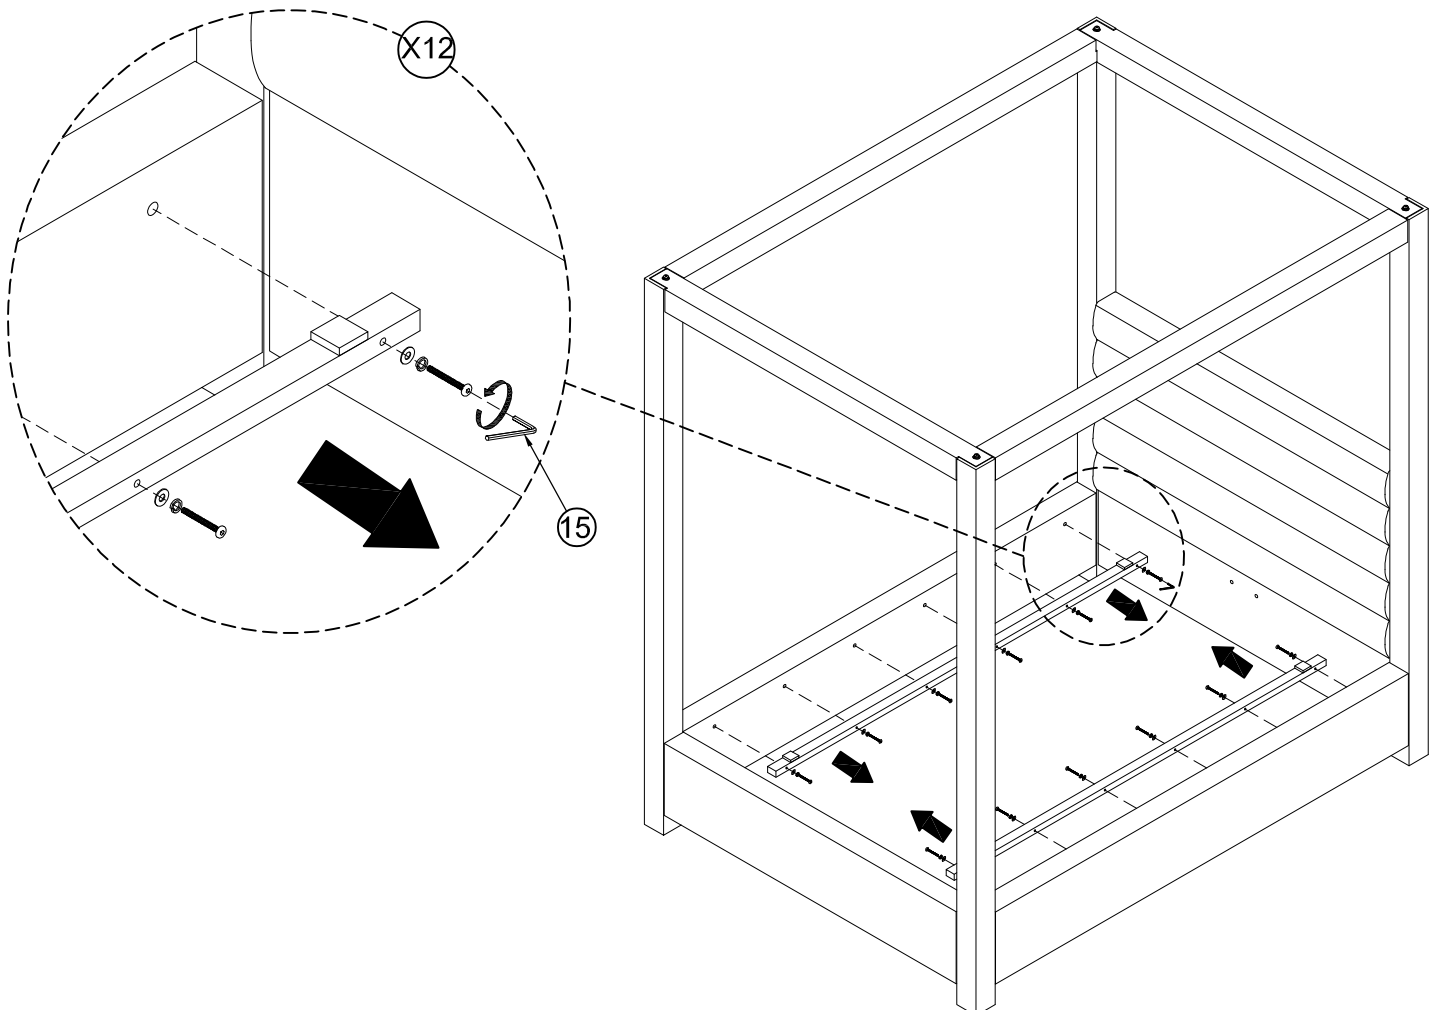

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION