


# ASSEMBLY INSTRUCTION

## DAYBED WITH TRUNDLE


### PART LIST:




A: Arm Post  
2PCS




B: Arm Post  
2PCS

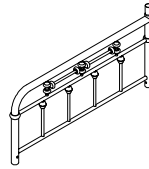


C: LSF Arm  
1PC

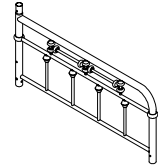


D: RSF Arm  
1PC

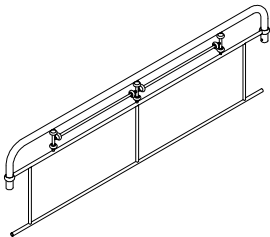


E: Back Frame  
1PC

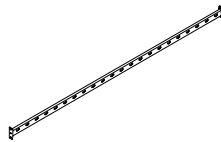


F: Rail  
2PCS

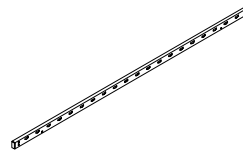

G: Trundle Long  
Rail  
2PCS

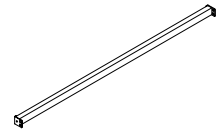


H: Trundle Short  
Rail  
2PCS




I: Lock Wheel  
2PCS



J: Wheel  
2PCS

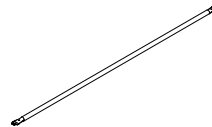

K: Slat  
42PCS  
(Daybed: 22pcs, Trundle: 20pcs)



L: Slat Spacer  
40PCS  
(Daybed: 21pcs, Trundle: 19pcs)



M: Slat Connector  
84PCS

### HARDWARE LIST:



1: Bolt 1/4\*33mm  
X 4pcs



2: Bolt 1/4\*55mm  
X 2pcs



3: Bolt 1/4\*19mm  
X 14pcs



4: Bolt 5/16\*19mm  
X 8pcs



5: Nut 1/4  
X 4pcs



6: Allen Key  
X 1pc




7: Wrench  
X 1pc

Note: Please do not tighten all bolts until the bed is assembled completely.


## DAYBED ASSEMBLY

### STEP 1

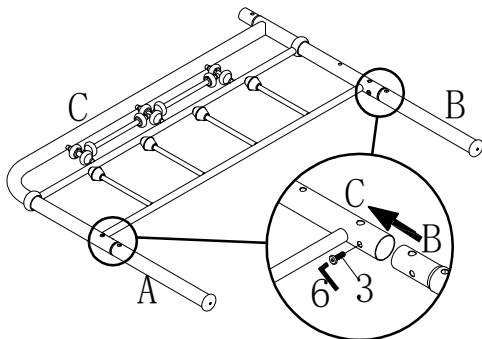


Hardware 3: 2 pcs

### STEP 2

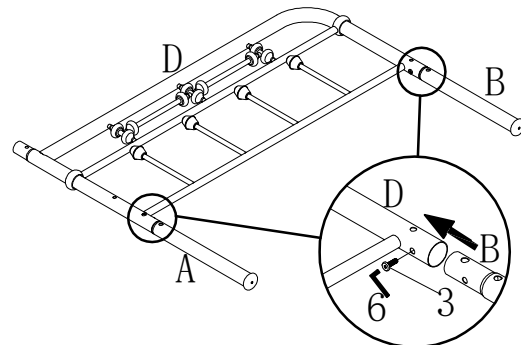


Hardware 3: 2 pcs

### STEP 3

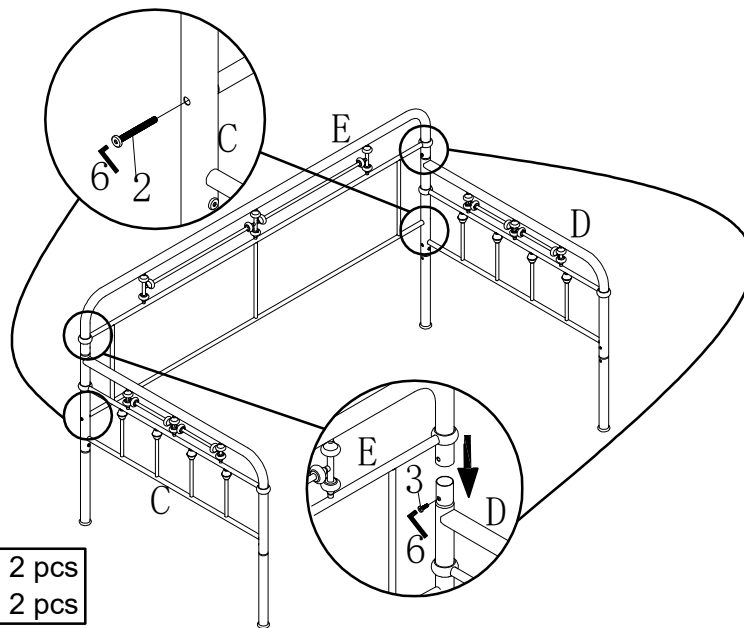


Hardware 2: 2 pcs  
Hardware 3: 2 pcs

### STEP 4

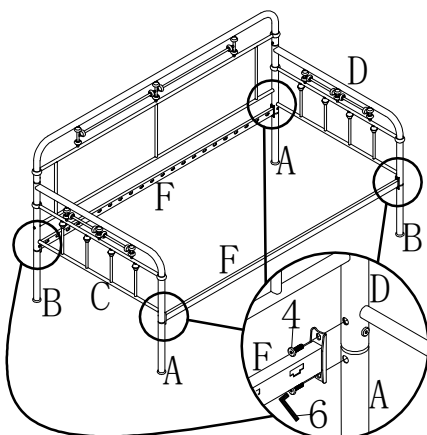


Hardware 4: 8 pcs

### STEP 5

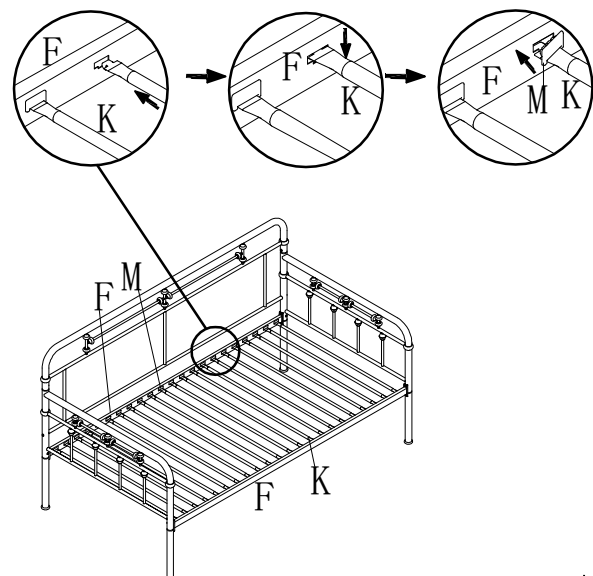


Note: Please do not tighten all bolts until the bed is assembled completely.

## STEP 6

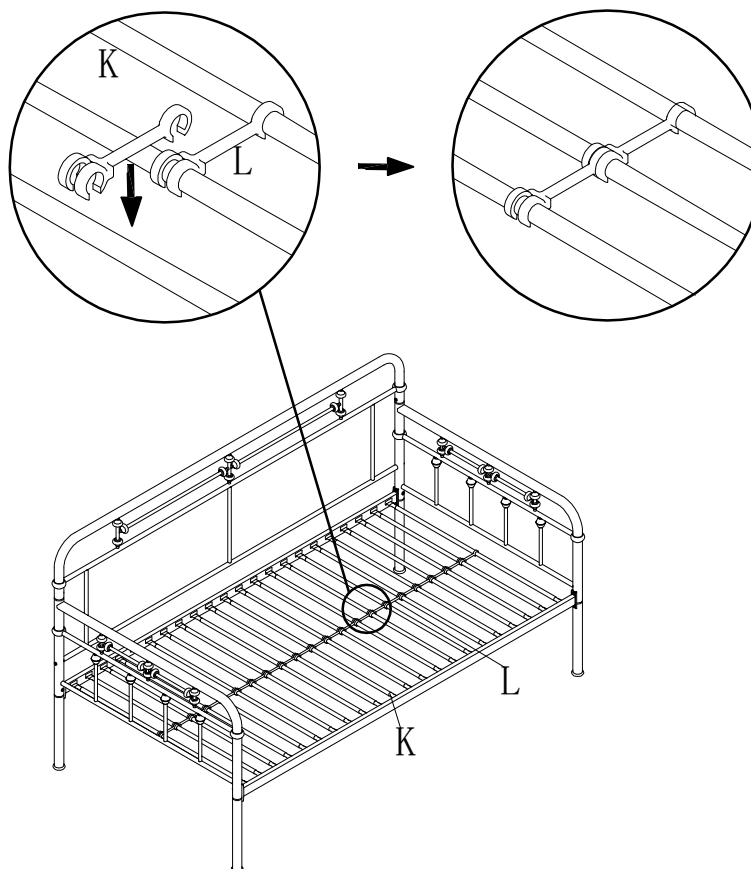


DAYBED COMPLETED

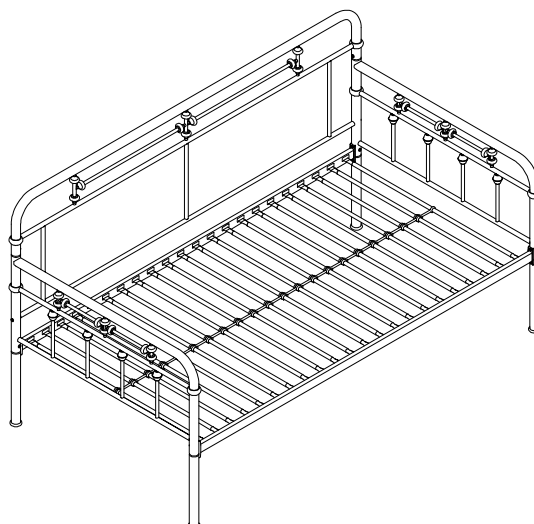


Note: Please do not tighten all bolts until the bed is assembled completely.

## TRUNDLE ASSEMBLY


### STEP 7

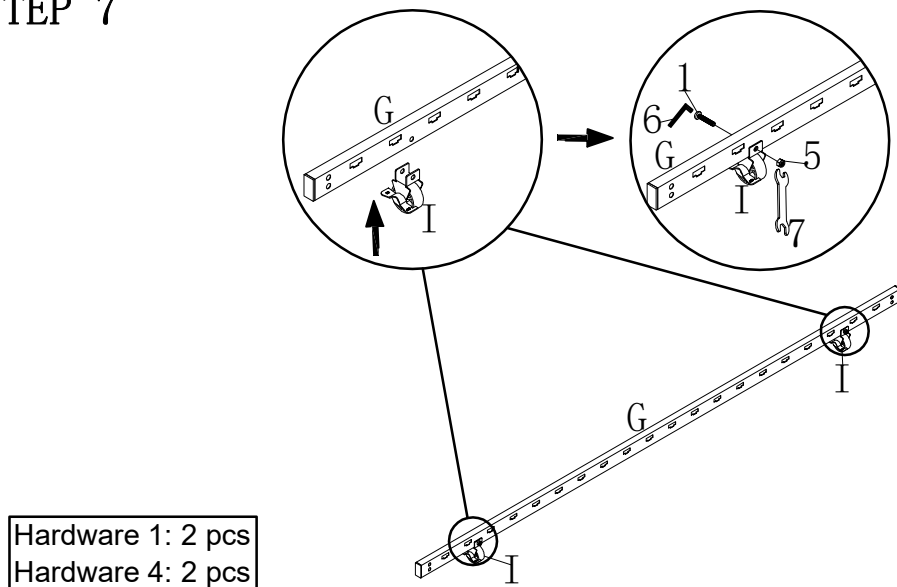


### STEP 8

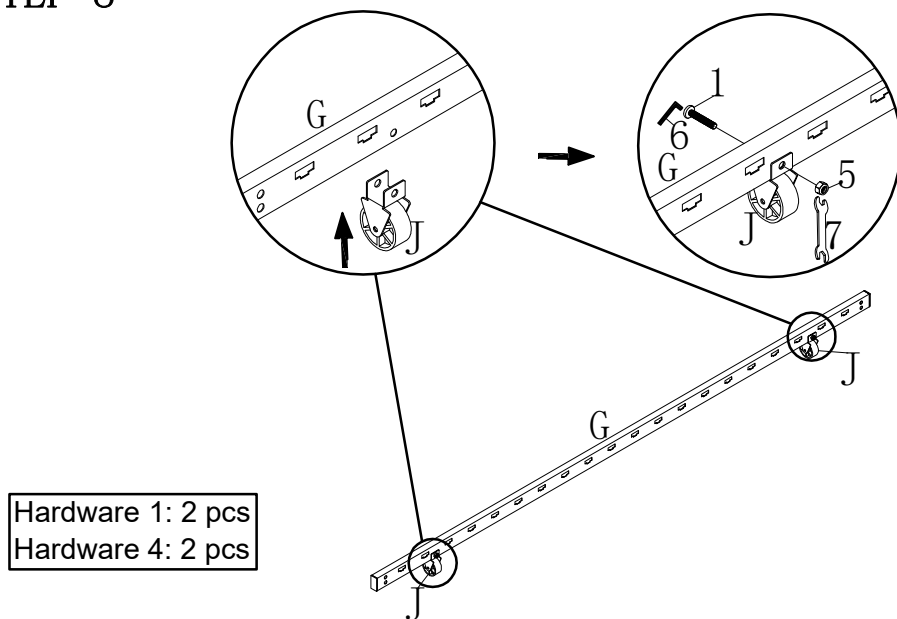

### STEP 9

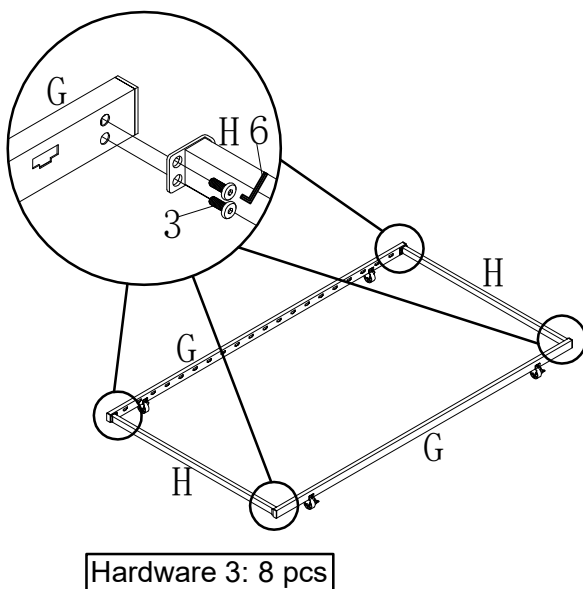


### STEP 10

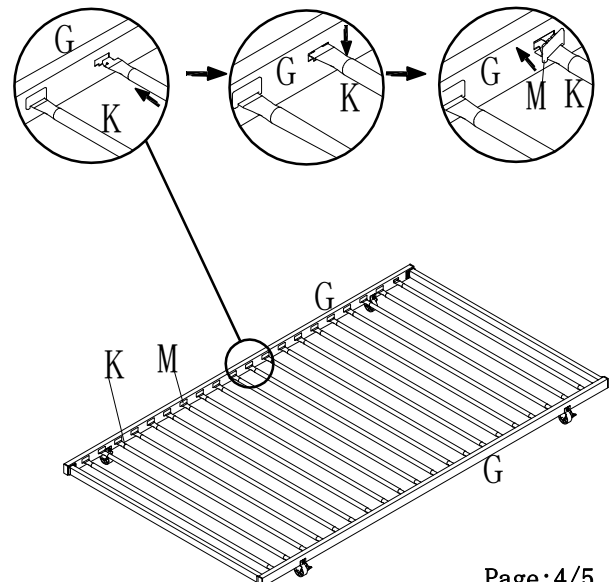


Note: Please do not tighten all bolts until the bed is assembled completely.

## STEP 11

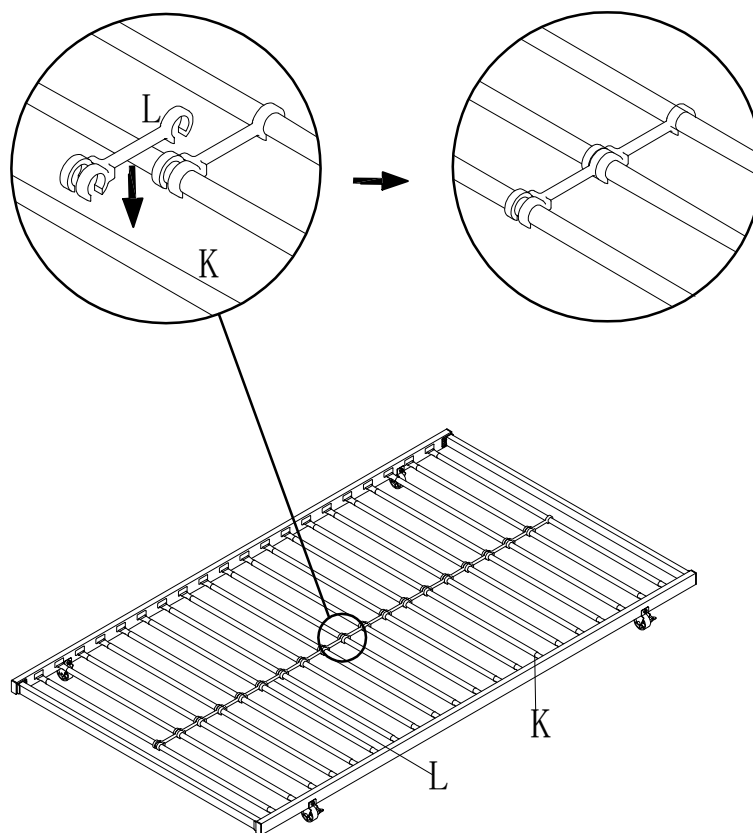

TRUNDLE COMPLETED

COMPLETED

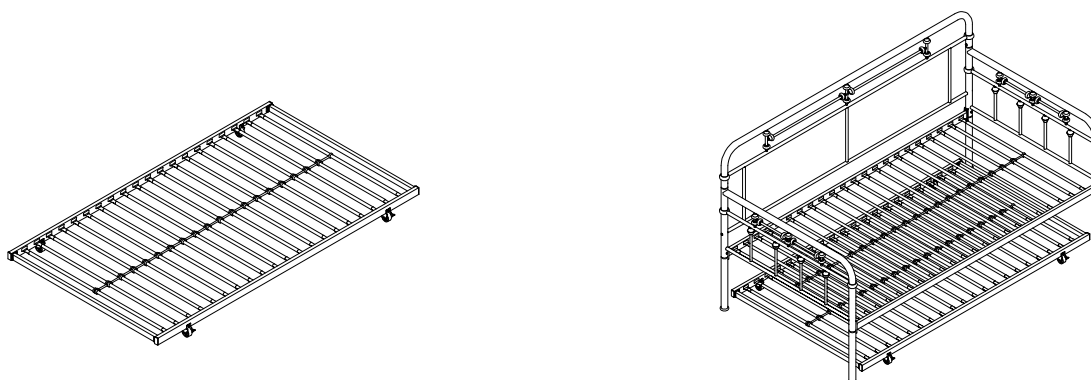

For items use on wooden floor, hard surfaces or carpets, it is recommended to Install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.