










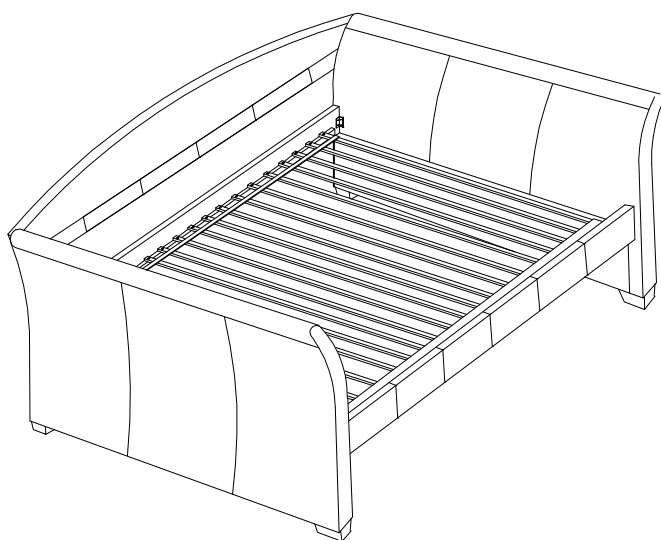


# ASSEMBLY INSTRUCTION


## DAYBED ARMS

<b>A</b> Bolt 5/16"2"L	<b>B</b> Bolt 5/16"x3/4"L	<b>C</b> Lock Washer #5/16 "	<b>D</b> Flat Washer 5/16"x3/4"	<b>E</b> Screw #8/1-1/4"L
				
12PCS	8PCS	20PCS	20PCS	28PCS
<b>F</b> Allen Wrench	<b>G</b> Angle Iron 60x90mm	<b>H</b> Back rest	<b>I</b> Front Rail	<b>J</b> Slats for Daybed (in box 2)
				
1PC	4PCS	1PC	2PCS	2PCS
<b>K</b> Left & Right Arm				
				
2PCS				




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


- 1** Attached Left & Right Arms(K) to the Front Rail(I), use Bolt(A), Lock washer(C) , Flat Washer(D), with Angle Iron(G) on holes of Left & Right Arms(K). Use Bolt(B), Lock Washer (C) Flat Washer(D), on holes of Front Rail(I), turn the Allen Wrench(F) in Blot(B).

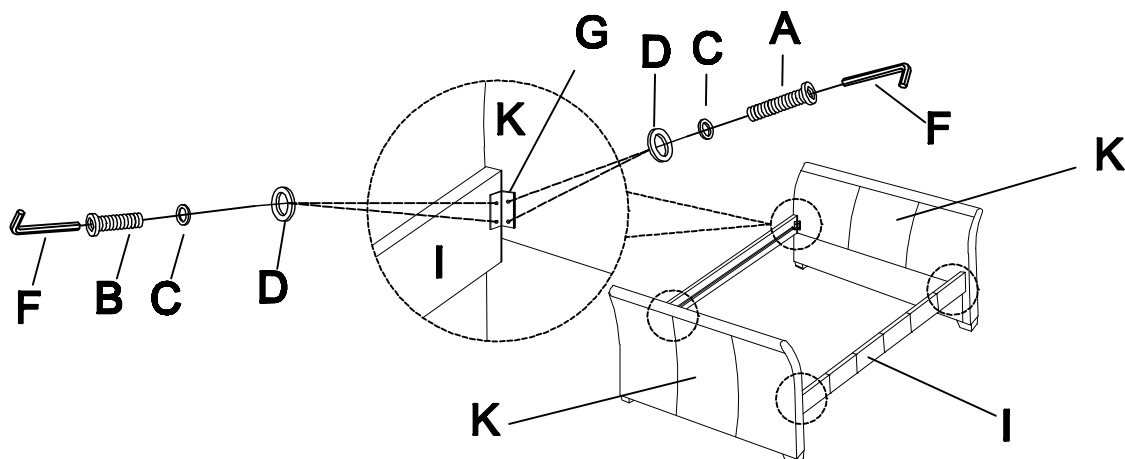

- 2** Attached Back Rest(H) to Left & Right Arm(K), and attached Bolt(A), Lock Washer(C), Flat Washer(D), turn the Allen Wrench(F) in Blot(A).

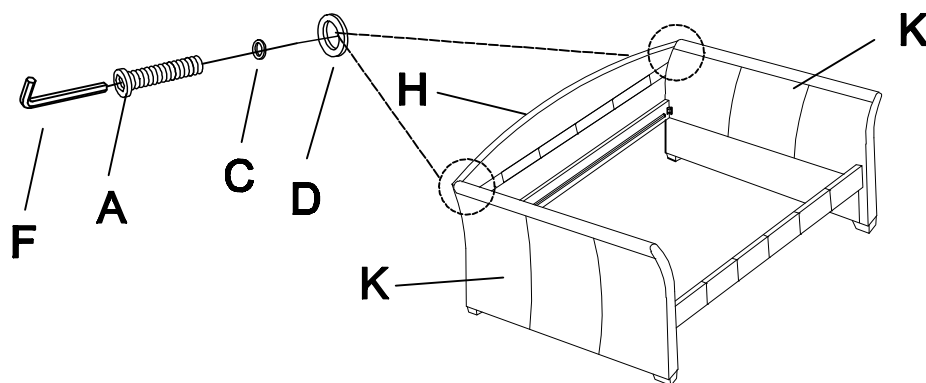

- 3** Attached Slats for Daybed(J) to uniform on the Front Rail(I). Use Screw(E), on holes of Slats for Daybed(J), turn the screwdriver in Screw(E).

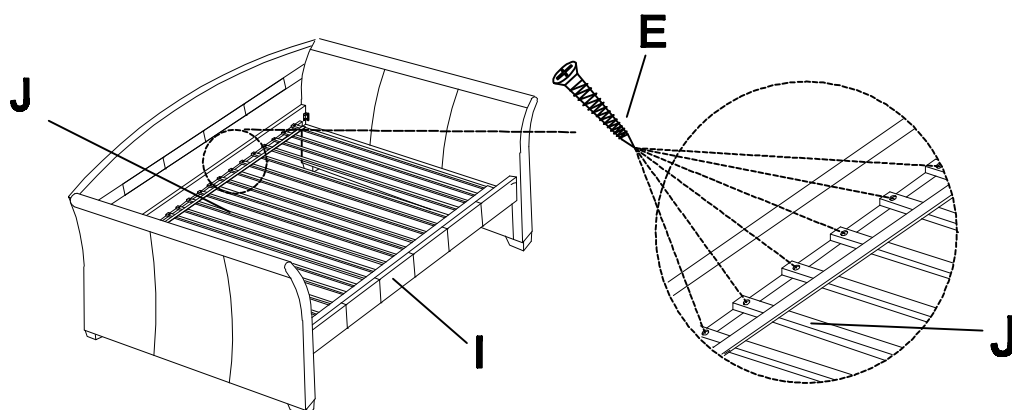

#### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.