
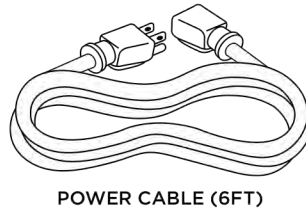
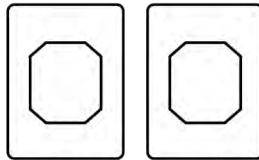
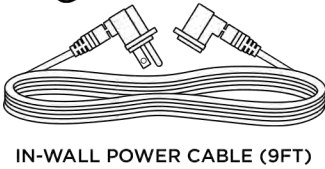
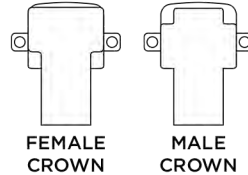
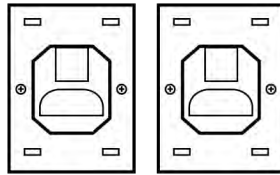


IN WALL POWER RELOCATION KIT HS-PWRLOC01



Ethereal

CELEBRATING
75
YEARS
OF INNOVATION


KIT CONTENTS:

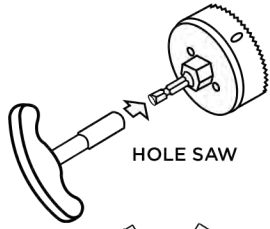


TOOLS NEEDED:

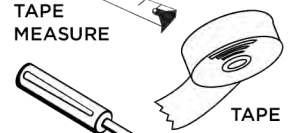


- 1** Check plug size from your TV

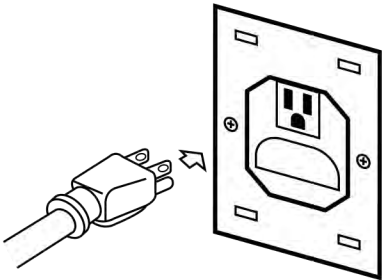


- 2** Center between studs

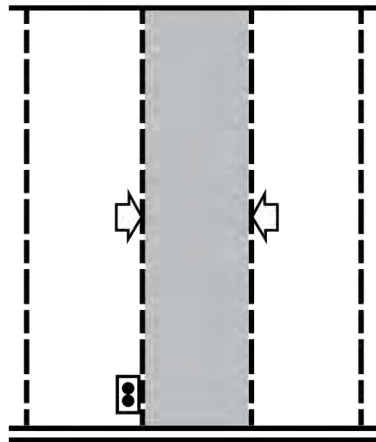



- 3** Measure and mark the location for holes with pencil

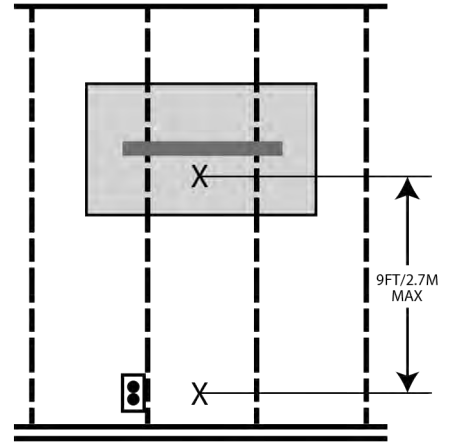

- 4** Drill holes with provided Hole Saw

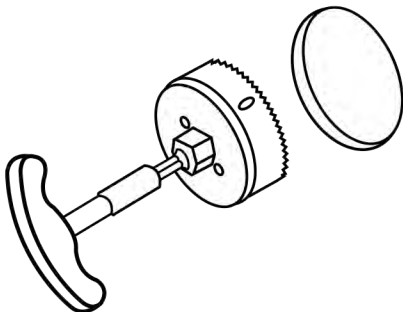


- 5** Use Fish Tape to snake the In-Wall Power Cable into the wall with the **Female Tip at the top** and the **Male Tip at the bottom**. Use tape to secure the Fish Tape if needed.

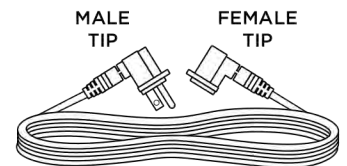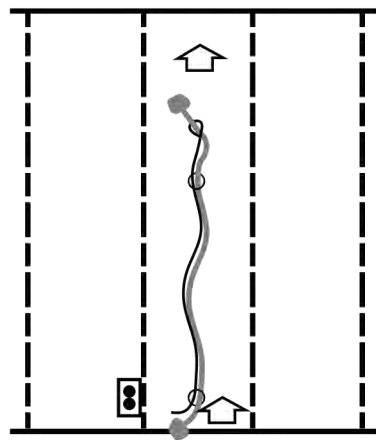


NOTE: Snake any additional cables at this time.
Coax cable not included.




- 6** At the top, insert Female Tip into the back side of an In-Wall Housing unit. Repeat at the bottom with the Male Tip.

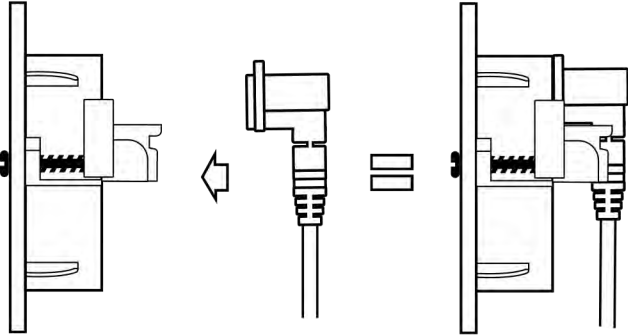


- 7** Snap on Female Crown over the Plug Tip and secure with screws. Repeat at the bottom with the Male Tip and Male Crown.

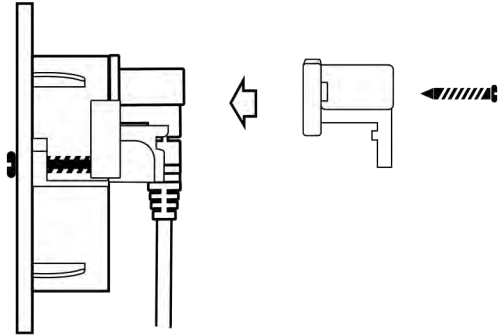


- 8** Fold in Dog Ears and slide Housing into wall. Repeat at the bottom with the Male Housing.

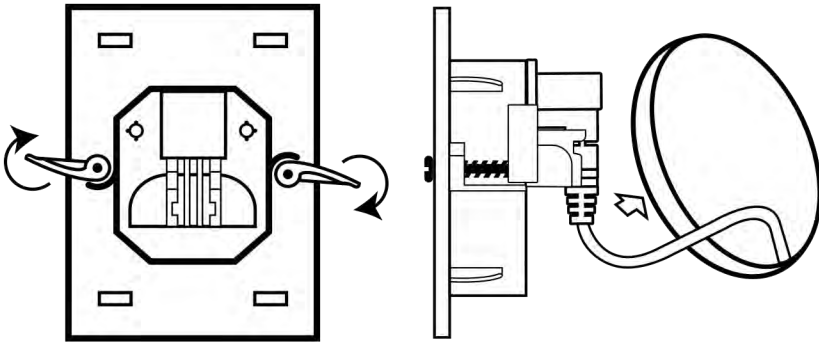

- 9** Level and screw Dog Ears until Housing is secure. Repeat at the bottom with the Male Housing.

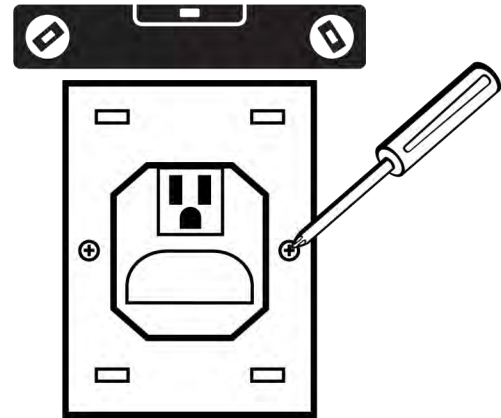

- 10** Snap Housing Fascia onto the front of the Housing. Repeat at the bottom with the Male Housing.

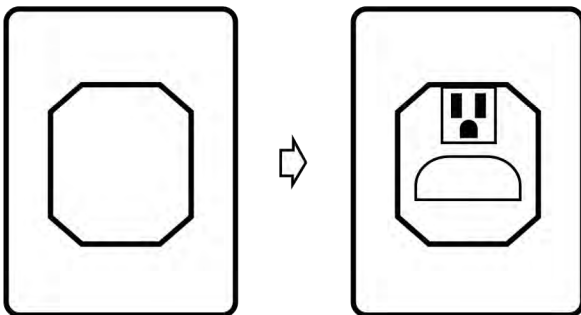

- 11** Plug Extension Cord into the bottom device. Installation is now complete.

