


ASSEMBLY INSTRUCTION


BF/BQ/BK HEADBOARD

A Headboard

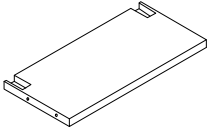


1PC

B Left Headboard Leg (sticker stick under stretcher)



1PC

C Right Headboard Leg (sticker stick under stretcher)




1PC

D Left Headboard Post (sticker stick under stretcher)



1PC

E Right Headboard Post (sticker stick under stretcher)




1PC

F Bolt 5/16" * 2-3/4"




4PCS

G Bolt 5/16" * 2"



4PCS

H Flat washer 5/16" * 22MM



8PCS

I Lock washer 5/16"




8PCS

J Allen Wrench 5MM




1PC

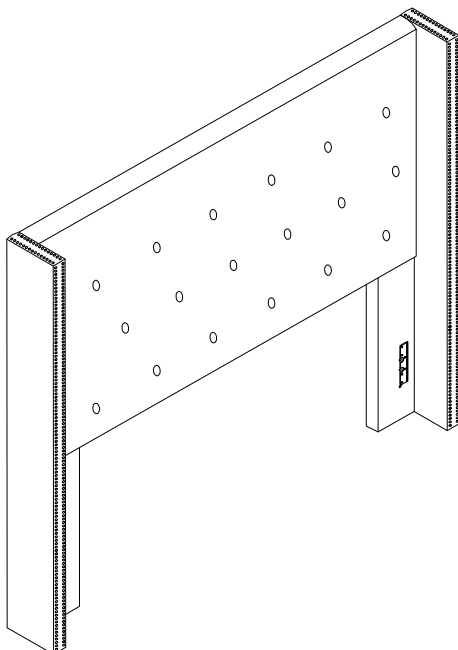


Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Hardware package with white sticker is for customers using a bolt-on metal bed frame.


- 1 Open Non-woven fabric and take out the Left Headboard Leg(B), Right Headboard Leg(C), Left Headboard Post(D), and Right Headboard Post(E).

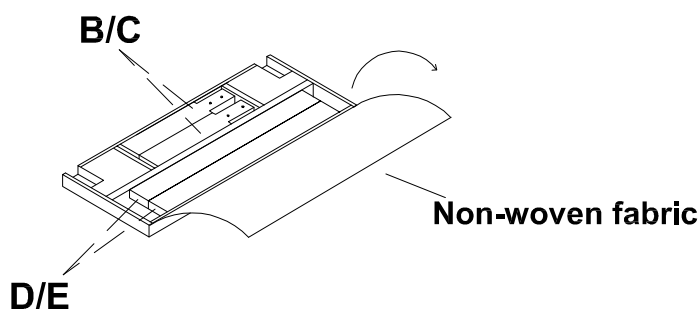

- 2 Attached Headboard(A), Left Headboard Leg(B) & Right Headboard Leg(B), Flat Washer(H), Lock Washer(I), Bolt(F) by Allen Wrench(J).

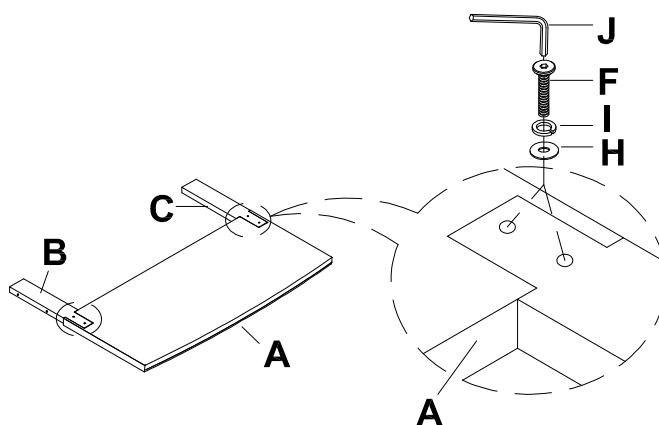

- 3 Attached Left Headboard Post(D) & Right Headboard Post(E), to Headboard(A), Headboard Leg, Flat Washer(H), Lock Washer(I), Bolt(G) by Allen Wrench(J).

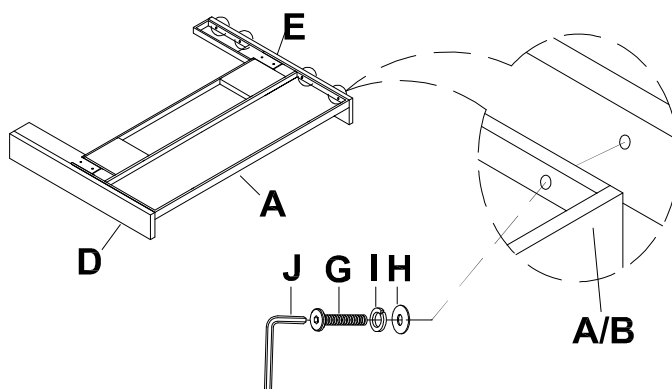

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean scratches with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.