

ROCKPORT UPH POSTER C. KING BED


ASSEMBLY INSTRUCTIONS



PARTS PACKING CONFIGURATIONS


BOX #1:

- A. TOP STRETCHER 1 PC
- B. UPH HEADBOARD PANEL 1 PC
- C. UPH HEADBOARD CUSHION 1 PC
- D. BOTTOM STRETCHER 1 PC

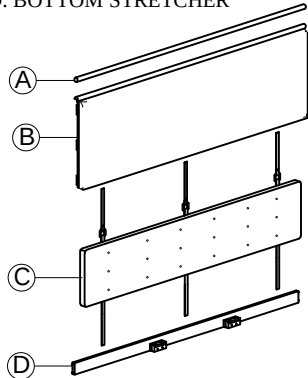


BOX #2:

- E. FOOTBOARD 1 PC
- F. SLAT ROLL 1 SET

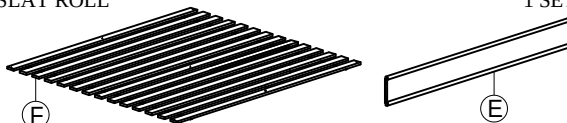


BOX #3:

- G. SIDE RAILS 2 PCS
- H. SLAT SUPPORT LEG 10 PCS
- I. CENTER SLAT SUPPORT 2 PCS
- N. MATTRESS SPACER 2 PCS


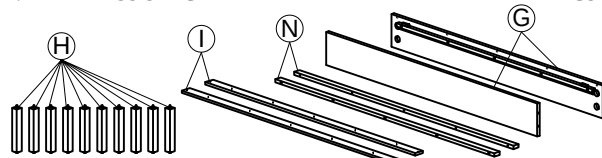


BOX #4:

- J. HEADBOARD LEFT POST 1 PC
- K. HEADBOARD RIGHT POST 1 PC
- L. FOOTBOARD LEFT POST 1 PC
- M. FOOTBOARD RIGHT POST 1 PC

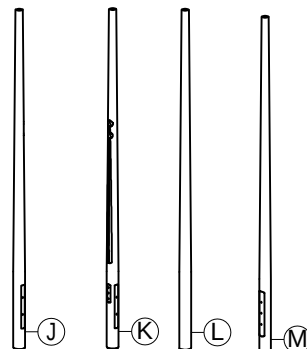


FULLY ASSEMBLED

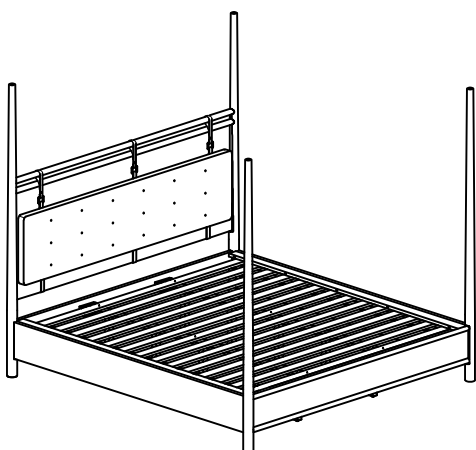


HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (8x90mm)		20 PCS
2	HALF MOON WASHER (7x14x27mm)		20 PCS
3	HEX NUT (M8)		20 PCS
4	WOOD SCREW (4x30mm)		16 PCS
5	WRENCH (13mm)		1 PC
6	ALLEN KEY (4mm)		1 PC
7	ALLEN BOLT (6x60mm)		10 PCS
8	SPRING WASHER (M6)		10 PCS
9	FLAT WASHER (M6)		10 PCS
10	WOOD SCREW (4x50mm)		2 PCS

STEP 1:

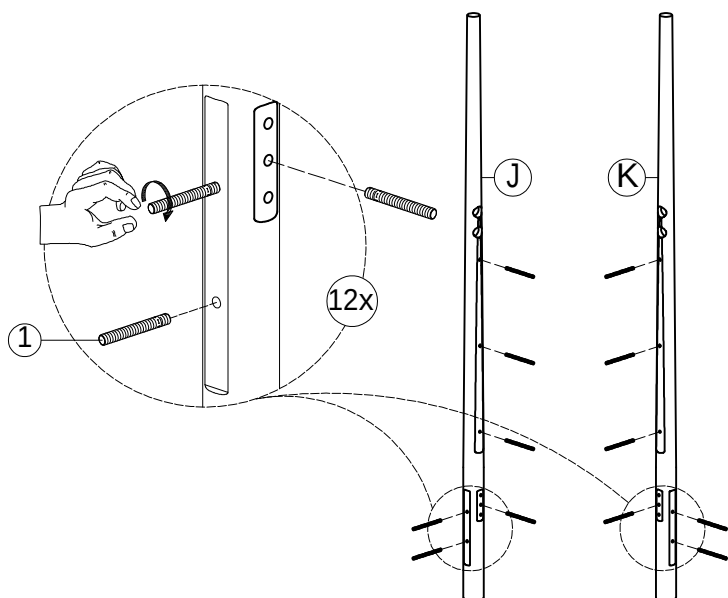

STEP 2:

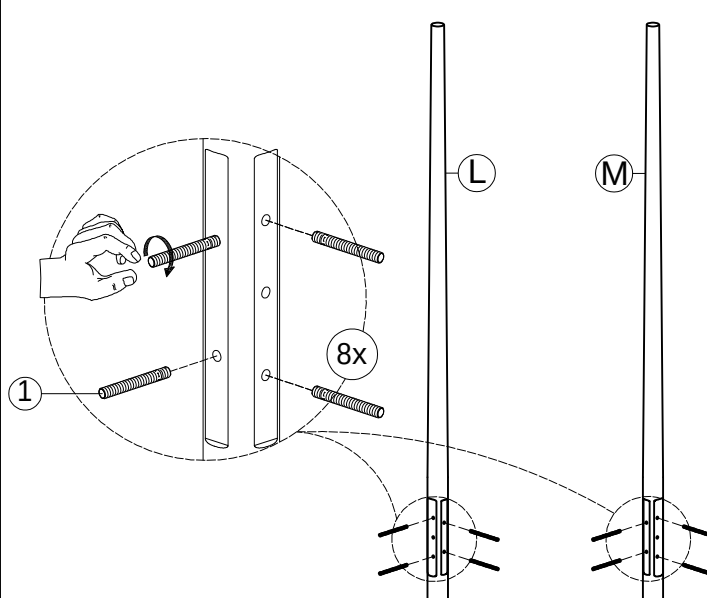

MODUS
FURNITURE

STEP 3:

STEP 4:

STEP 5:

Diagram illustrating Step 5: Attaching the bottom panel. The main diagram shows the bottom panel being slid into the frame, with arrows indicating the direction of movement. A circular inset provides a detailed view of the corner joint, showing the panel being secured with a screw (2) and a washer (3). A wrench (5) is shown tightening the screw. The inset is labeled "4x", indicating four such joints. A label "G" points to the bottom panel.




- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP TO STEP 10 AND THEN APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 8

ROCKPORT UPH POSTER C. KING BED


ASSEMBLY INSTRUCTIONS




STEP 7:

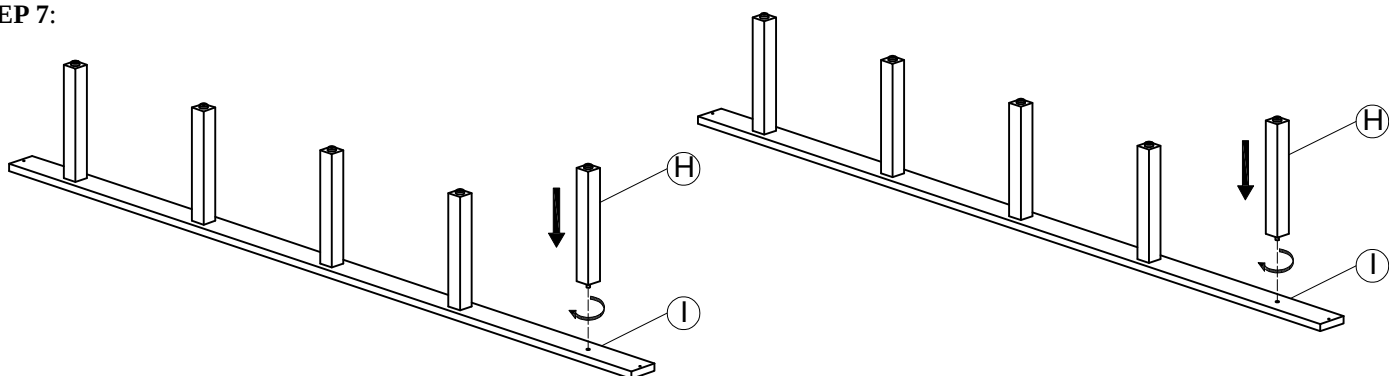


STEP 8:

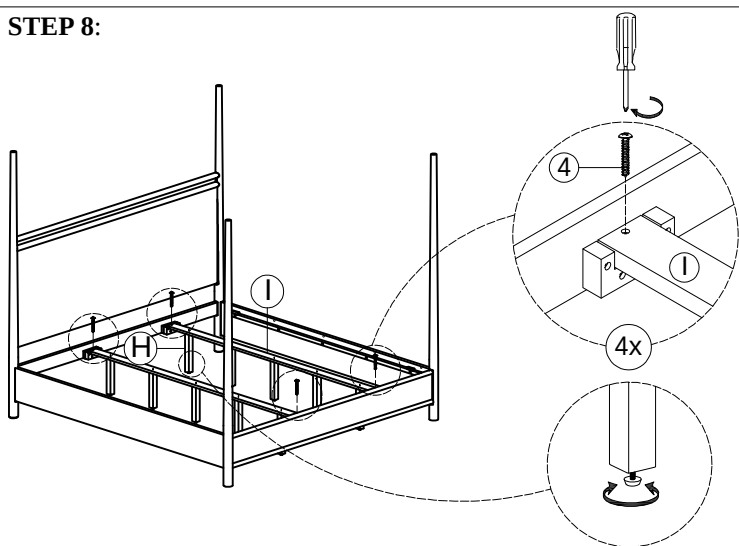


STEP 9:

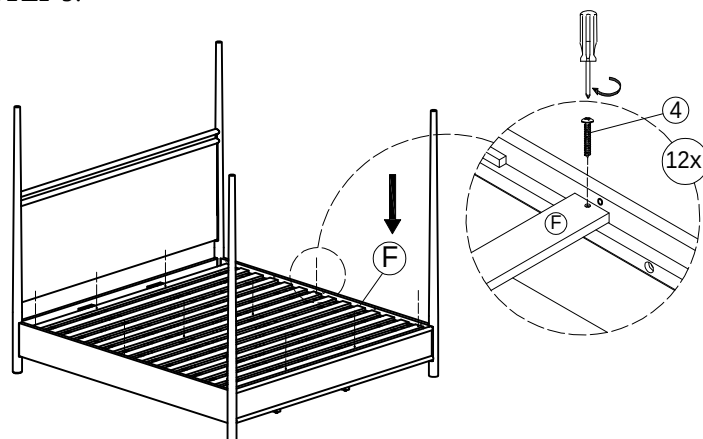

STEP 10:

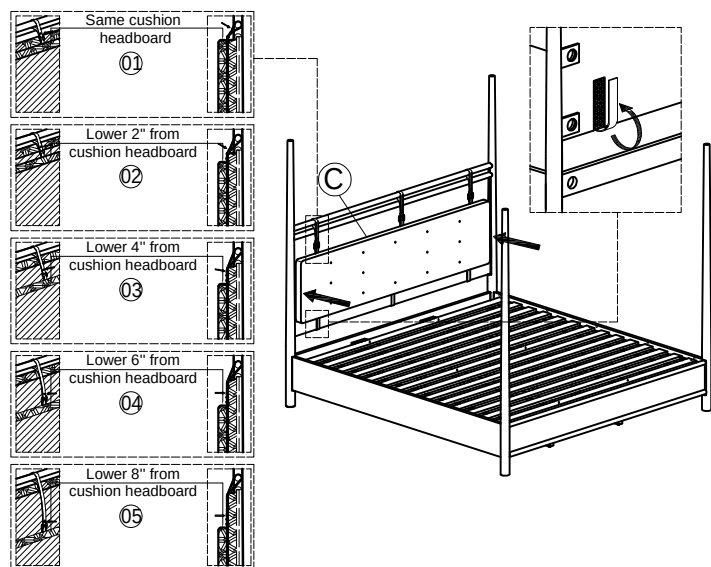

STEP 11:

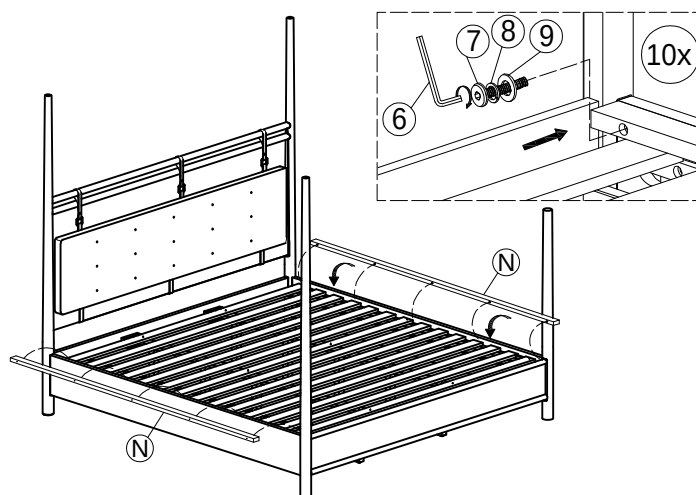


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

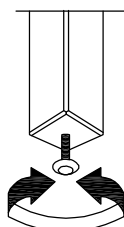

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ROCKPORT UPH POSTER C. KING BED

ASSEMBLY INSTRUCTIONS

APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT



AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

F. SLAT ROLL	:1 SET	4. WOOD SCREW (4x30mm)	:16 PCS
H. SLAT SUPPORT LEG	:10 PCS	7. ALLEN BOLT (6x60mm)	:10 PCS
I. CENTER SLAT SUPPORT	:2 PCS	8. SPRING WASHER (M6)	:10 PCS
N. MATTRESS SPACER	:2 PCS	9. FLAT WASHER (M6)	:10 PCS

STEP 1:

USE ALLEN KEY (6) IN BOX #2 TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

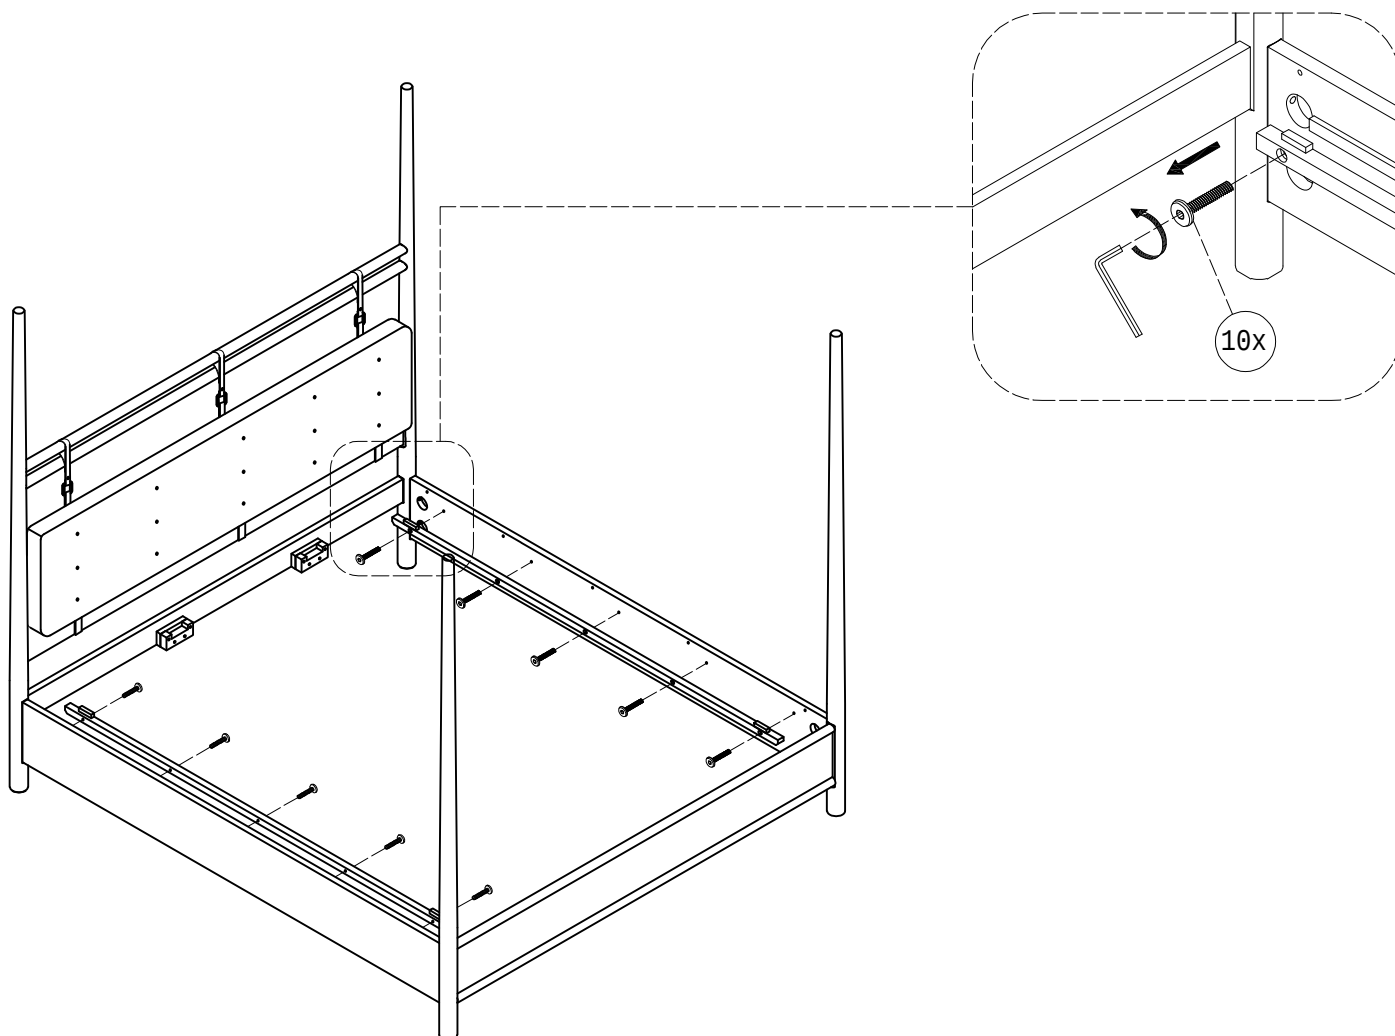

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION.