




www.todaysdesignhouse.com

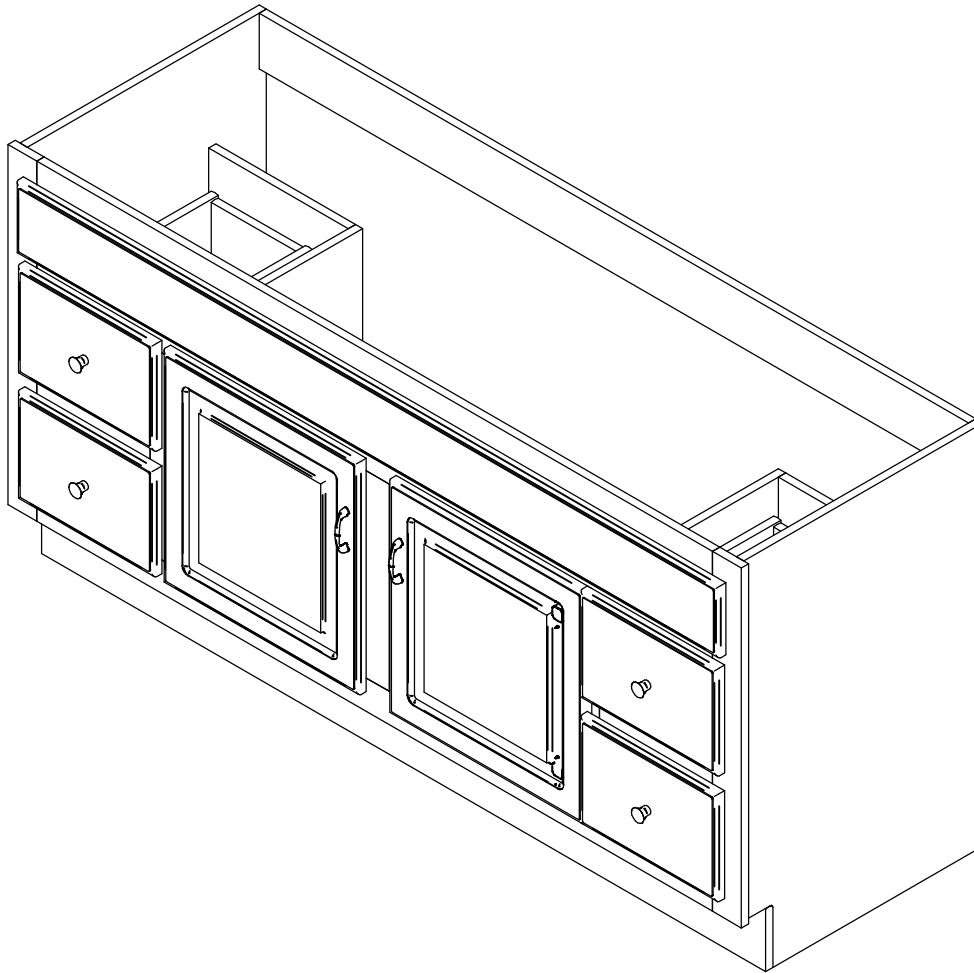


541078


CONCORD VANITY 60X21 2 DOOR / 4 DRAWER WHITE ASSEMBLY INSTRUCTIONS

DHI Corp. • 262.518.1877 • www.todaysdesignhouse.com


PART LIST:

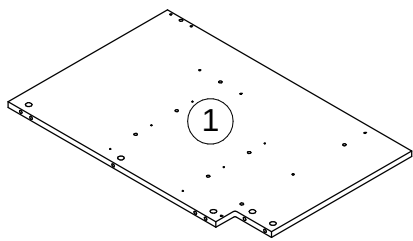


LEFT SIDE PANEL 1 PC

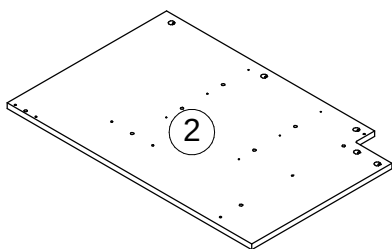


RIGHT SIDE PANEL 1 PC

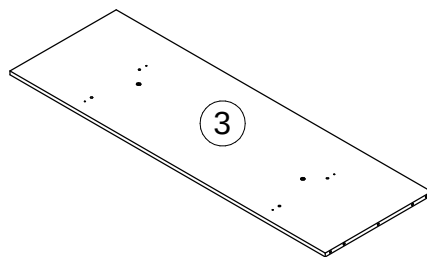


BASE 1 PC

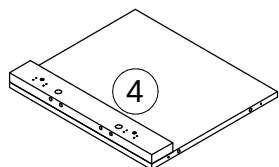


LEFT DIVISION 1 PC

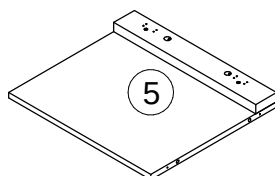


RIGHT DIVISION 1 PC

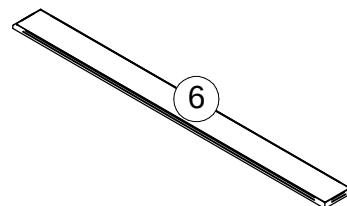


TOP PANEL 1 PC

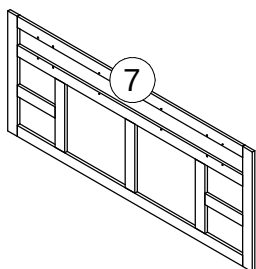


FRONT PANEL 1 PC

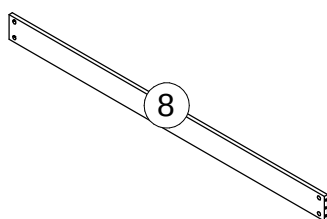


BACK CROSS BRACE 1 PC

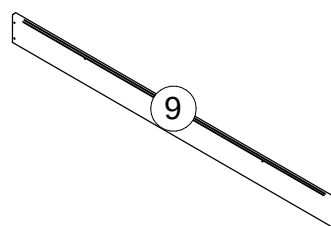


BASEBOARD 1 PC

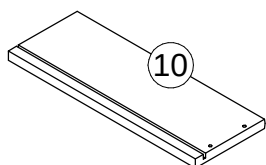

DRAWER LEFT SIDE 4 PC

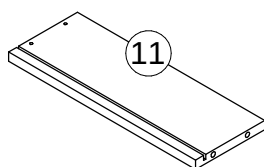


DRAWER RIGHT SIDE 4 PC




DRAWER BACK
PANEL 4 PC




CENTRAL FOOT 2 PC

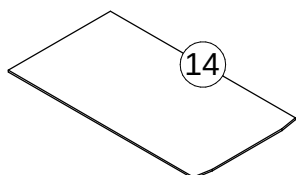


DRAWER BOTTOM PANEL 4 PC

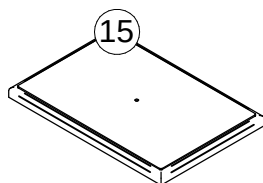


DRAWER FRONT 4 PC




LARGER SLIDING
SUPPORT 4 PC




SLIDING
SUPPORT 4 PC

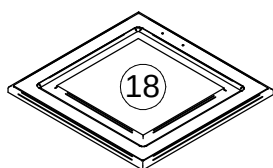

LEFT DOOR 1 PC

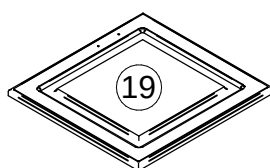


RIGHT DOOR 1 PC

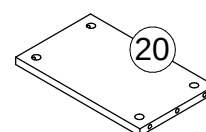


INTERNAL PANEL 2 PC


HARDWARE LIST:




A - Cam Bolt 48 PCS




B - Cam Nut 48 PCS

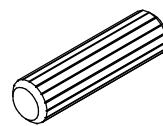


C - Dowel Ø8x30mm 30 PCS




D - Dowel Ø8x20mm 12 PCS




E- Screw Ø3,5x25mm 12 PCS




F- Screw Ø3,5x25mm 8 PCS

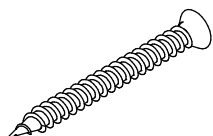


G- Screw Ø3,5x35mm 20 PCS

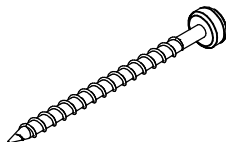

H- Screw Ø3,5x45mm 12 PCS



I- Screw Ø3,5x16mm 24 PCS




J- Screw Ø3,5x14mm 40 PCS




K- Screw Ø3,5x12mm 4 PCS




L- Fixing Corner 2 PCS

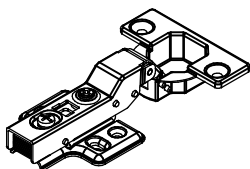


M- Hinge 4 PCS

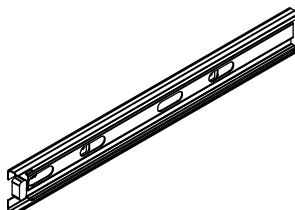


N- Glide 8 PCS

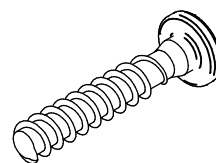


O- Screw Ø7x50mm 2 PCS

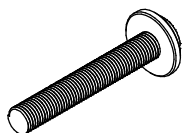


P- Screw M4x22mm 8 PCS



Q- Drawer Handle 4 PCS

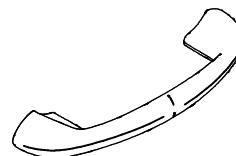


R- Door Handle 2 PCS

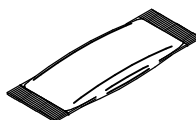

S - Glue 2 PCS**

**Minimal glue needed, wipe away any excess glue immediately.


STEP 1

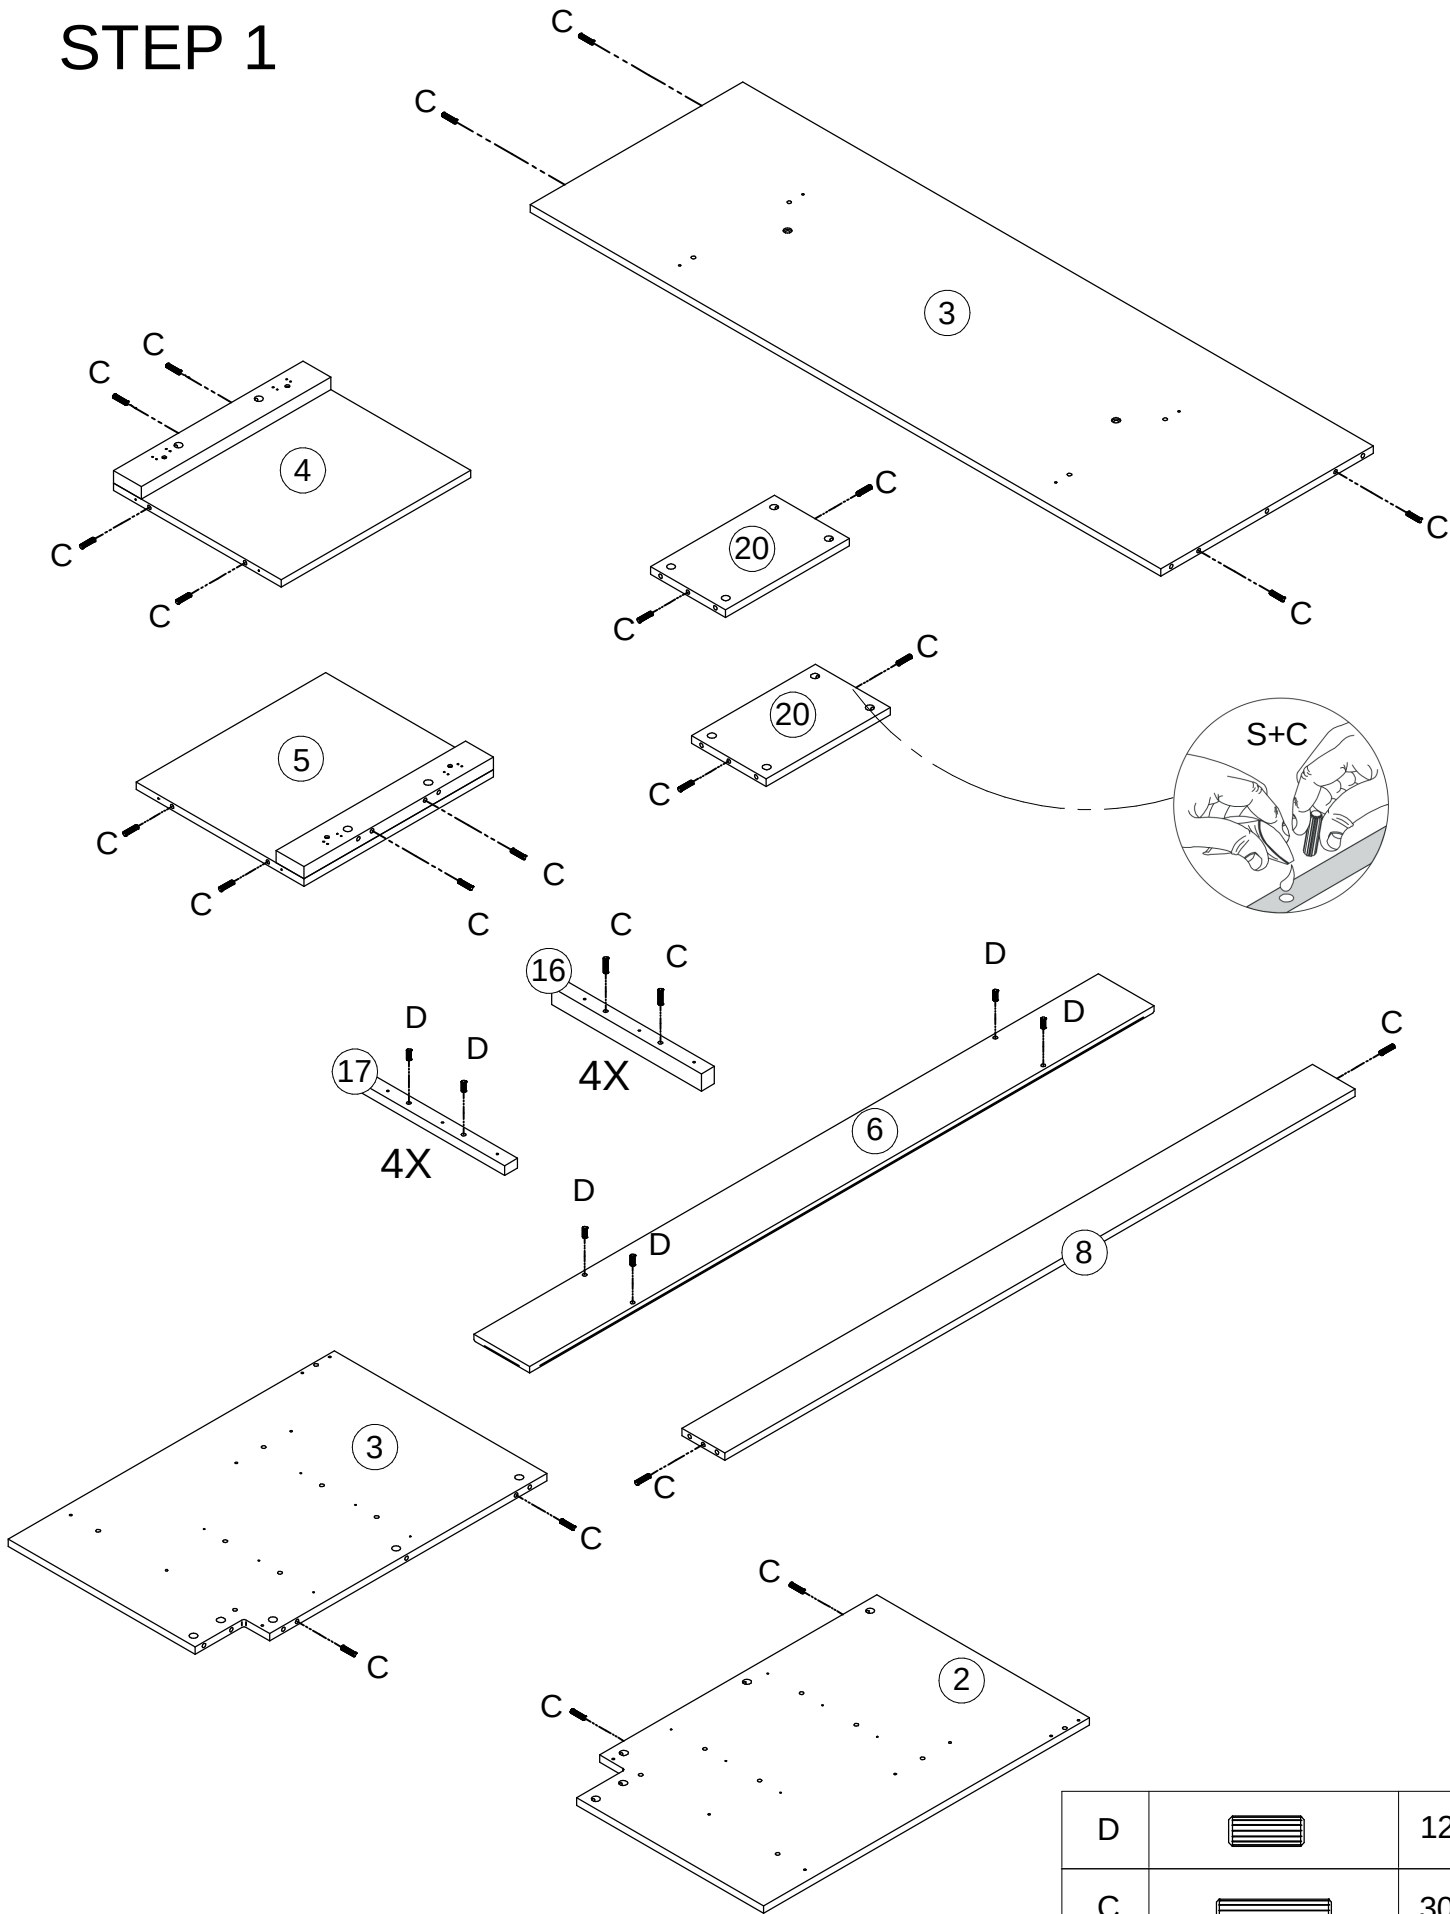


**Minimal glue needed, wipe away any excess glue immediately.

D		12
C		30
S		1


STEP 2

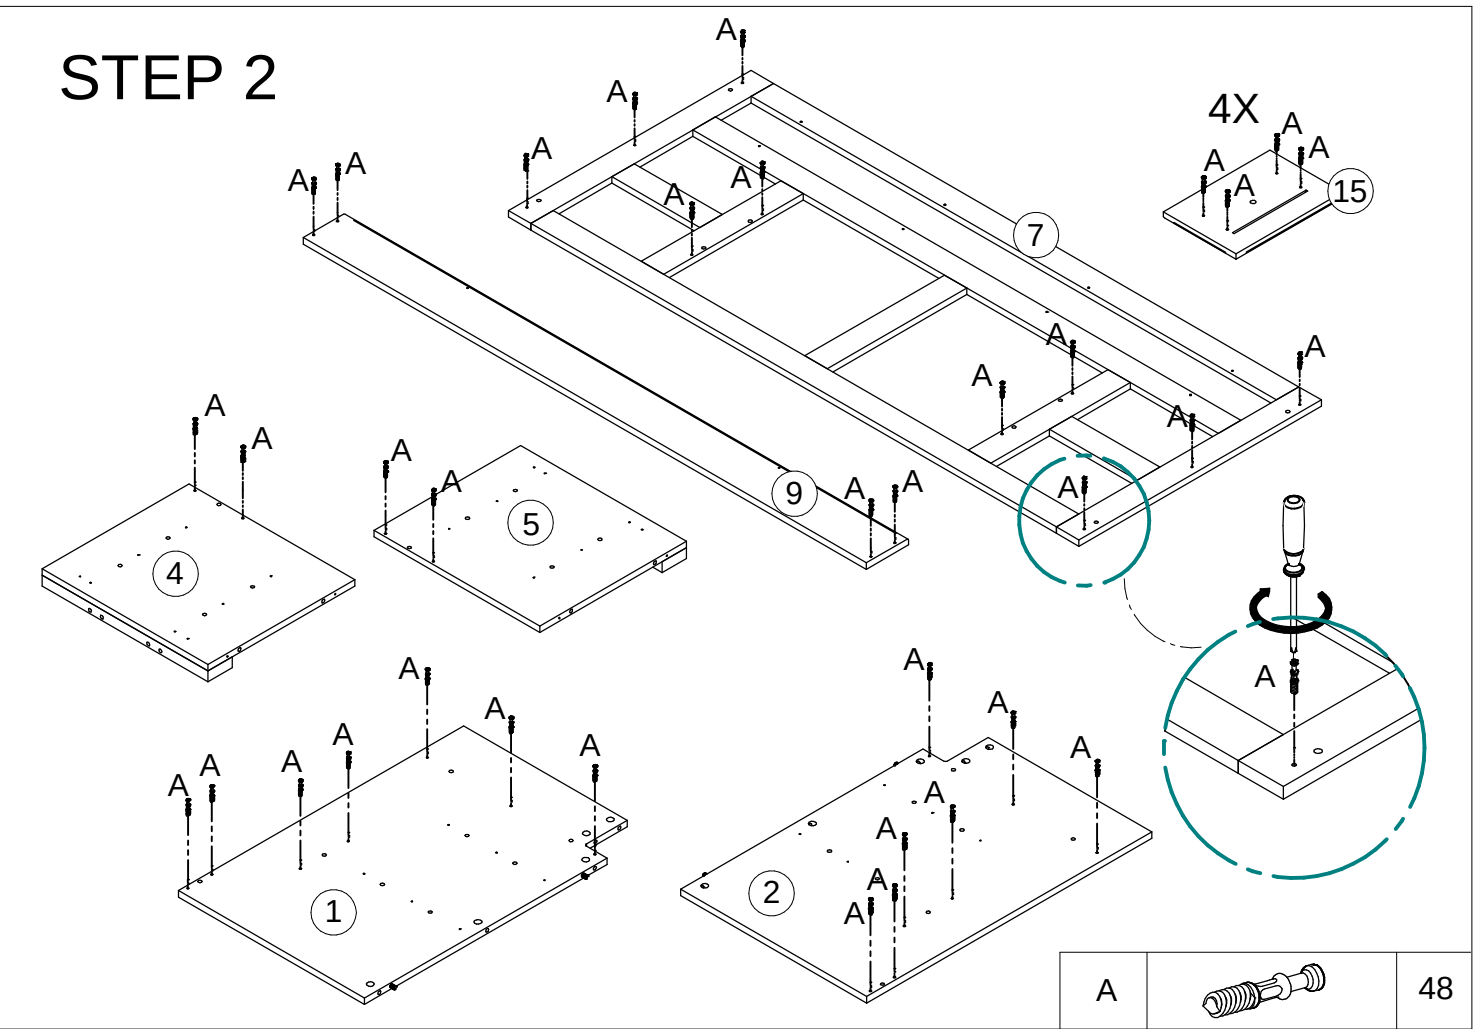



STEP 3

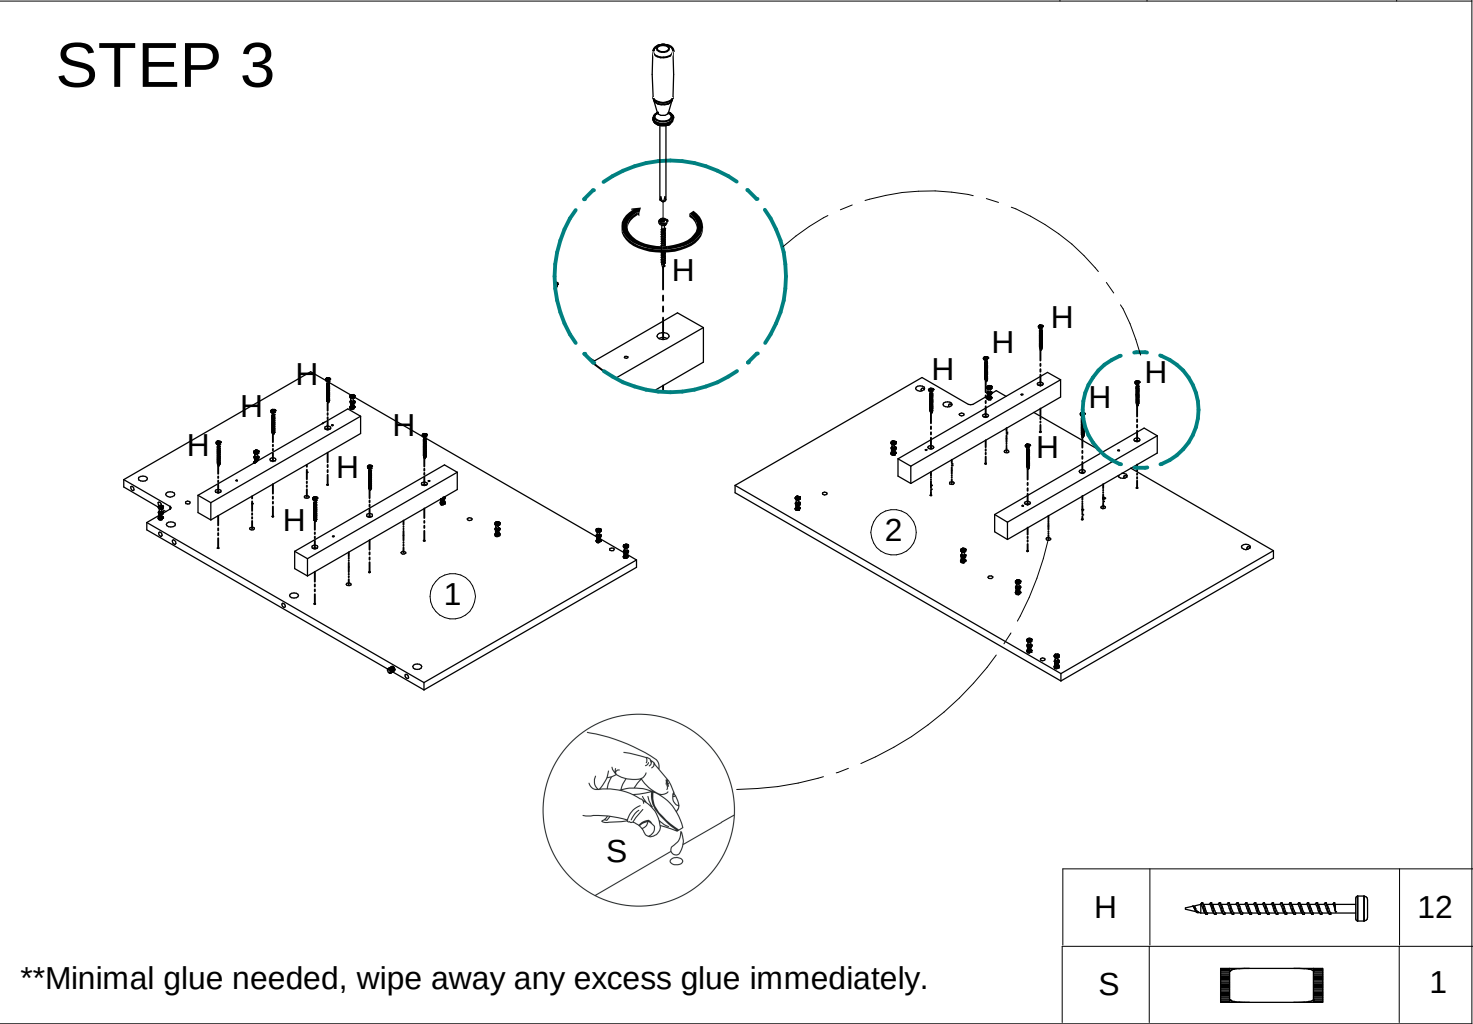


STEP 4

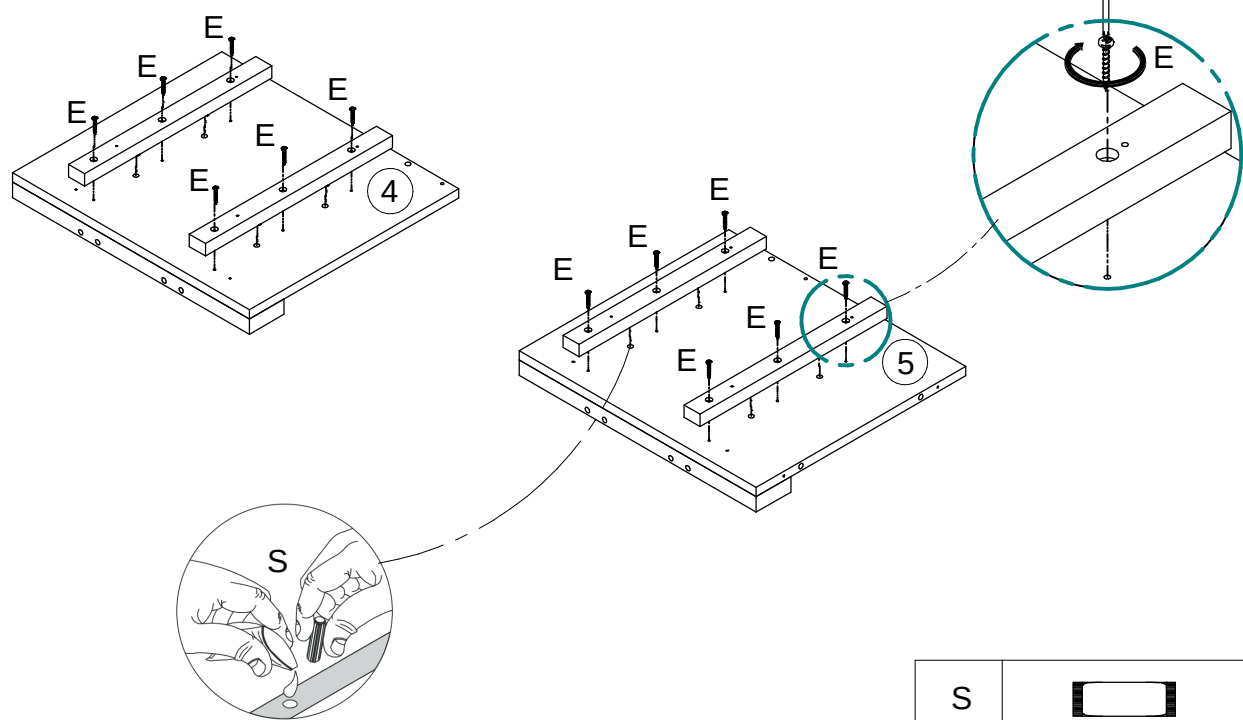

**Minimal glue needed, wipe away any excess glue immediately.


S		1
E		12

STEP 5

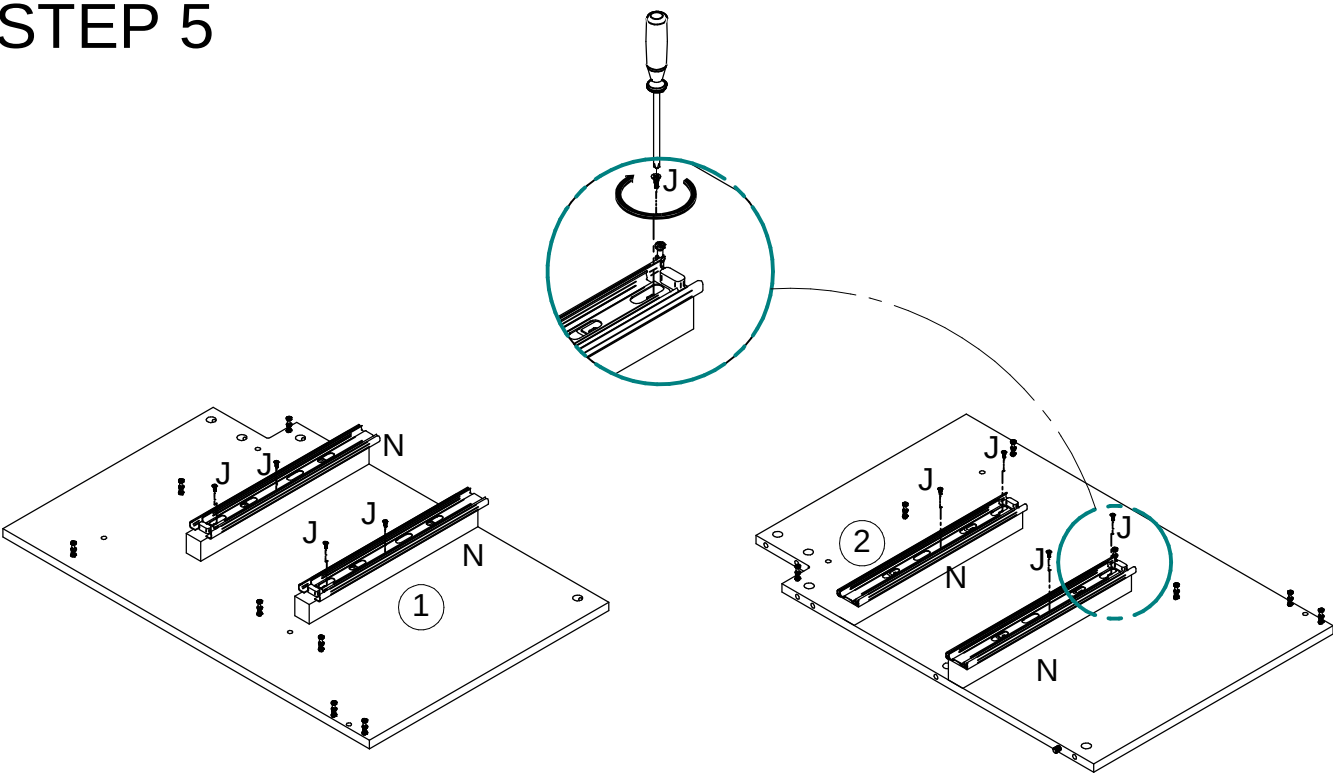


N		4
J		8


STEP 6

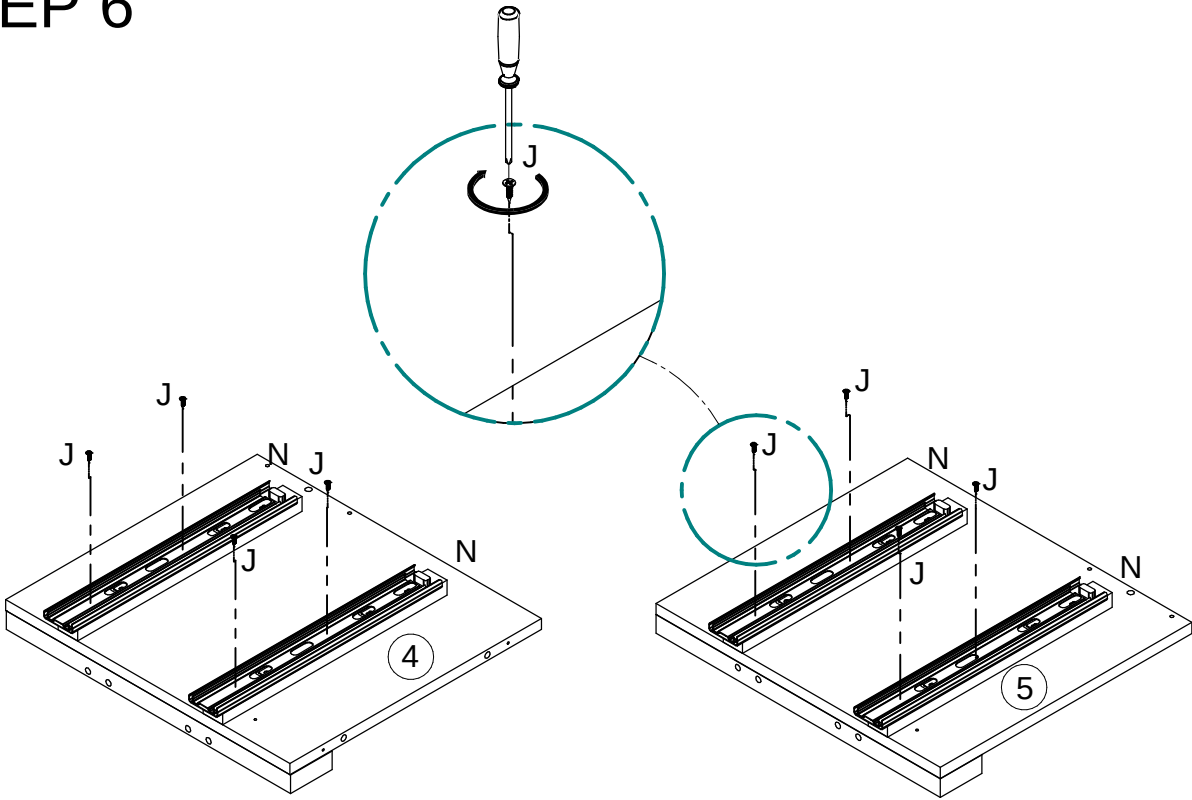

N		4
J		8


STEP 7

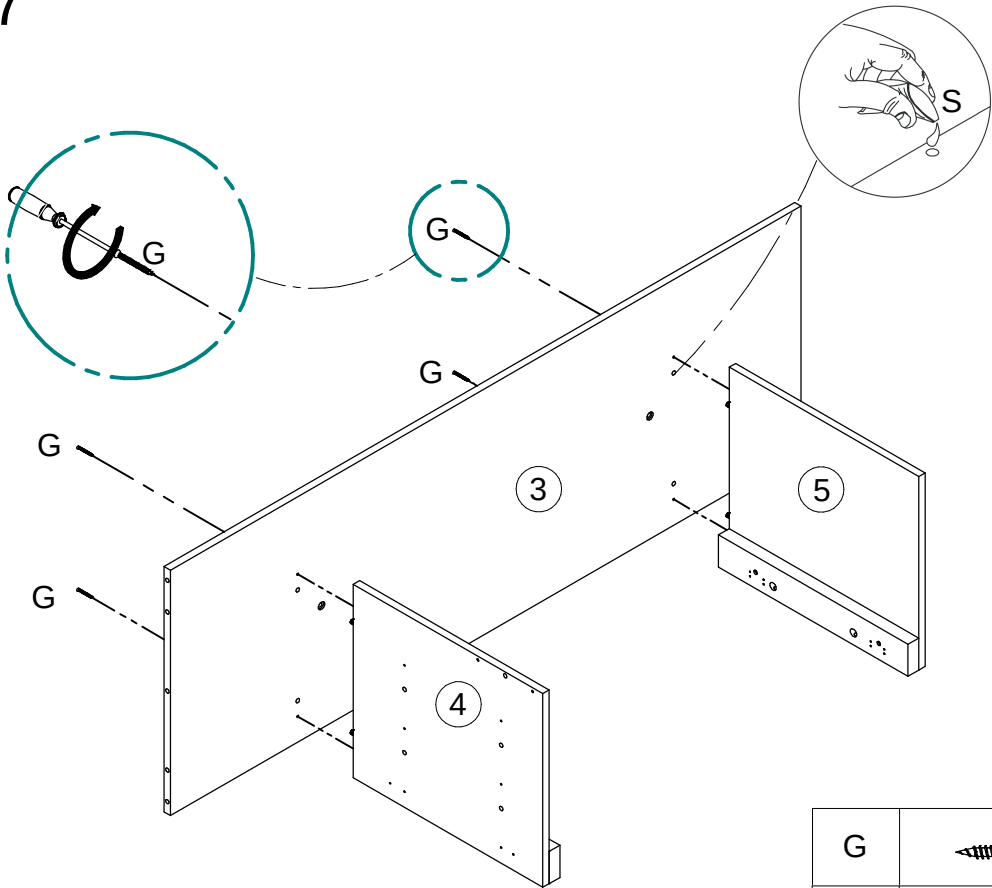

G		4
S		1

**Minimal glue needed, wipe away any excess glue immediately.


STEP 8

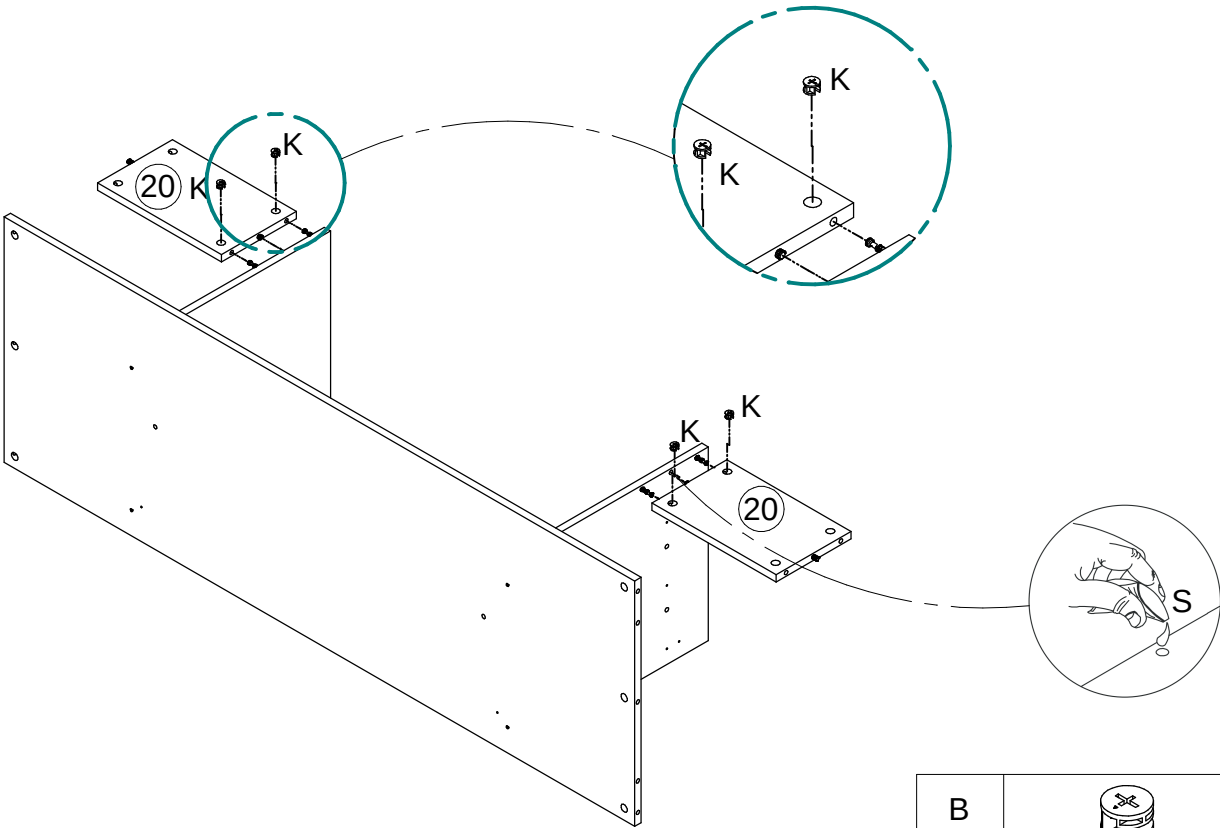

**Minimal glue needed, wipe away any excess glue immediately.

B		4
S		1


STEP 9

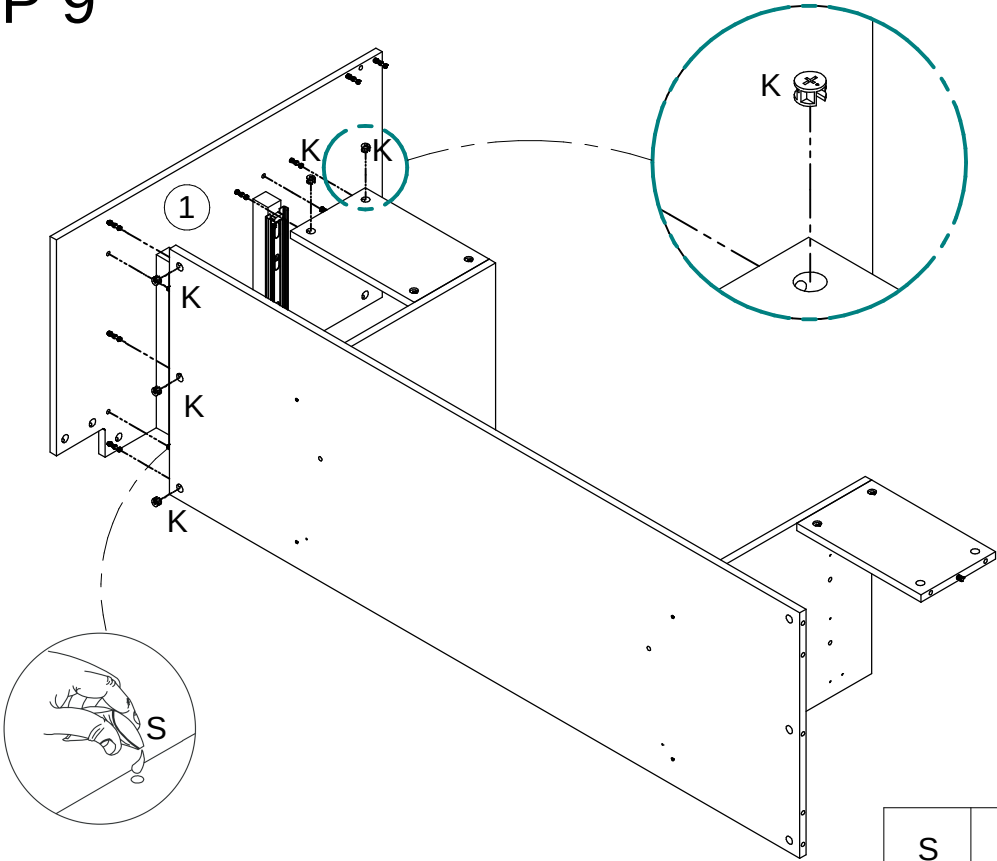

**Minimal glue needed, wipe away any excess glue immediately.


S		1
B		5


STEP 10

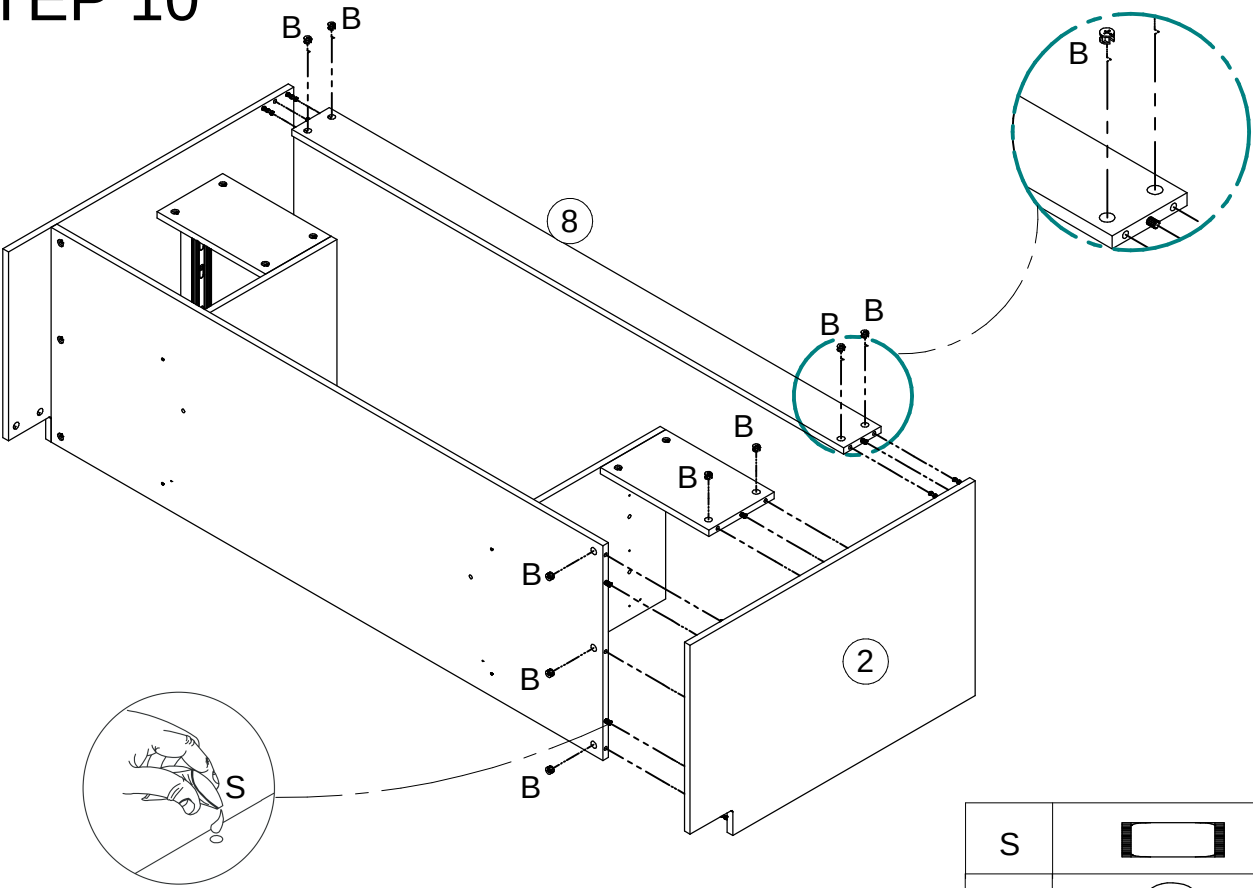


S		1
B		9

STEP 11

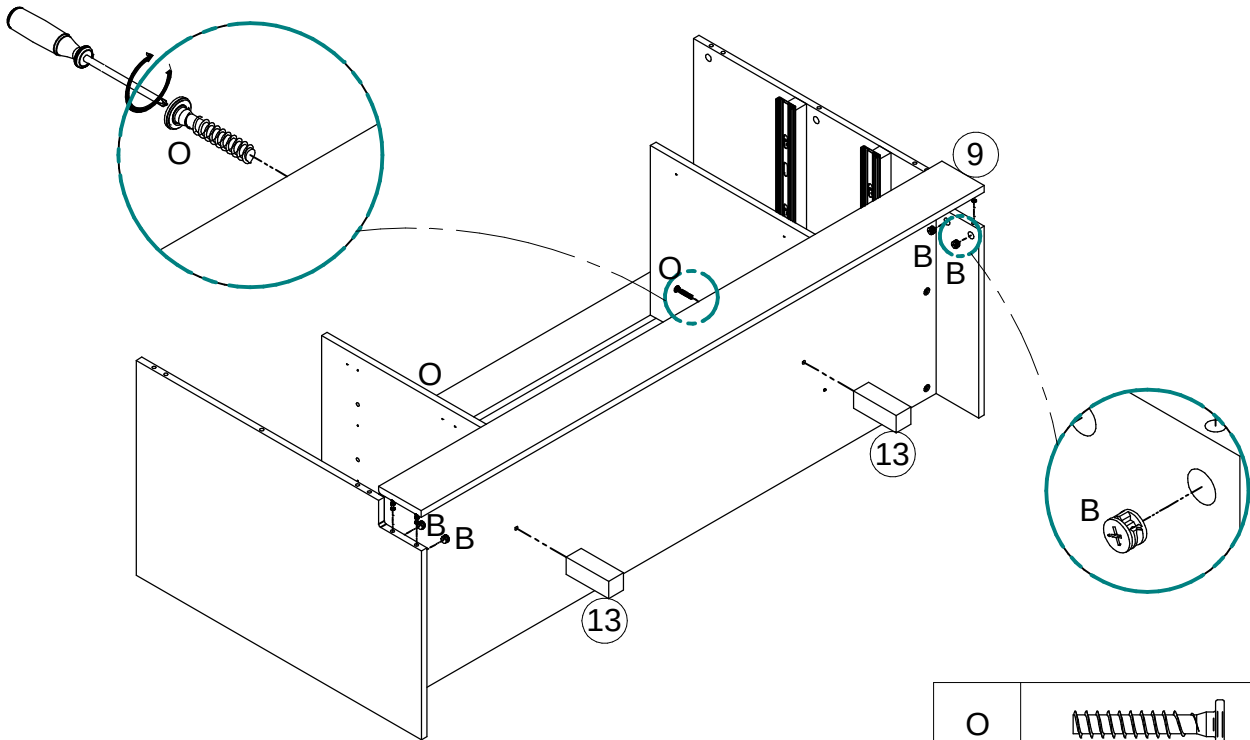


O		2
B		4

STEP 12

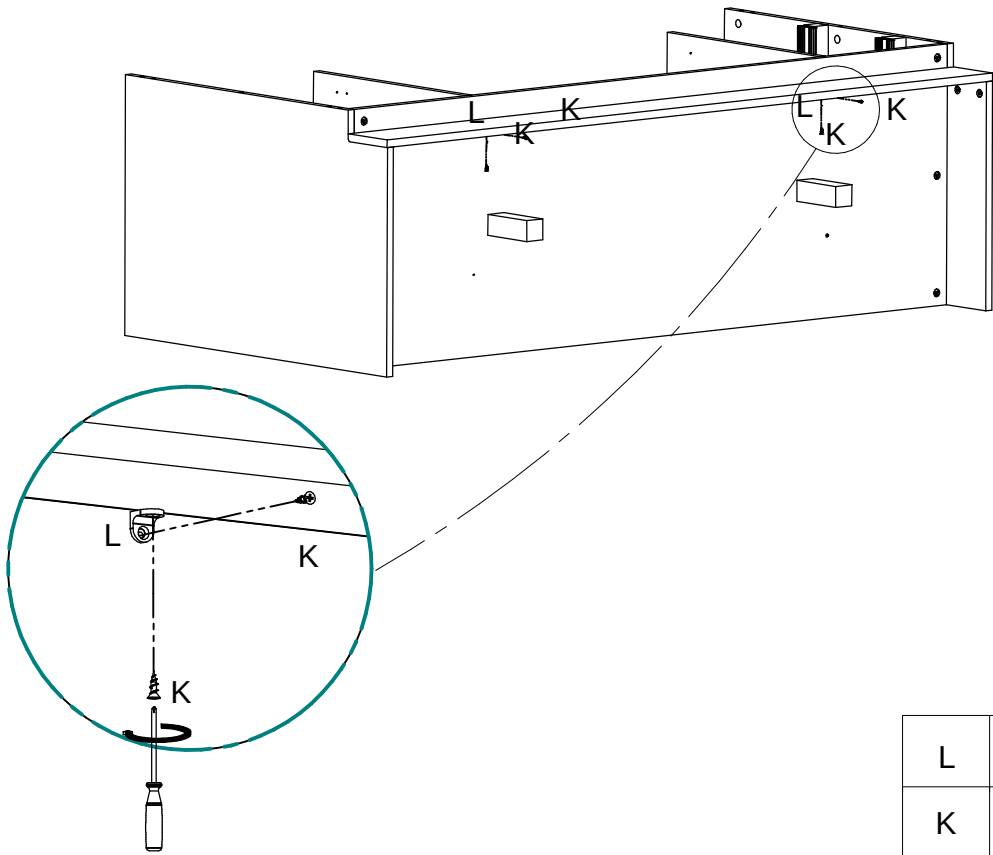

L		2
K		4


STEP 13

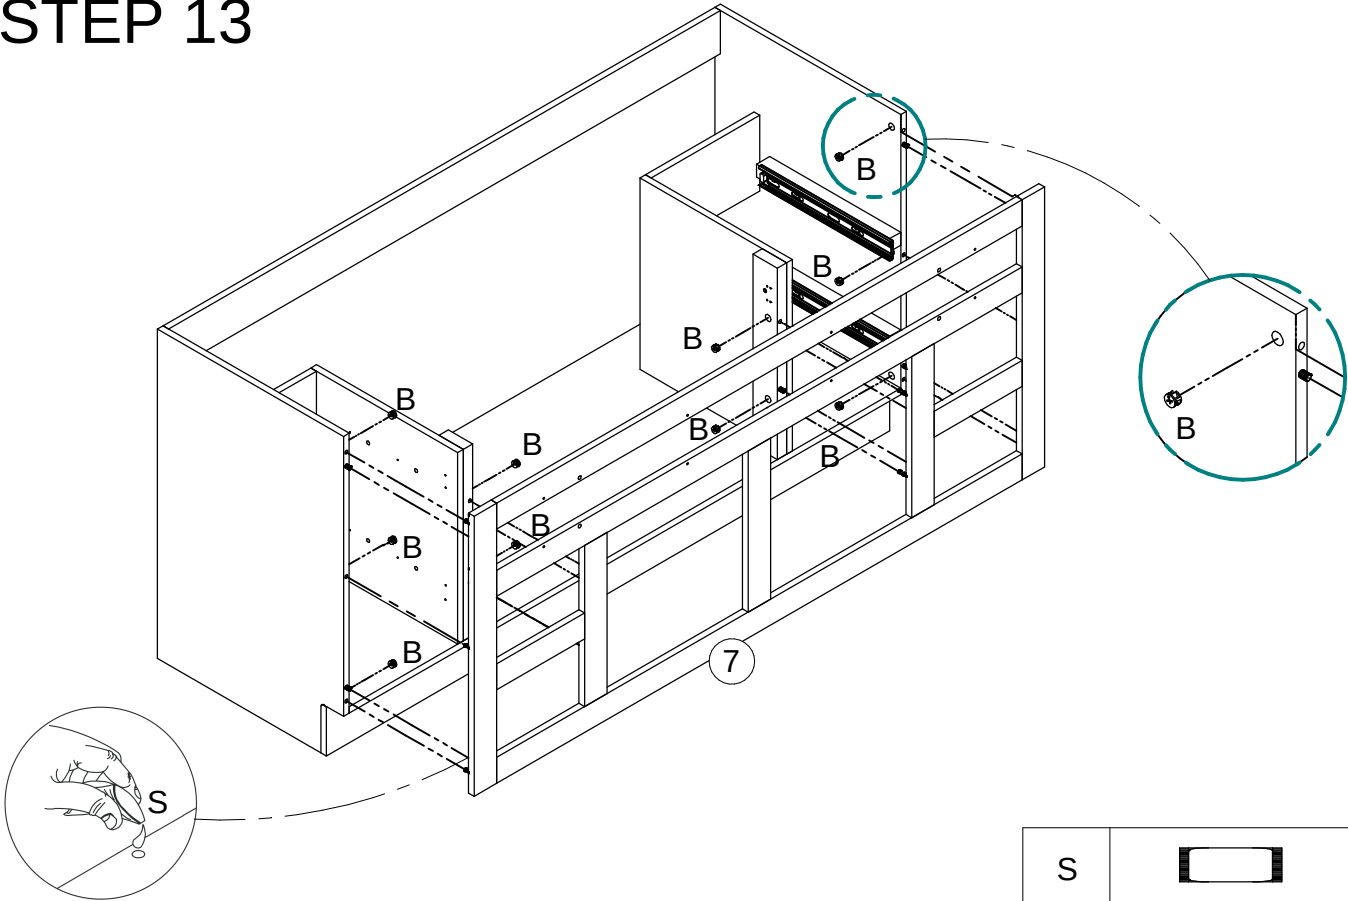

S		1
B		10


**Minimal glue needed, wipe away any excess glue immediately.

STEP 14

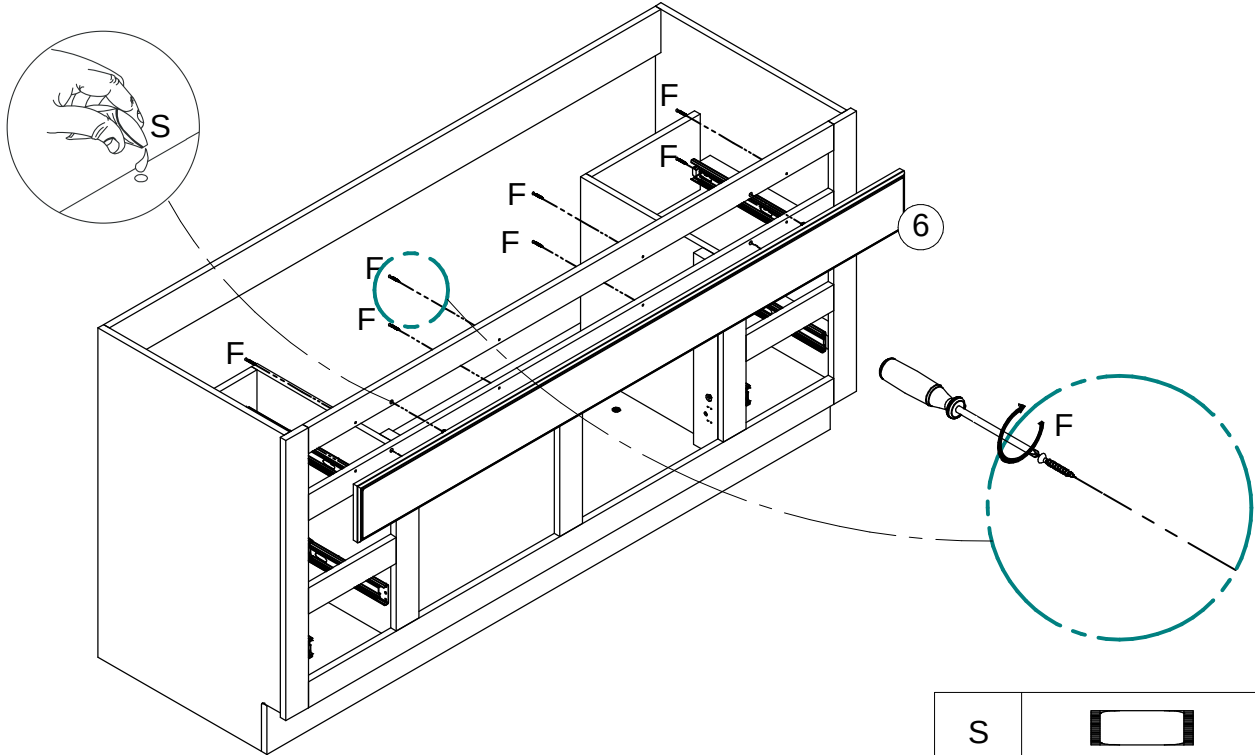


S		1
F		8

STEP 15

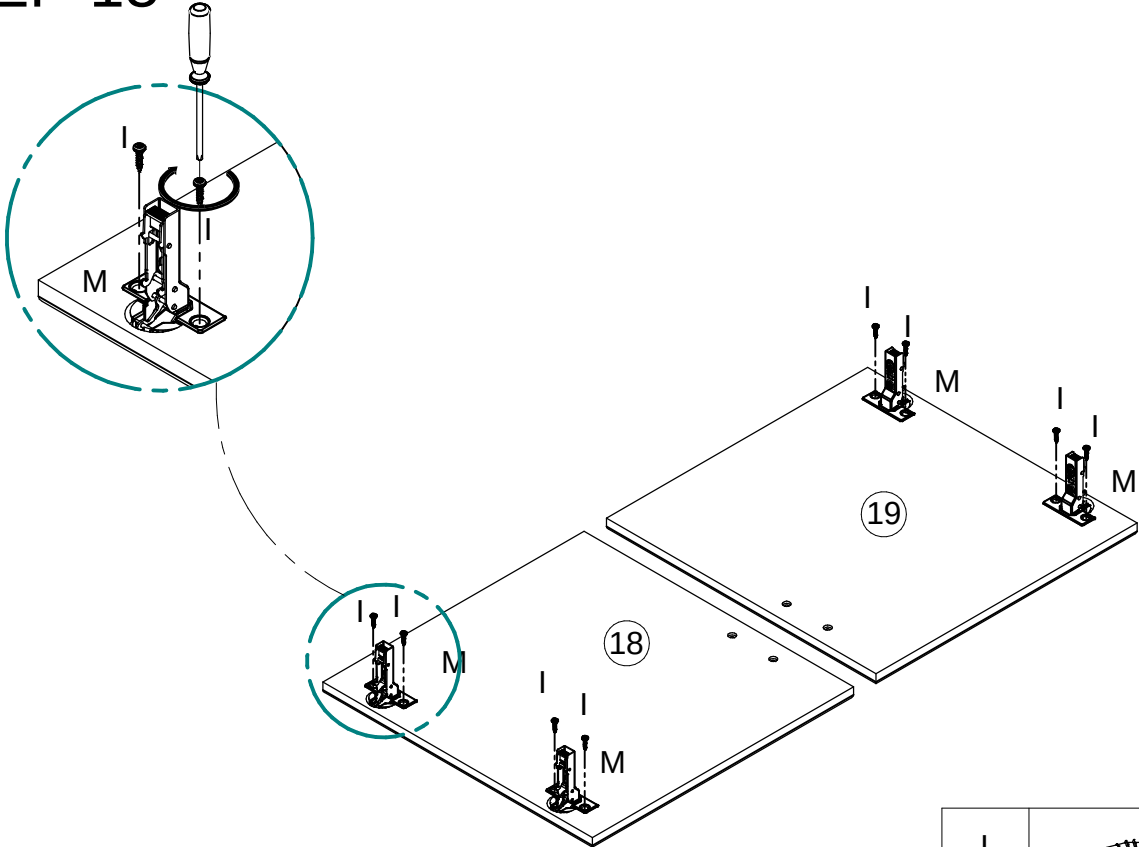


I		8
M		4

STEP 16

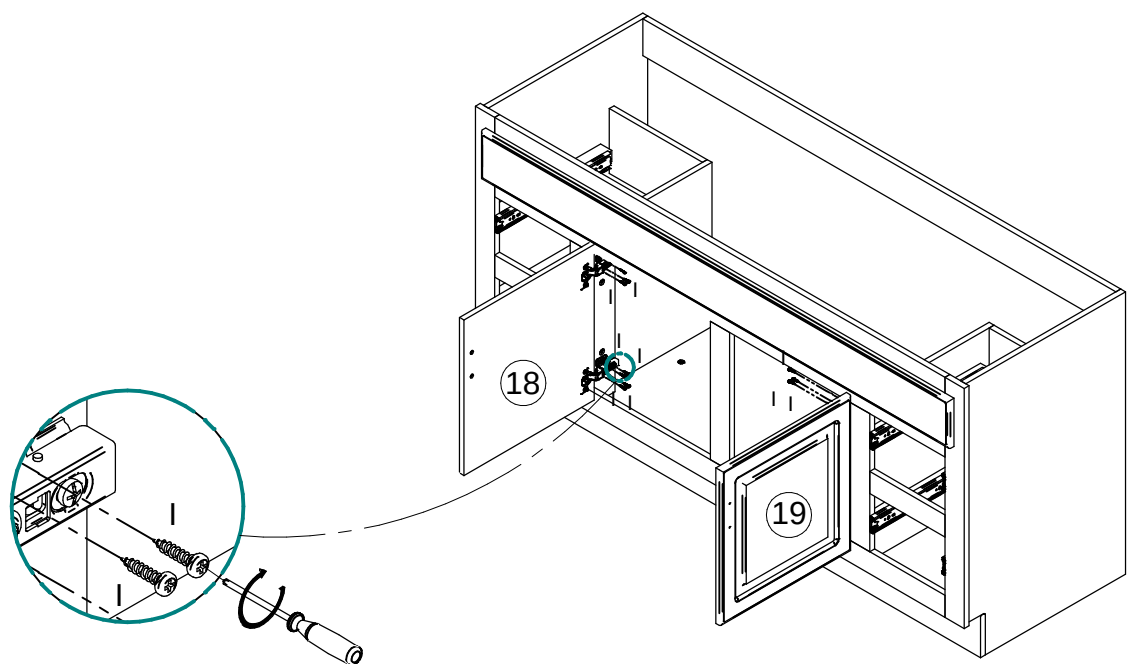

I		16
---	---	----








STEP 17

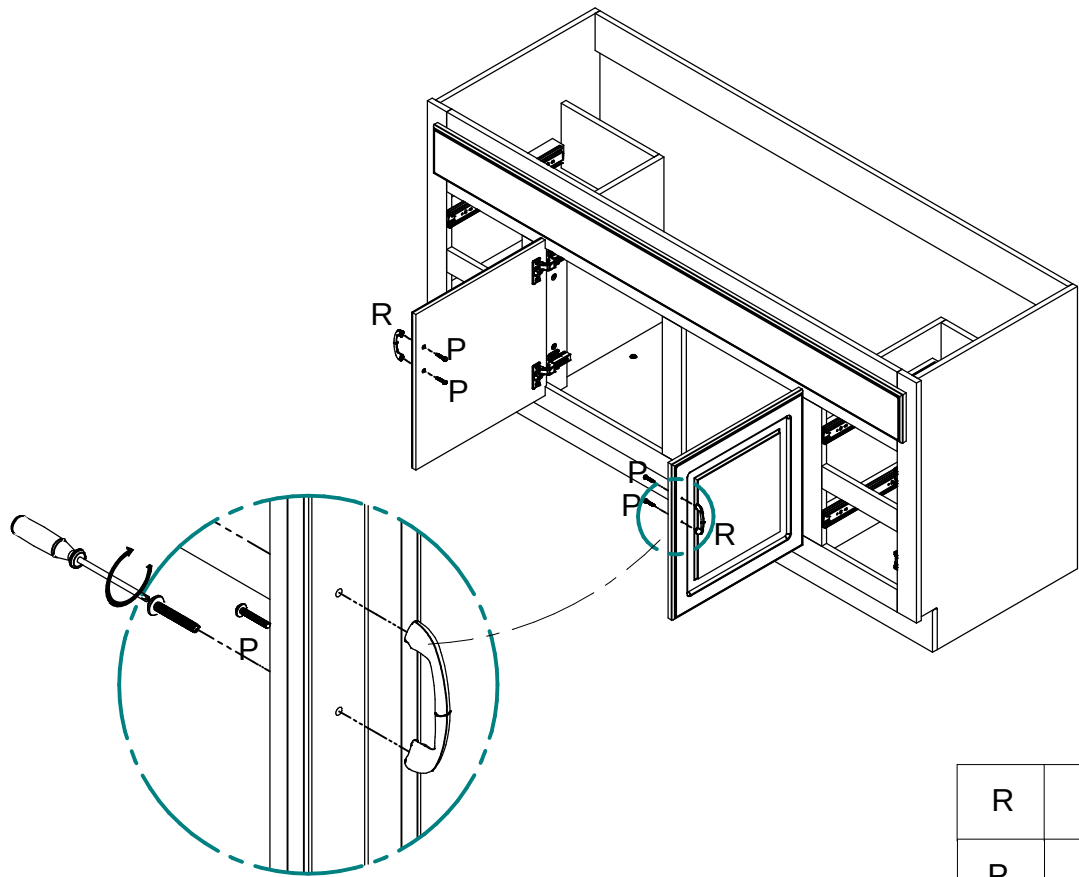


R		2
P		4

STEP 18

Door adjustment

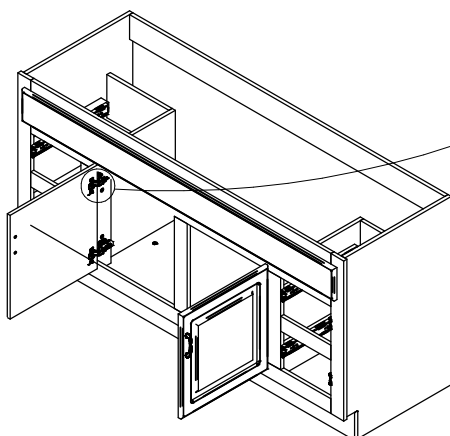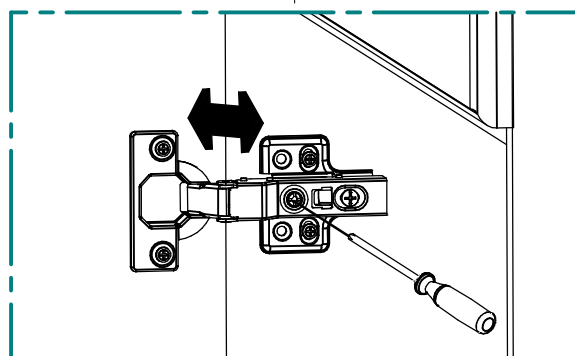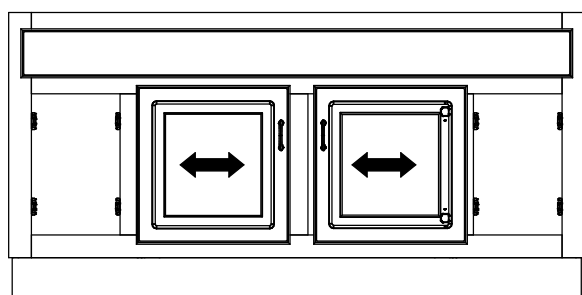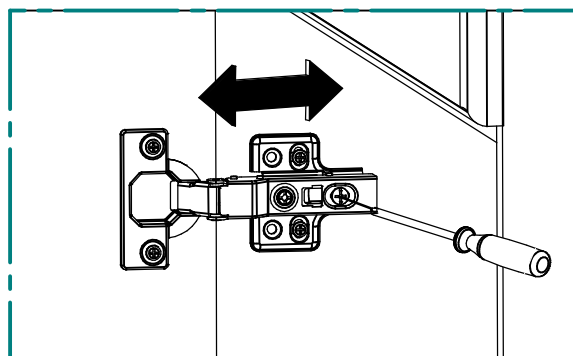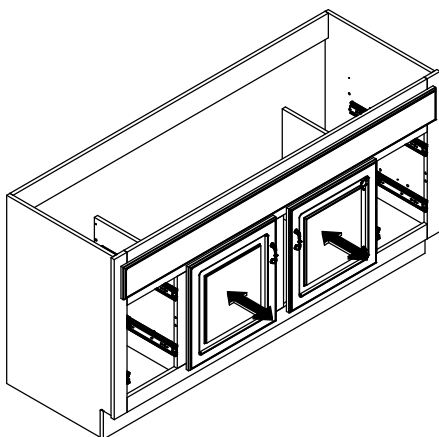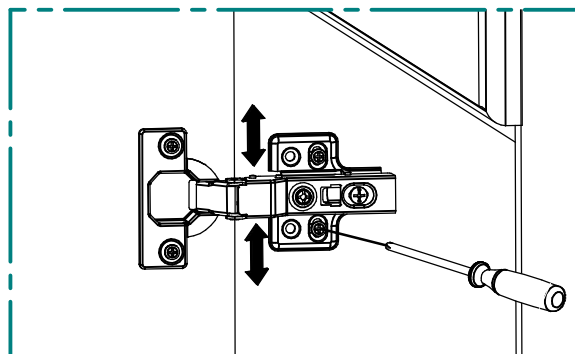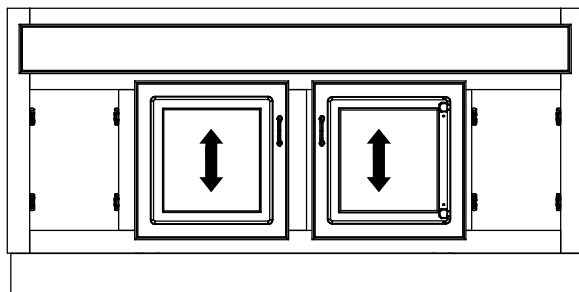


STEP 19

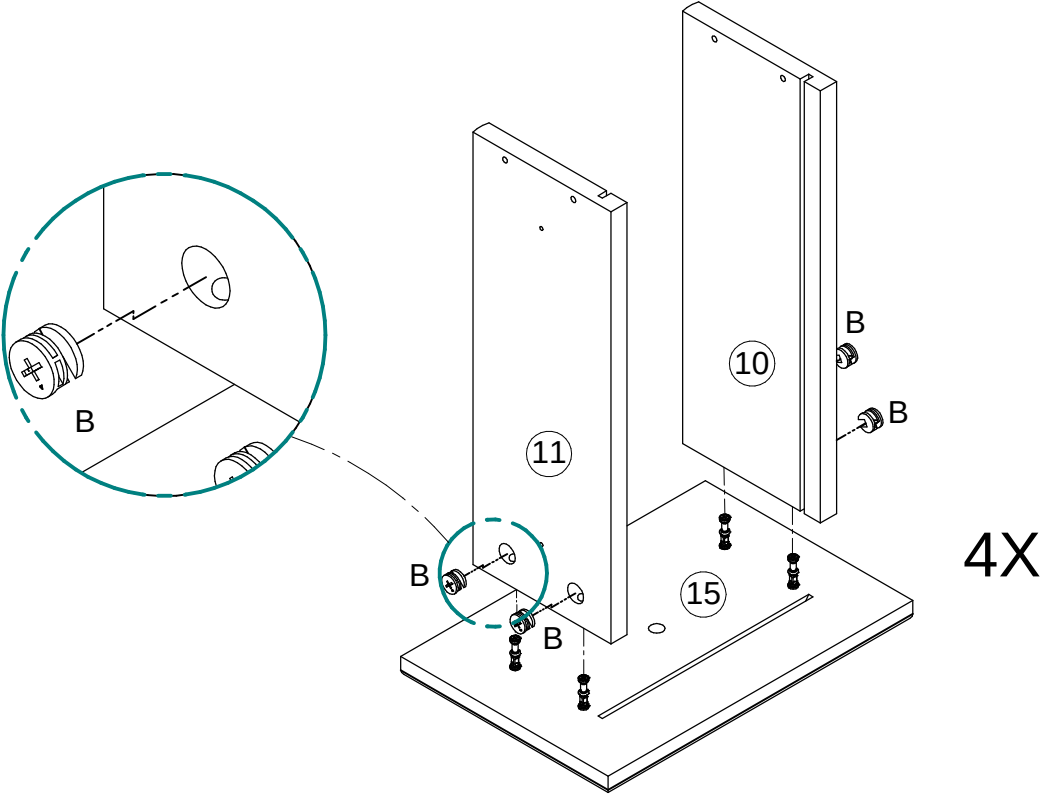



B		16
---	---	----

STEP 20

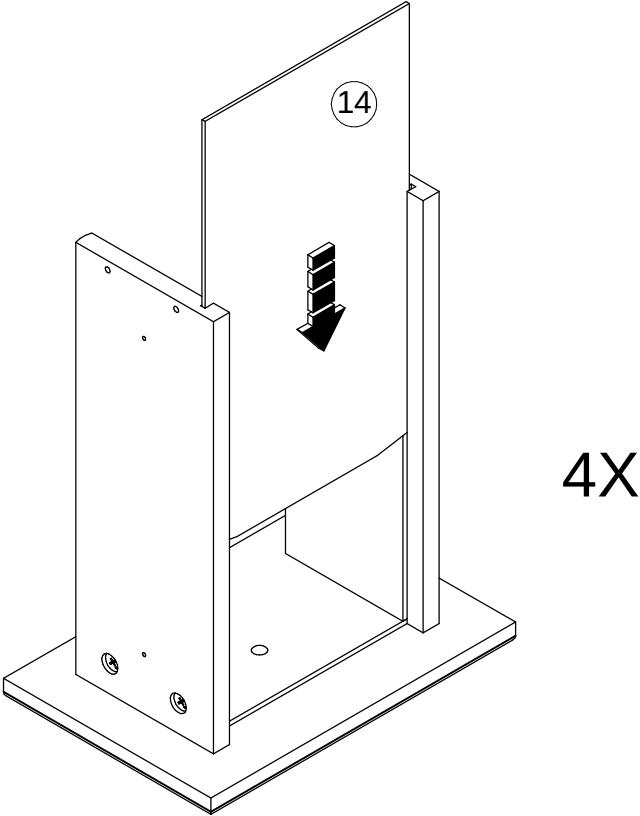


STEP 21

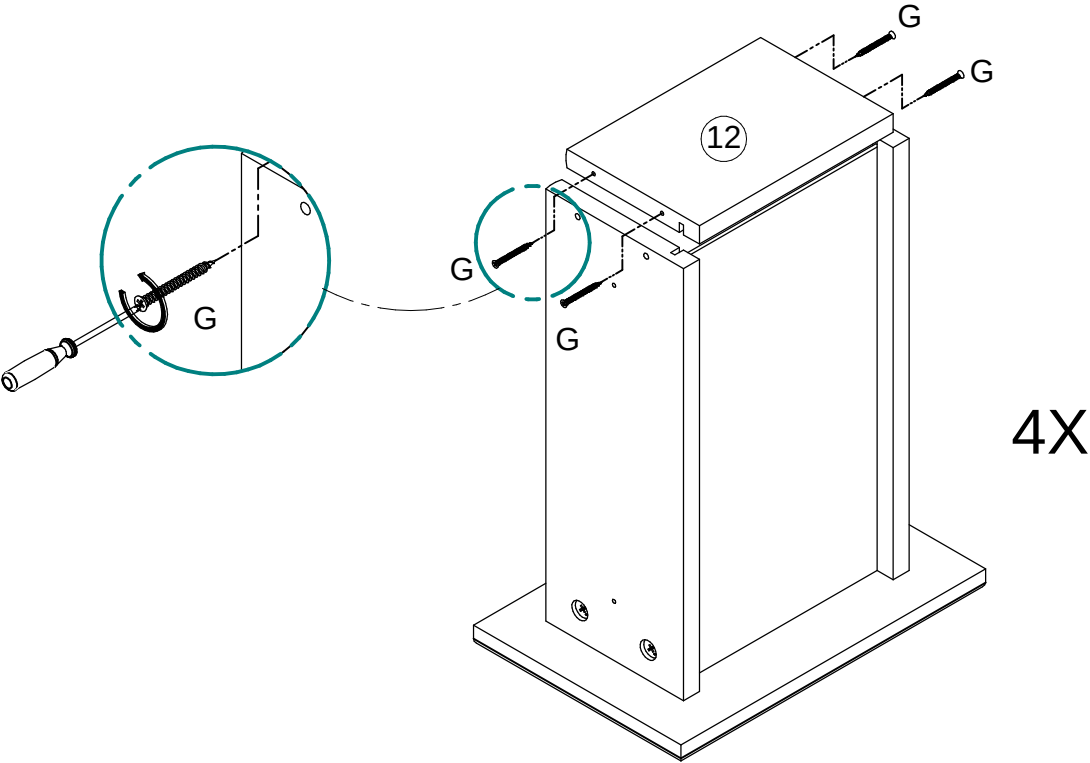


G		16
---	---	----

STEP 22

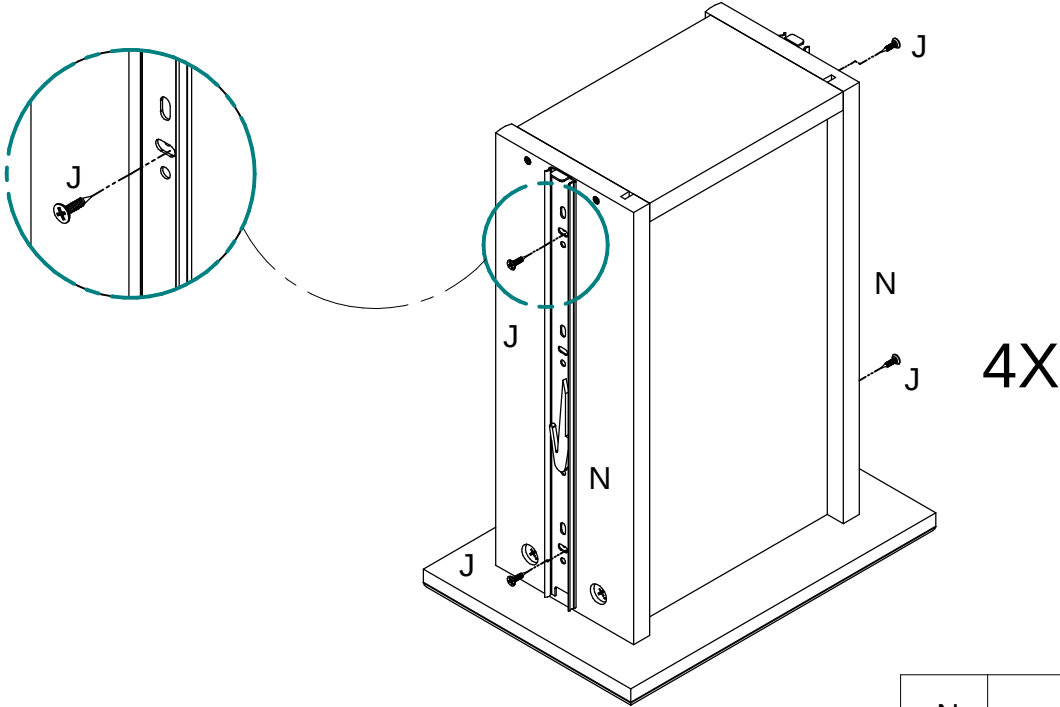


N		8
J		16

STEP 23

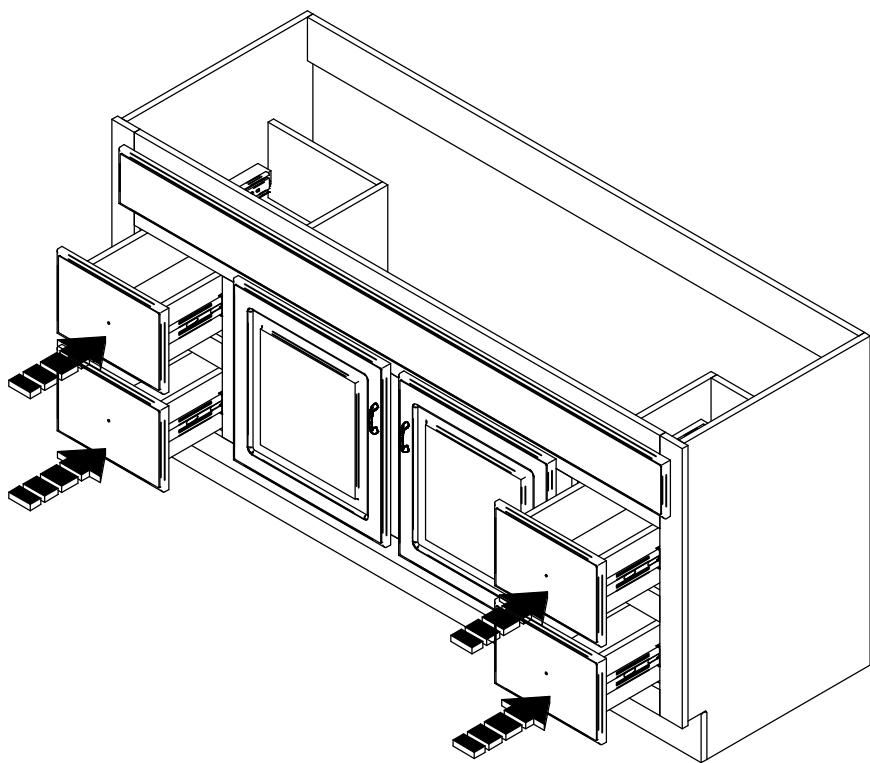



STEP 24

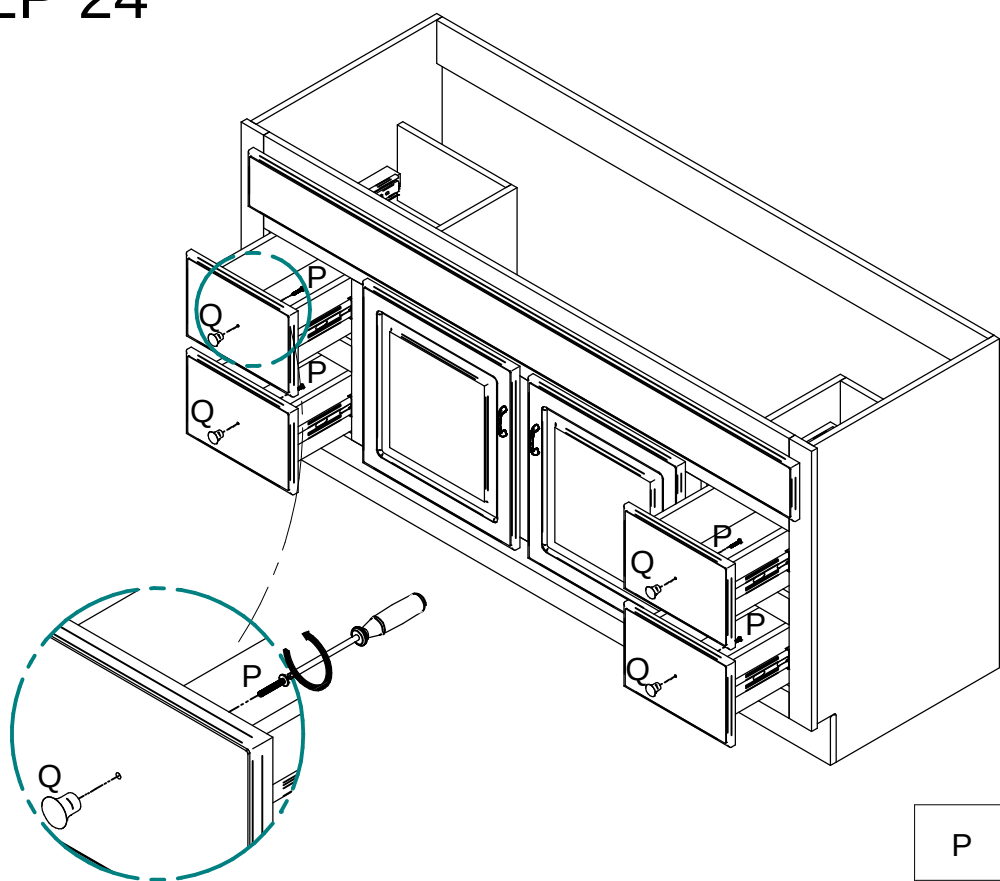

P		4
Q		4

STEP 25

Drawer adjustment

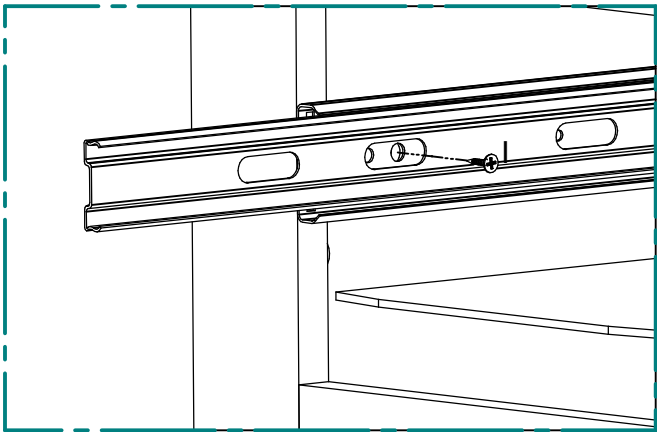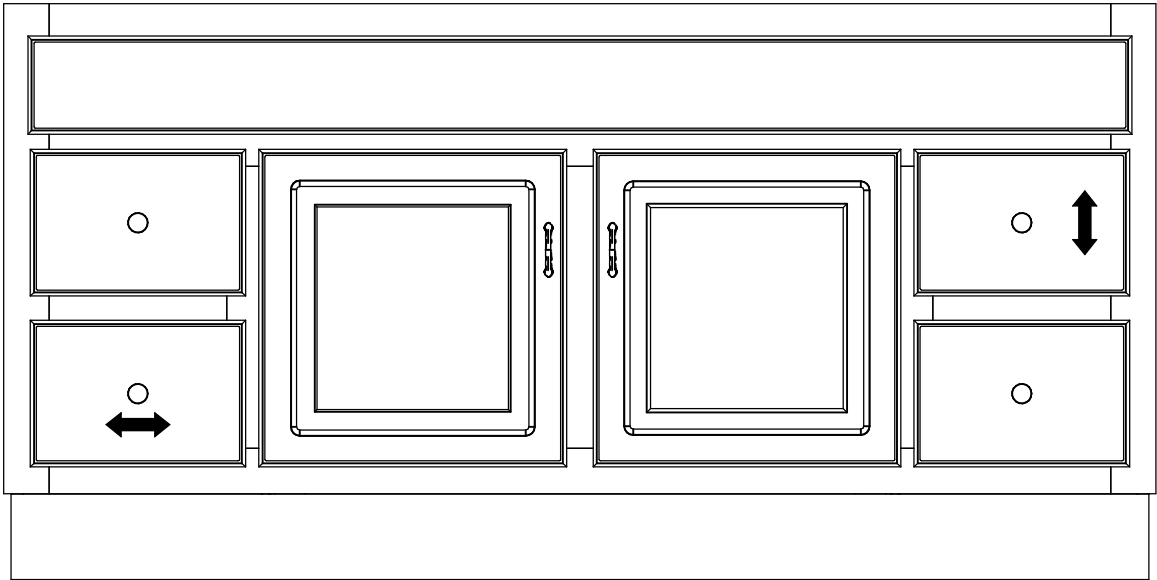

4X

After adjusting the height of the drawers,
fix the drawer rails with the screws (I)
as shown in the image above

J		8
---	---	---