

ASSEMBLY INSTRUCTION

ITEM: MV-5962-90967-81-6/0-6/6 Channeled Headboard
MV-5962-90968-81-6/0-6/6 Uph Footboard
MV-5962-90953-81-5/0-6/6 Uph Rails

Please read all instructions carefully before starting the assembly process. Please be sure to unpack carefully as small parts may have come loose during travel from paradise. Helpful tip--do not fully tighten bolts until assembly is complete. It will make assembly easier.

HARDWARE LIST OF HEADBOARD

No.	Drawing	Description	Size	Q'ty
A		Bolt	Ø5/16"80mm	6
B		Bolt	Ø5/16"60mm	2
C		Lock Washer	Ø5/16"13mm	8
D		Flat Washer	Ø5/16"19mm	8
E		Allen Key	M4	1


HARDWARE LIST OF FOOTBOARD

No.	Drawing	Description	Size	Q'ty
J		Wood Screw	Ø4x30mm	10


HARDWARE LIST OF SIDE RAIL

No.	Drawing	Description	Size	Q'ty
A		Bolt	Ø5/16"80mm	6
C		Lock Washer	Ø5/16"13mm	6
D		Flat Washer	Ø5/16"19mm	6
E		Allen Key	M4	1
F		All thread bolt	Ø5/16"x100mm	4
G		Half Round Washer	Ø5/16"x30mm	4
H		Hexagon Nut	Ø5/16"x13mm	4
I		Wrench	D 12mm	1


Step 1

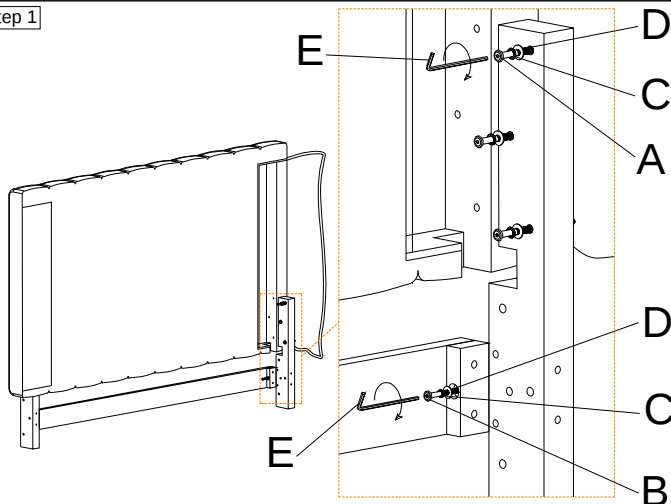

Step 4

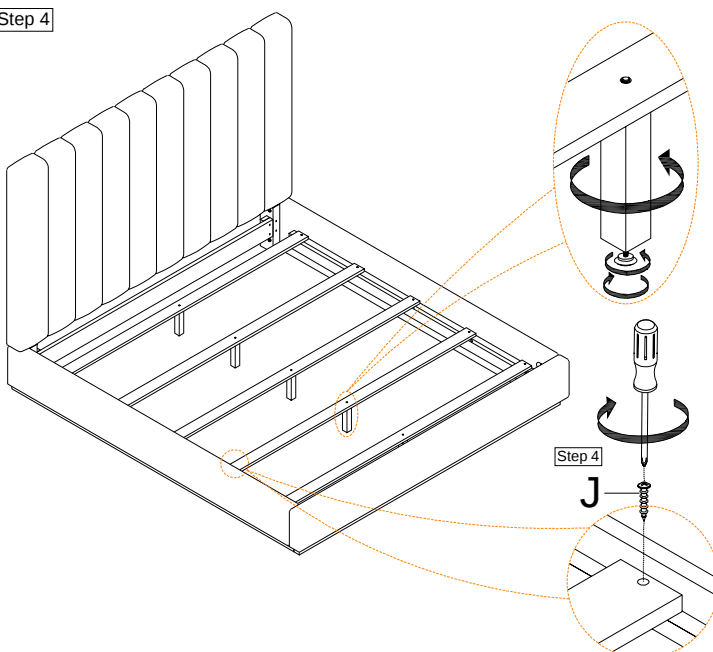

Step 2

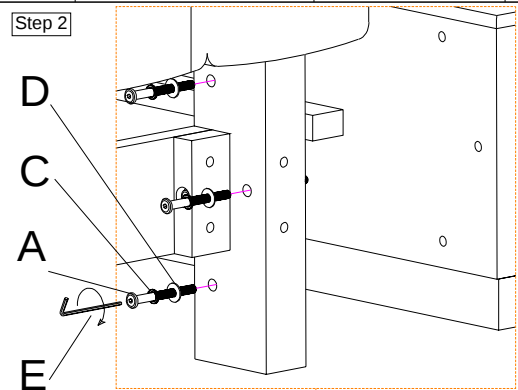

MV-5962-90967-81-6/0-6/6 Tufted Headboard

MV-5962-90953-81-5/0-6/6 Uph Rails

MV-5962-90968-81-6/0-6/6 Uph Footboard

Step 3

