
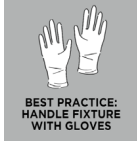
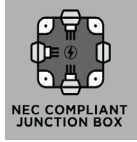
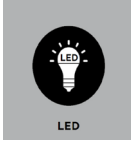
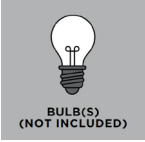



PRATT STREET THREE LIGHT PENDANT

65062, 65087

General Product Information

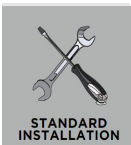

WARRANTY

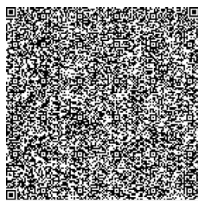

FCC STATEMENT

Tools Required



PHILLIPS-HEAD SCREWDRIVER

Safety Information

CAUTION-RISK OF FIRE

This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.


USE MINIMUM 90°C SUPPLY CONDUCTORS.



Turn off electrical current at the source before working with any lighting fixture or portable lamp.

Install and use this product in adherence with local electrical codes and regulations.



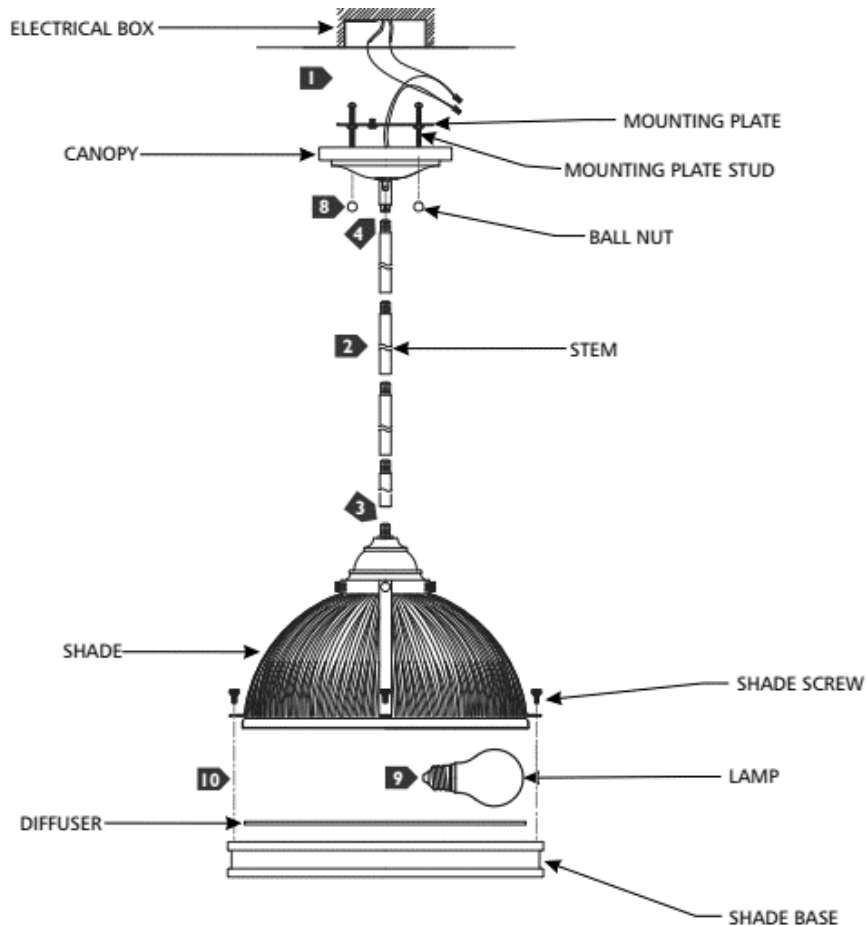

INSTRUCTIONS

I. Preparing the Fixture

1. Secure the mounting plate to the electrical box with two mounting plate screws.
2. Determine the desired height of the fixture and assemble the stems by screwing them together.
3. Feed the fixture wires through the stems and screw to the fixture tightly.
4. Feed the fixture wires through the canopy and screw the canopy tightly onto the stems.

II. Wiring the Fixture

1. Safety first! Locate the circuit breaker and switch it off to cut off the power supply to the relevant circuits to ensure there's no electricity running through the wiring.
2. In accordance with local electrical codes, connect the fixture ground wire (bare copper or silver wire) to suitable ground. This may be a green ground screw on the mounting plate, which the ground wire should be tightly wrapped around, or a house wire (green or bare copper wire without insulation).
3. Twist the bare ends of the following pairs of wires together using a wire nut to secure a connection:
 - a) White fixture wire to neutral power line wire
 - b) Black fixture wire to hot power line wire

III. Installing the Fixture

1. Align then place the canopy onto the mounting plate studs. Secure with two ball nuts.
2. Screw the lamp into the socket.
3. Gently install the diffuser into the shade base, place the shade base onto the shade, and secure them tightly with the shade screws.