

PASADENA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

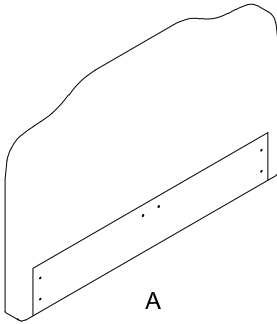

A

BOX#2

B. FOOTBOARD


1 PC

C. CENTER SLAT SUPPORT CLEAT

2 PCS

D. SLAT ROLL


1 SET

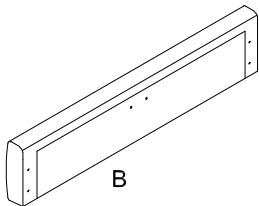

B



C

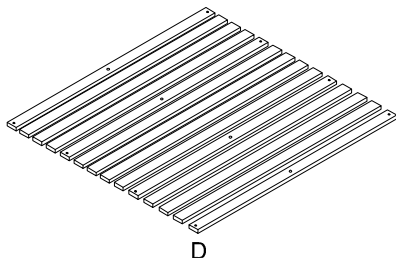

D

BOX#3

E. SIDE RAIL


2 PCS

F. CENTER SLAT SUPPORT


1 PC

G. SUPPORT LEG

4 PCS

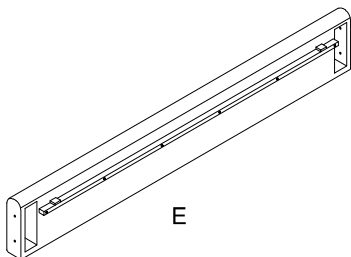

E

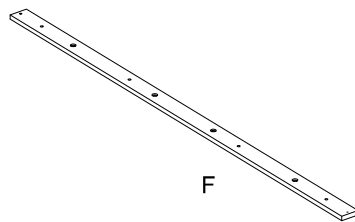

F





G

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		8 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		4 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		4 PCS
4	FLAT WASHER (5/16")		12 PCS
5	FLAT WASHER (1/4")		4 PCS
6	LOCK WASHER (5/16")		12 PCS
7	LOCK WASHER (1/4")		4 PCS
8	HEX NUT (5/16")		8 PCS
9	PHILLIPS SCREW (M4 x 32mm)		10 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

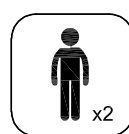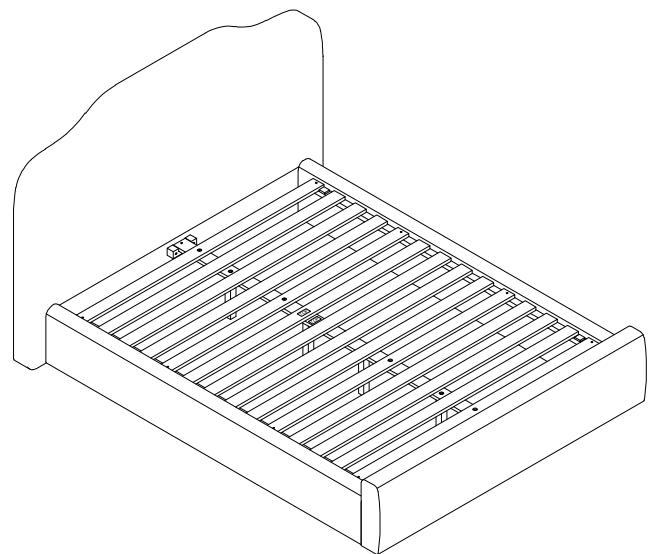


PASADENA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 1:

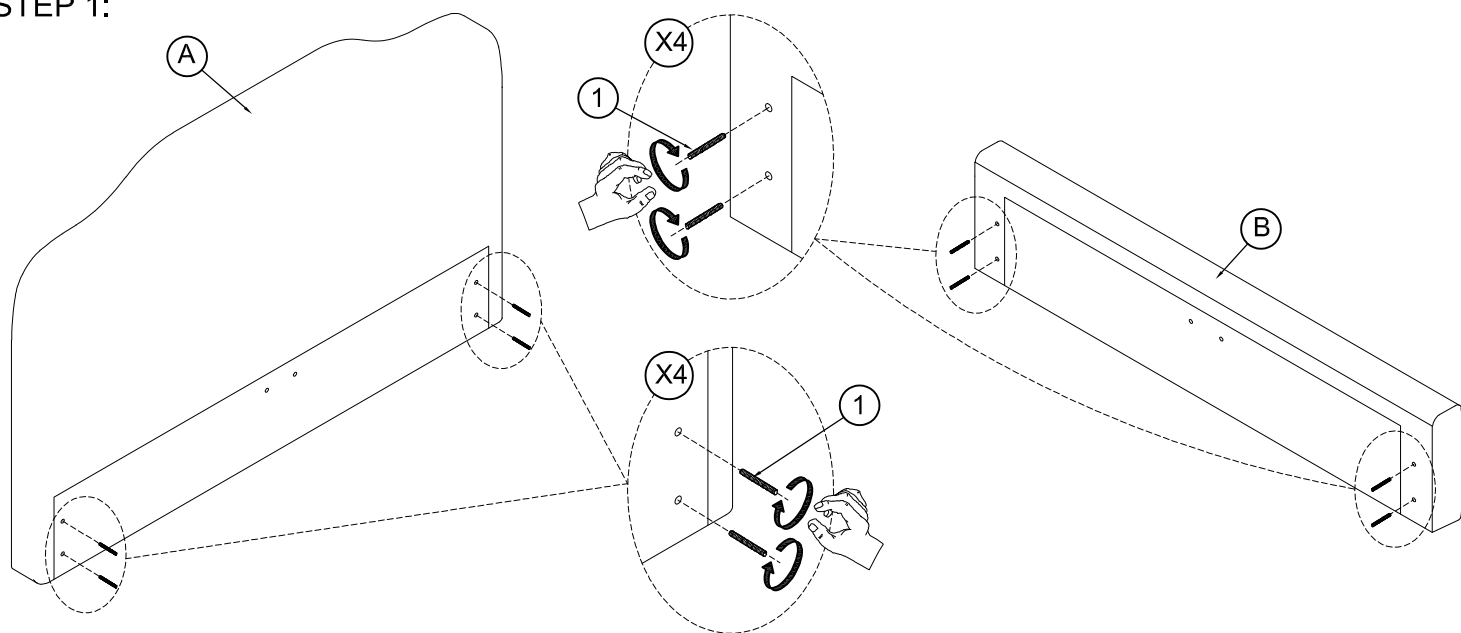

STEP 2:

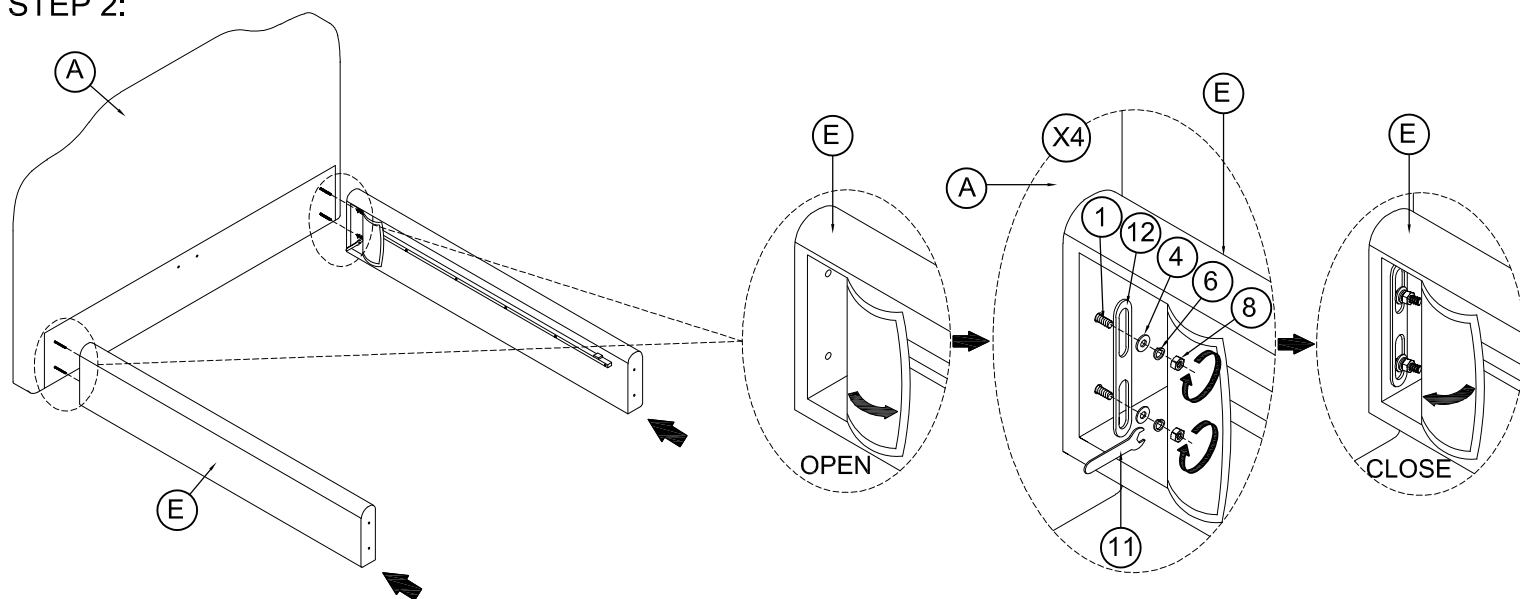

STEP 3:

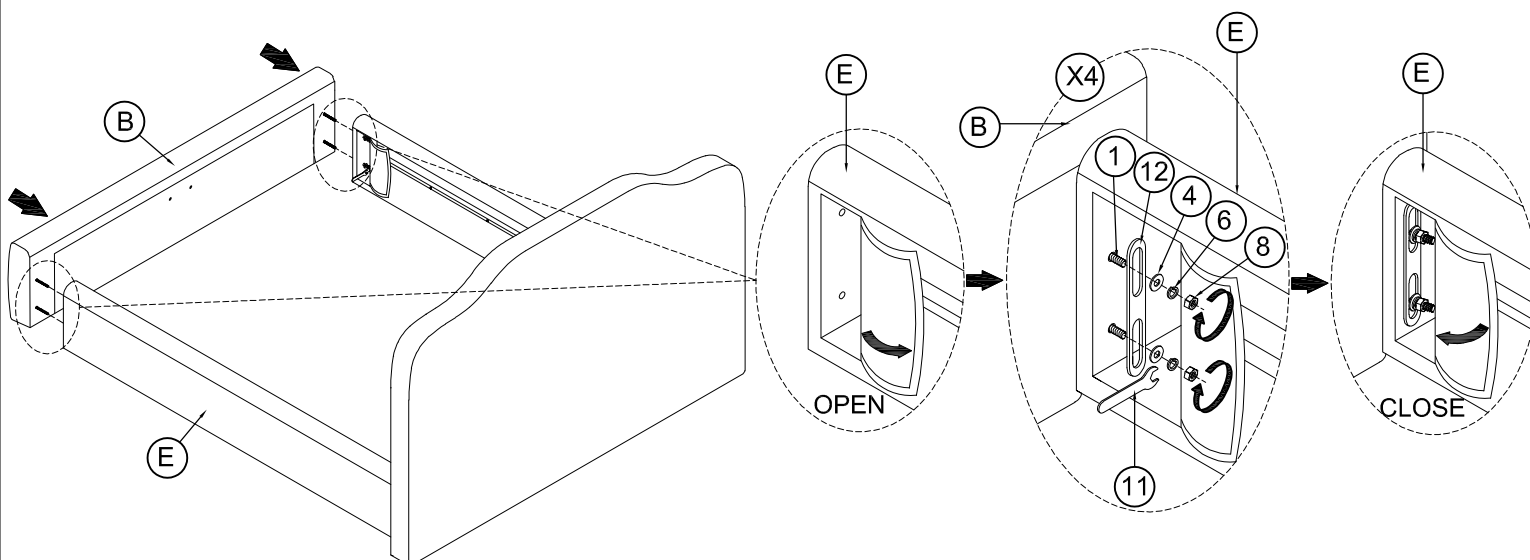

PASADENA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

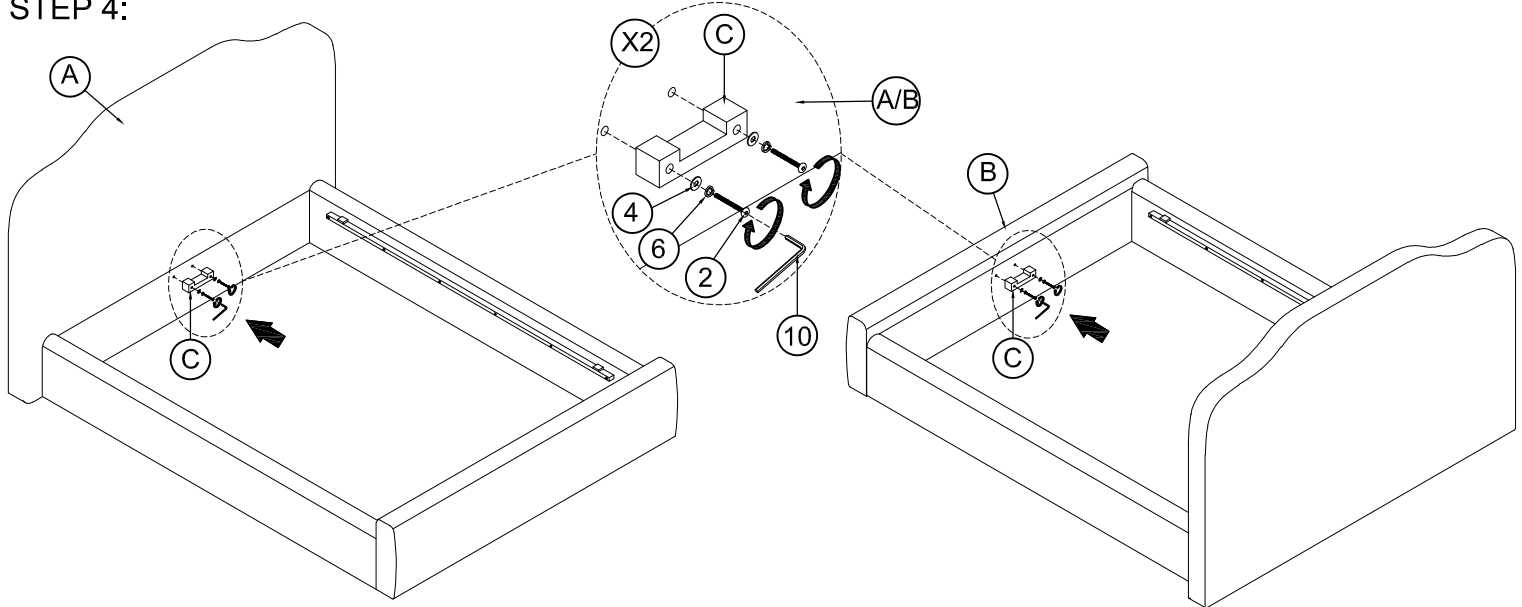

STEP 5:

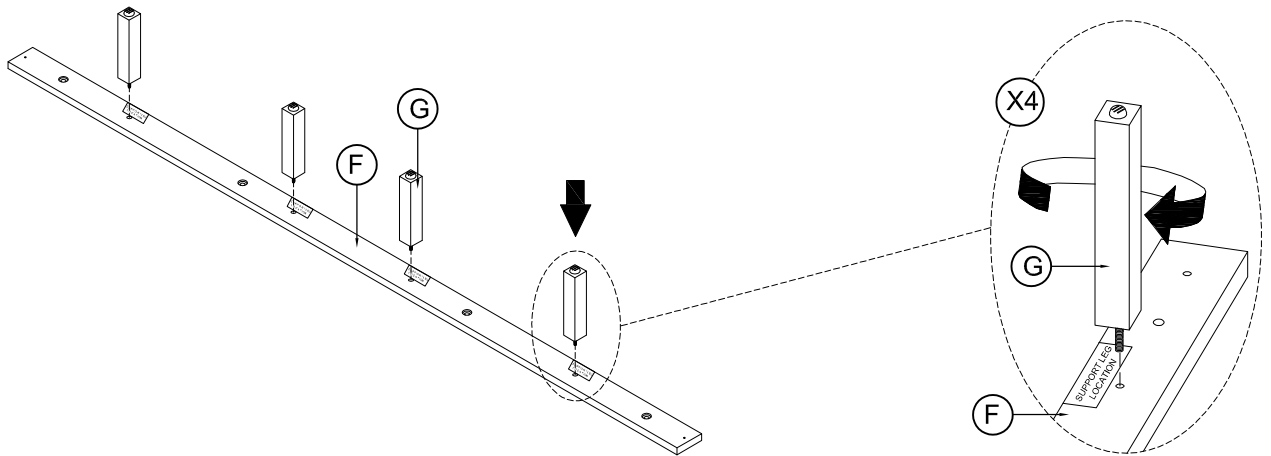

STEP 6:

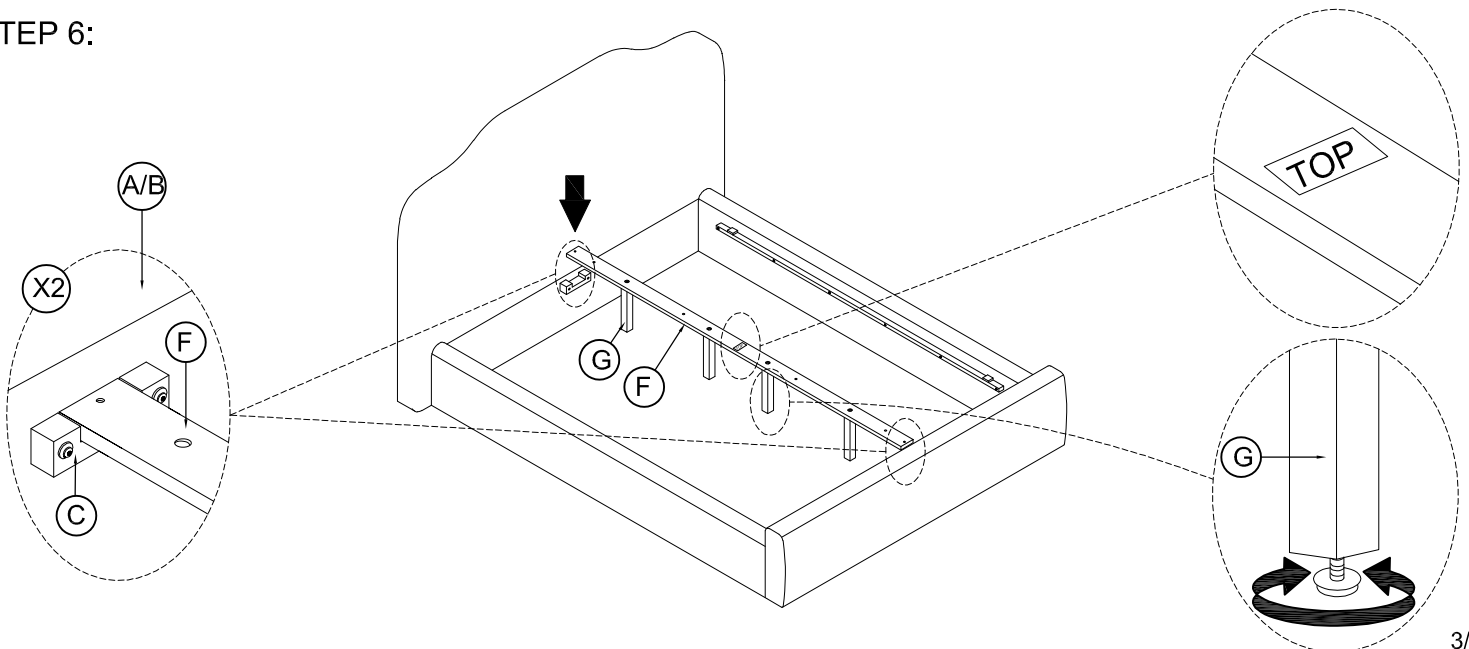


PASADENA UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



STEP 7:

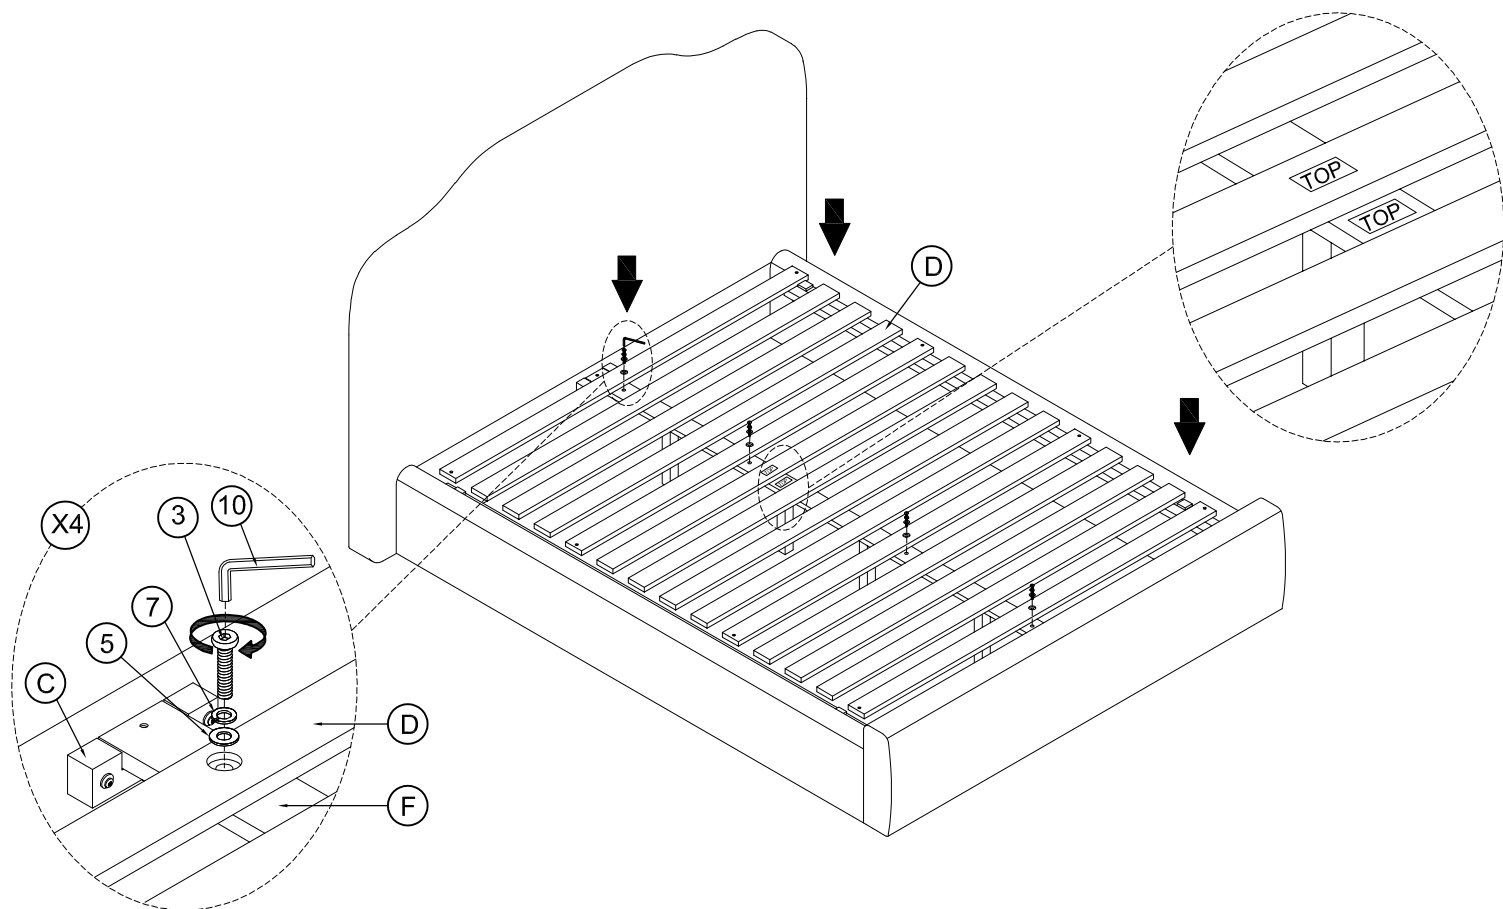


STEP 8:

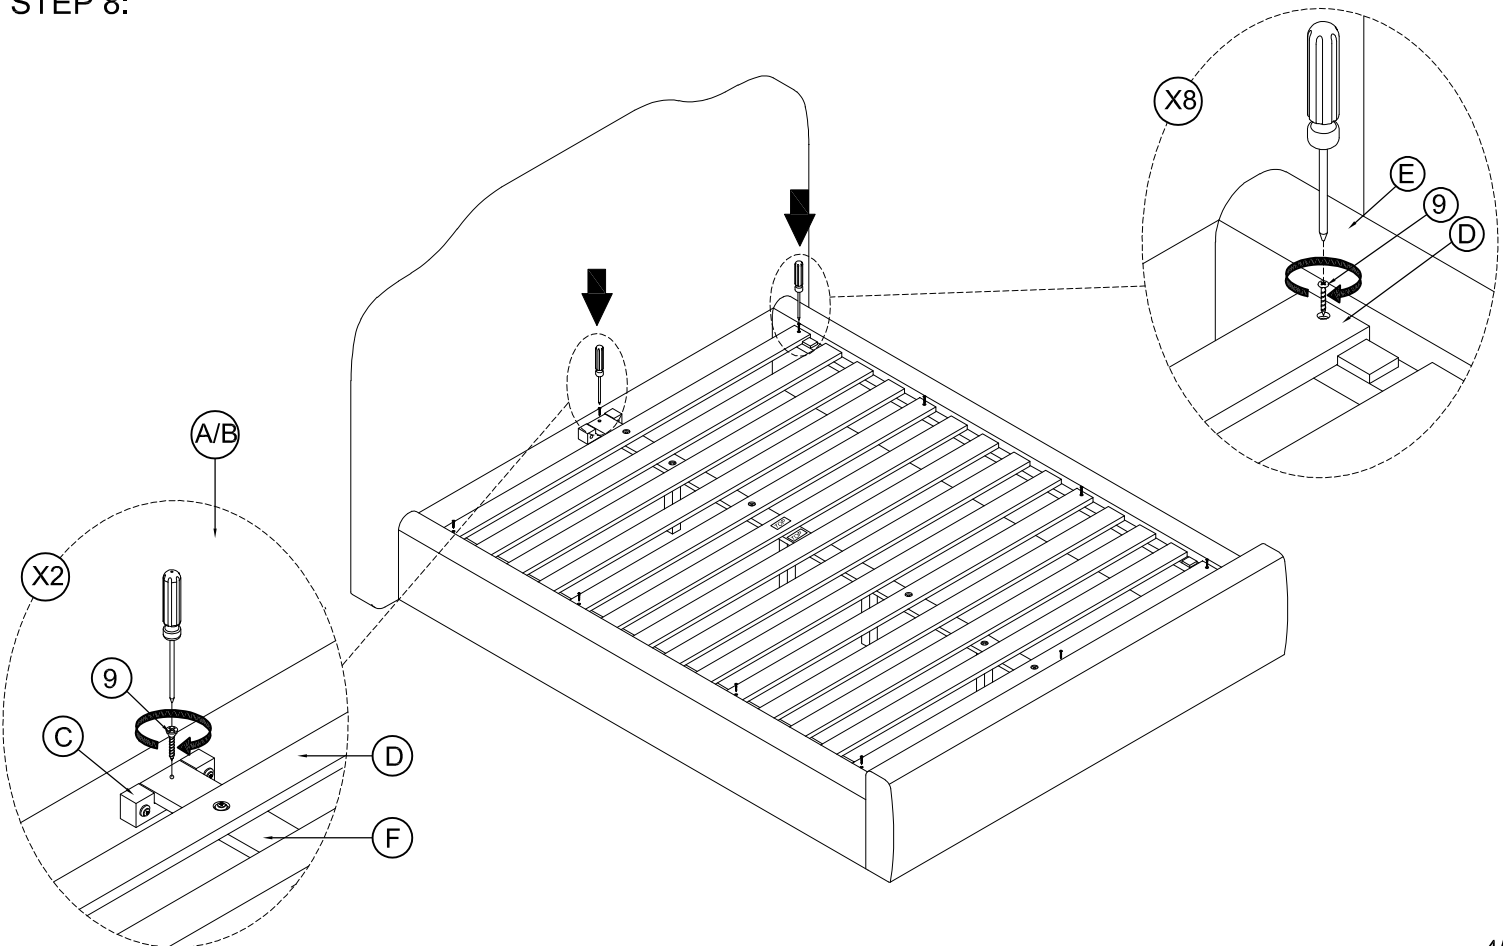

PASADENA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS

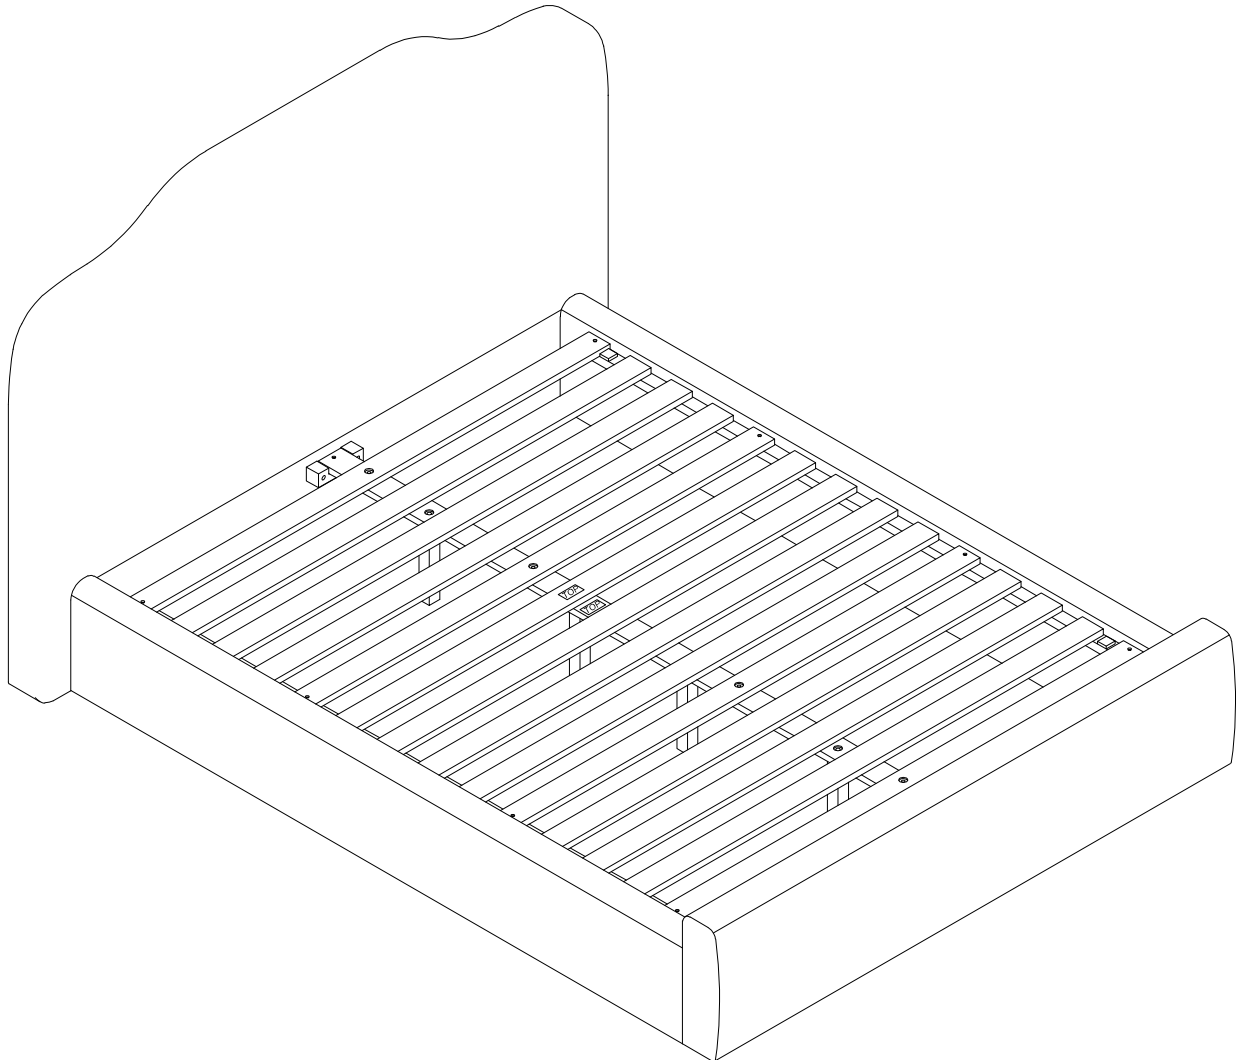


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

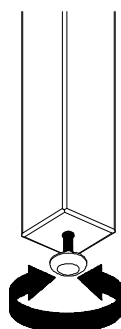

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PASADENA UPHOLSTERED QUEEN BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C.CENTER SLAT SUPPORT CLEAT	2 PCS
D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	1 PC
G SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

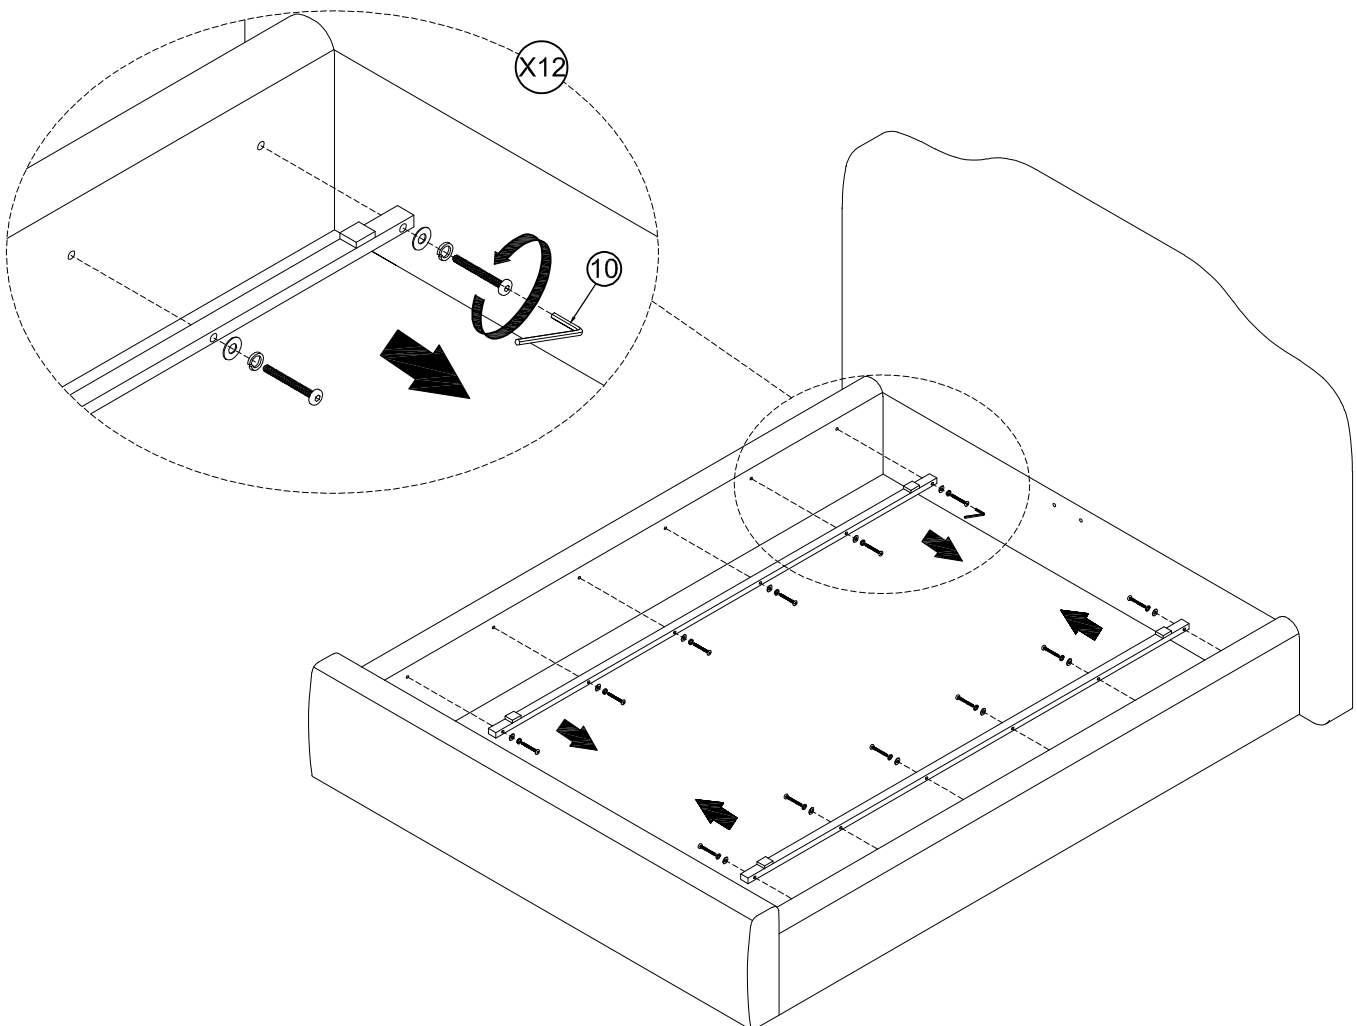

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

PASADENA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

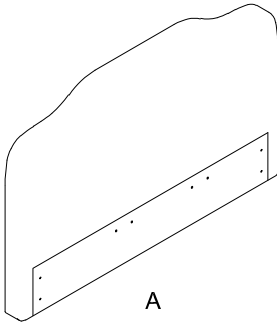

A

BOX#2

B. FOOTBOARD


1 PC

C. CENTER SLAT SUPPORT CLEAT

4 PCS

D. SLAT ROLL


1 SET

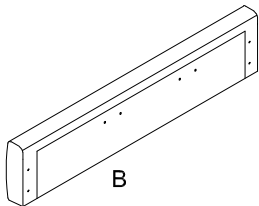

B



C

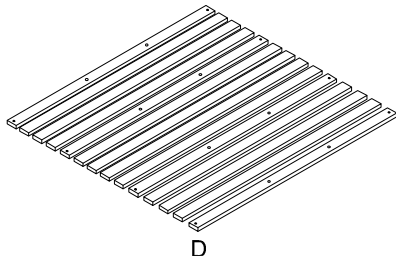

D

BOX#3

E. SIDE RAIL


2 PCS

F. CENTER SLAT SUPPORT


2 PCS

G. SUPPORT LEG

8 PCS

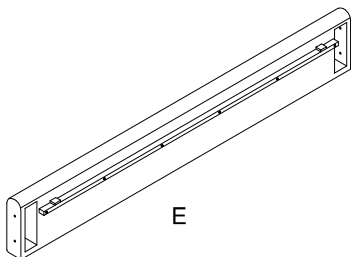

E

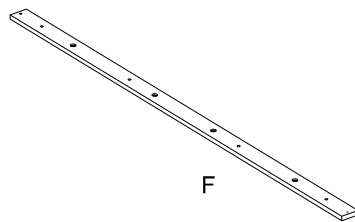

F





G

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		8 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		8 PCS
4	FLAT WASHER (5/16")		16 PCS
5	FLAT WASHER (1/4")		8 PCS
6	LOCK WASHER (5/16")		16 PCS
7	LOCK WASHER (1/4")		8 PCS
8	HEX NUT (5/16")		8 PCS
9	PHILLIPS SCREW (M4 x 32mm)		12 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

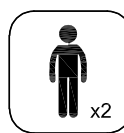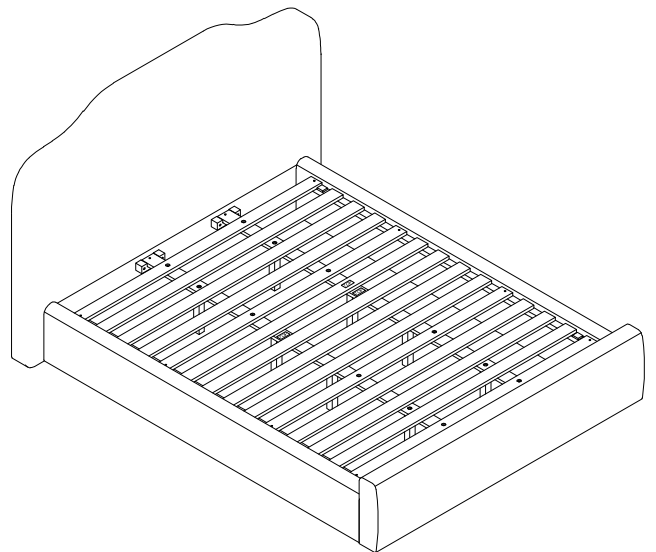


PASADENA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

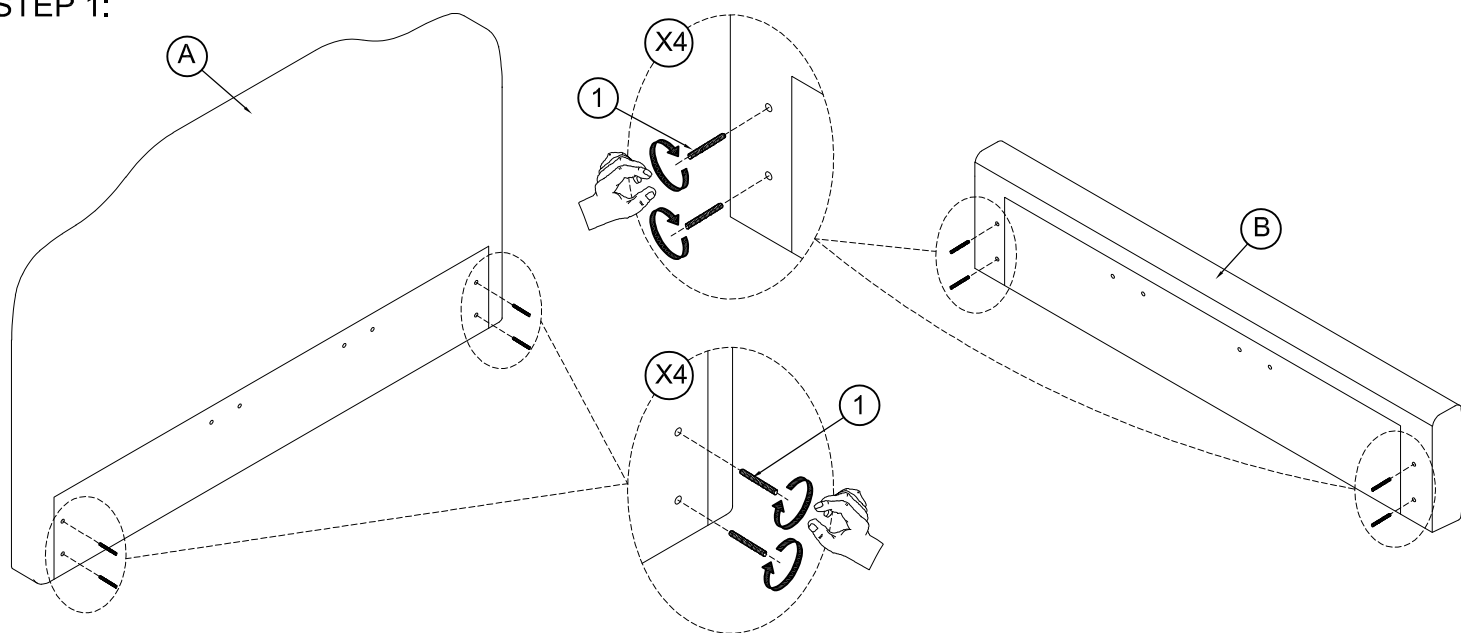

STEP 2:

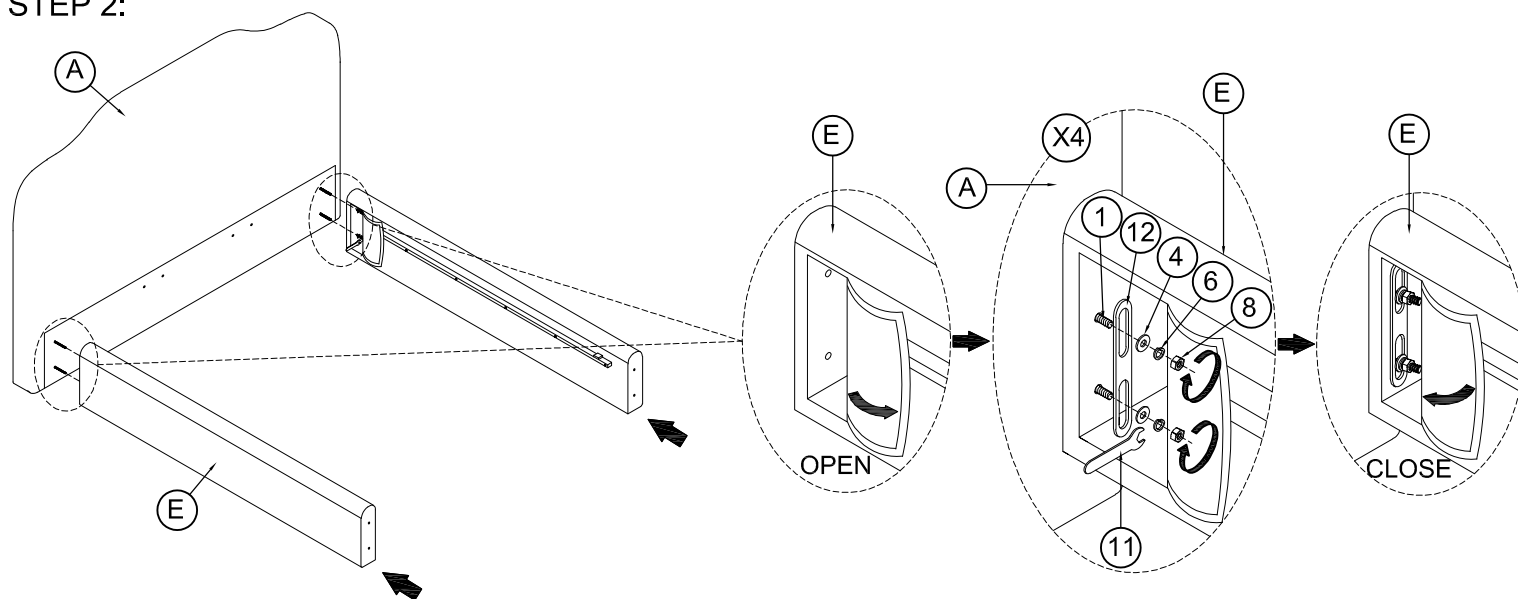

STEP 3:

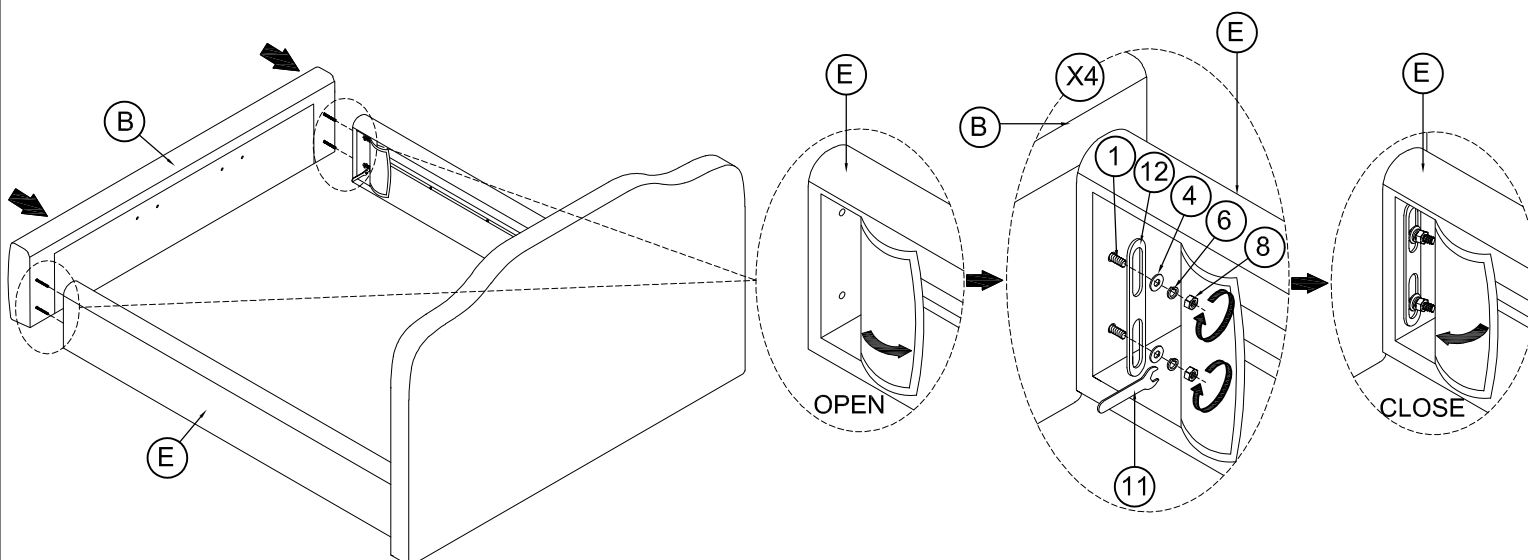

PASADENA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

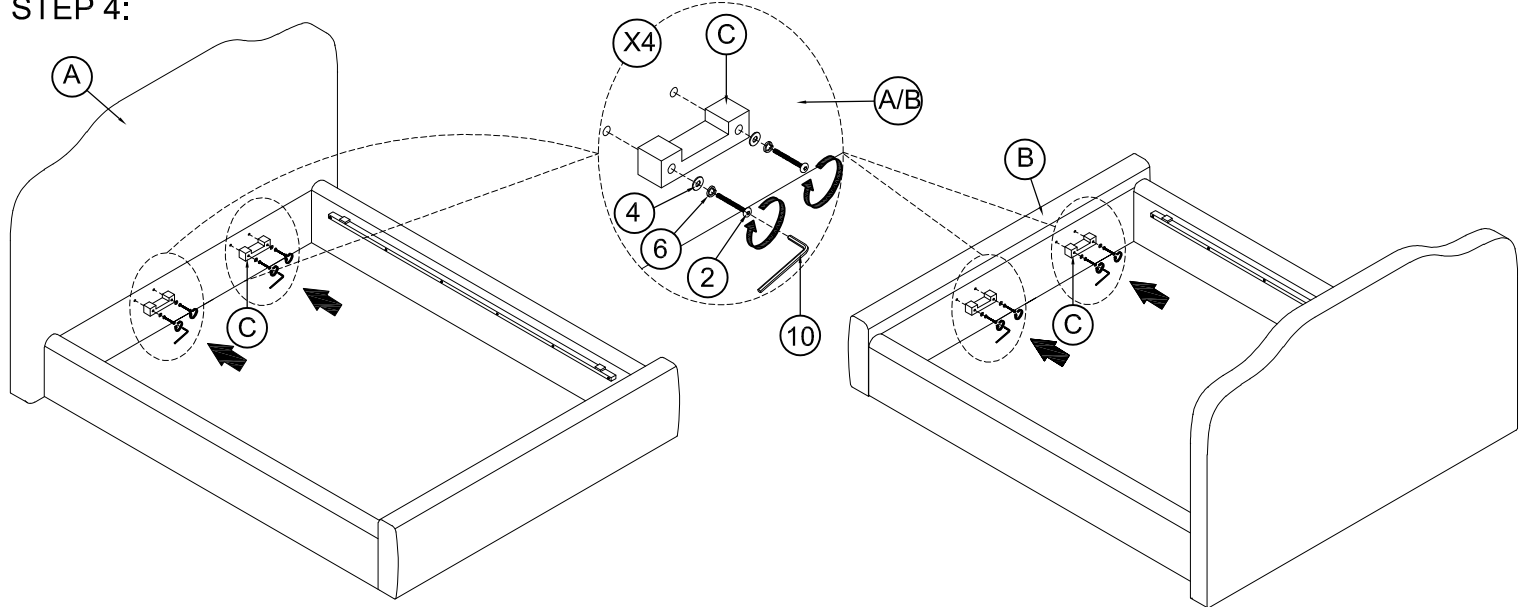

STEP 5:

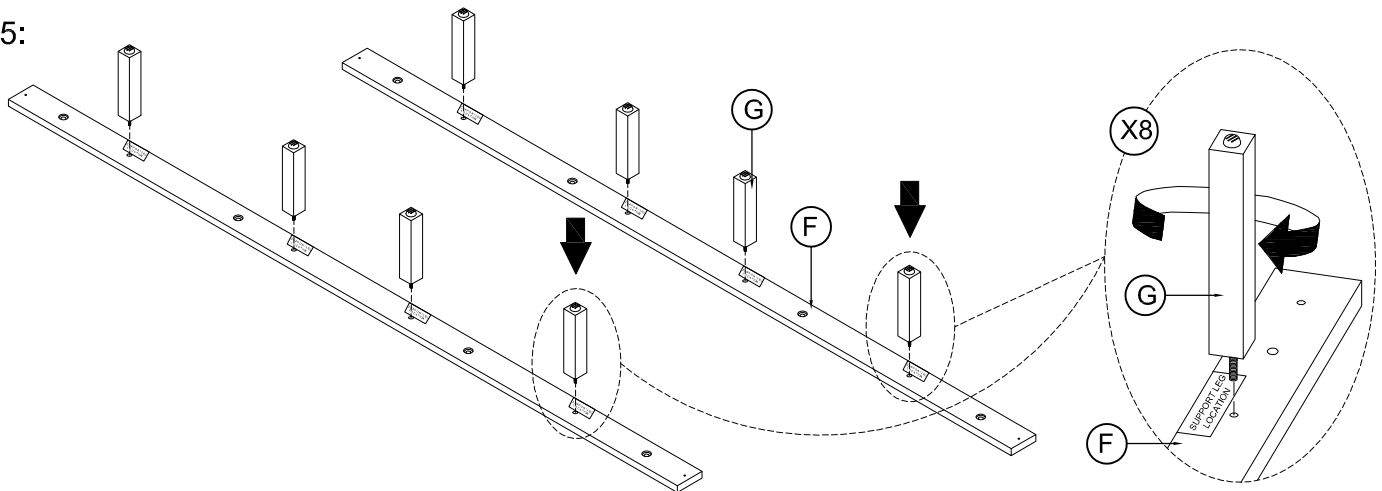

STEP 6:

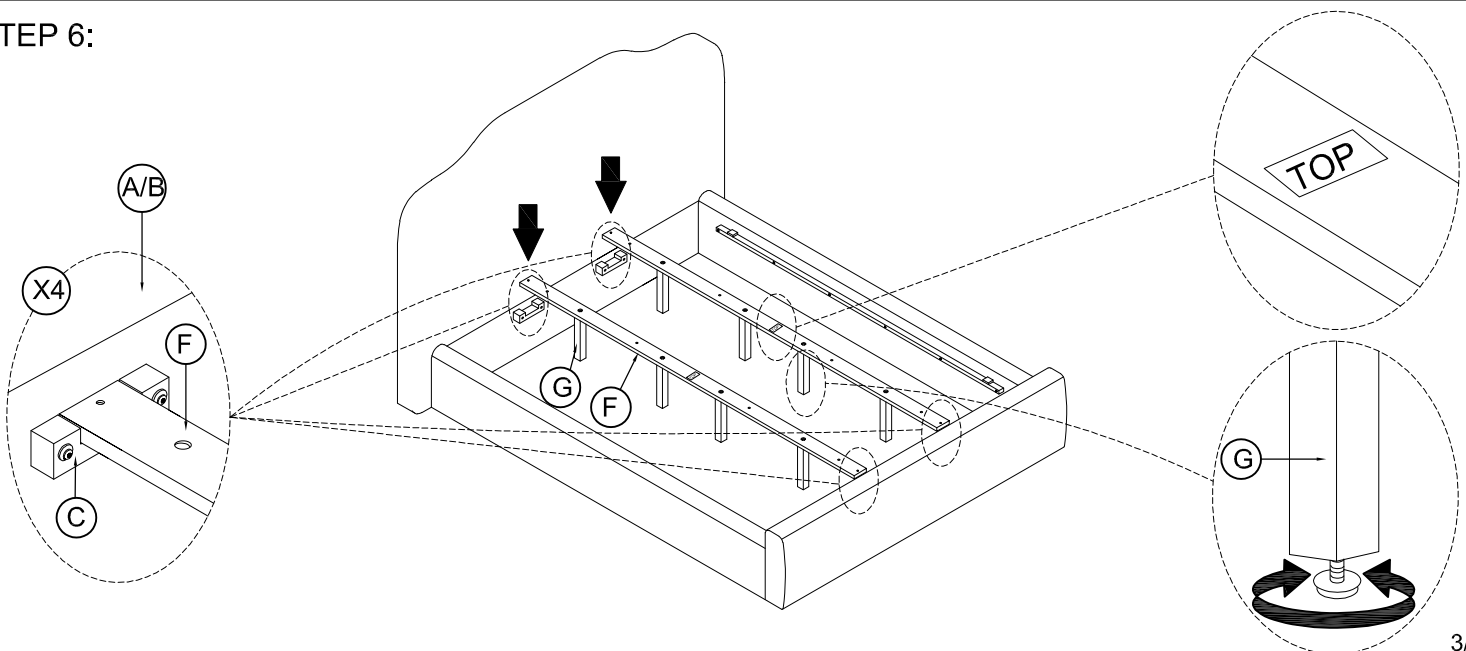


PASADENA UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

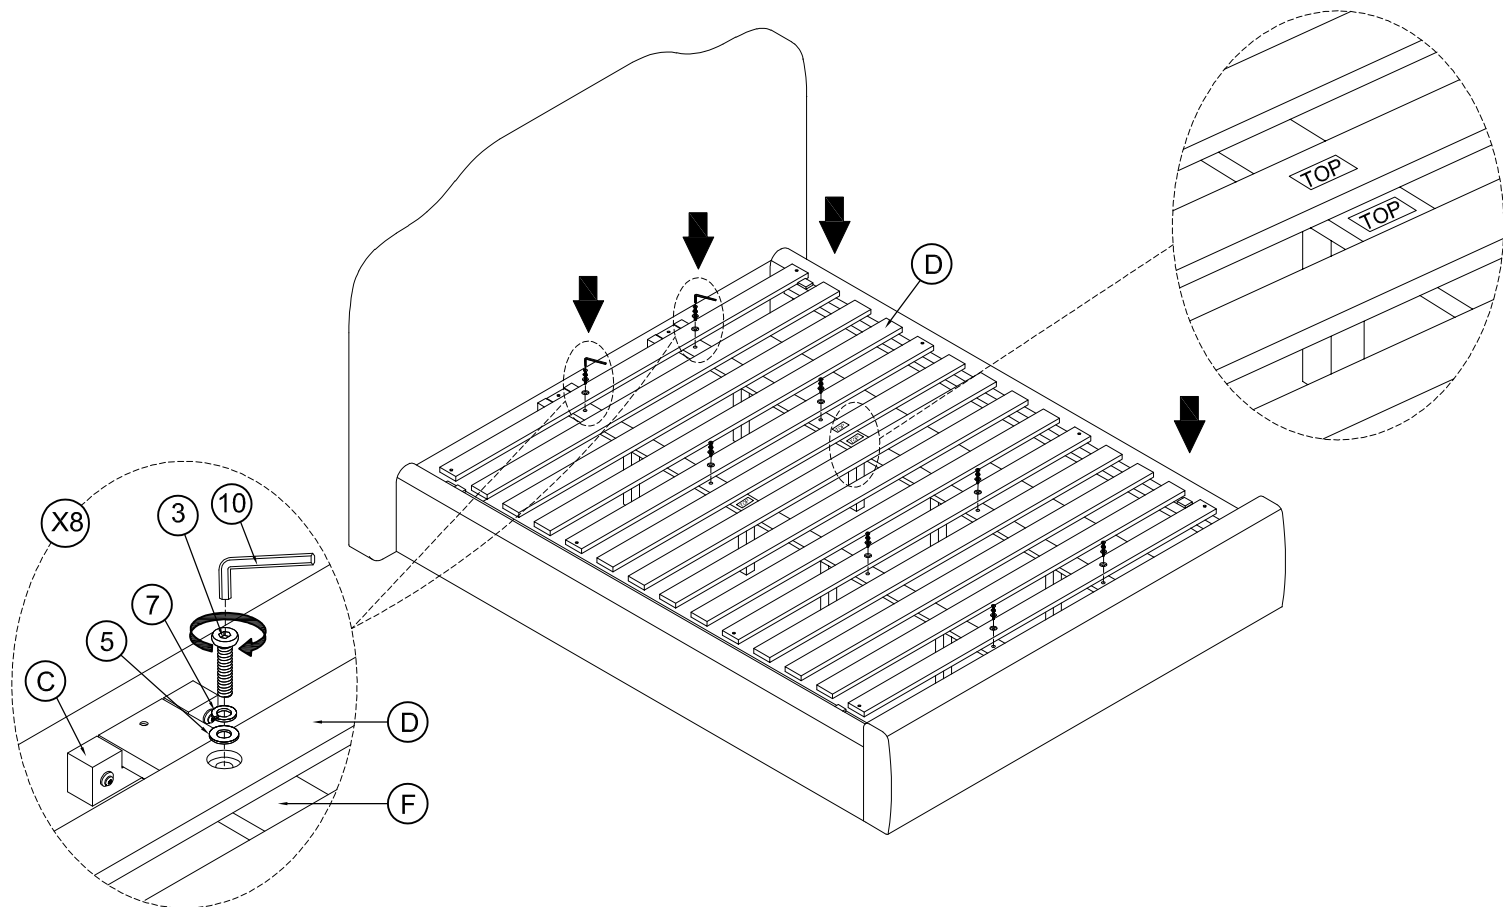


STEP 8:

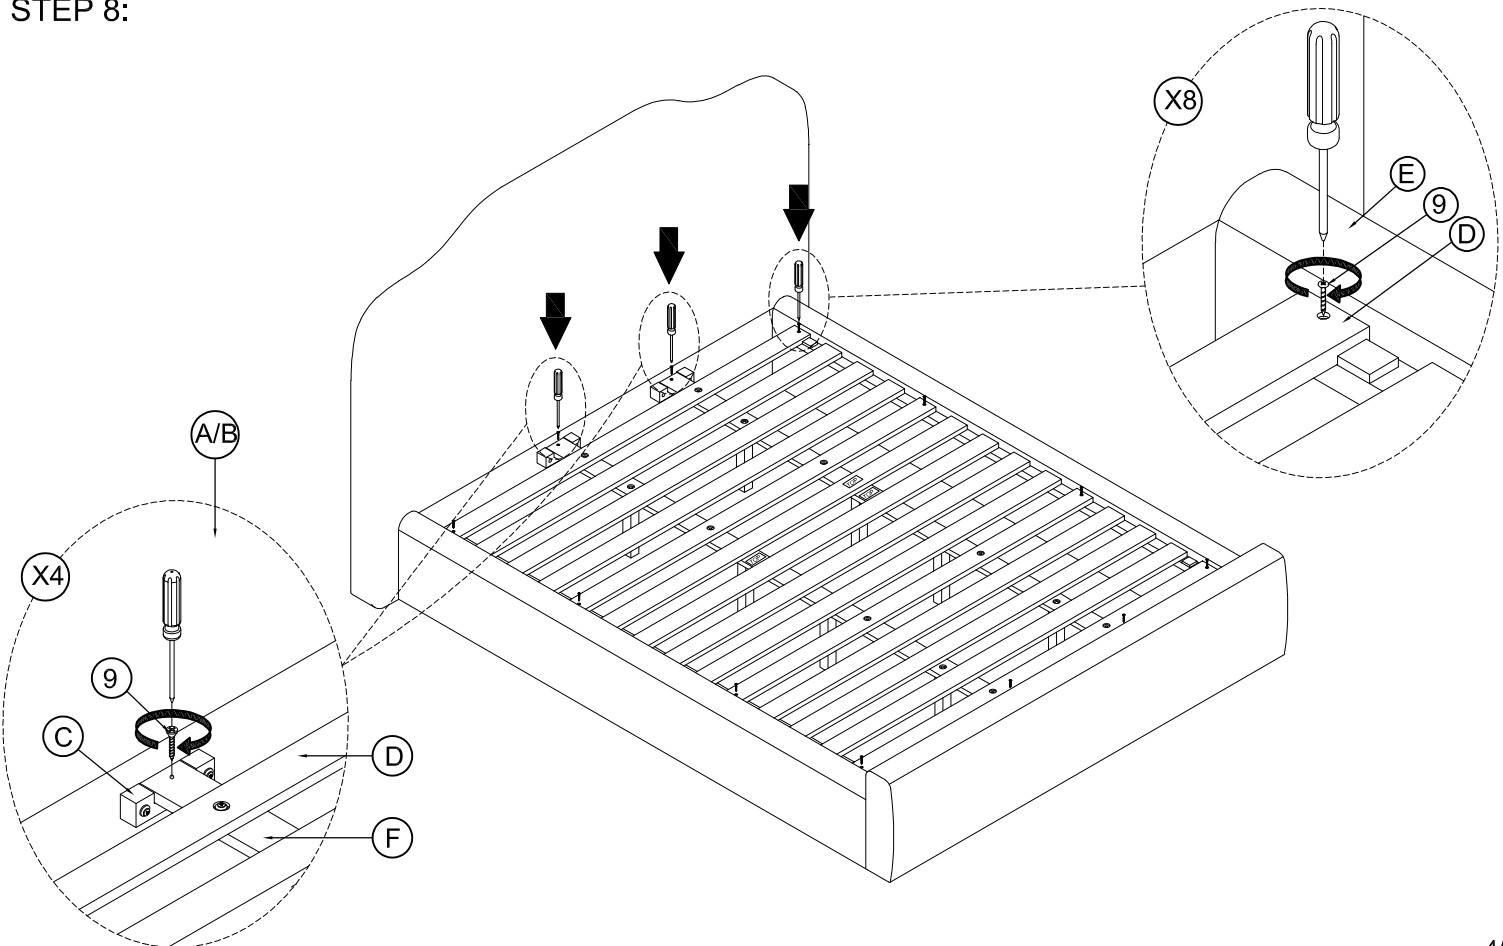

PASADENA UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS

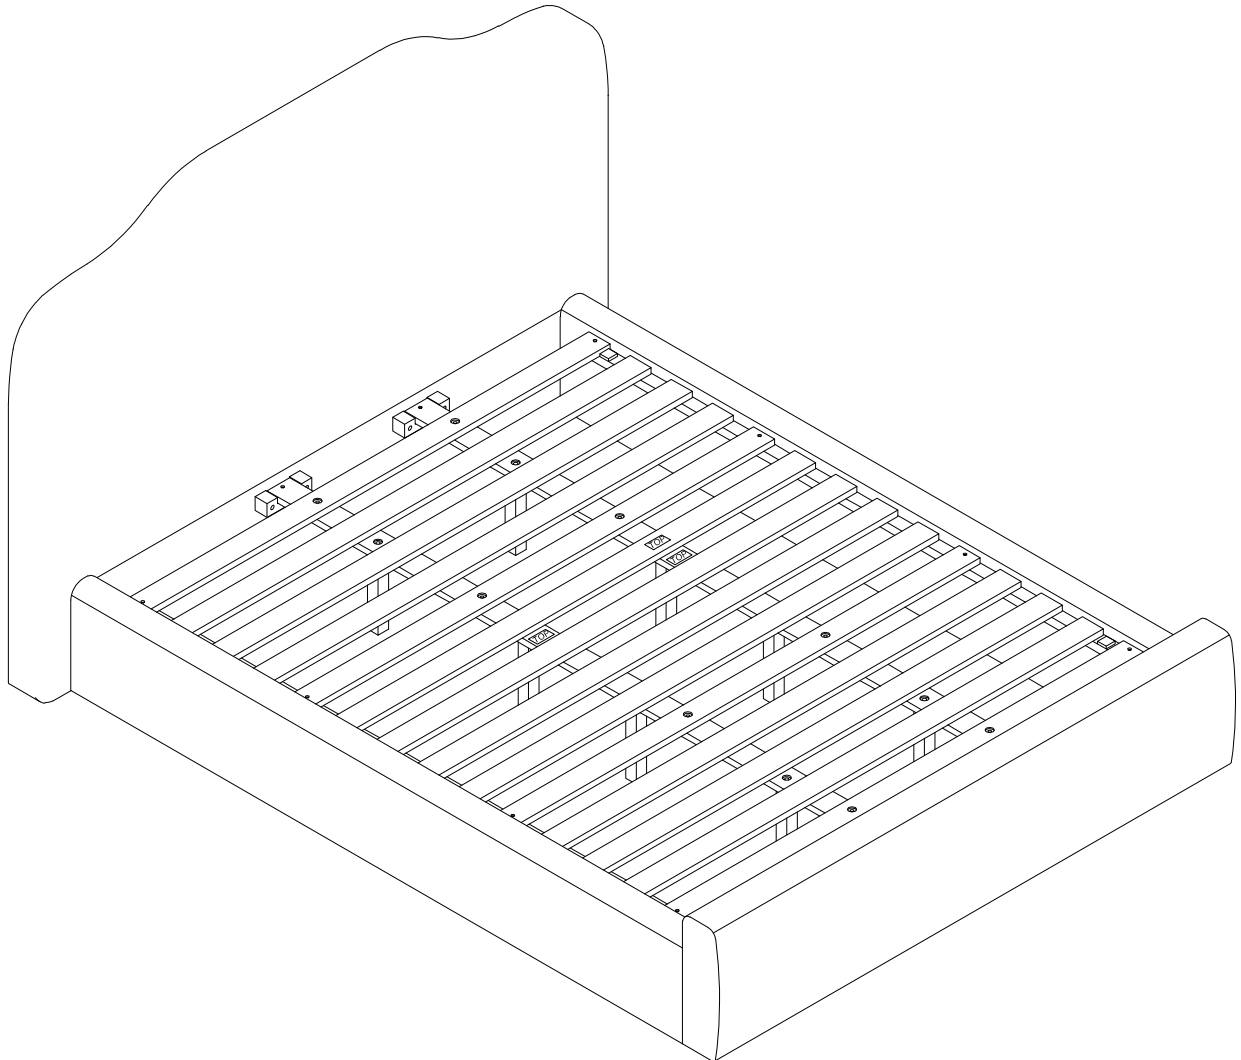


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

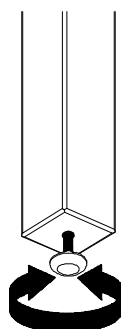

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PASADENA UPHOLSTERED KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C.CENTER SLAT SUPPORT CLEAT	4 PCS
D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

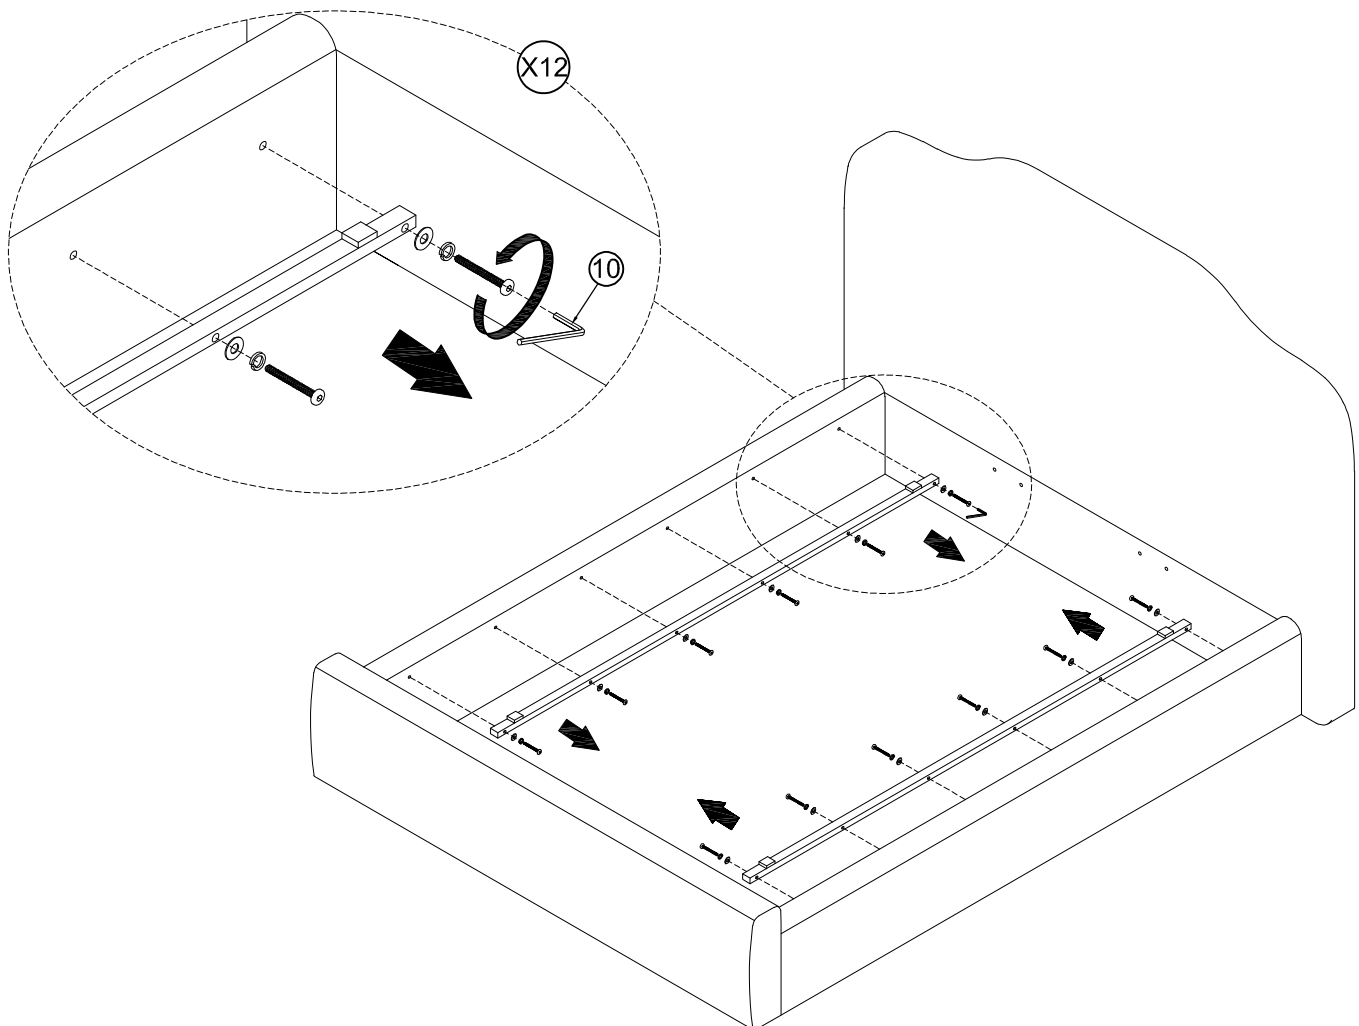


NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

PASADENA UPHOLSTERED C.KING BED
ASSEMBLY INSTRUCTIONS



BOX#1


A. HEADBOARD 1 PC

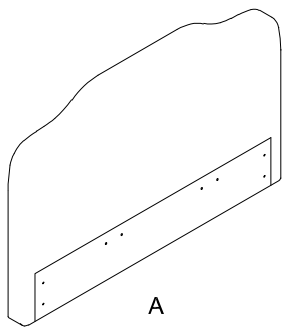

A

BOX#2


B. FOOTBOARD 1 PC
C.CENTER SLAT SUPPORT CLEAT 4 PCS
D. SLAT ROLL 1 SET

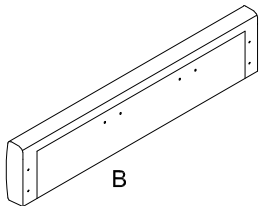

B




C

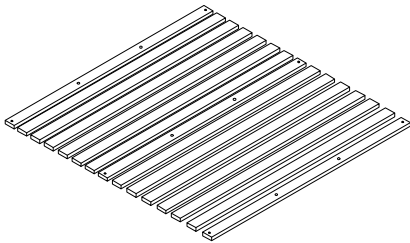


D

BOX#3

E. SIDE RAIL 2 PCS
F. CENTER SLAT SUPPORT 2 PCS
G. SUPPORT LEG 8 PCS

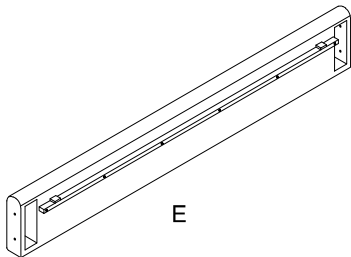

E

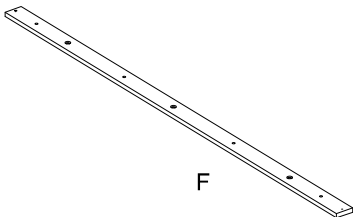

F





G

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
1	THREADED BOLT (5/16"x 3-1/2")		8 PCS
2	ALLEN BOLT (5/16"x 2-1/2")		8 PCS
3	ALLEN BOLT (1/4"x 1-1/4")		6 PCS
4	FLAT WASHER (5/16")		16 PCS
5	FLAT WASHER (1/4")		6 PCS
6	LOCK WASHER (5/16")		16 PCS
7	LOCK WASHER (1/4")		6 PCS
8	HEX NUT (5/16")		8 PCS
9	PHILLIPS SCREW (M4 x 32mm)		10 PCS
10	ALLEN KEY (5/16")		1 PC
11	WRENCH		1 PC
12	CONNECTING BRACKET		4 PCS

FULLY ASSEMBLED

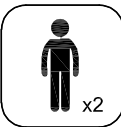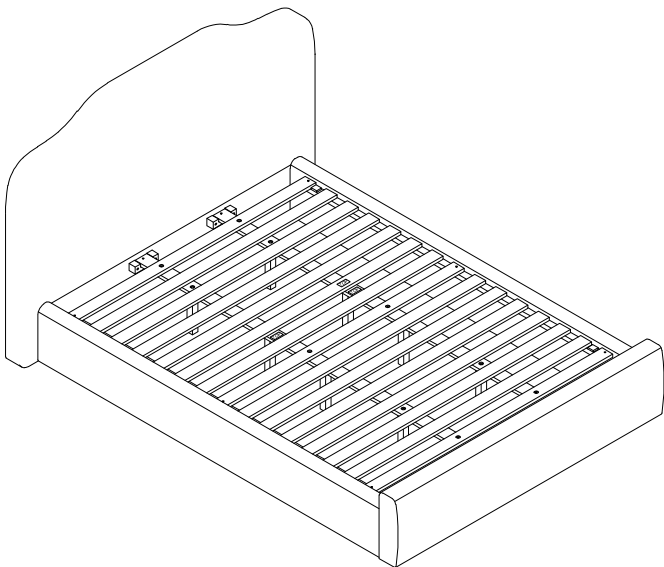


PASADENA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

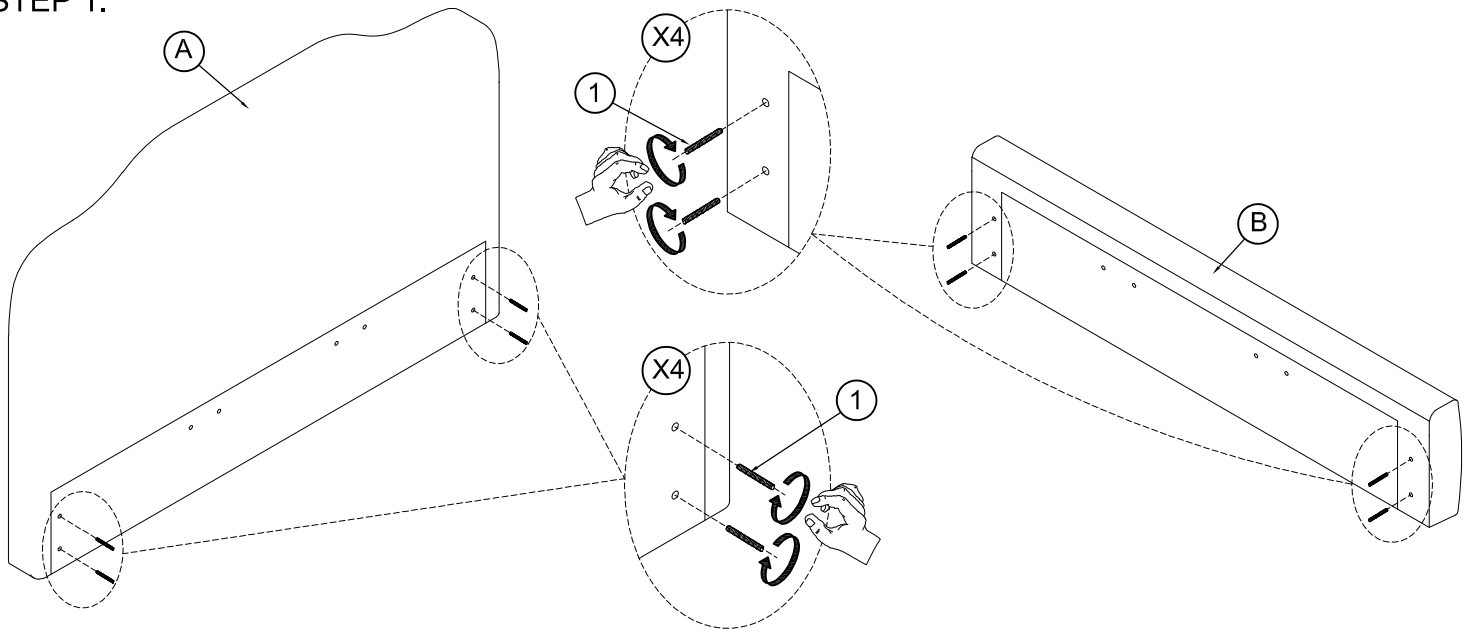

STEP 2:

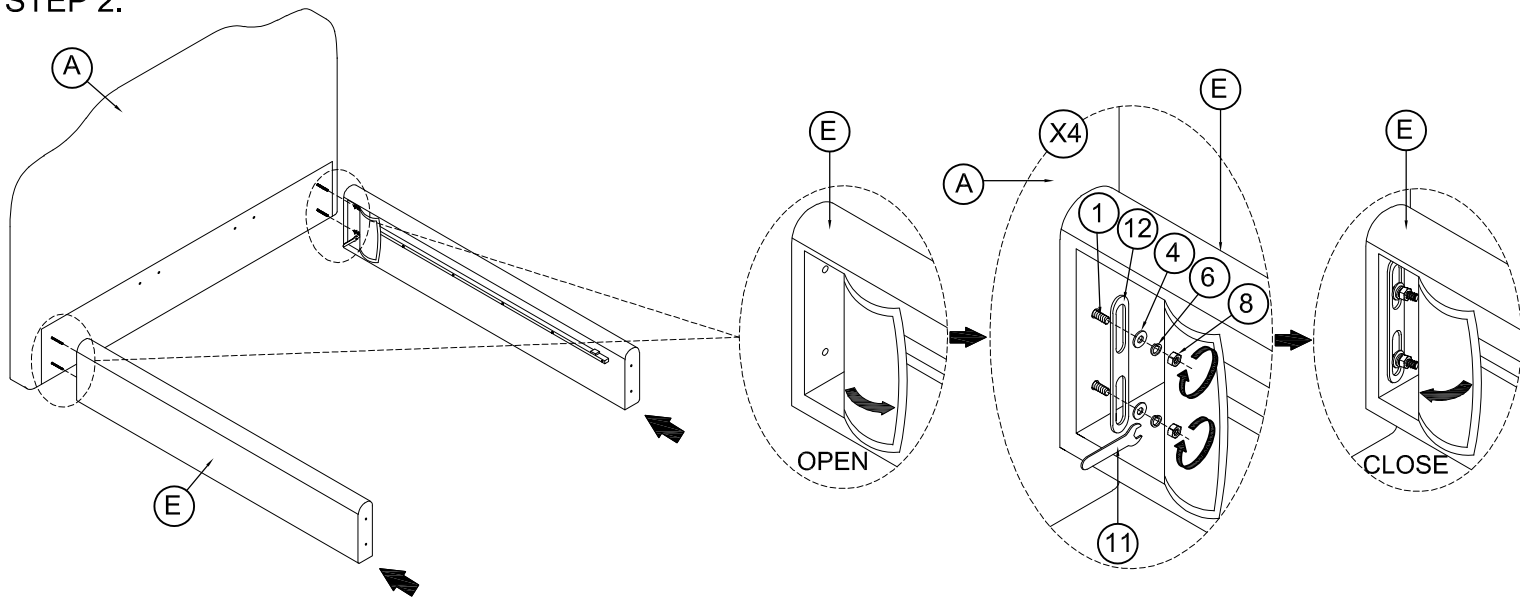


STEP 3:

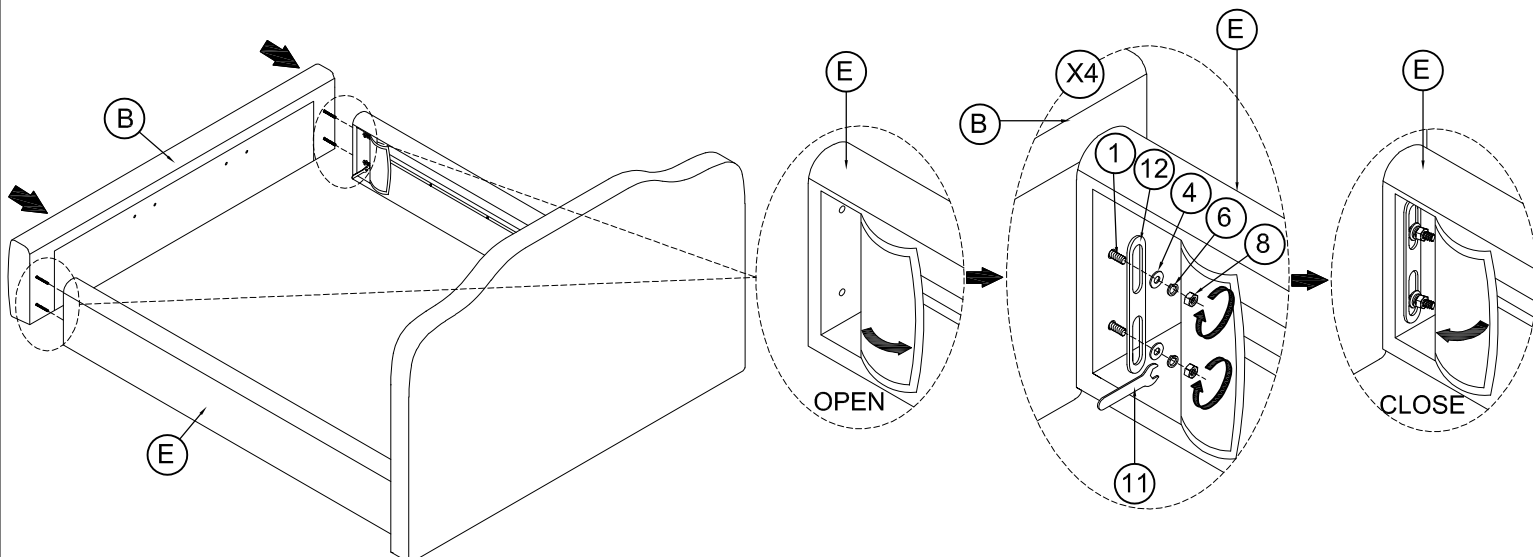

PASADENA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS

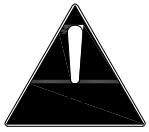


STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4-8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

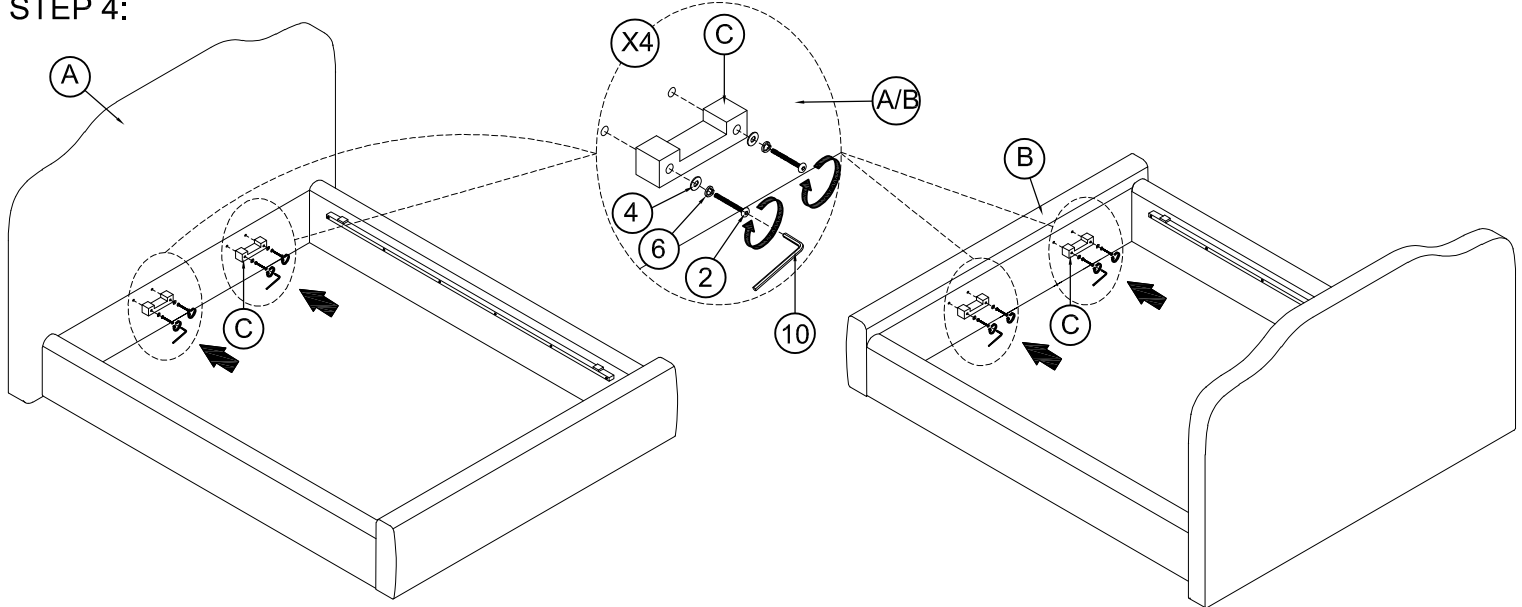

STEP 5:

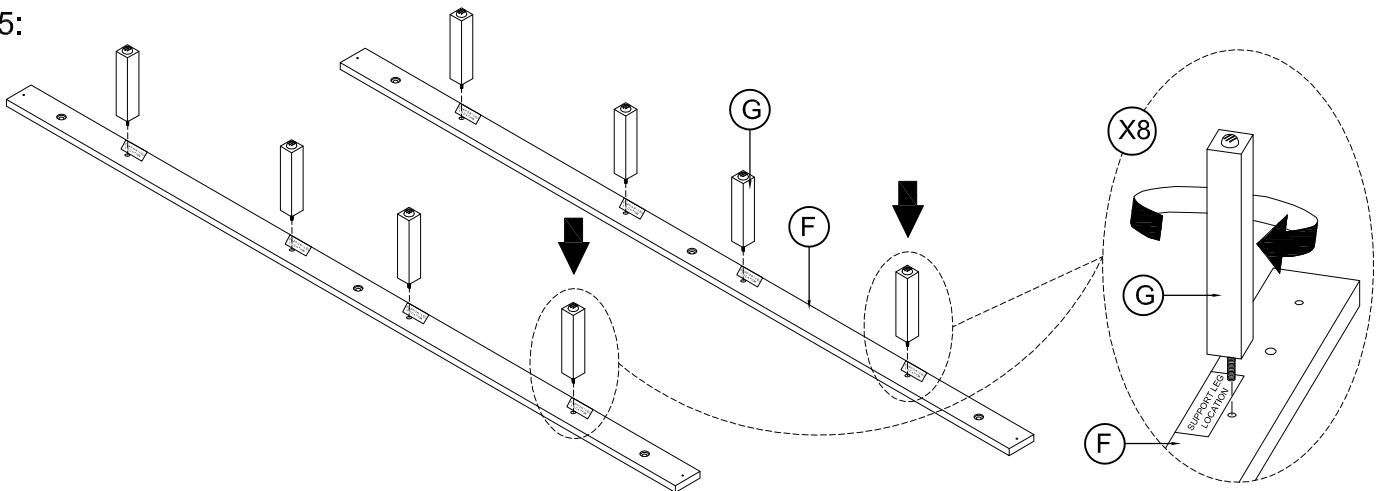

STEP 6:

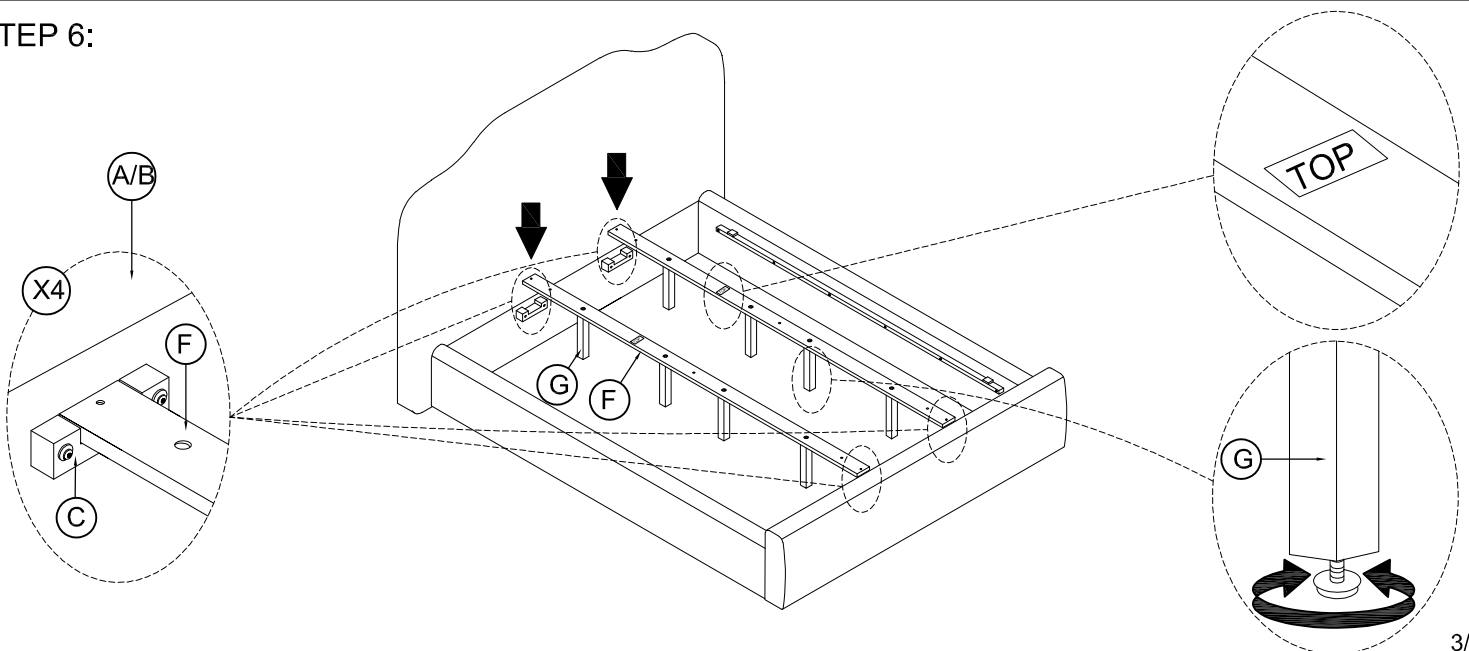


PASADENA UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

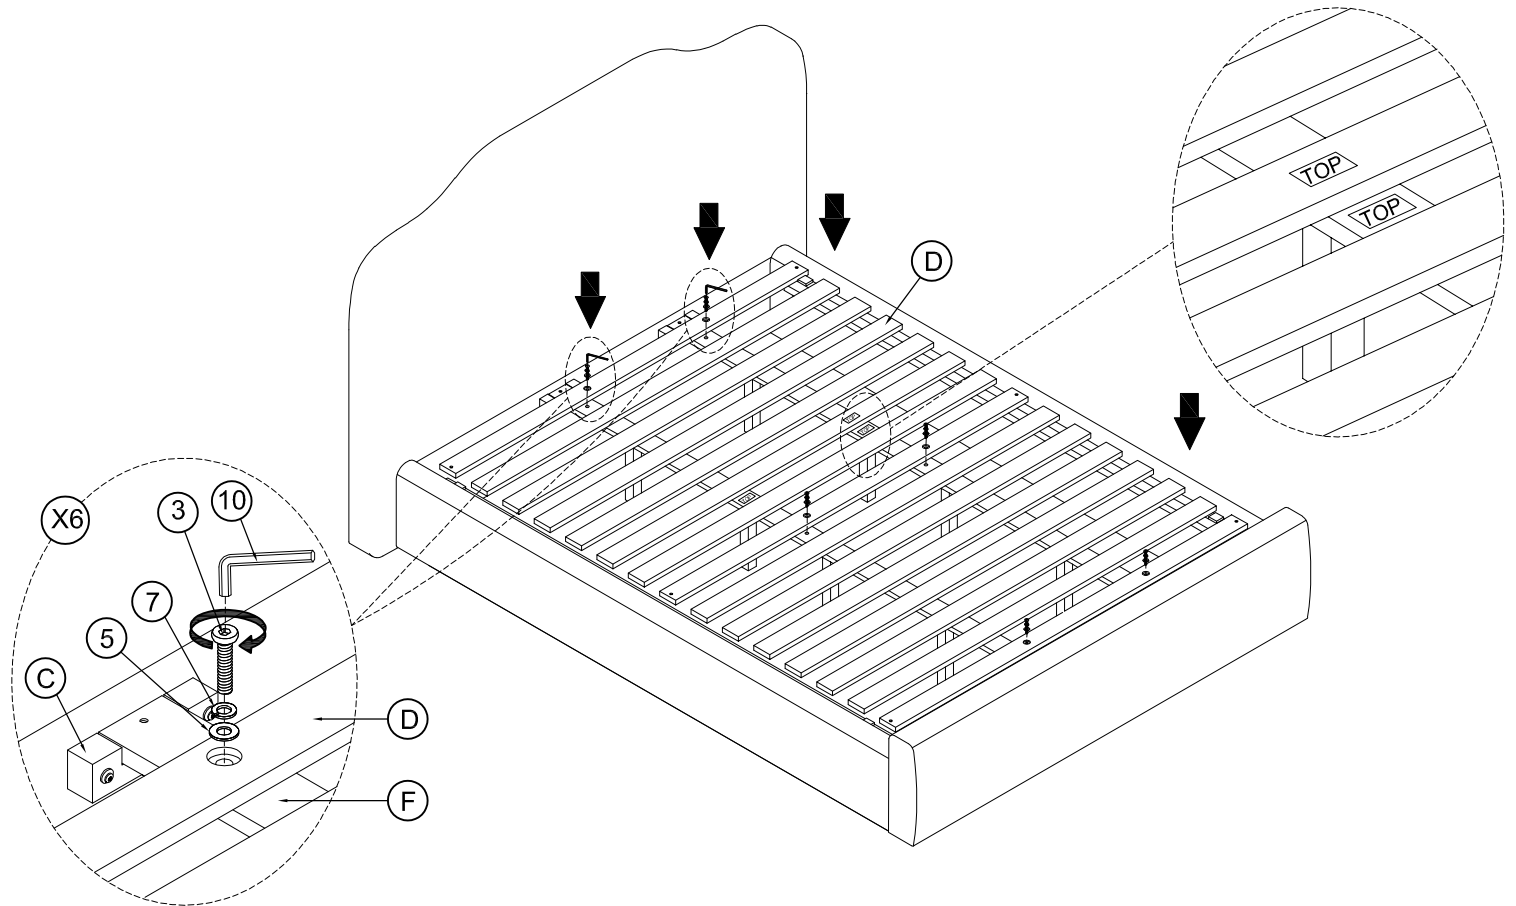


STEP 8:

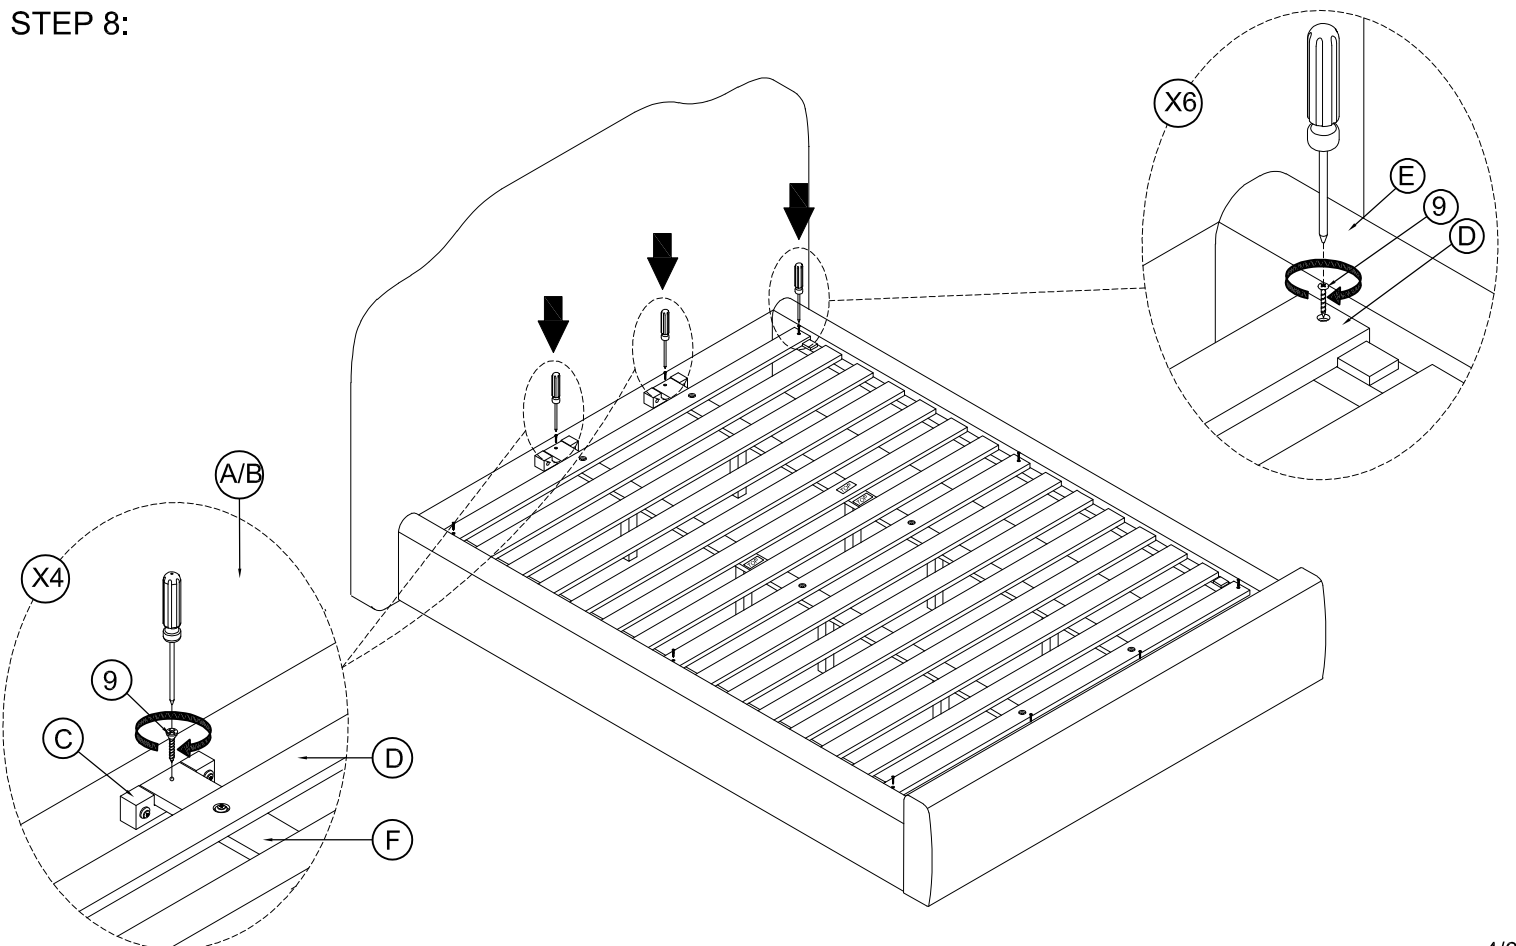

PASADENA UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

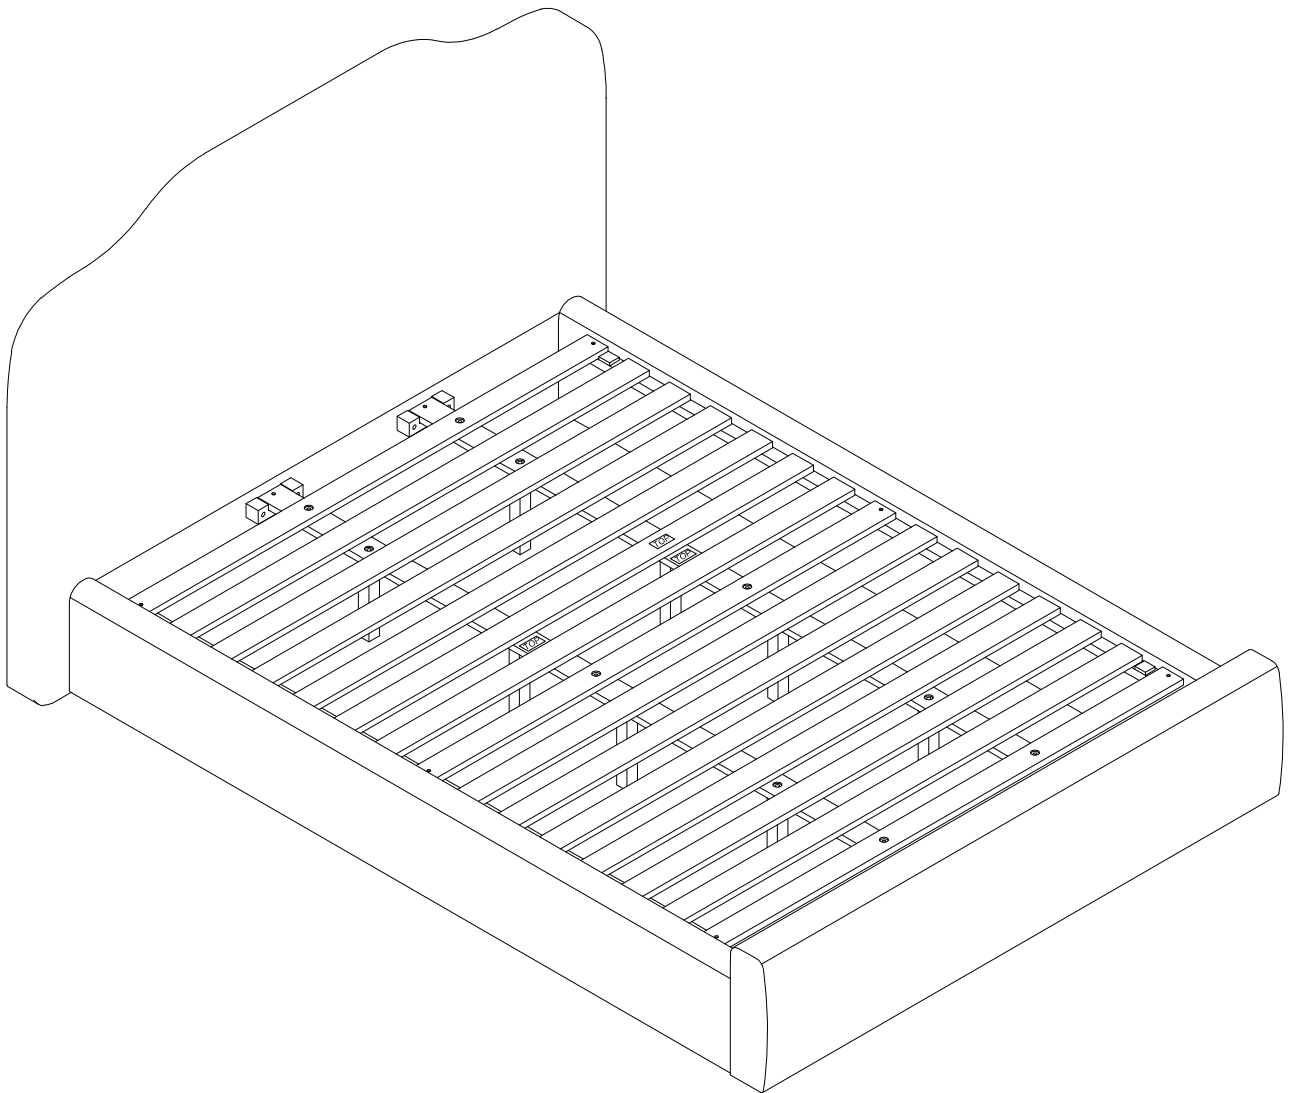


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.

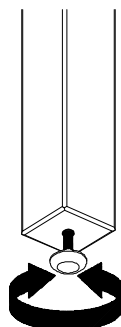

MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

PASADENA UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C.CENTER SLAT SUPPORT CLEAT	4 PCS
D. SLAT ROLL	1 SET
F. CENTER SLAT SUPPORT	2 PCS
G SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (10) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

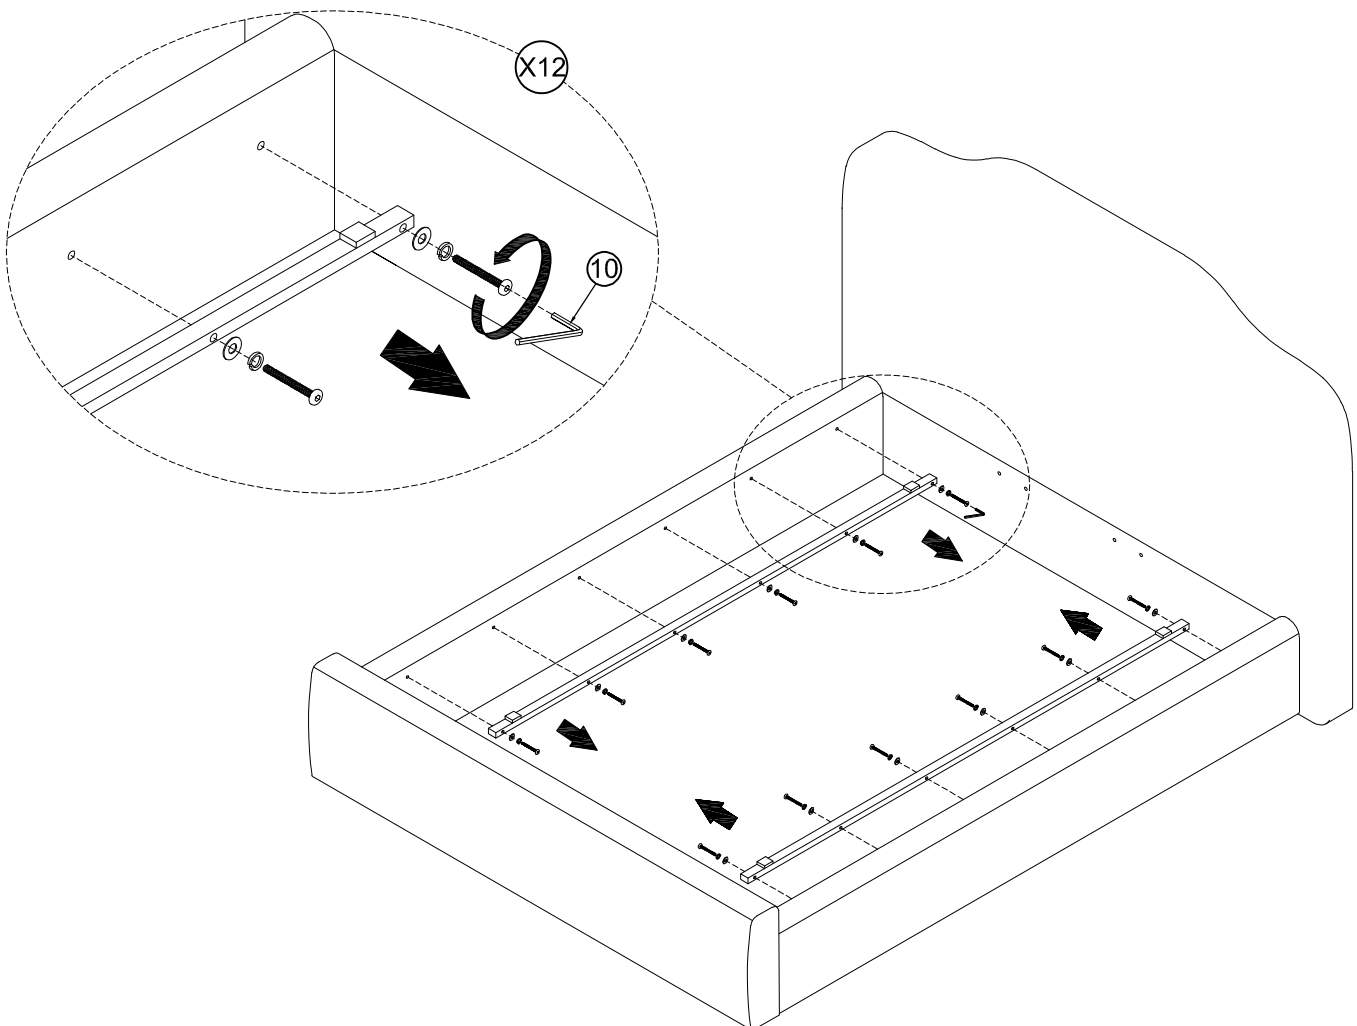

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION