

ONE COL. UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

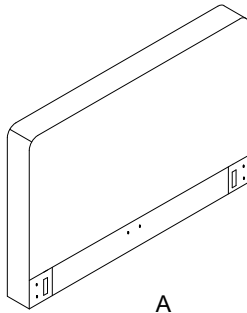

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (6 x 45mm)		4 PCS
2	FLAT WASHER (6 x 16mm)		8 PCS
3	LOCK WASHER (6 x 16mm)		8 PCS
4	ALLEN KEY (6mm)		1 PC
5	HEX NUT (6mm)		4 PCS
6	WRENCH		1 PC

BOX#2

B. FOOTBOARD


1 PC

C. CENTER SLAT SUPPORT CLEAT


2 PCS

D. SLAT ROLL

1 SET

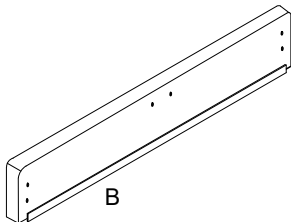

B

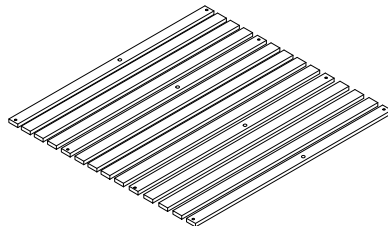

D



C

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
7	THREADED BOLT (8 x 90mm)		8 PCS
8	ALLEN BOLT (6 x 50mm)		4 PCS
9	ALLEN BOLT (6 x 30mm)		4 PCS
10	FLAT WASHER (8 x 22mm)		8 PCS
11	FLAT WASHER (6 x 16mm)		8 PCS
12	LOCK WASHER (8 x 22mm)		8 PCS
13	LOCK WASHER (6 x 16mm)		8 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		10 PCS
16	ALLEN KEY (6mm)		1 PC
17	WRENCH		1 PC
18	CONNECTING BRACKET		4 PCS

BOX#3

E. LEFT SIDE RAIL

1 PC

F. RIGHT SIDE RAIL


1 PC

G. CENTER SLAT SUPPORT


1 PC

H. SUPPORT LEG


4 PCS

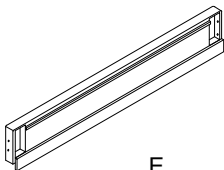

E

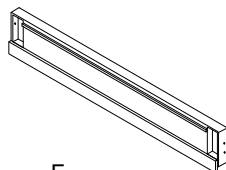

F



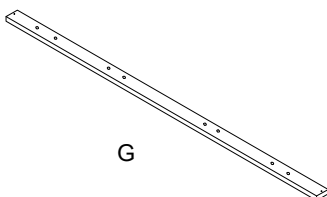


G




H

FULLY ASSEMBLED

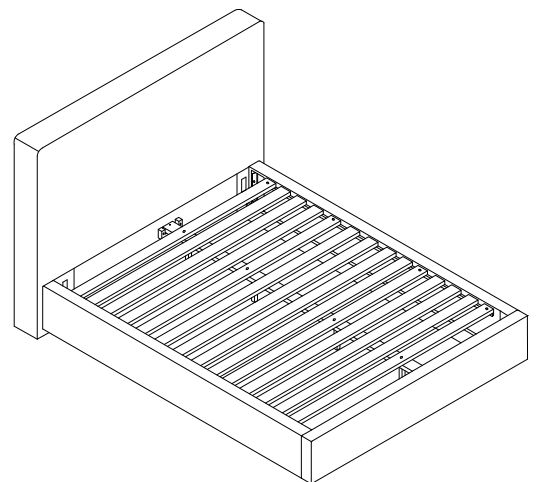


ONE COL. UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS


STEP 1:

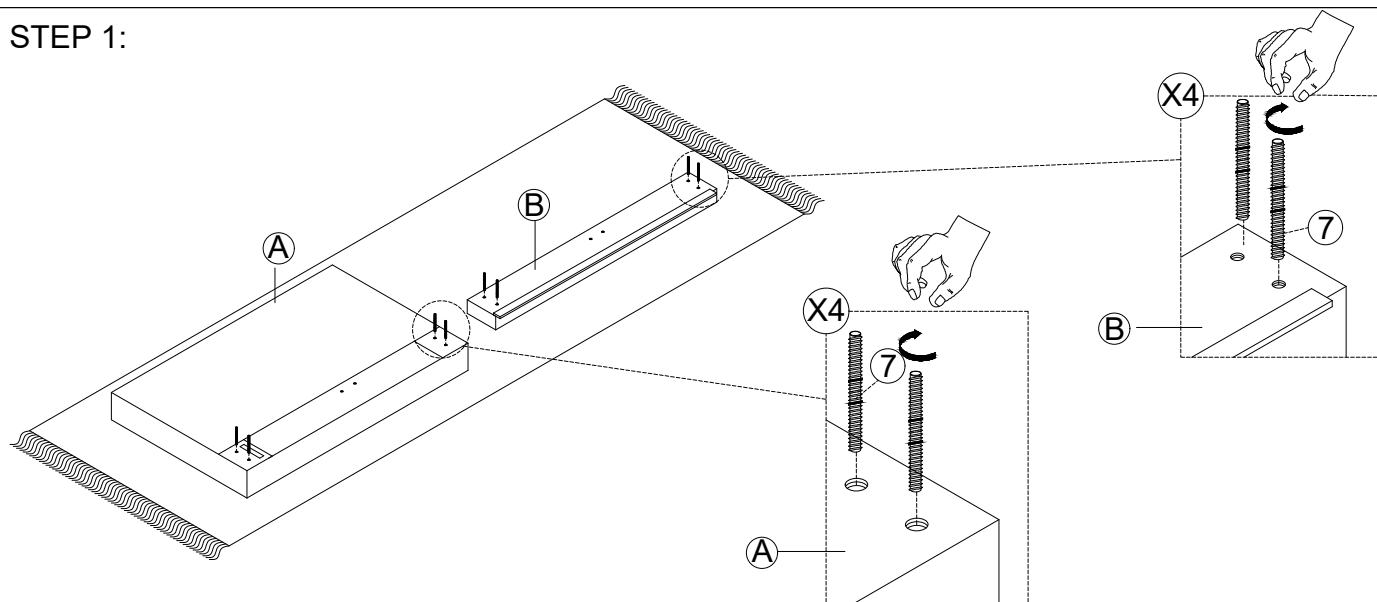

STEP 2:

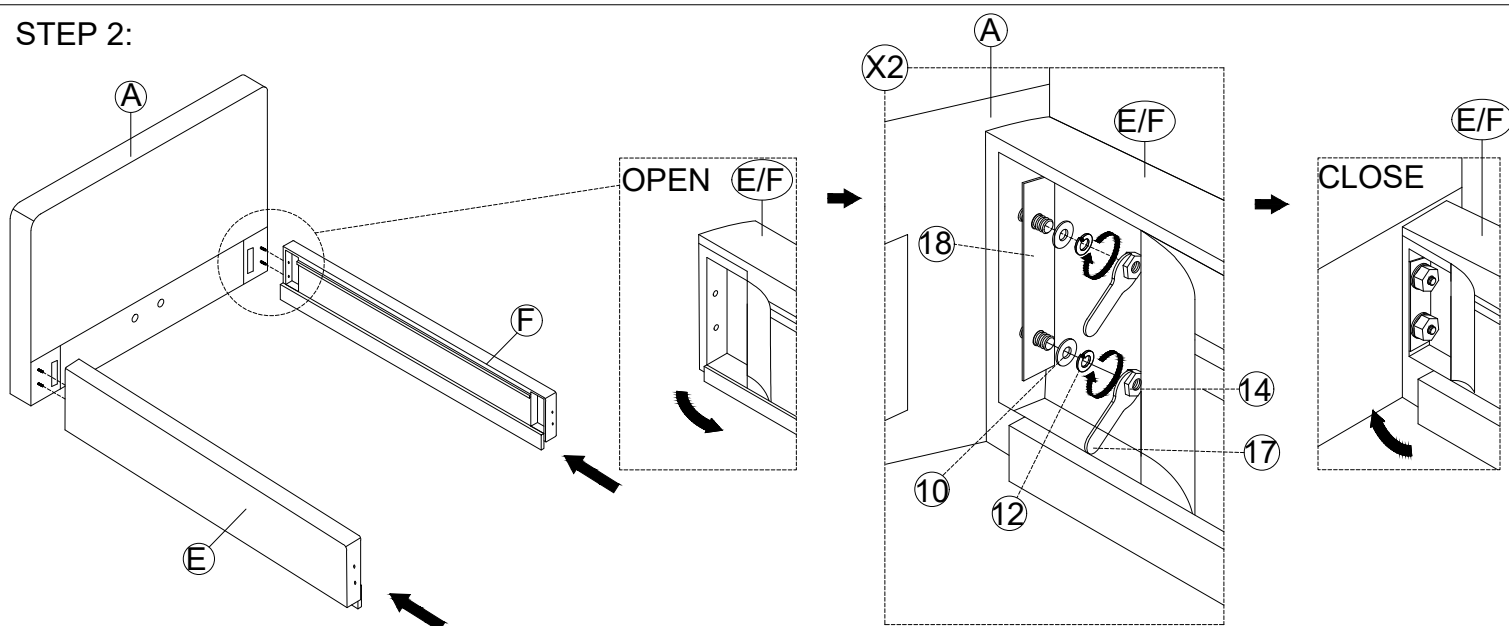

STEP 3:

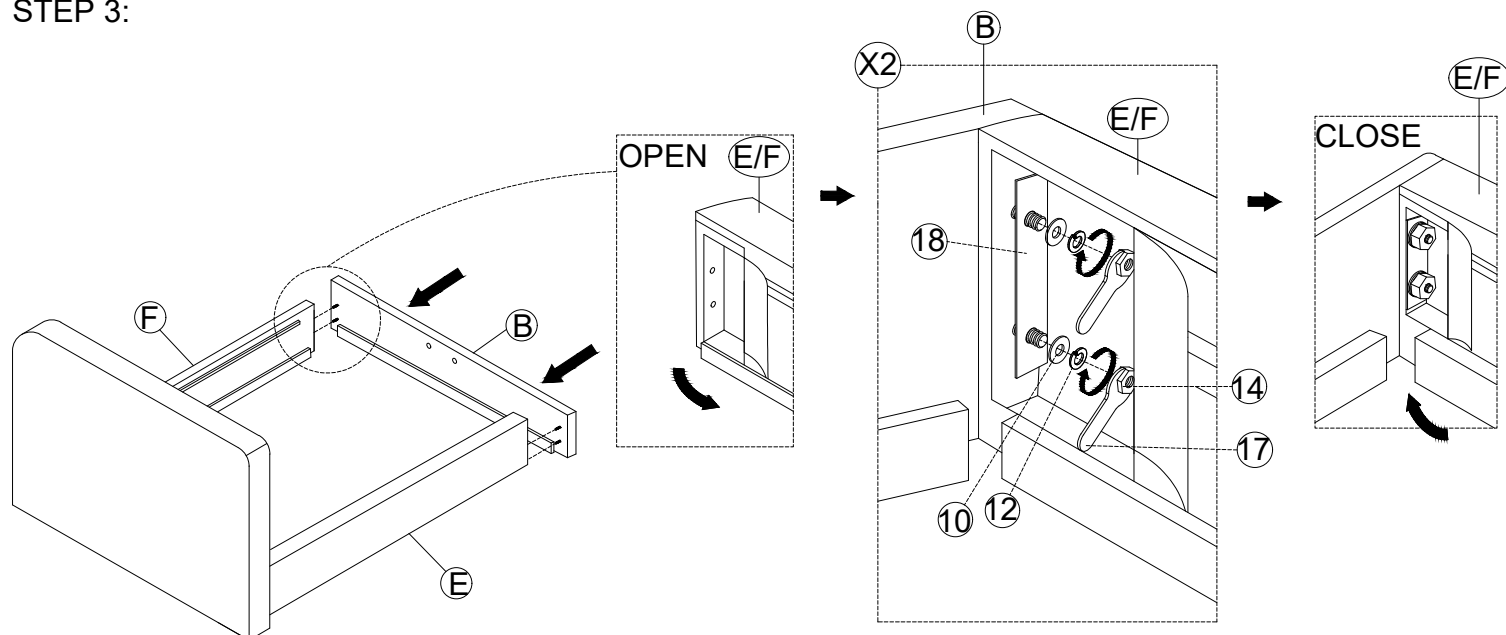


ONE COL. UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

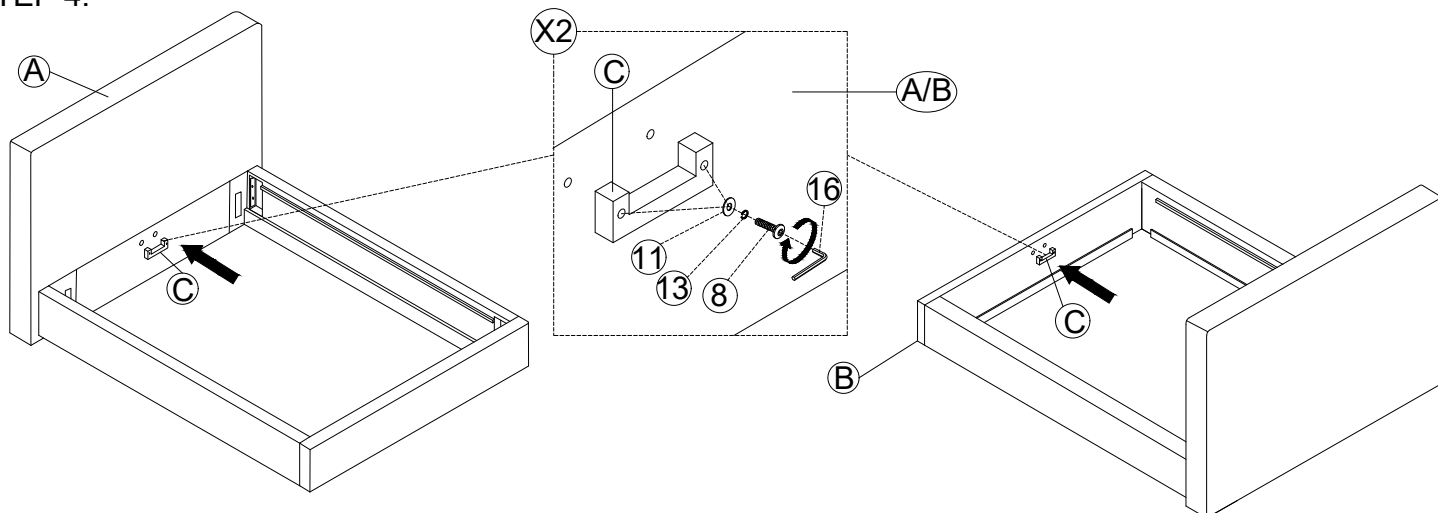

STEP 5:

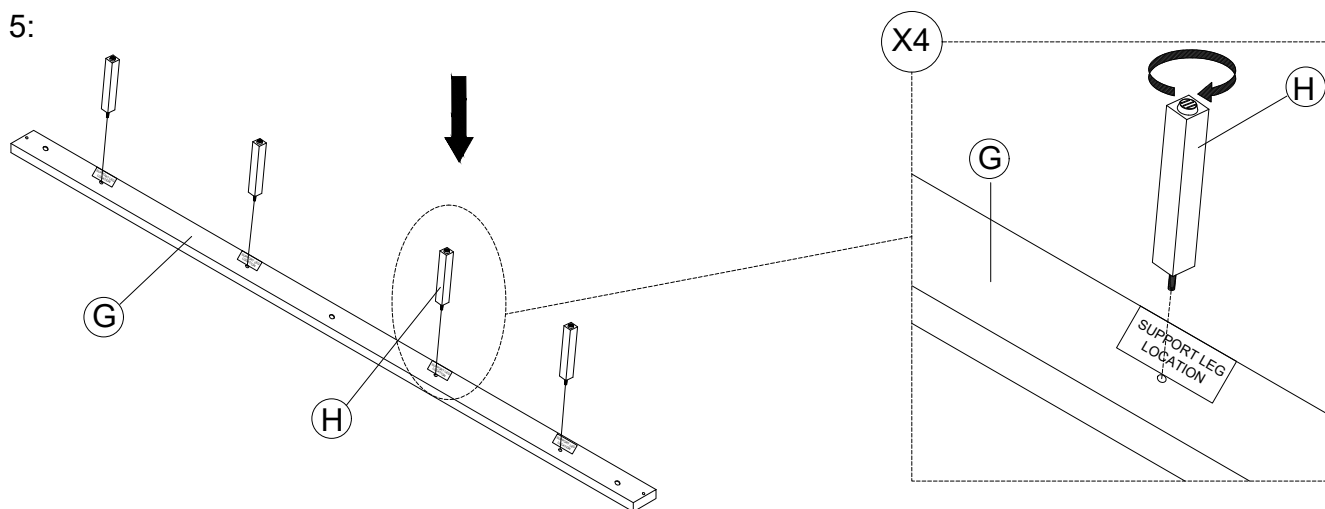

STEP 6:


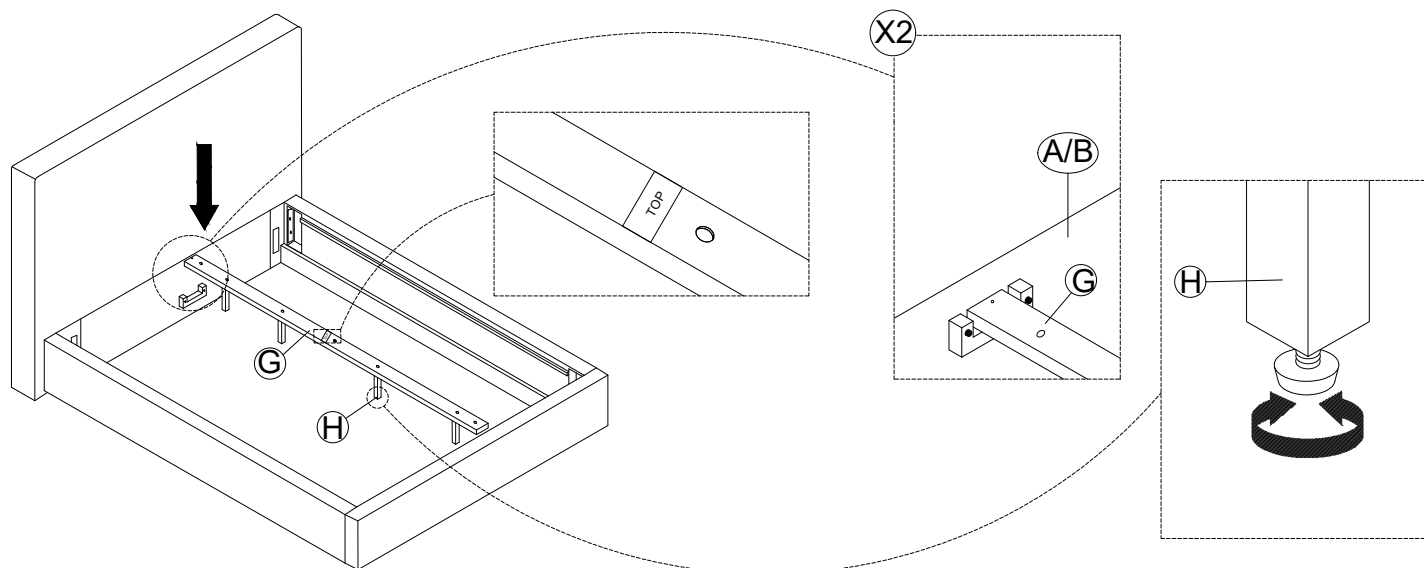


ONE COL. UPHOLSTERED QUEEN BED


ASSEMBLY INSTRUCTIONS




STEP 7:

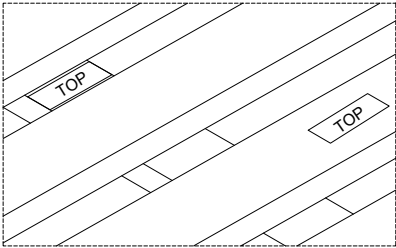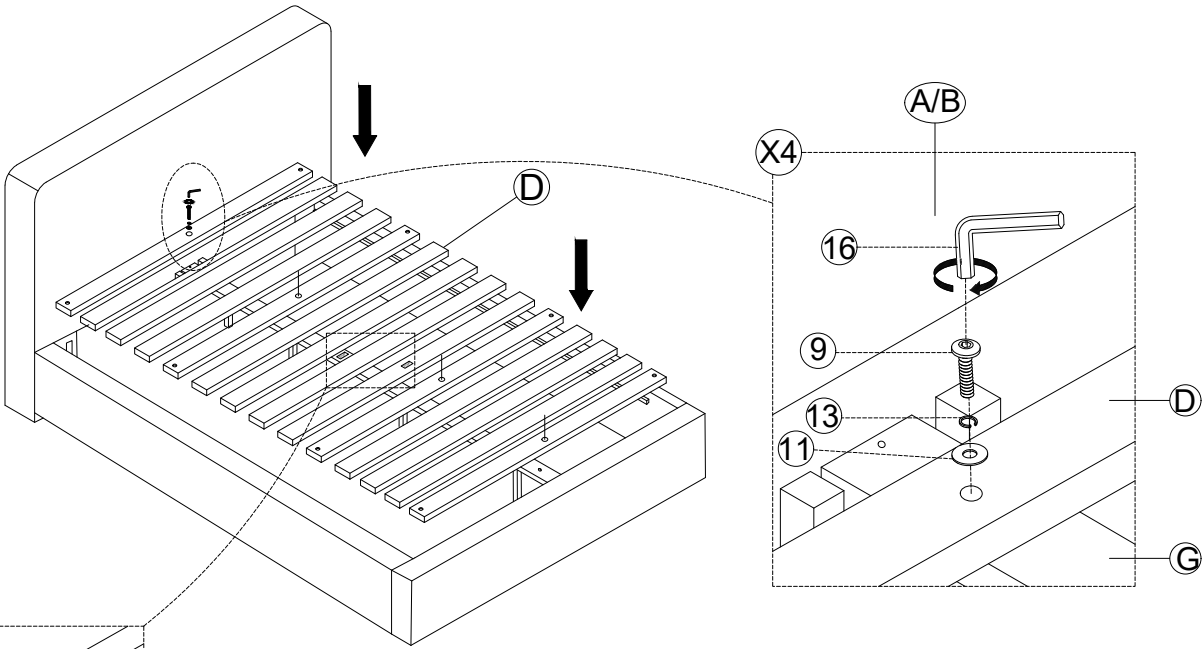

STEP 8:

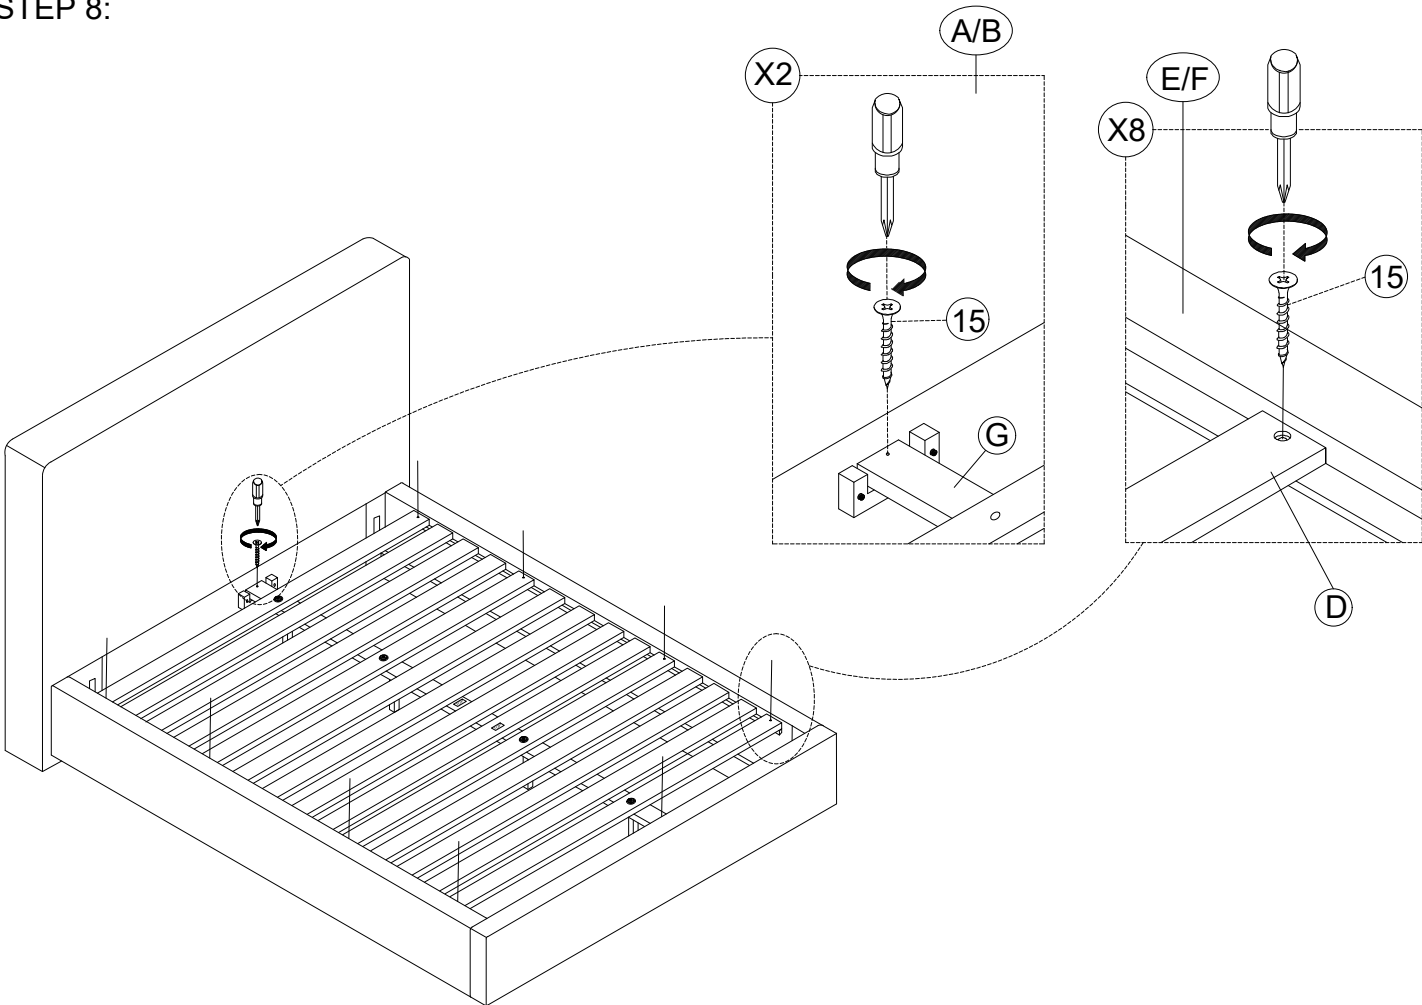

ONE COL. UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS

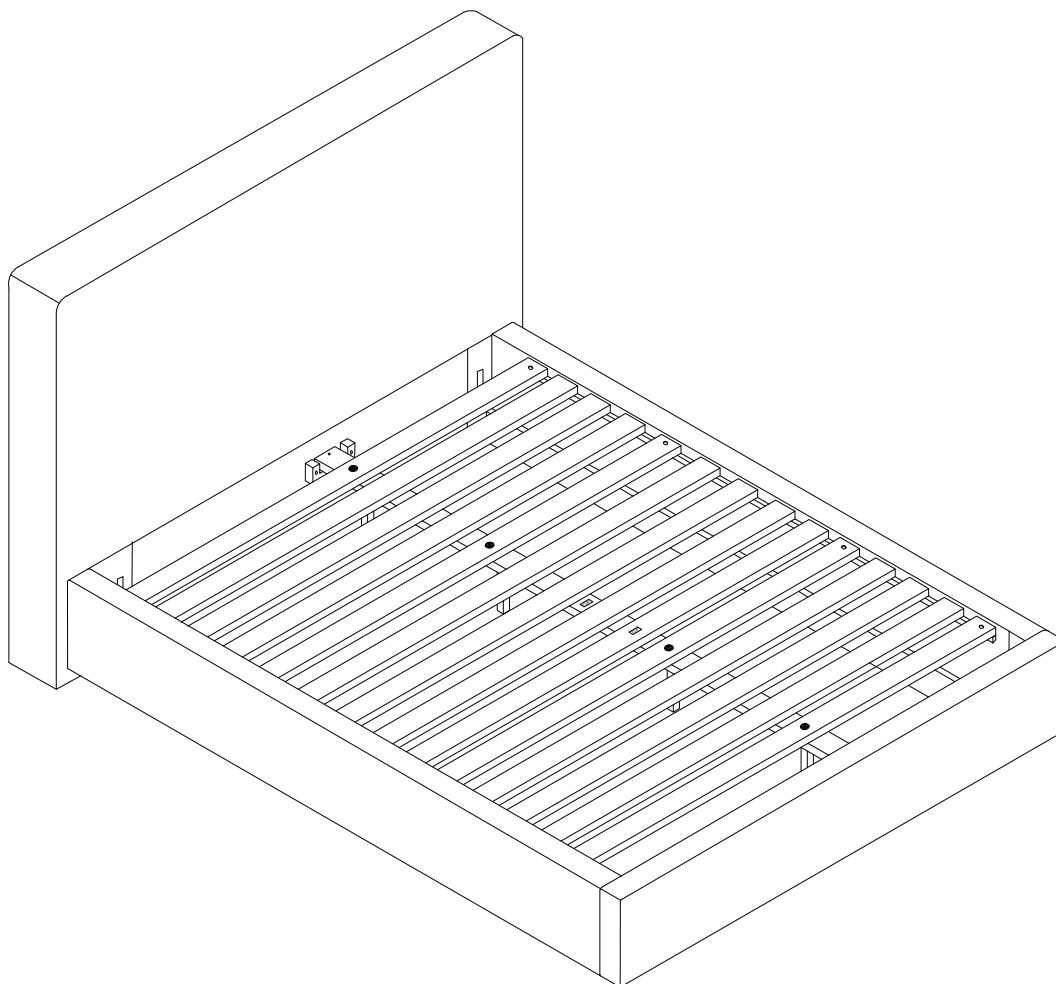


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ONE COL. UPHOLSTERED QUEEN BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. CENTER SLAT SUPPORT CLEAT	2 PCS
D. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	1 PC
H. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

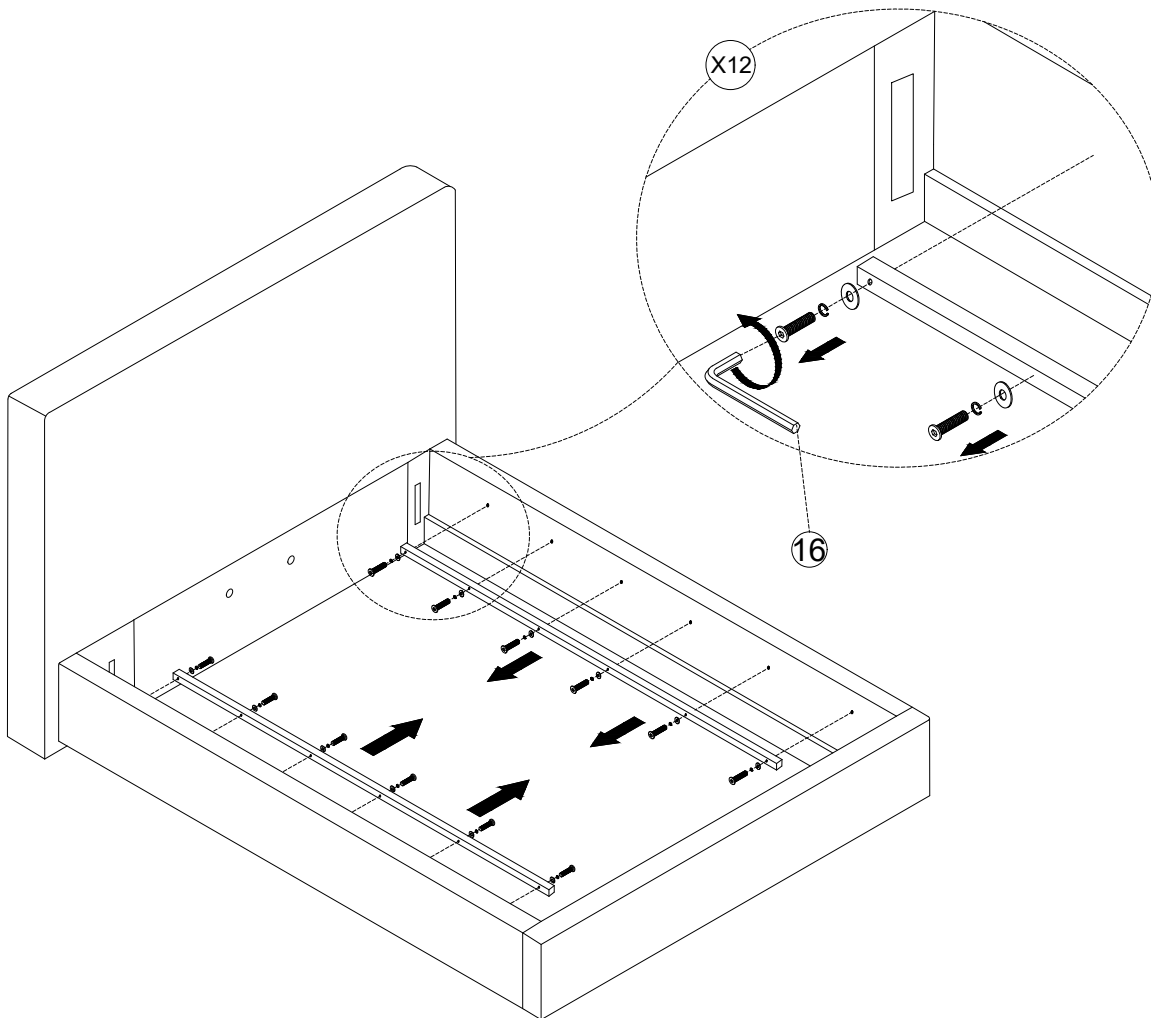

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ONE COL. UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

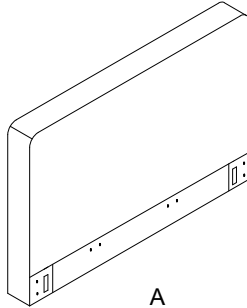

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (6 x 45mm)		4 PCS
2	FLAT WASHER (6 x 16mm)		8 PCS
3	LOCK WASHER (6 x 16mm)		8 PCS
4	ALLEN KEY (6mm)		1 PC
5	HEX NUT (6mm)		4 PCS
6	WRENCH		1 PC

BOX#2

B. FOOTBOARD


1 PC

C. CENTER SLAT SUPPORT CLEAT


4 PCS

D. SLAT ROLL

1 SET

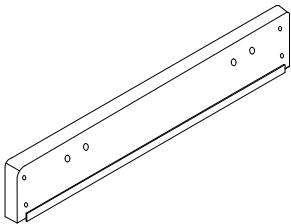

B

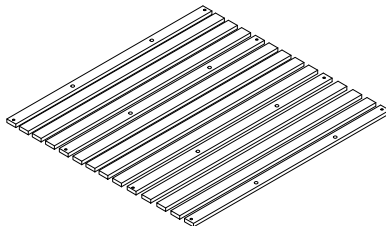

D



C

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
7	THREADED BOLT (8 x 90mm)		8 PCS
8	ALLEN BOLT (6 x 50mm)		8 PCS
9	ALLEN BOLT (6 x 30mm)		8 PCS
10	FLAT WASHER (8 x 22mm)		8 PCS
11	FLAT WASHER (6 x 16mm)		16 PCS
12	LOCK WASHER (8 x 22mm)		8 PCS
13	LOCK WASHER (6 x 16mm)		16 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		12 PCS
16	ALLEN KEY (6mm)		1 PC
17	WRENCH		1 PC
18	CONNECTING BRACKET		4 PCS

BOX#3

E. LEFT SIDE RAIL

1 PC

F. RIGHT SIDE RAIL


1 PC

G. CENTER SLAT SUPPORT


2 PCS

H. SUPPORT LEG


8 PCS

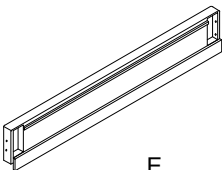

E

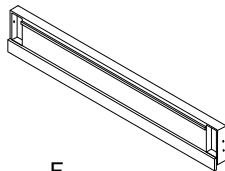

F


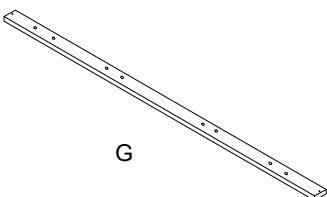


G



H

FULLY ASSEMBLED

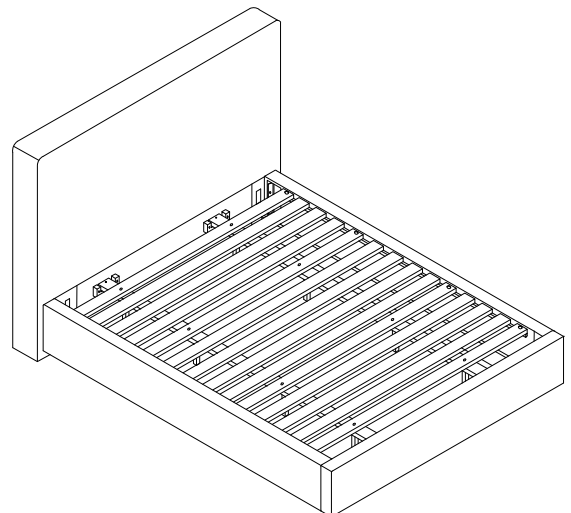


ONE COL. UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

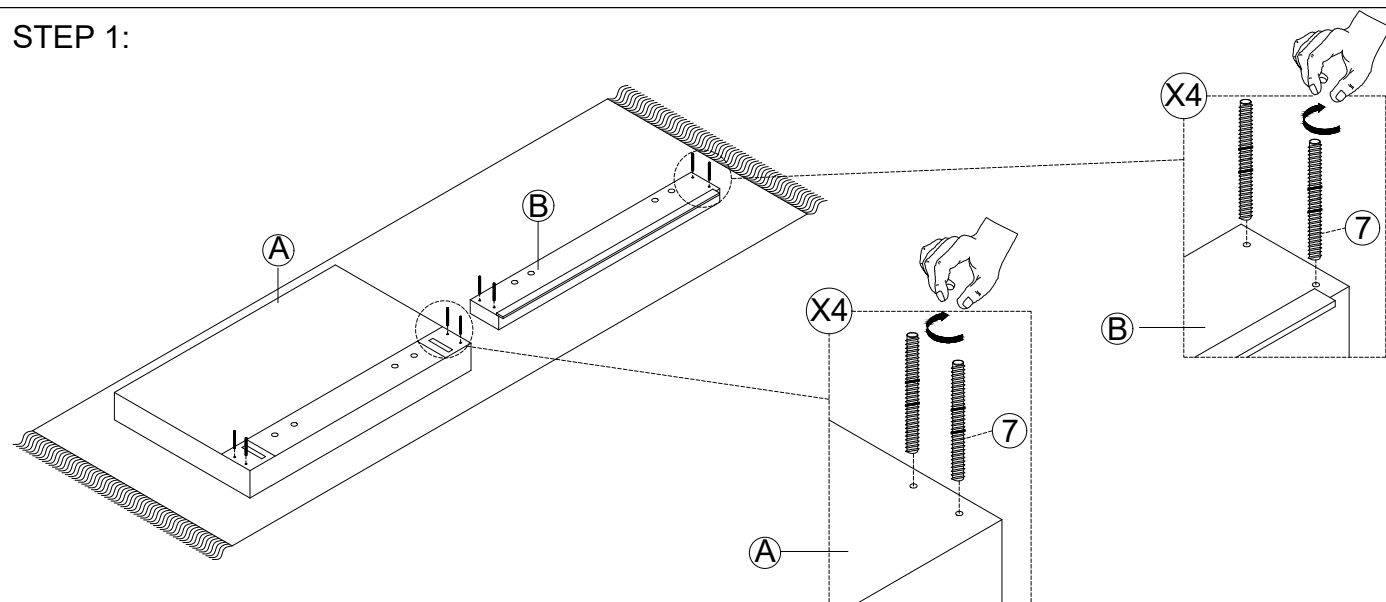

STEP 2:

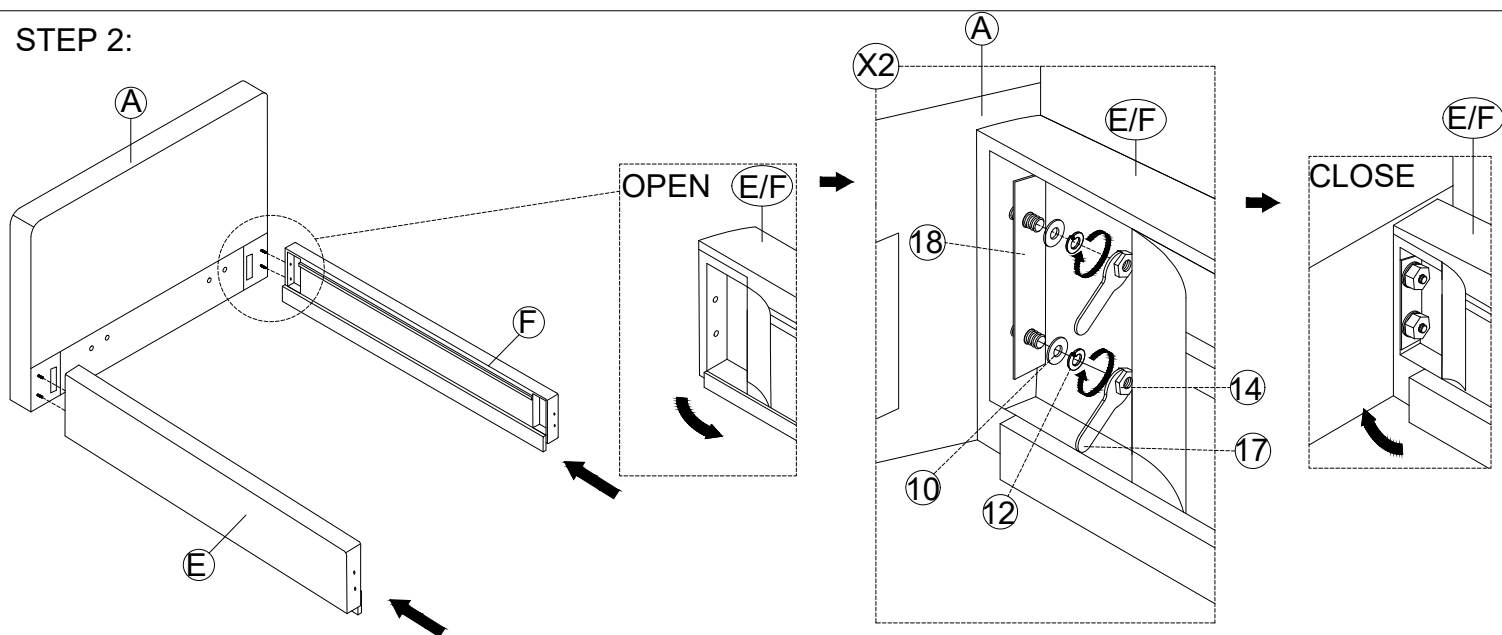

STEP 3:

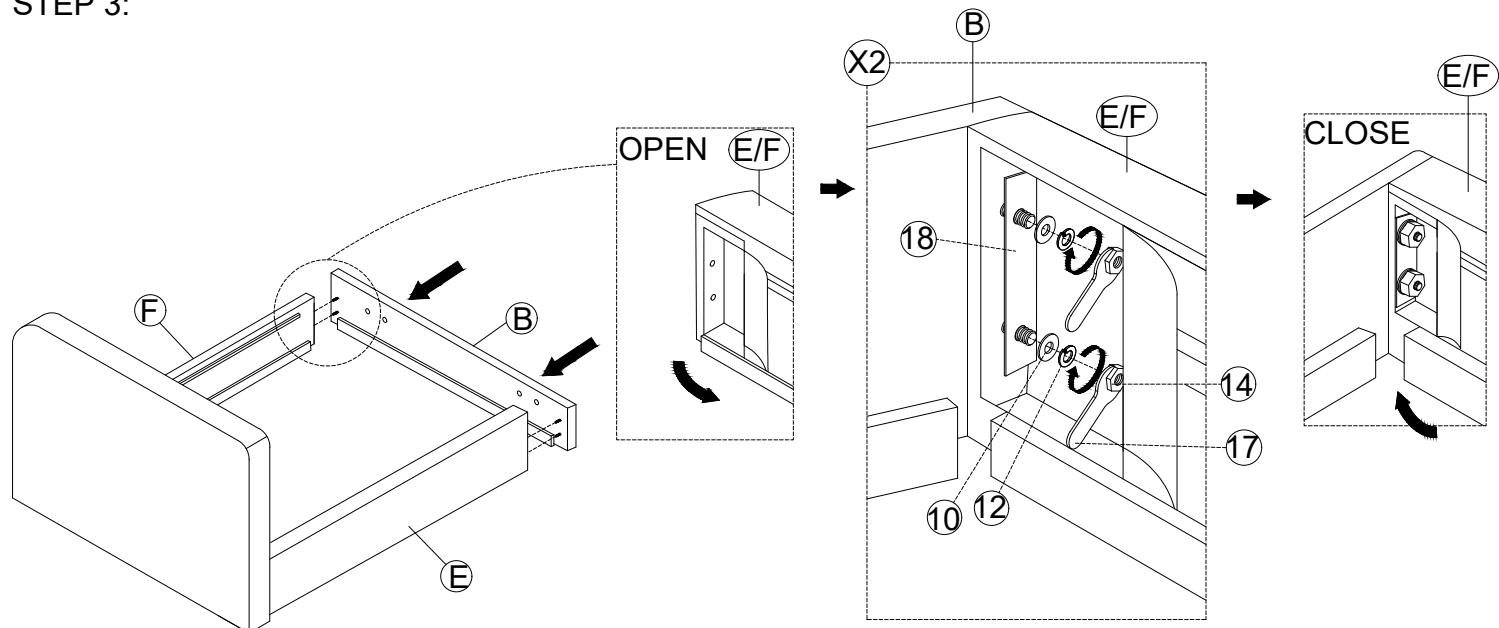

ONE COL. UPHOLSTERED KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

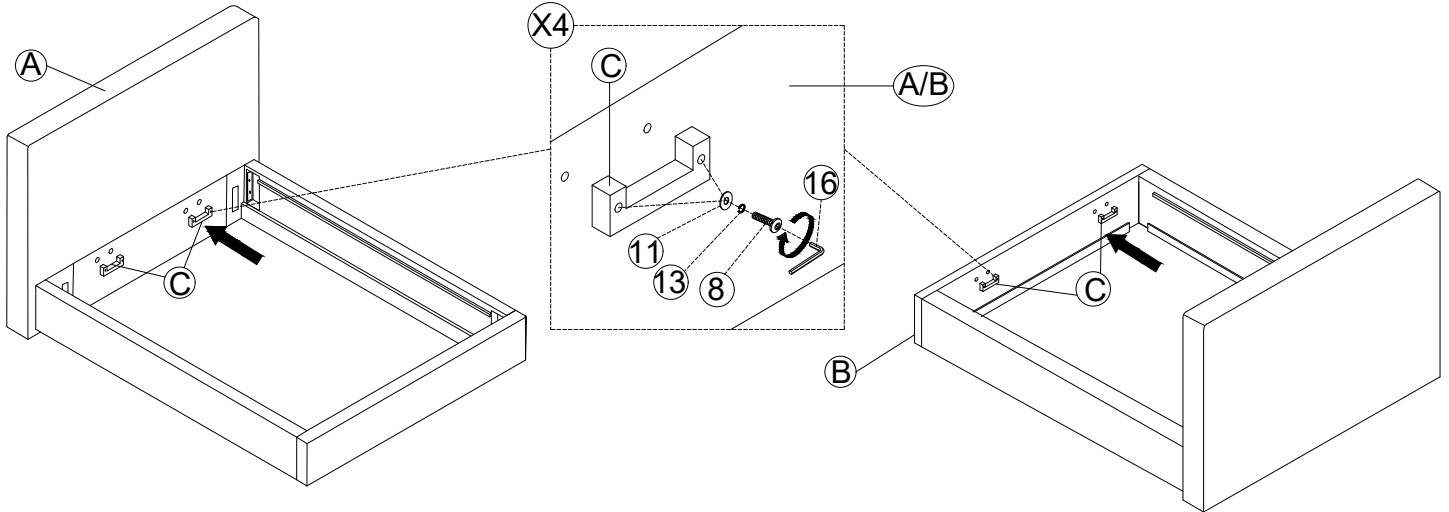





STEP 5:

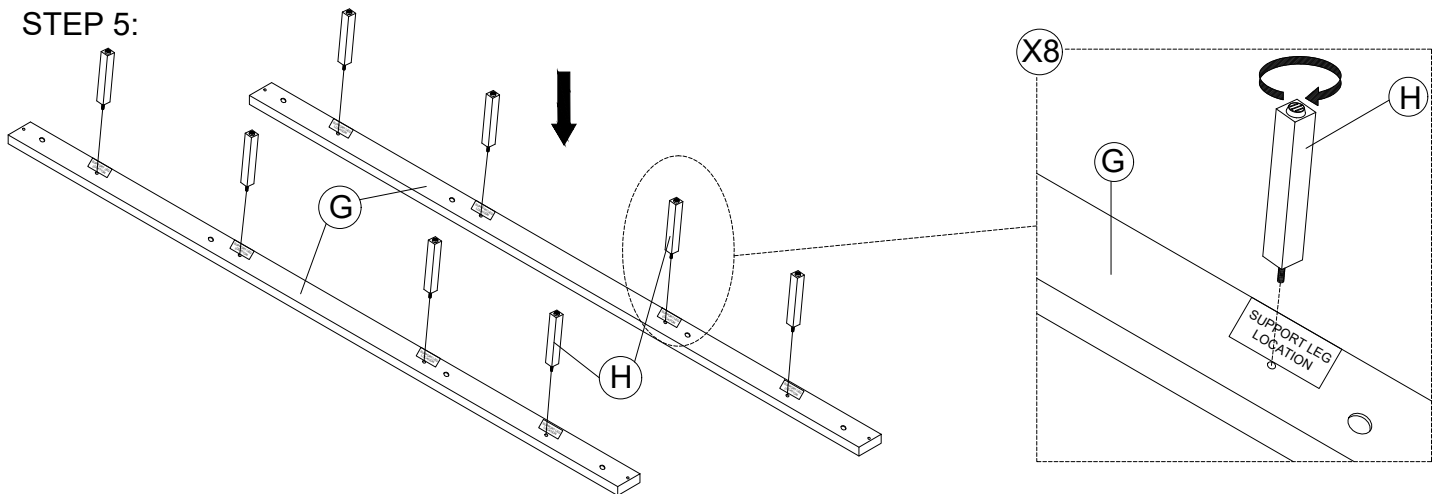


STEP 6:

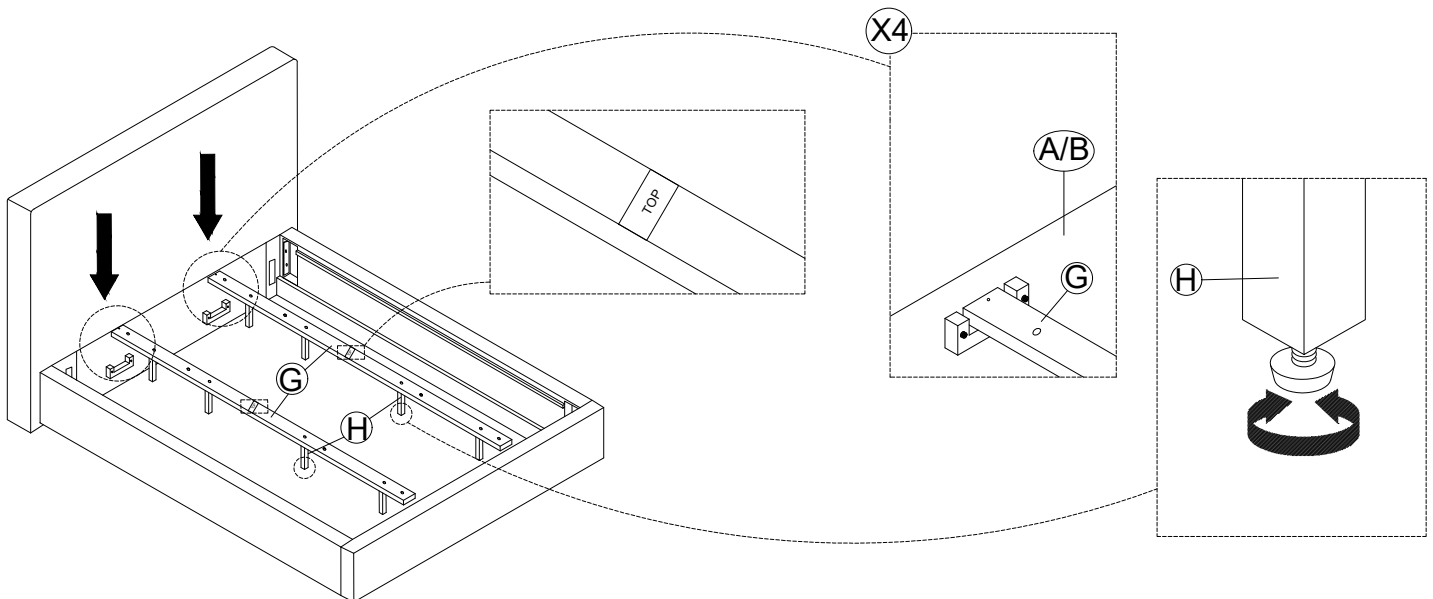

MODUS
FURNITURE

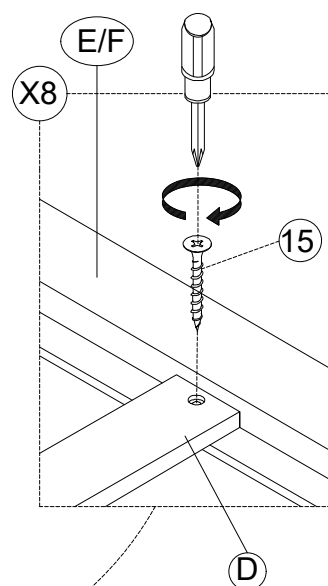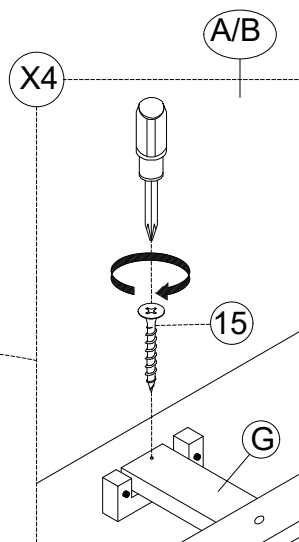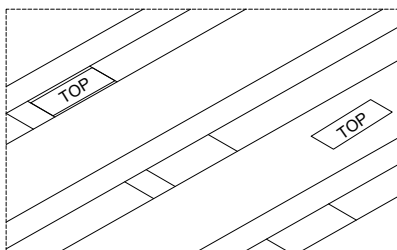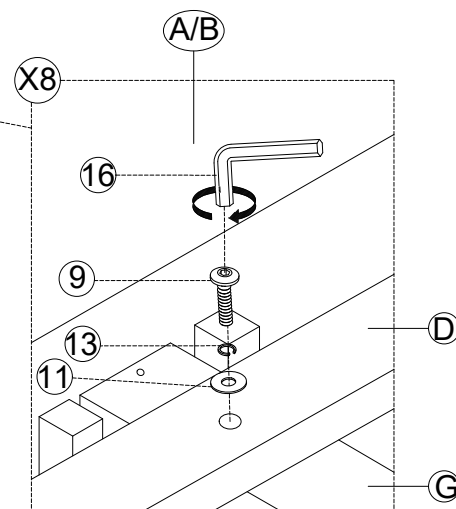

ONE COL. UPHOLSTERED KING BED ASSEMBLY INSTRUCTIONS

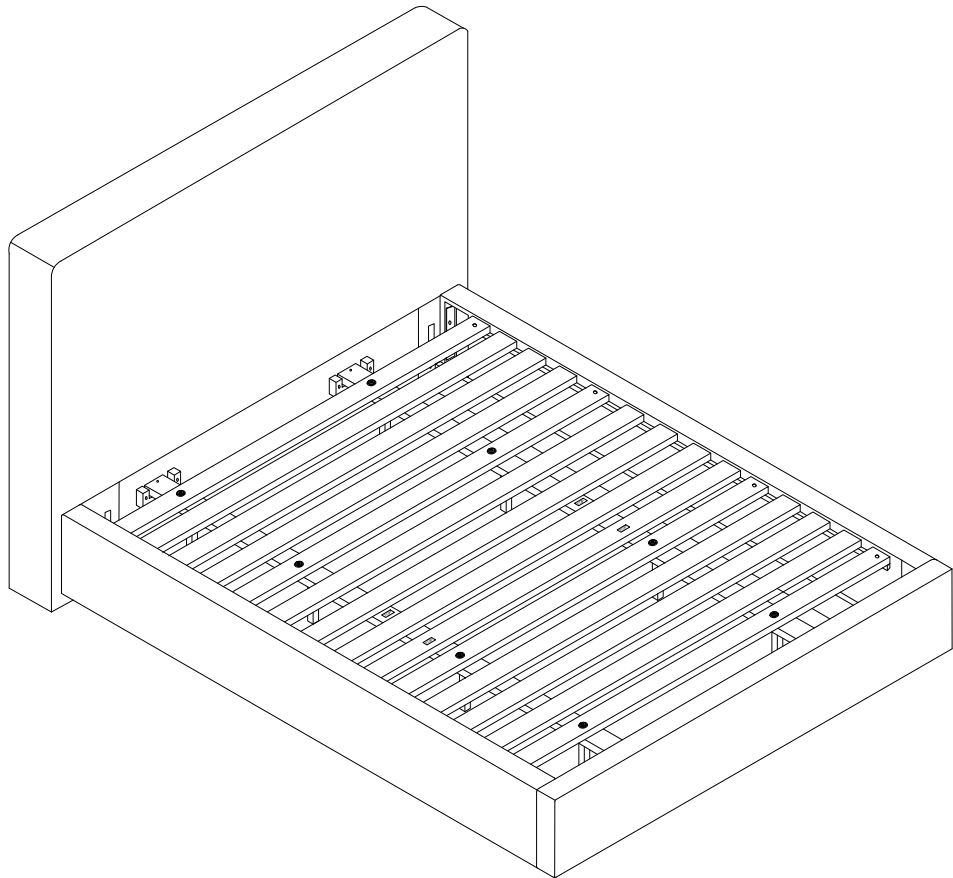


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ONE COL. UPHOLSTERED KING BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. CENTER SLAT SUPPORT CLEAT	4 PCS
D. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	2 PCS
H. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

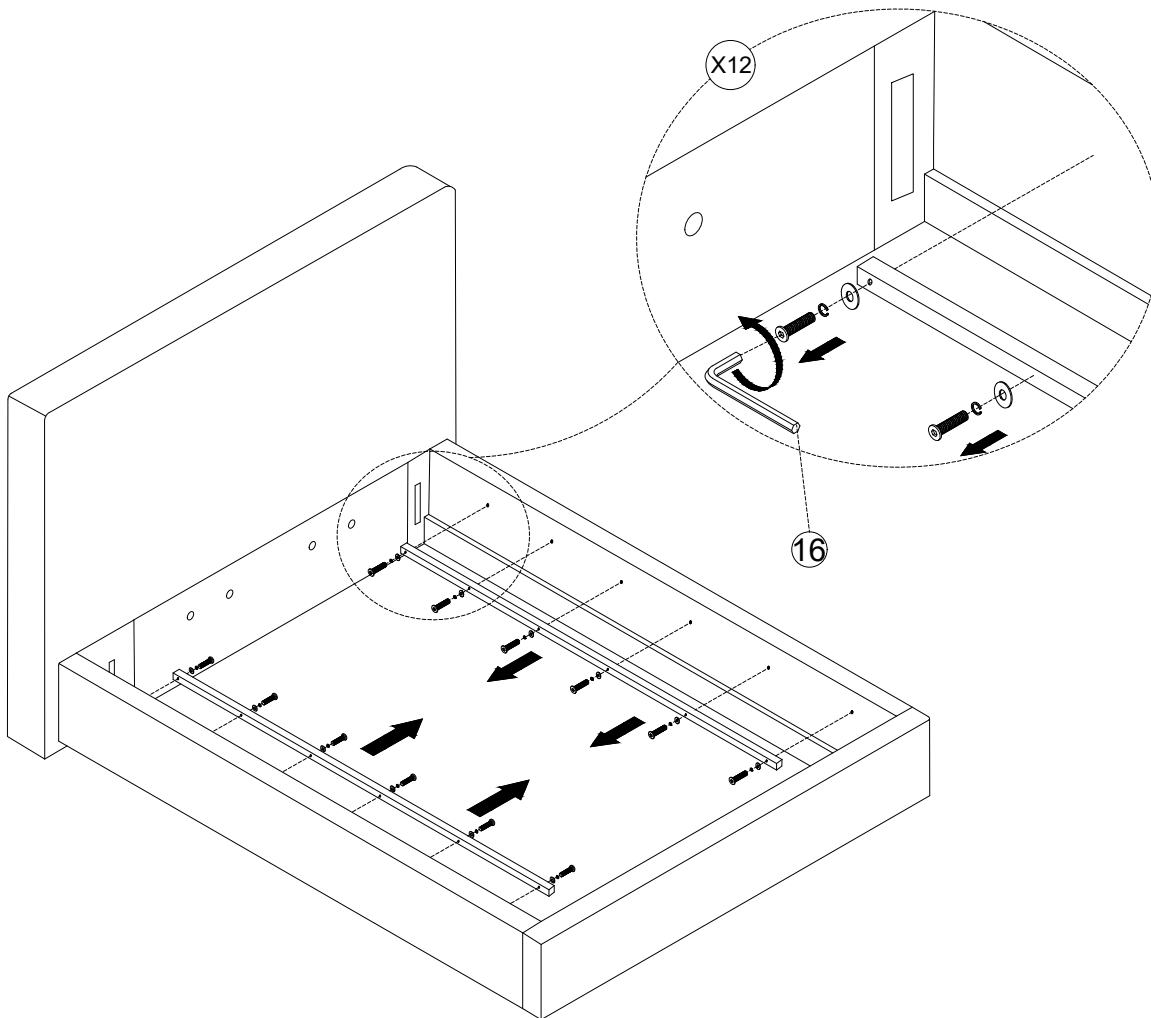

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ONE COL. UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

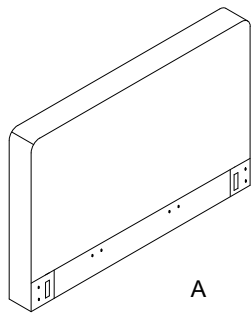

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (6 x 45mm)		4 PCS
2	FLAT WASHER (6 x 16mm)		8 PCS
3	LOCK WASHER (6 x 16mm)		8 PCS
4	ALLEN KEY (6mm)		1 PC
5	HEX NUT (6mm)		4 PCS
6	WRENCH		1 PC

BOX#2

B. FOOTBOARD


1 PC

C. CENTER SLAT SUPPORT CLEAT


4 PCS

D. SLAT ROLL

1 SET

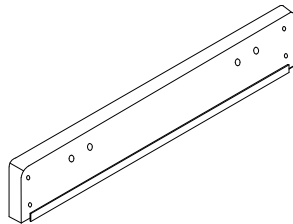

B

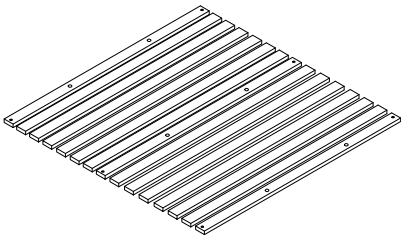

D



C

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
7	THREADED BOLT (8 x 90mm)		8 PCS
8	ALLEN BOLT (6 x 50mm)		8 PCS
9	ALLEN BOLT (6 x 30mm)		6 PCS
10	FLAT WASHER (8 x 22mm)		8 PCS
11	FLAT WASHER (6 x 16mm)		14 PCS
12	LOCK WASHER (8 x 22mm)		8 PCS
13	LOCK WASHER (6 x 16mm)		14 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		10 PCS
16	ALLEN KEY (6mm)		1 PC
17	WRENCH		1 PC
18	CONNECTING BRACKET		4 PCS

BOX#3

E. LEFT SIDE RAIL

1 PC

F. RIGHT SIDE RAIL


1 PC

G. CENTER SLAT SUPPORT


2 PCS

H. SUPPORT LEG


8 PCS

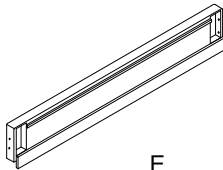

E

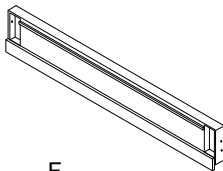

F



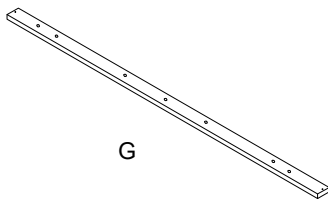


G



H

FULLY ASSEMBLED

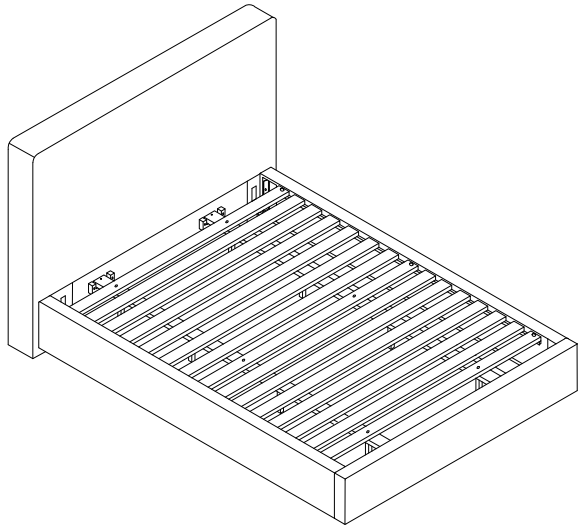


ONE COL. UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STEP 1:

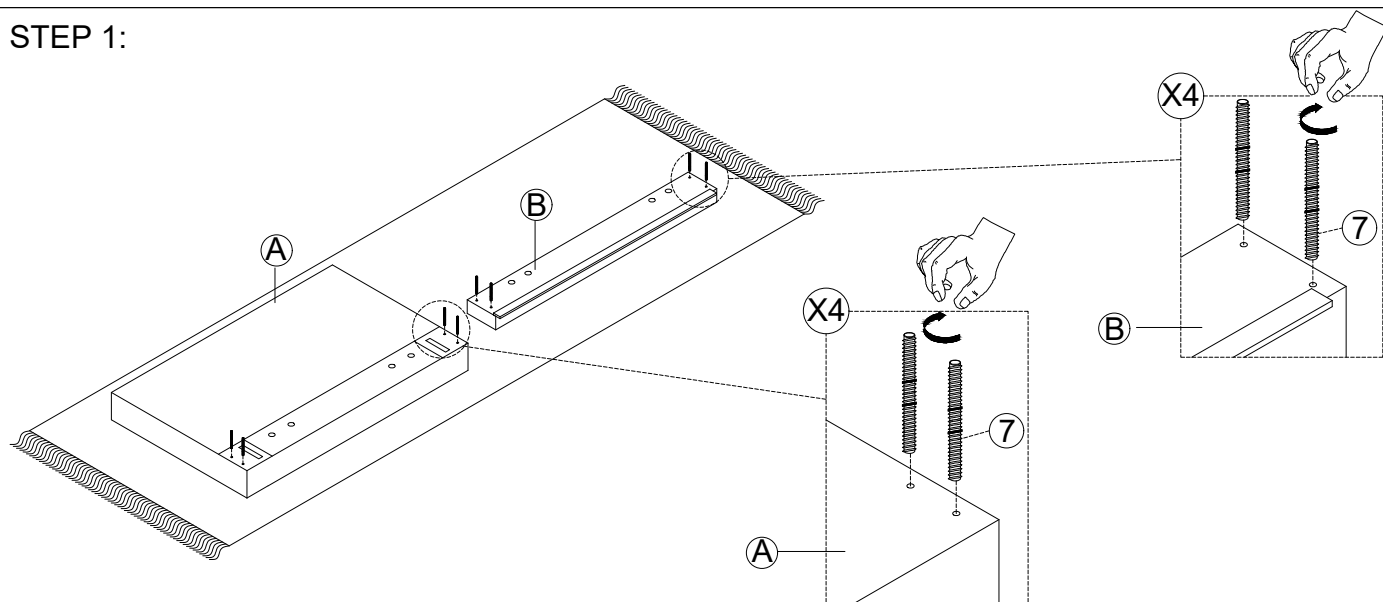

STEP 2:

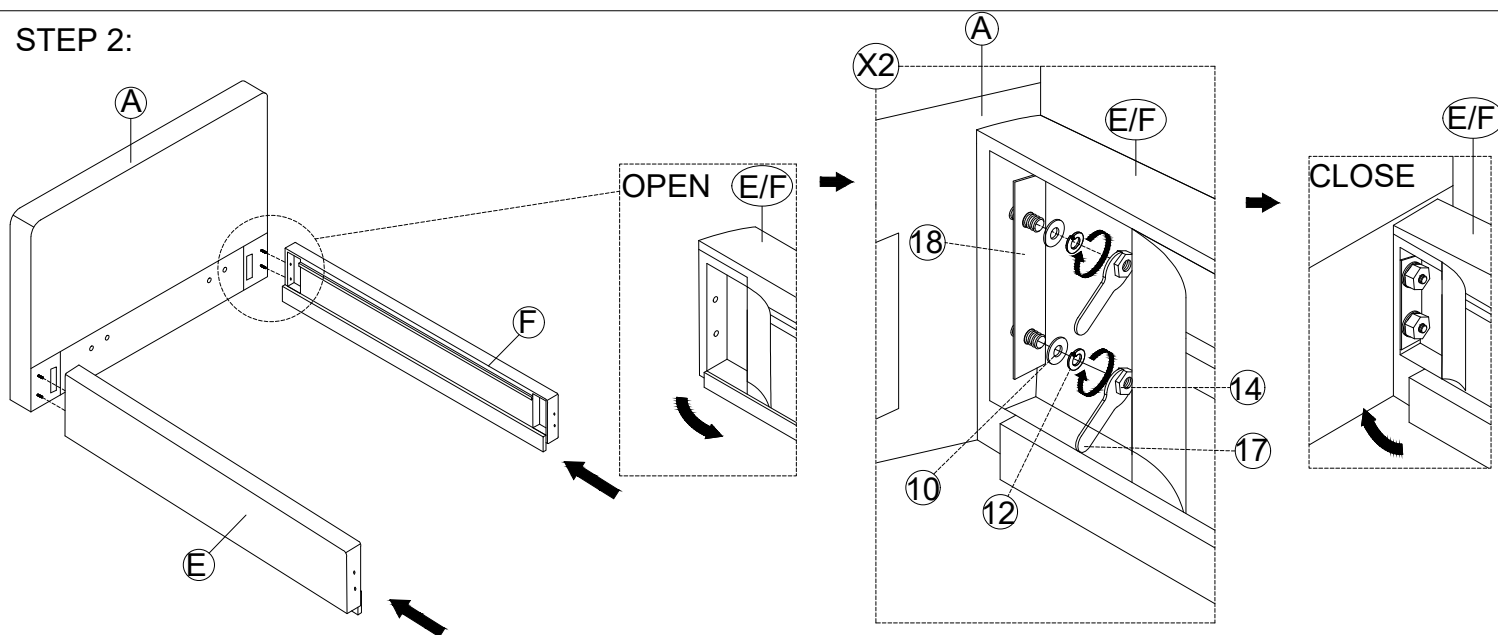

STEP 3:

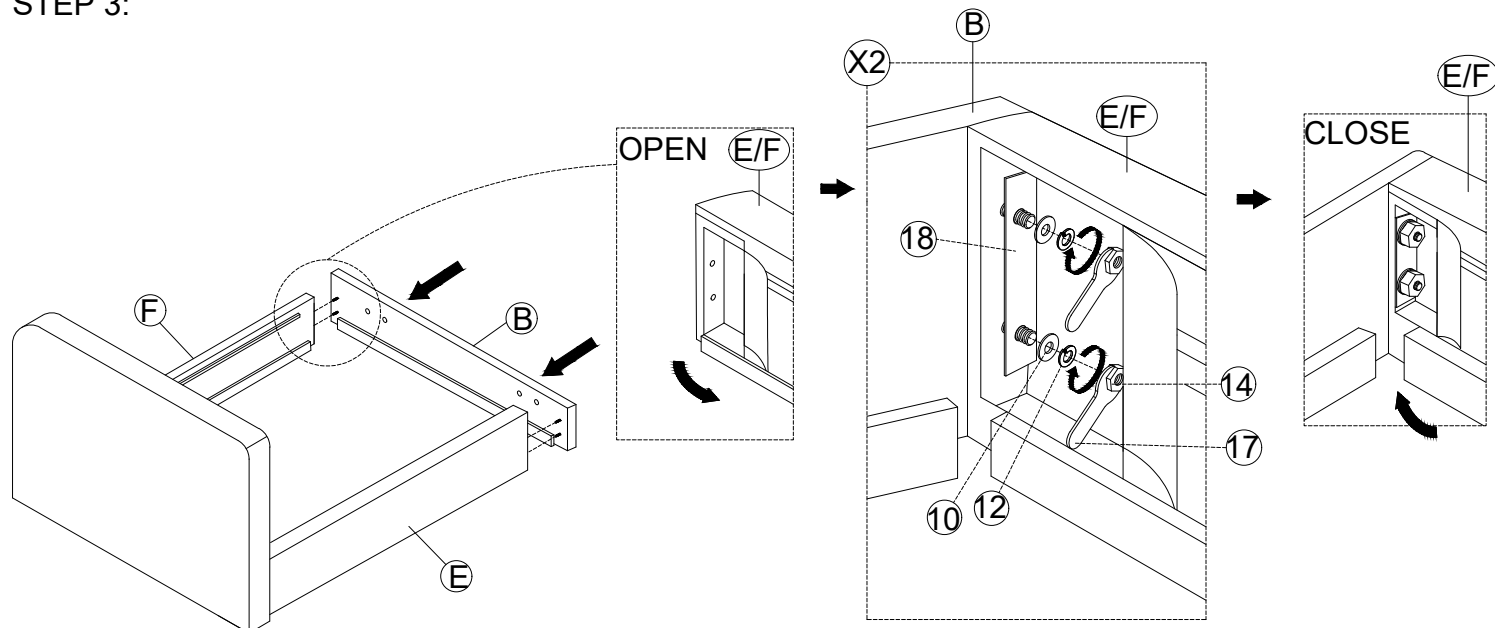

ONE COL. UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

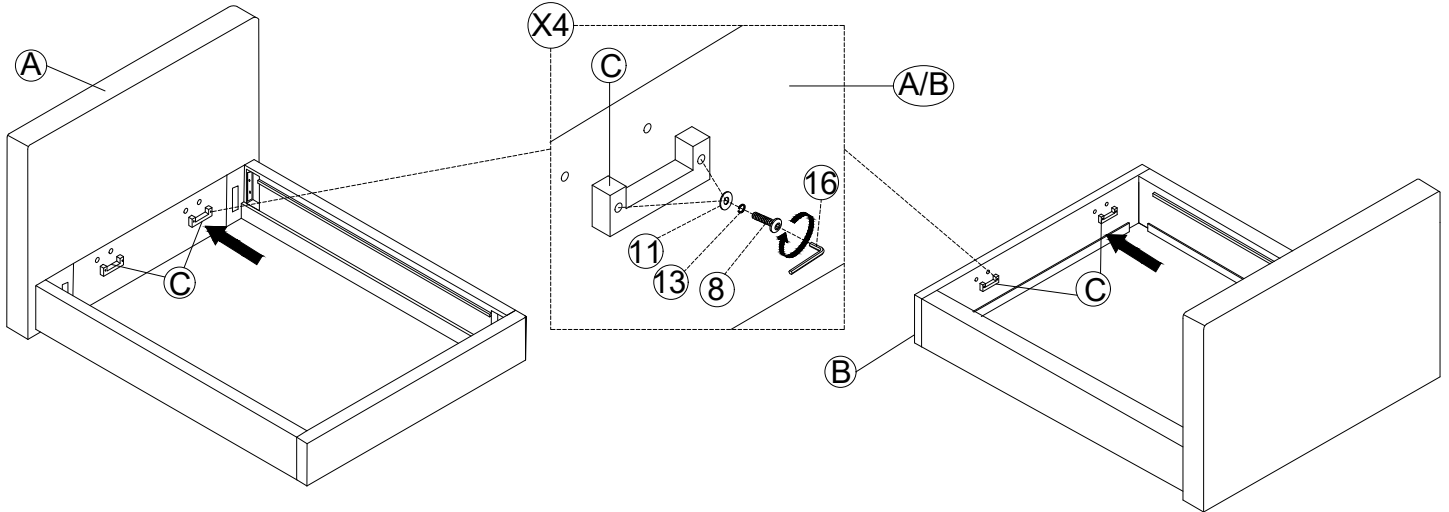

STEP 5:

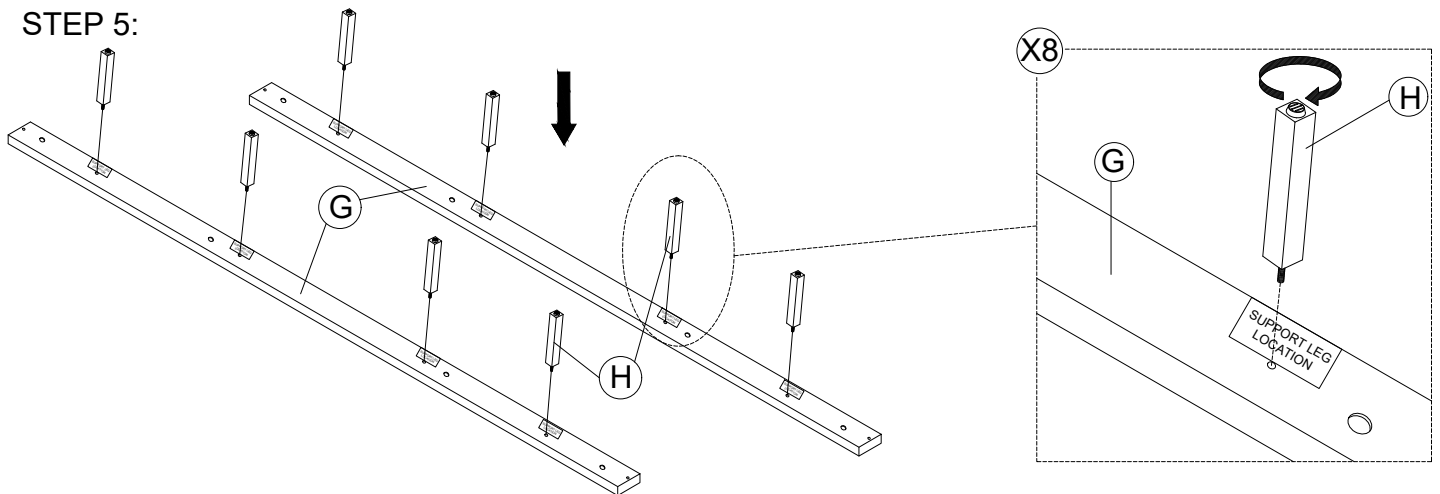

STEP 6:


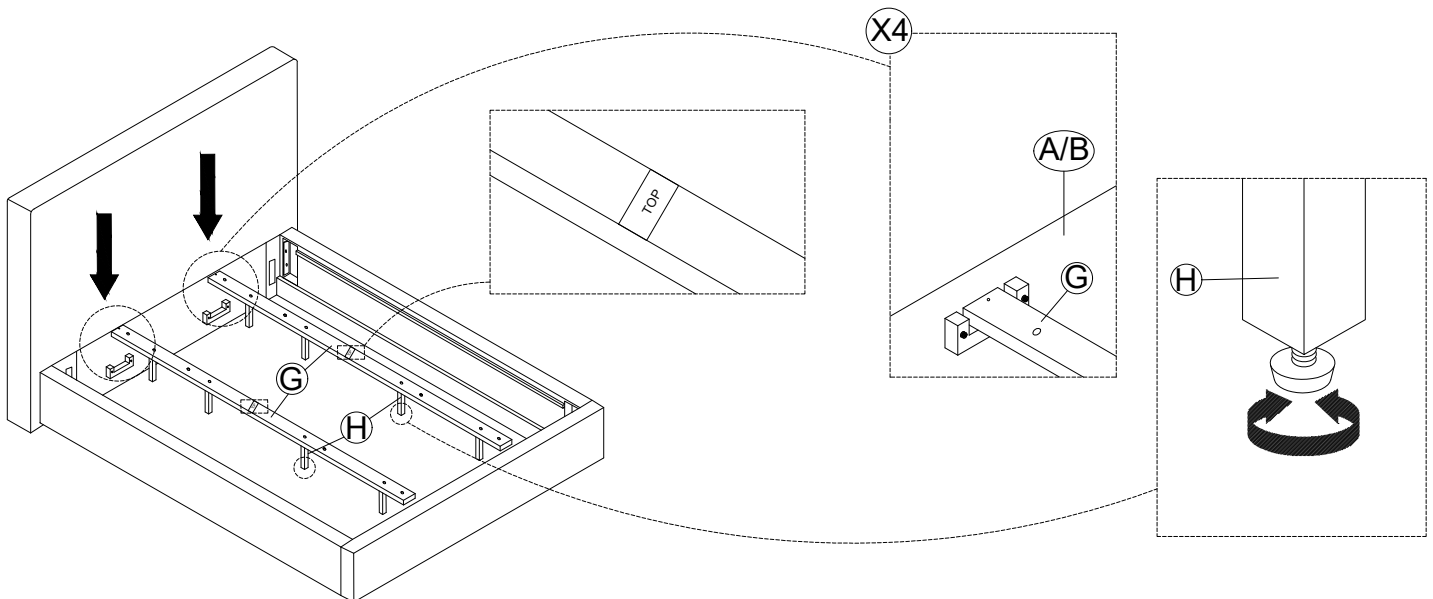


ONE COL. UPHOLSTERED C.KING BED


ASSEMBLY INSTRUCTIONS



STEP 7:

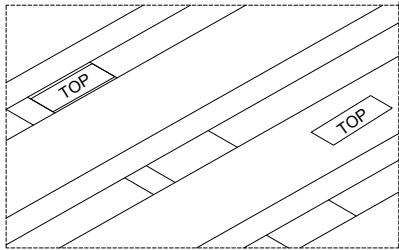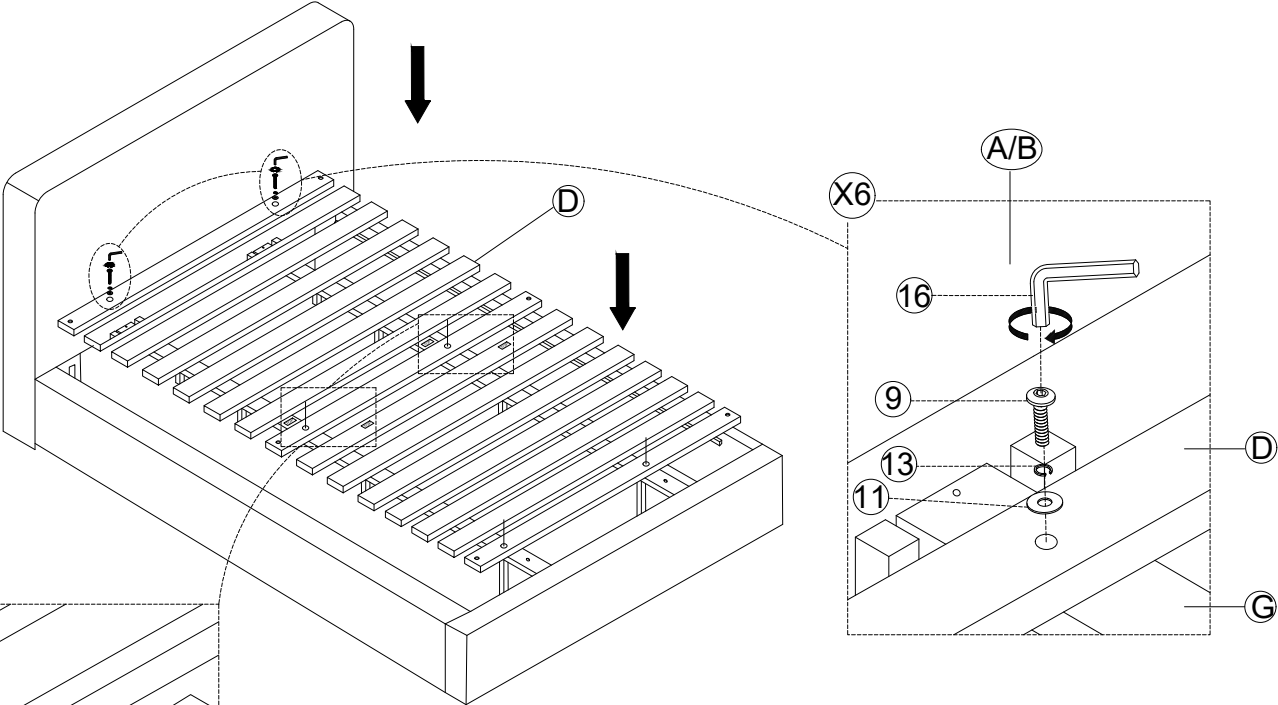


STEP 8:

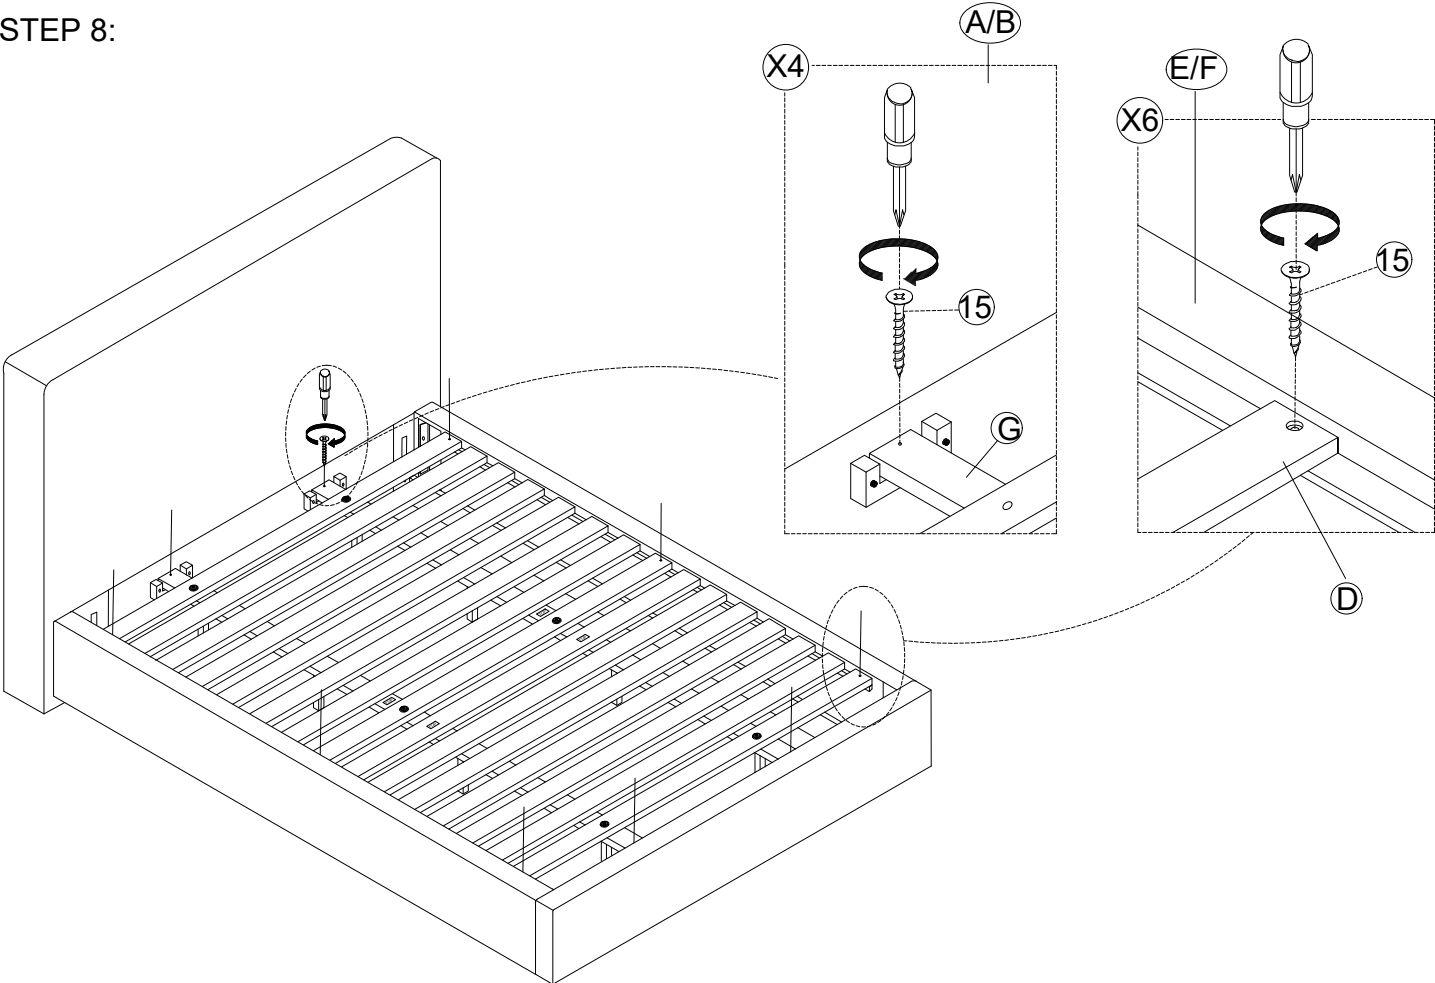

ONE COL. UPHOLSTERED C.KING BED

ASSEMBLY INSTRUCTIONS

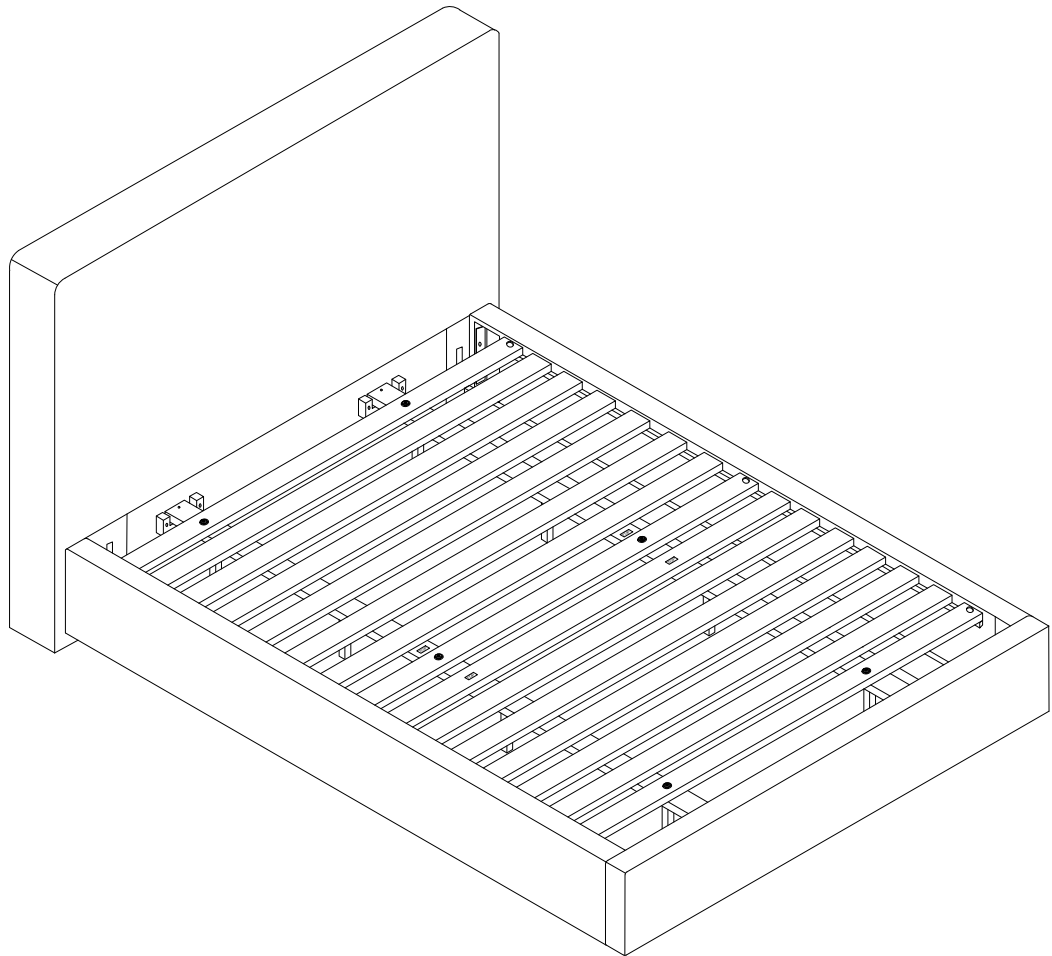


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ONE COL. UPHOLSTERED C.KING BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. CENTER SLAT SUPPORT CLEAT	4 PCS
D. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	2 PCS
H. SUPPORT LEG	8 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

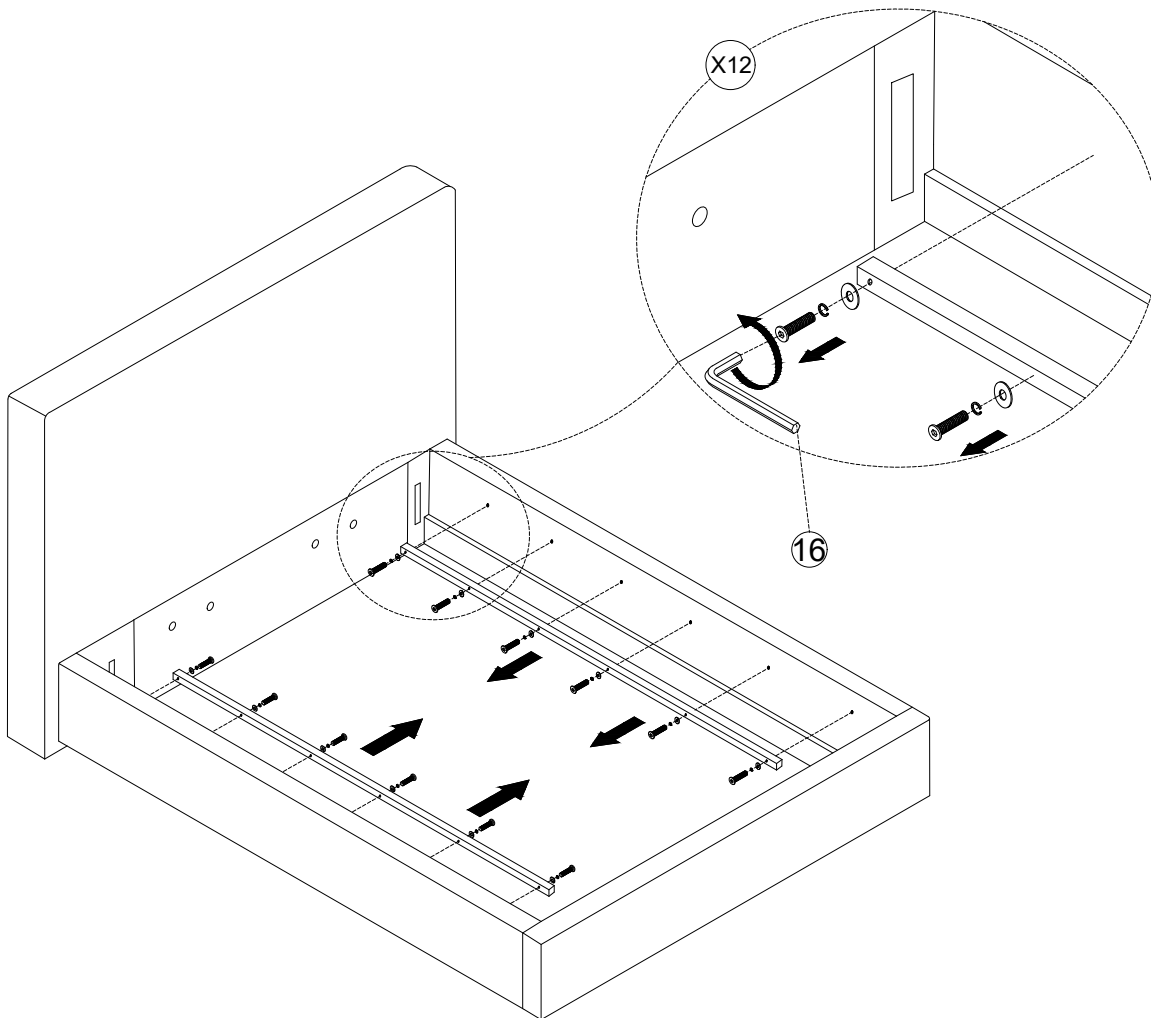

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION

ONE COL. UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS



BOX#1

A. HEADBOARD

1 PC

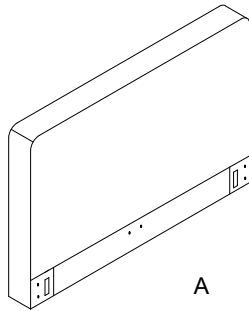

A

HARDWARE KIT PACKED IN BOX #1

No.	Description	Image	Quantity
1	ALLEN BOLT (6 x 45mm)		4 PCS
2	FLAT WASHER (6 x 16mm)		8 PCS
3	LOCK WASHER (6 x 16mm)		8 PCS
4	ALLEN KEY (6mm)		1 PC
5	HEX NUT (6mm)		4 PCS
6	WRENCH		1 PC

BOX#2

B. FOOTBOARD


1 PC

C. CENTER SLAT SUPPORT CLEAT


2 PCS

D. SLAT ROLL

1 SET

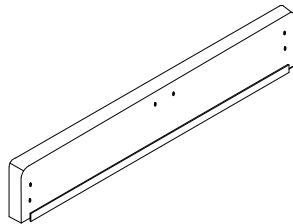

B

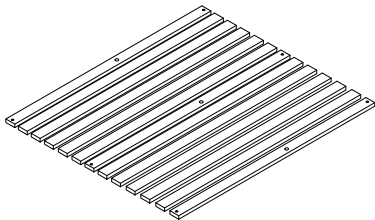

D



C

HARDWARE KIT PACKED IN BOX #2

No.	Description	Image	Quantity
7	THREADED BOLT (8 x 90mm)		8 PCS
8	ALLEN BOLT (6 x 50mm)		4 PCS
9	ALLEN BOLT (6 x 30mm)		3 PCS
10	FLAT WASHER (8 x 22mm)		8 PCS
11	FLAT WASHER (6 x 16mm)		7 PCS
12	LOCK WASHER (8 x 22mm)		8 PCS
13	LOCK WASHER (6 x 16mm)		7 PCS
14	HEX NUT (8mm)		8 PCS
15	PHILLIPS SCREW (7 x 35mm)		8 PCS
16	ALLEN KEY (6mm)		1 PC
17	WRENCH		1 PC
18	CONNECTING BRACKET		4 PCS

BOX#3

E. LEFT SIDE RAIL

1 PC

F. RIGHT SIDE RAIL


1 PC

G. CENTER SLAT SUPPORT


1 PC

H. SUPPORT LEG


4 PCS

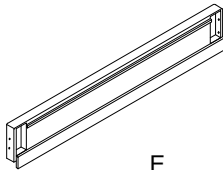

E

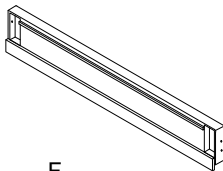

F


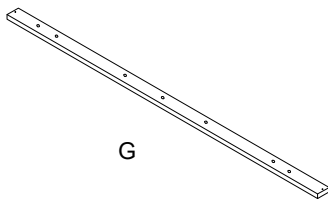


G



H

FULLY ASSEMBLED

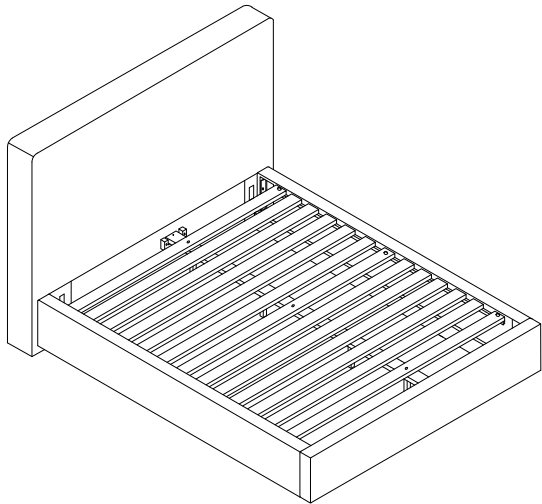


ONE COL. UPHOLSTERED FULL BED


ASSEMBLY INSTRUCTIONS




STEP 1:

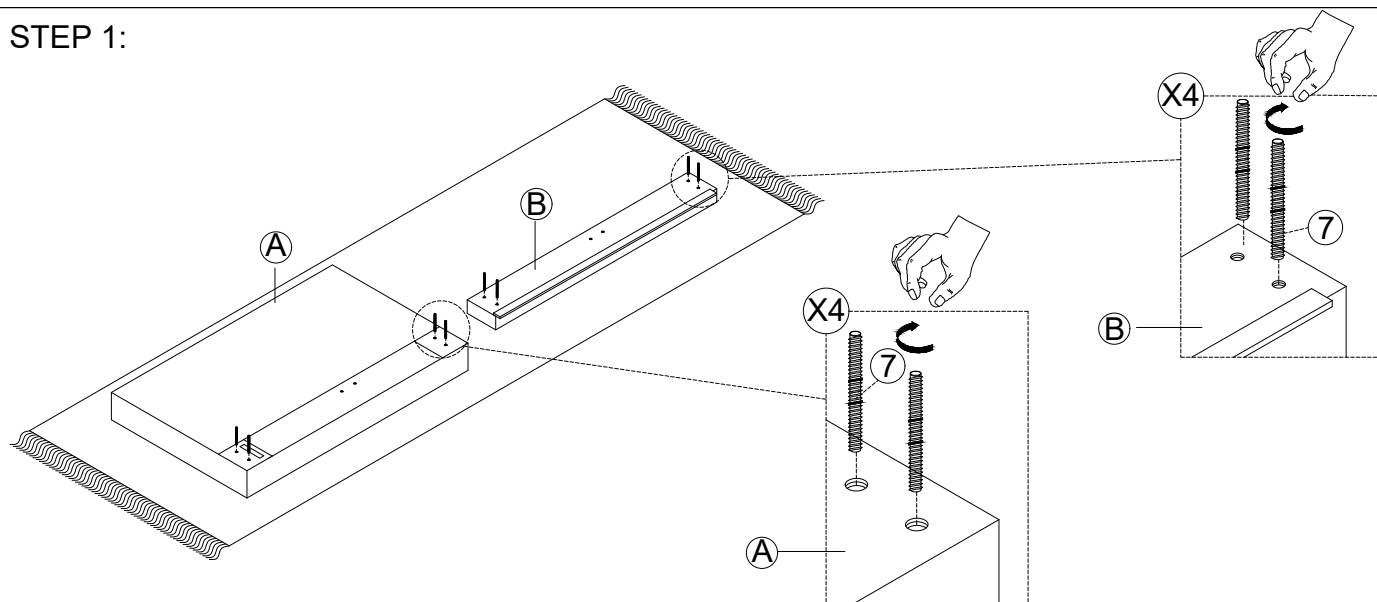

STEP 2:

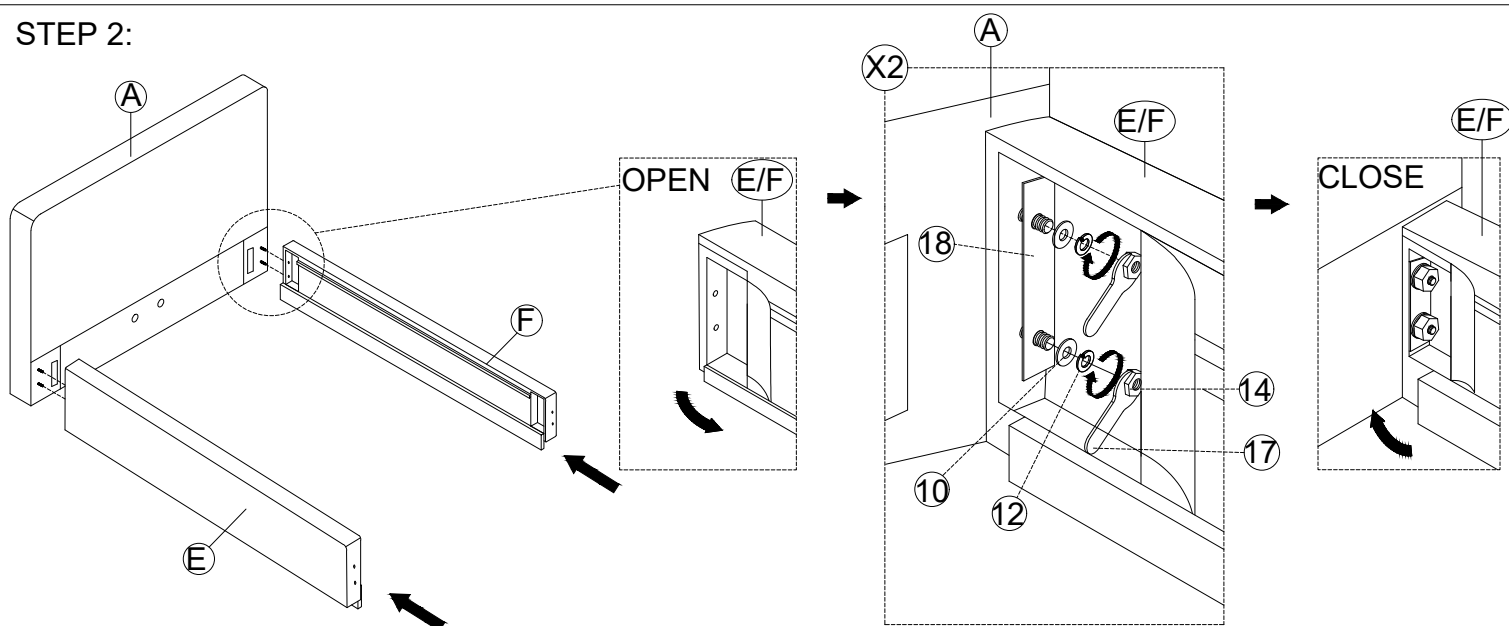

STEP 3:

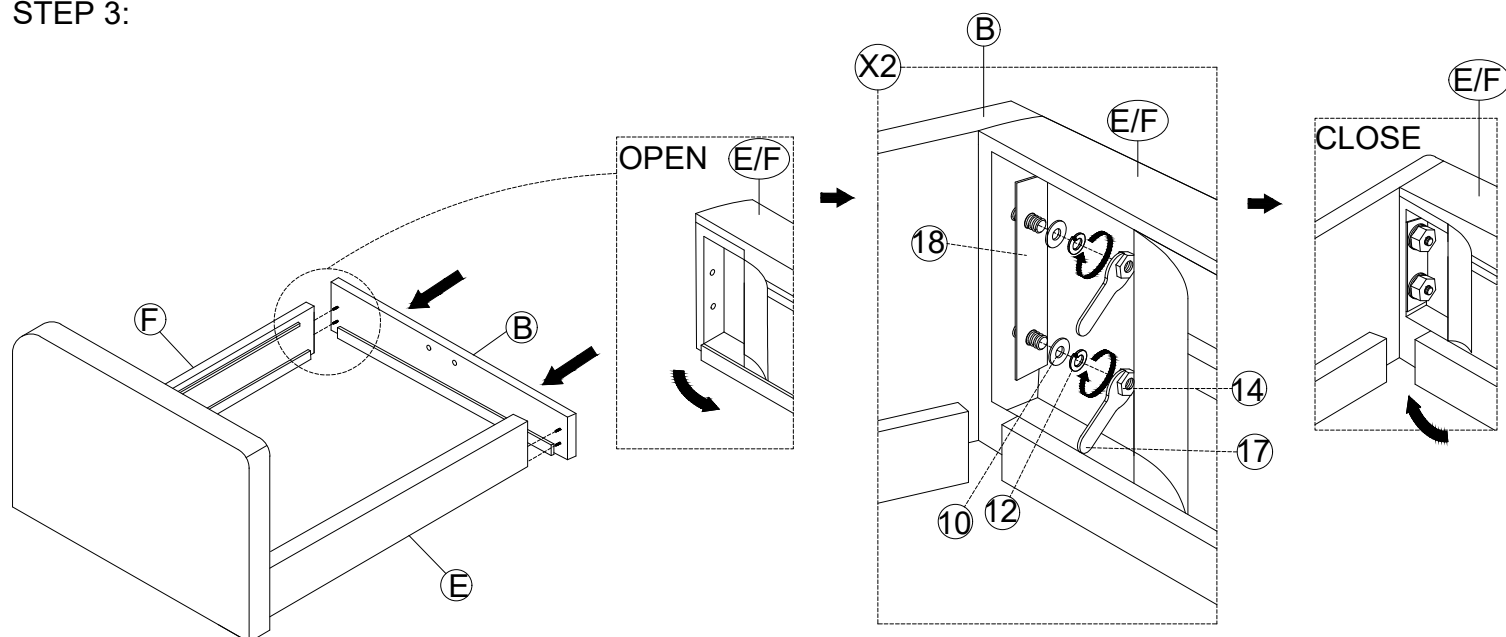


ONE COL. UPHOLSTERED FULL BED ASSEMBLY INSTRUCTIONS




STOP

- IF USING BED WITH AN ADJUSTABLE MATTRESS BASE, SKIP STEPS 4~8 AND REFERENCE APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT.
- IF USING BED FRAME WITH STANDARD BOX SPRING OR FOUNDATION, CONTINUE TO STEP 4.


STEP 4:

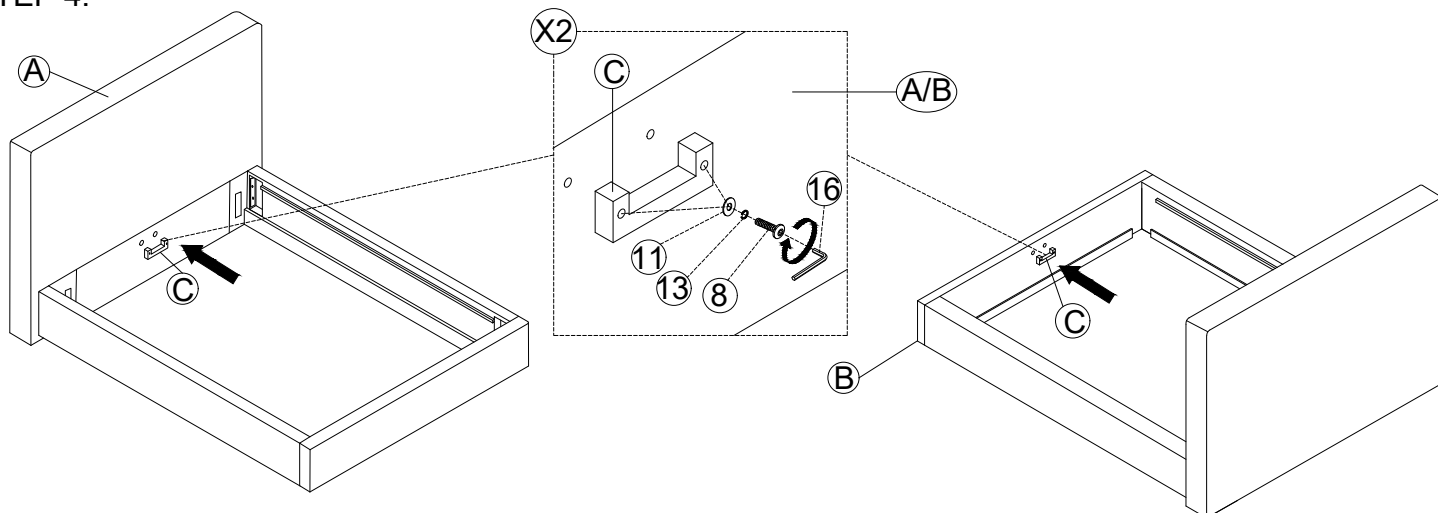

STEP 5:


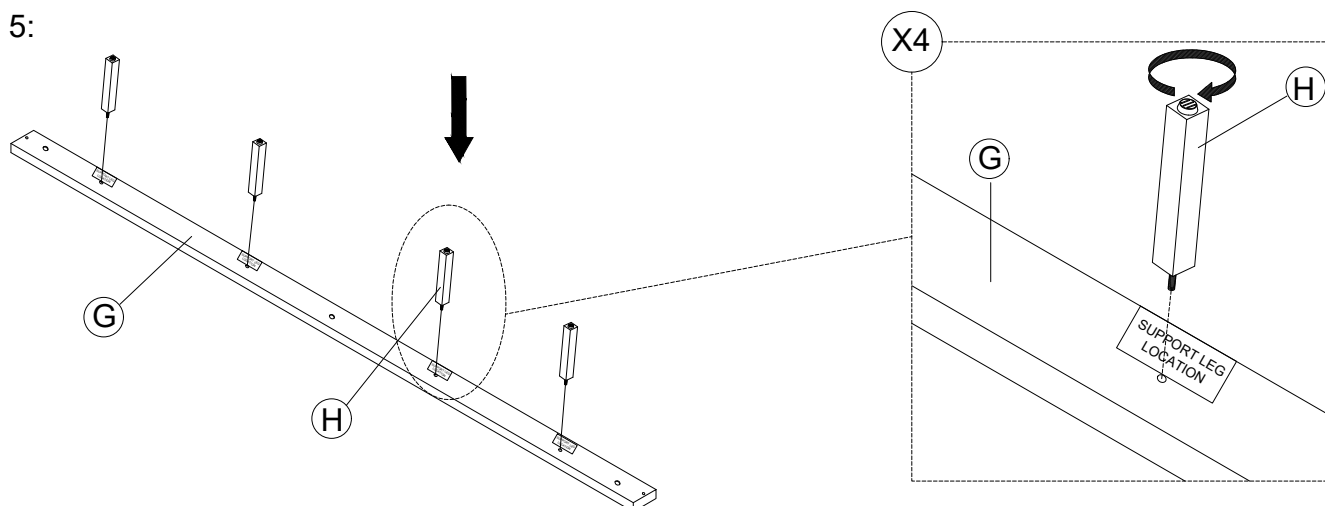


STEP 6:

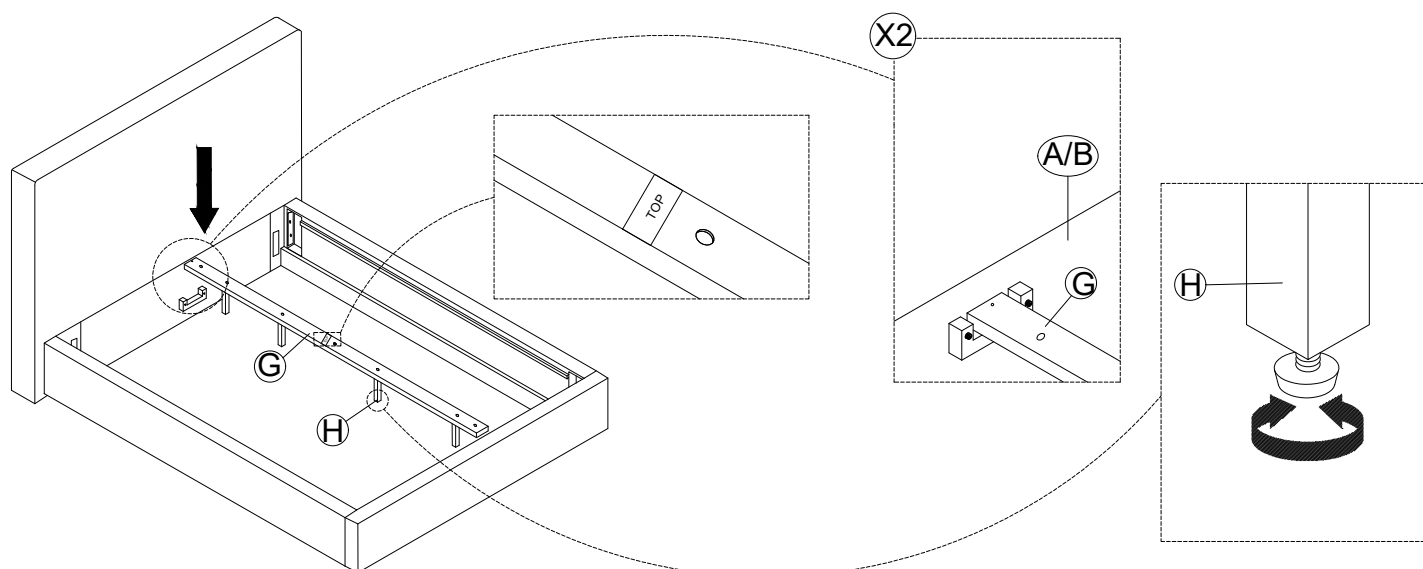


ONE COL. UPHOLSTERED FULL BED ASSEMBLY INSTRUCTIONS


STEP 7:

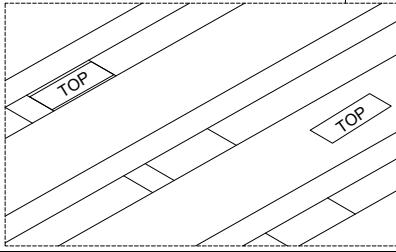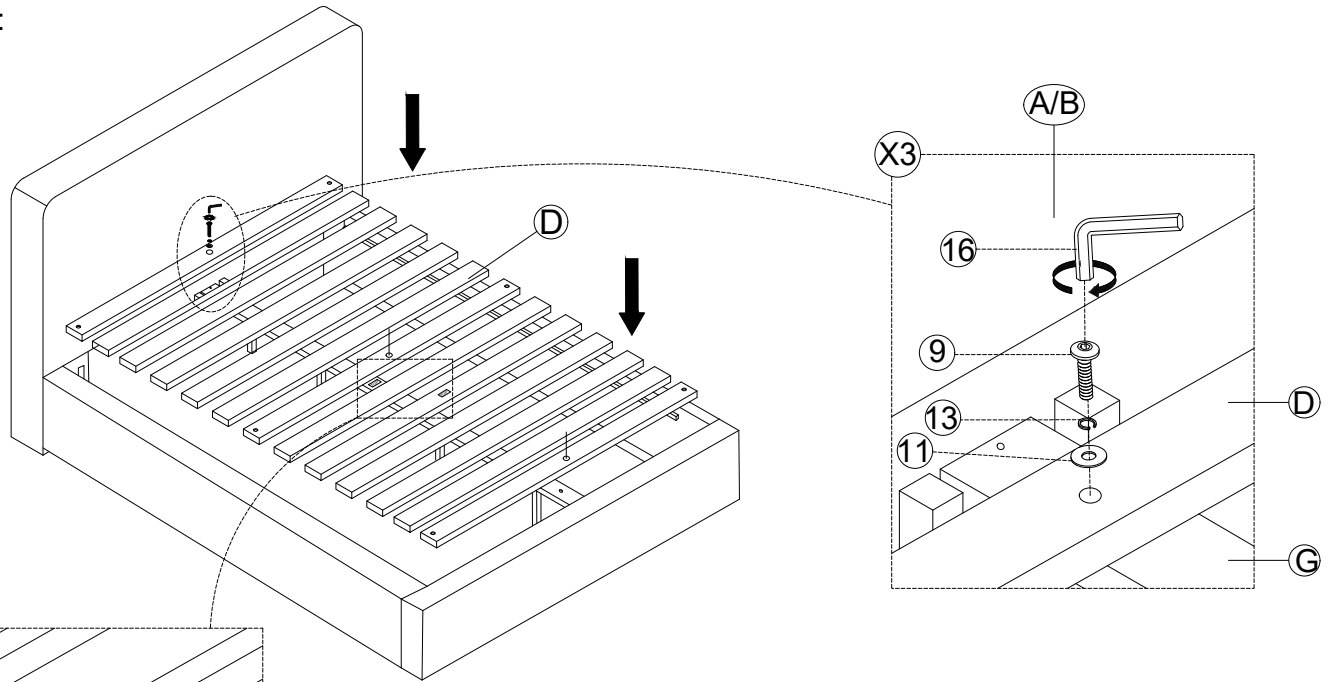

STEP 8:

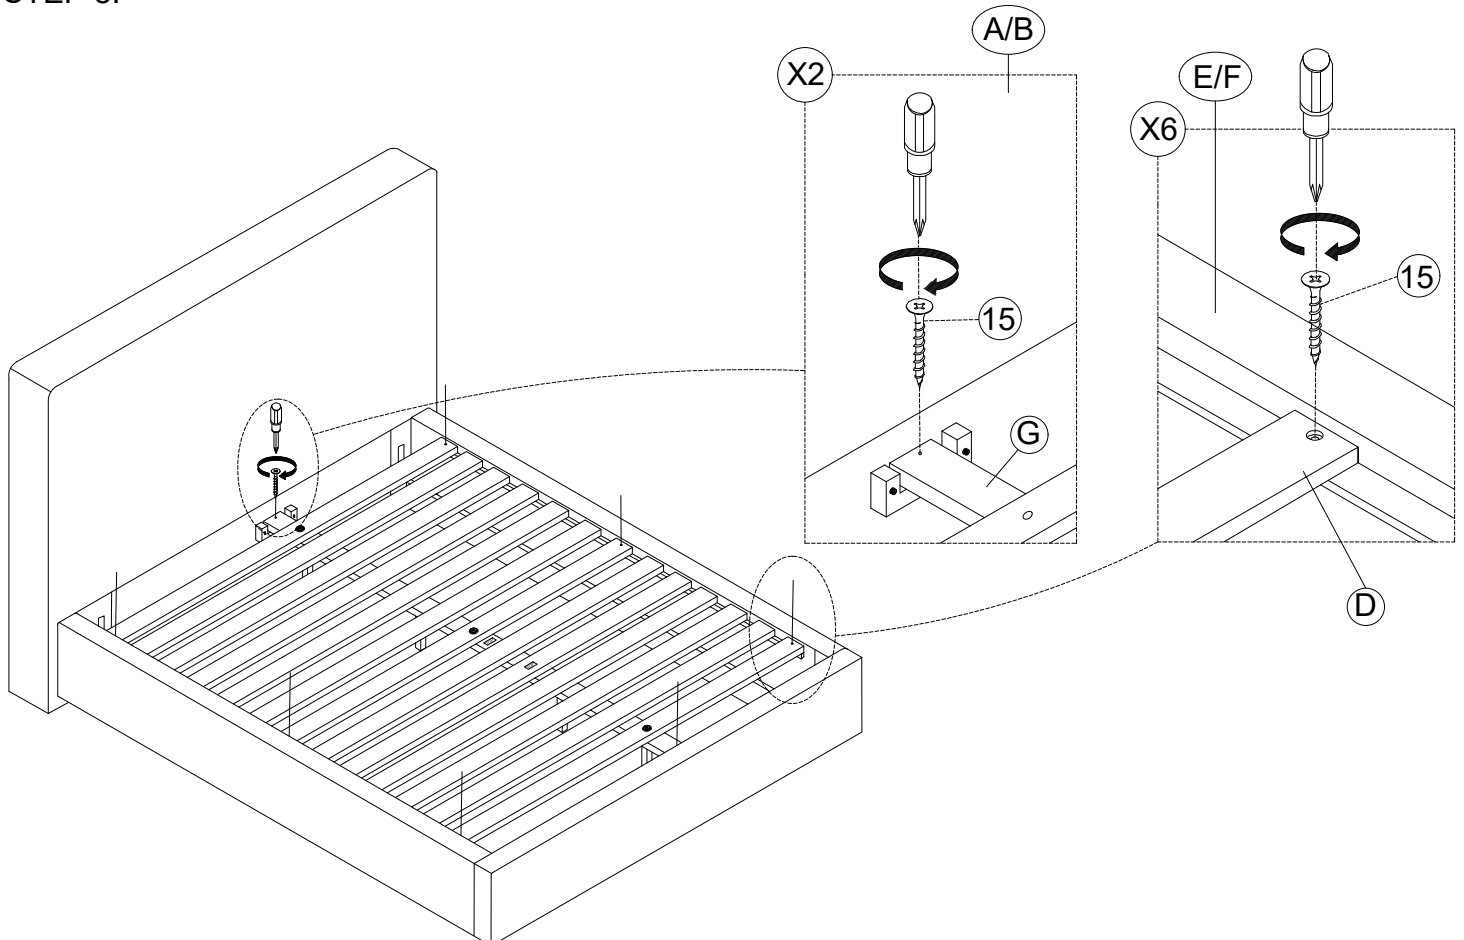

ONE COL. UPHOLSTERED FULL BED ASSEMBLY INSTRUCTIONS

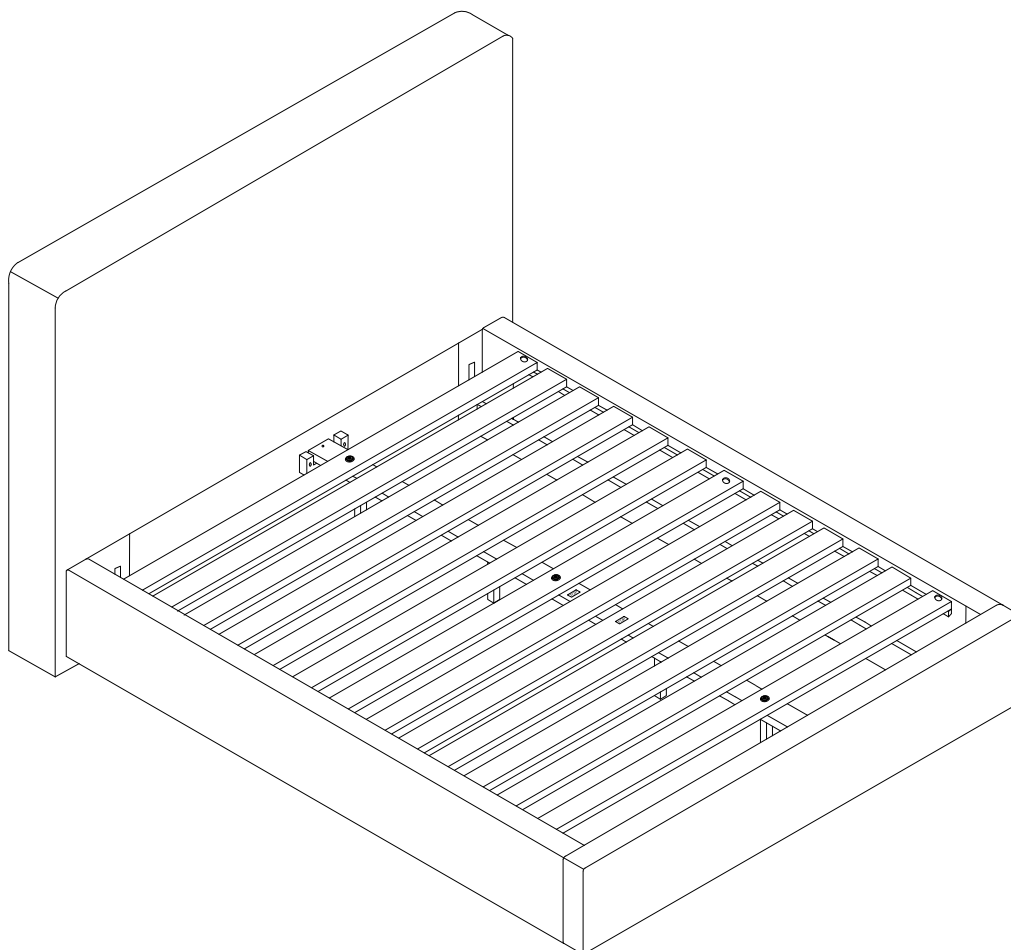


ASSEMBLY COMPLETE

INSTRUCTIONS FOR ADJUSTING LEVELERS:

Position the bed in your space and locate the leveler under each support leg.

Turn the leveler counter-clockwise to extend the leveler and clockwise to retract it.

Adjust each leveler until each support leg is applying equal, upward pressure on the support slat.



MAINTENANCE INSTRUCTIONS:

- Periodically check all fittings and tighten if necessary, as they can loosen over time.
- Always remove box spring and mattress before moving the bed.
- Lift the bed when moving it. Dragging the bed can damage the center support.
- Readjust levelers after moving the bed.

ONE COL. UPHOLSTERED FULL BED ASSEMBLY INSTRUCTIONS



APPENDIX A: ADJUSTABLE MATTRESS BASE ASSEMBLY SUPPLEMENT

AN ADJUSTABLE MATTRESS BASE IS A FREESTANDING MATTRESS SUPPORT THAT SITS WITHIN THE PERIMETER OF THE BED FRAME.

IF USING THIS BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION THESE INSTRUCTIONS DO NOT APPLY.


PRE-ASSEMBLED SIDE RAIL CLEATS OBSTRUCT ADJUSTABLE BASE INSTALLATION AND OPERATION. FOLLOW THESE INSTRUCTIONS TO REMOVE THEM.

THE FOLLOWING PARTS ARE NOT REQUIRED FOR ADJUSTABLE MATTRESS BASE INSTALLATION:

C. CENTER SLAT SUPPORT CLEAT	2 PCS
D. SLAT ROLL	1 SET
G. CENTER SLAT SUPPORT	1 PC
H. SUPPORT LEG	4 PCS

STEP 1:

USE ALLEN KEY (16) TO UNSCREW ALLEN BOLTS AND REMOVE PRE-ASSEMBLED SIDE RAIL CLEATS.

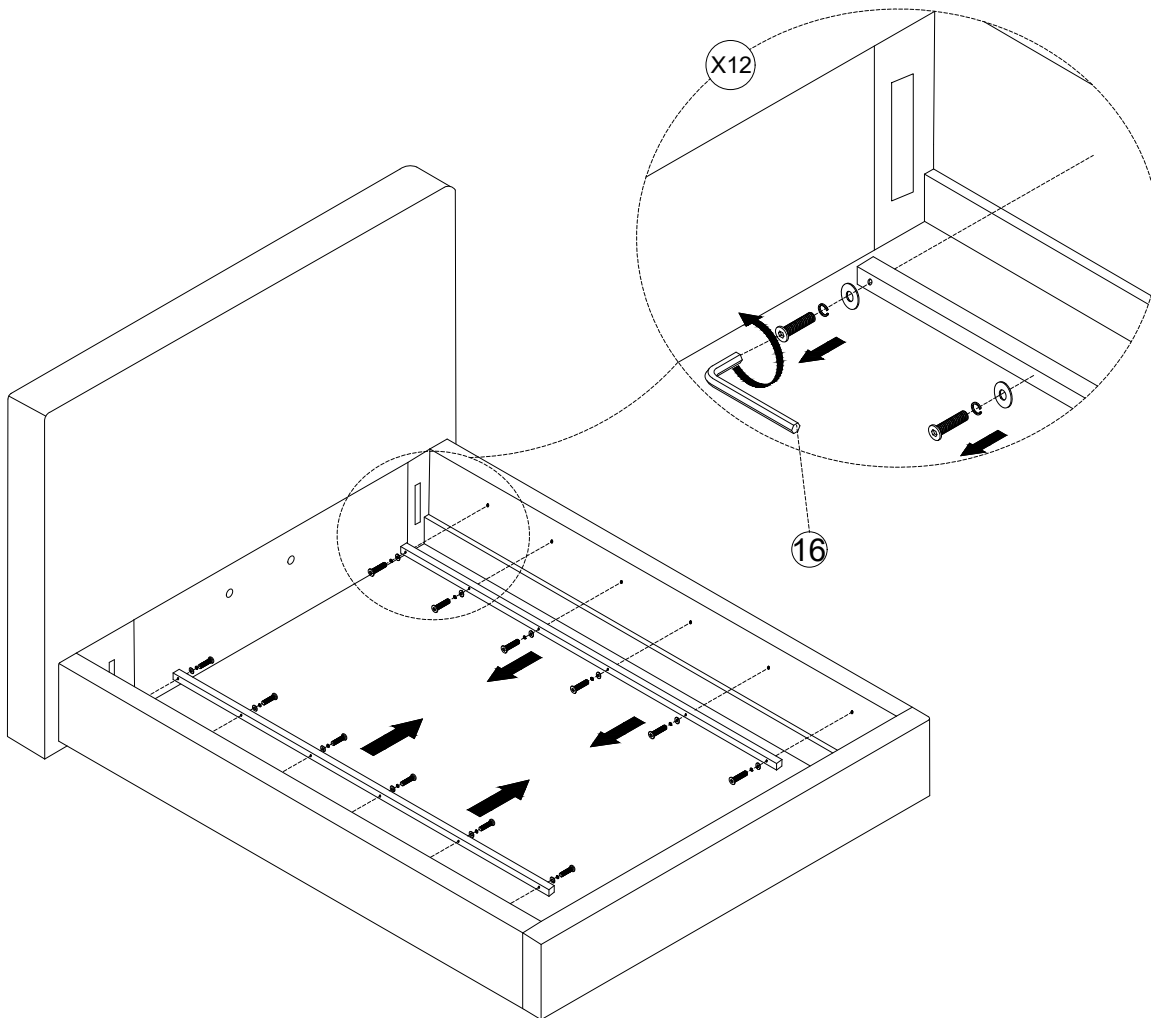

NOTE: YOU MAY WISH TO RETAIN UNUSED PARTS IF IN THE FUTURE YOU INTEND TO USE THE BED FRAME WITH A STANDARD BOX SPRING OR FOUNDATION