




www.todaysdesignhouse.com




228353-GRY & 228353-AWT OXFORD CHEST WITH DRAWERS ASSEMBLY INSTRUCTIONS

DHI Corp. • 262.518.1877 • www.todaysdesignhouse.com


PART LIST:

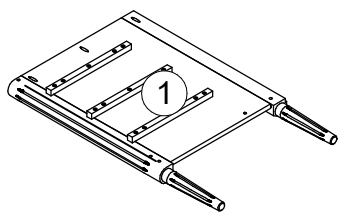


LEFT SIDE 1 PC

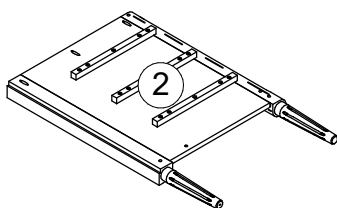


RIGHT SIDE 1 PC

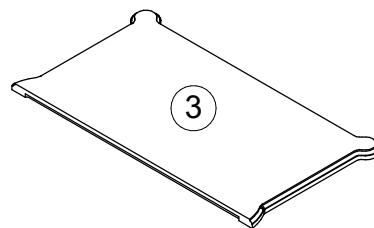


TOP 1 PC

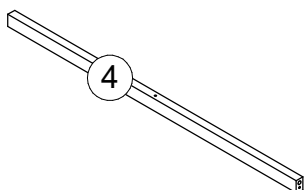


TOP RAIL 1 PC

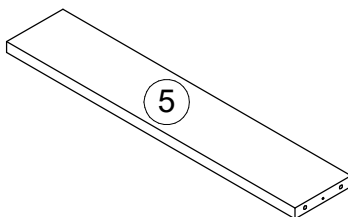


BACK RAIL 1 PC

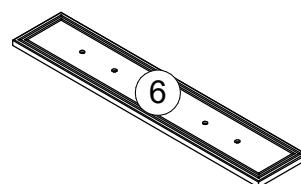


DRAWER FRONT 1 1 PC

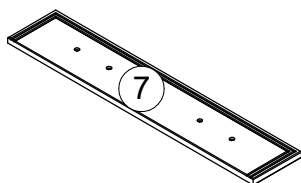


DRAWER FRONT 2 1 PC

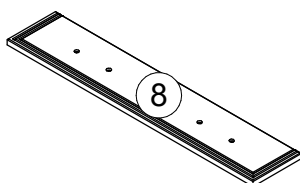


DRAWER FRONT 3 1 PC

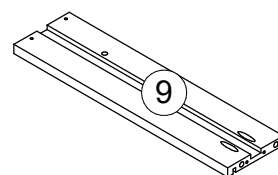


DRAWER LEFT SIDE 3 PC

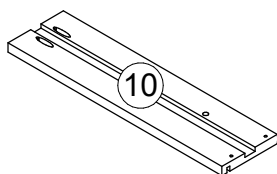


DRAWER RIGHT SIDE 3 PC

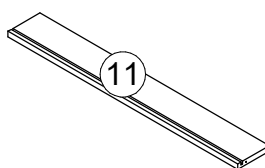


DRAWER BACK PANEL 3 PC

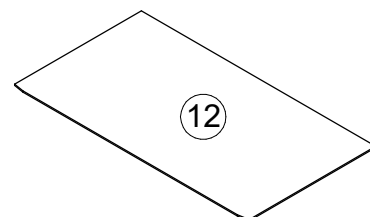

DRAWER BOTTOM 3 PC

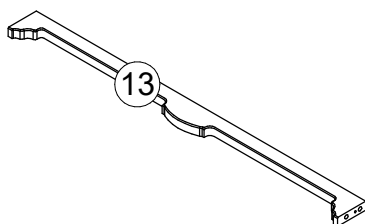

BASEBOARD 1 PC

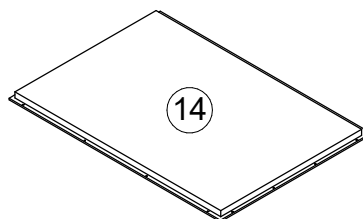


BACK PANEL 1 PC


HARDWARE LIST:




A - Dowel Ø8x30mm 34 PCS



B - Dowel Ø8x40mm 6 PCS




C - Screw Ø3,5x35mm 11 PCS




D - Screw Ø3,5x16mm 16 PCS




E - Flat Head Screw
Ø3,5x35mm 12 PCS



F - Screw M4x16 12 PCS

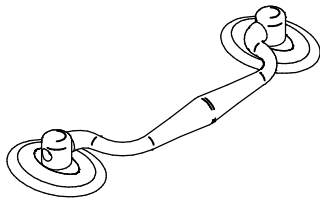


G -Knob 6 PCS

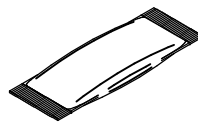


H - Glue 1 PCS**



I - Screw ø3,5x30mm 14 PCS**



J - Screw ø 3,5x16 2 PCS**




K - Washer 2 PCS**



L - Straps 2 PCS**




M - Screw ø 4,5x50 2 PCS**



N - Fixing Bushing 2 PCS**


STEP 1

Insert wooden dowels (A) into the pre-drilled holes of the Left Side (1), Right Side (2), Top Rail (4), Back Rail (5), Baseboard (13), Drawer Left Side (9) and Drawer Right Side (10).

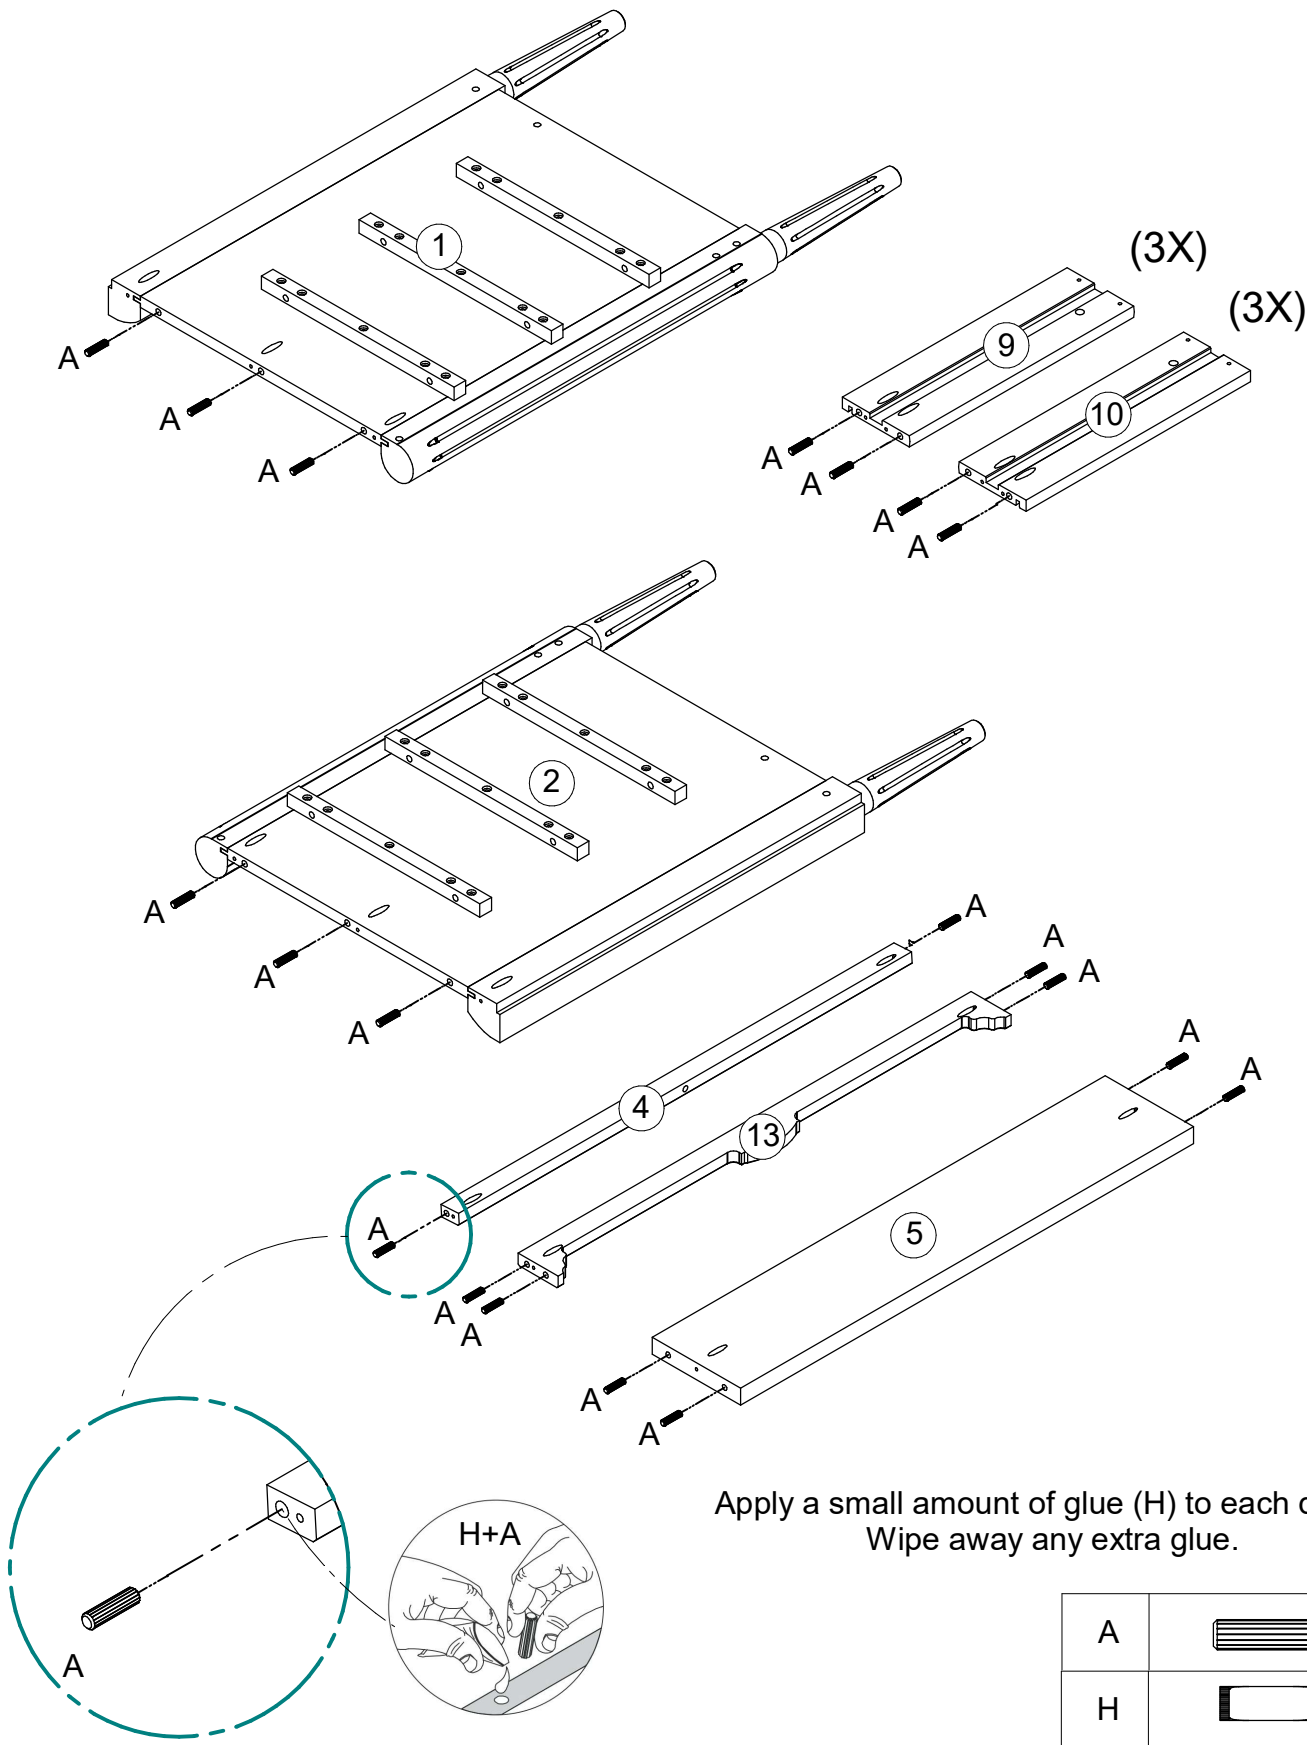

STEP 2


Attach the Top Rail (4) and baseboard (13) o the Left Side (1) using Screws (C).
Attached the Back Rail (5) to the Left Side (1) using Screws(I).

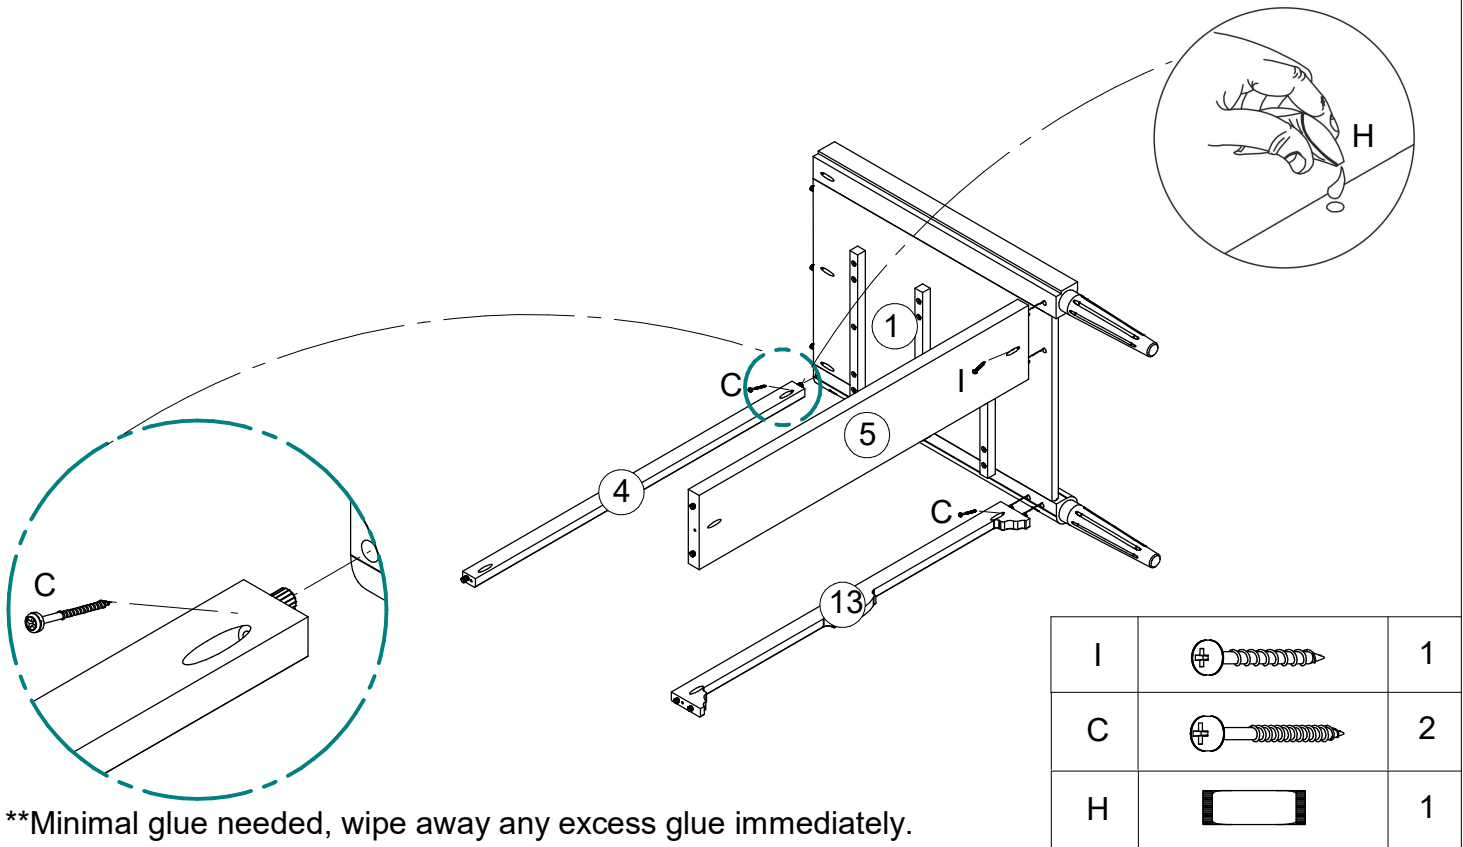




**Minimal glue needed, wipe away any excess glue immediately.

STEP 3

Repeat Step 2 for the Right Side (2). The basic frame will now be complete.


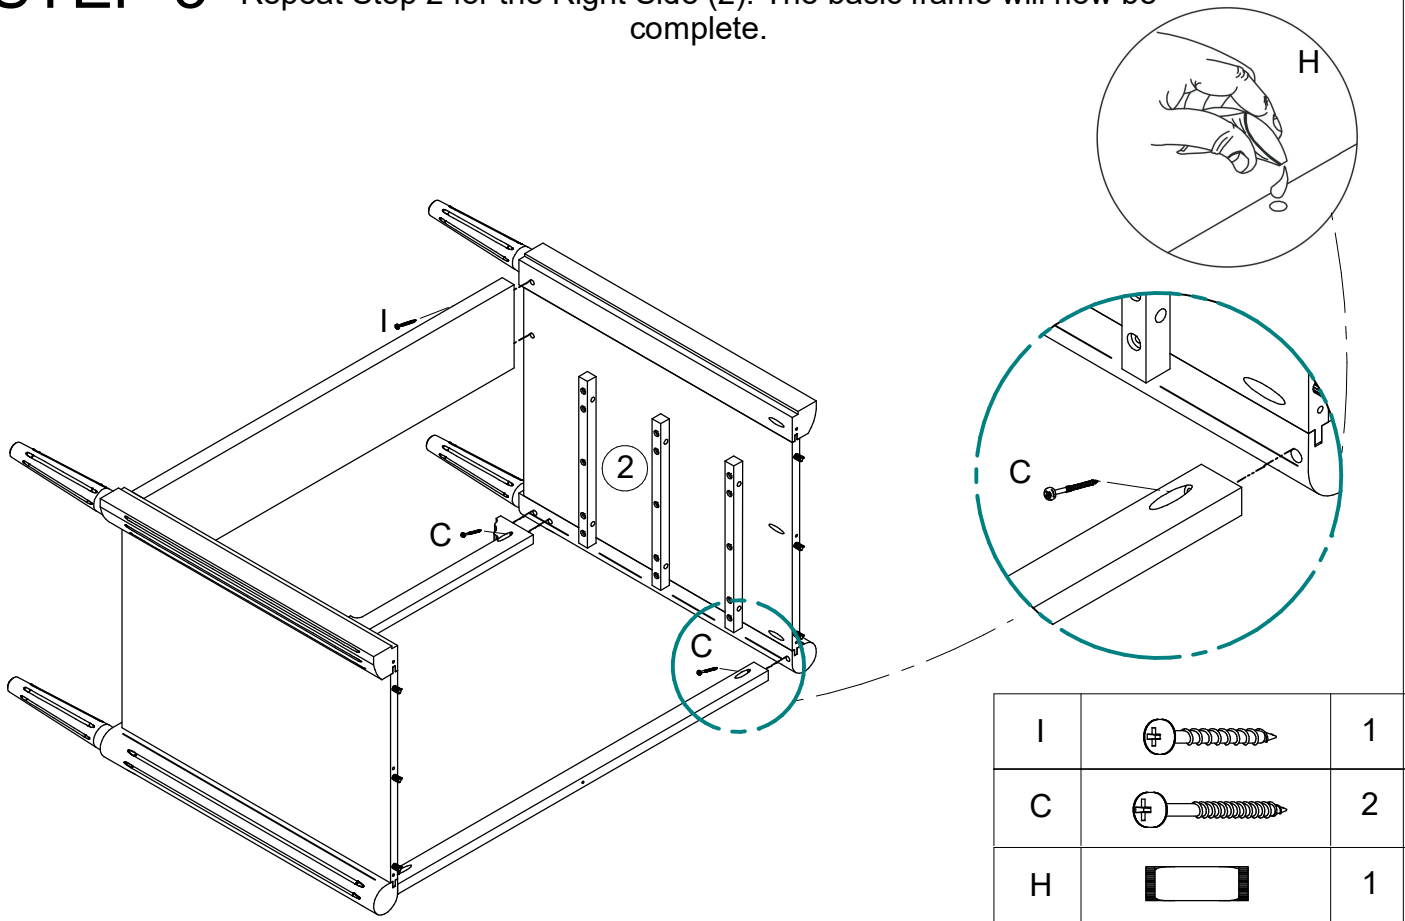


STEP 4 Attach the Top (3) to the frame using Screws (C).

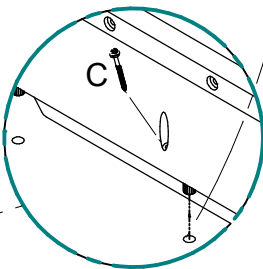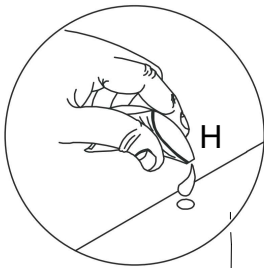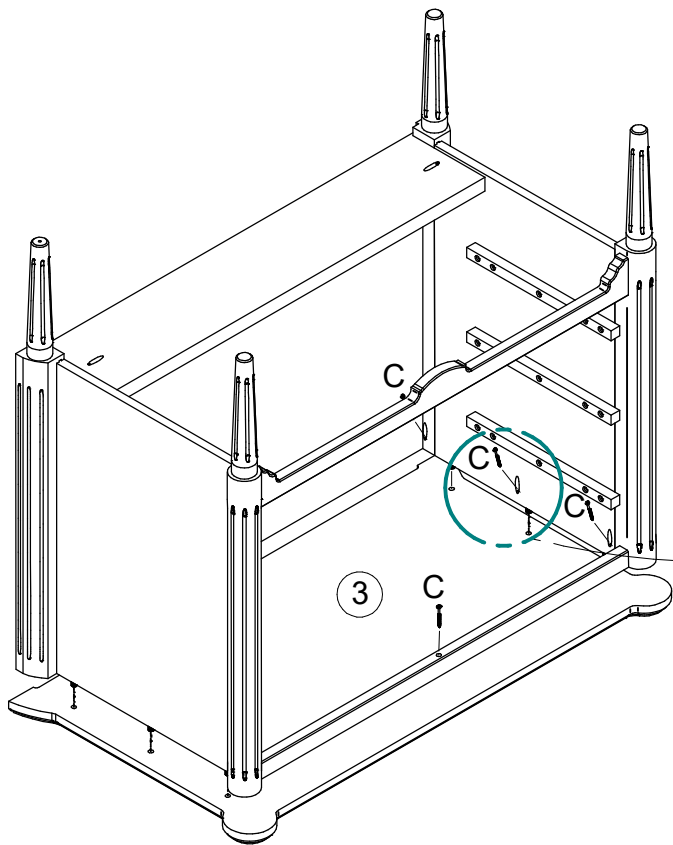

C		7
H		1


STEP 5 Secure the Back Panel (14) to the frame using Screws (D). Make sure the panel is flush with the sides.

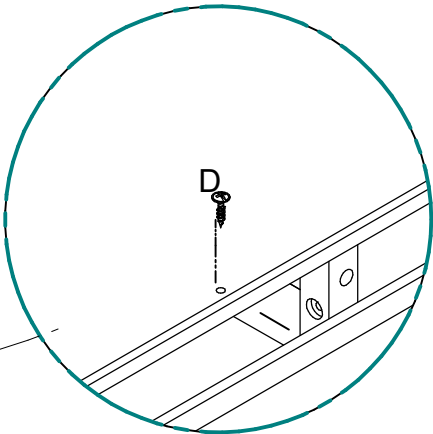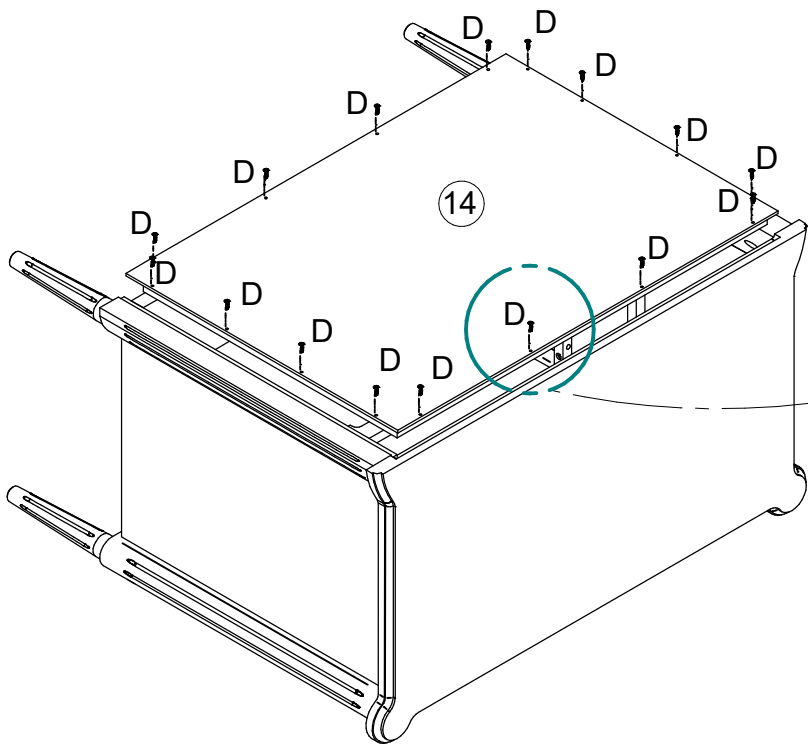

D		16
---	--	----


STEP 6

Assemble each drawer by connecting the Drawer Sides (9,10) with the Drawer Back Panel (11) using Screws (E).

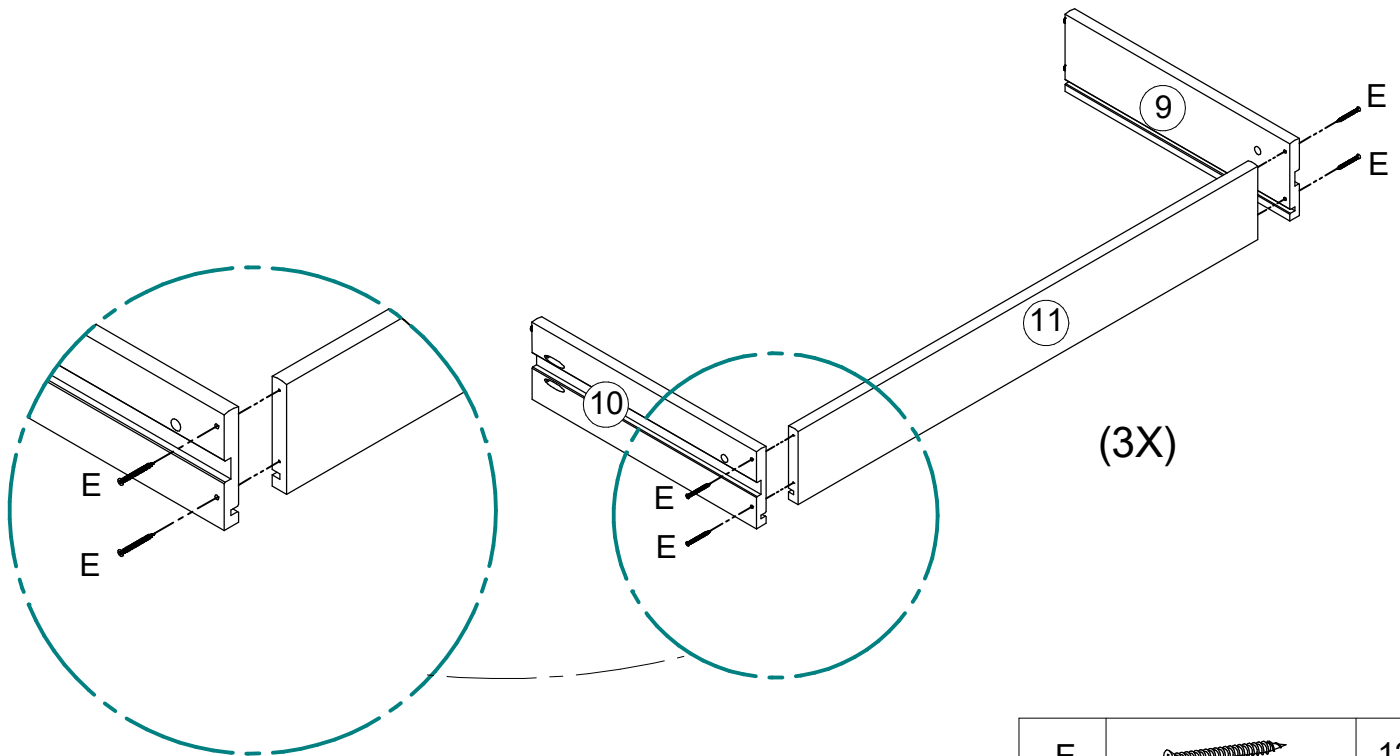


STEP 7

Slide the Drawer Bottom (12) into the grooves of the drawer frame.

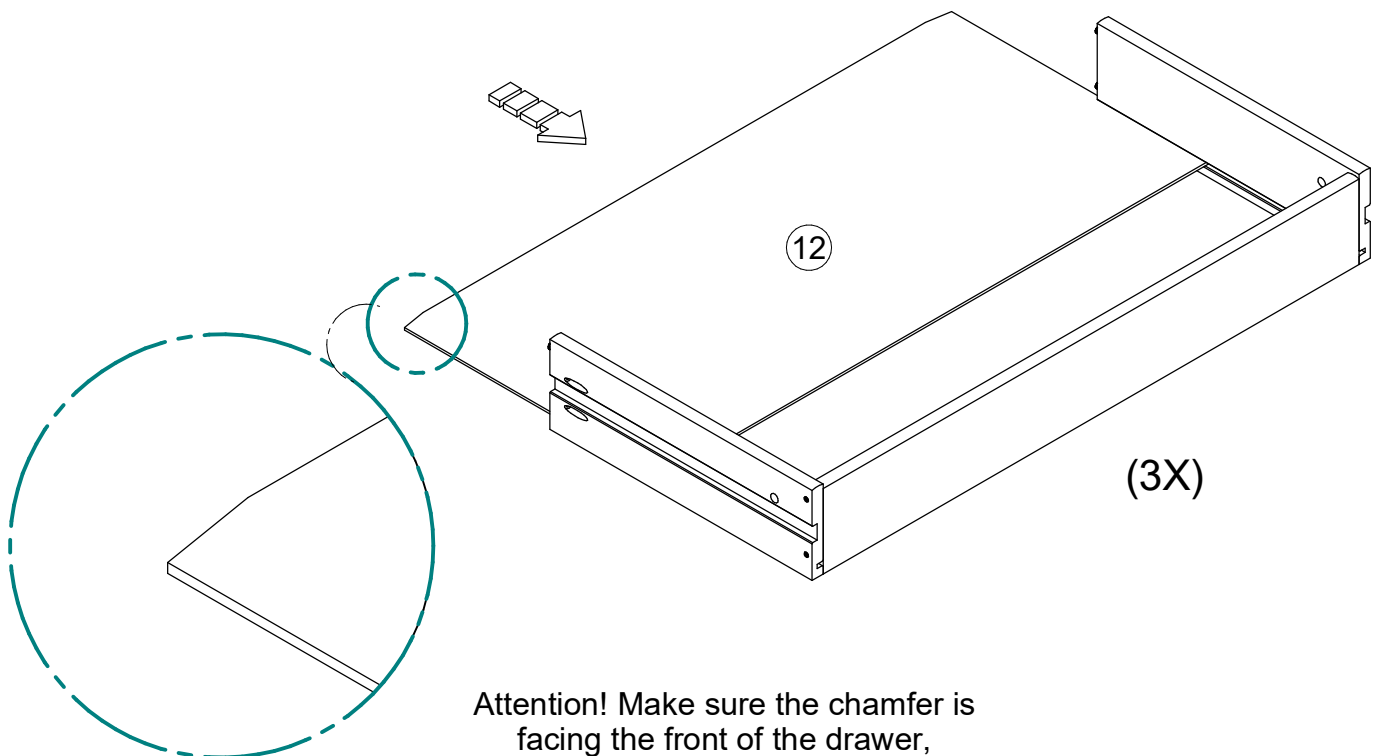






Attention! Make sure the chamfer is facing the front of the drawer, where it fits into the groove.

STEP 8 Attach the Drawer Fronts (6, 7, 8) using Screws (I). Make sure they are aligned evenly.

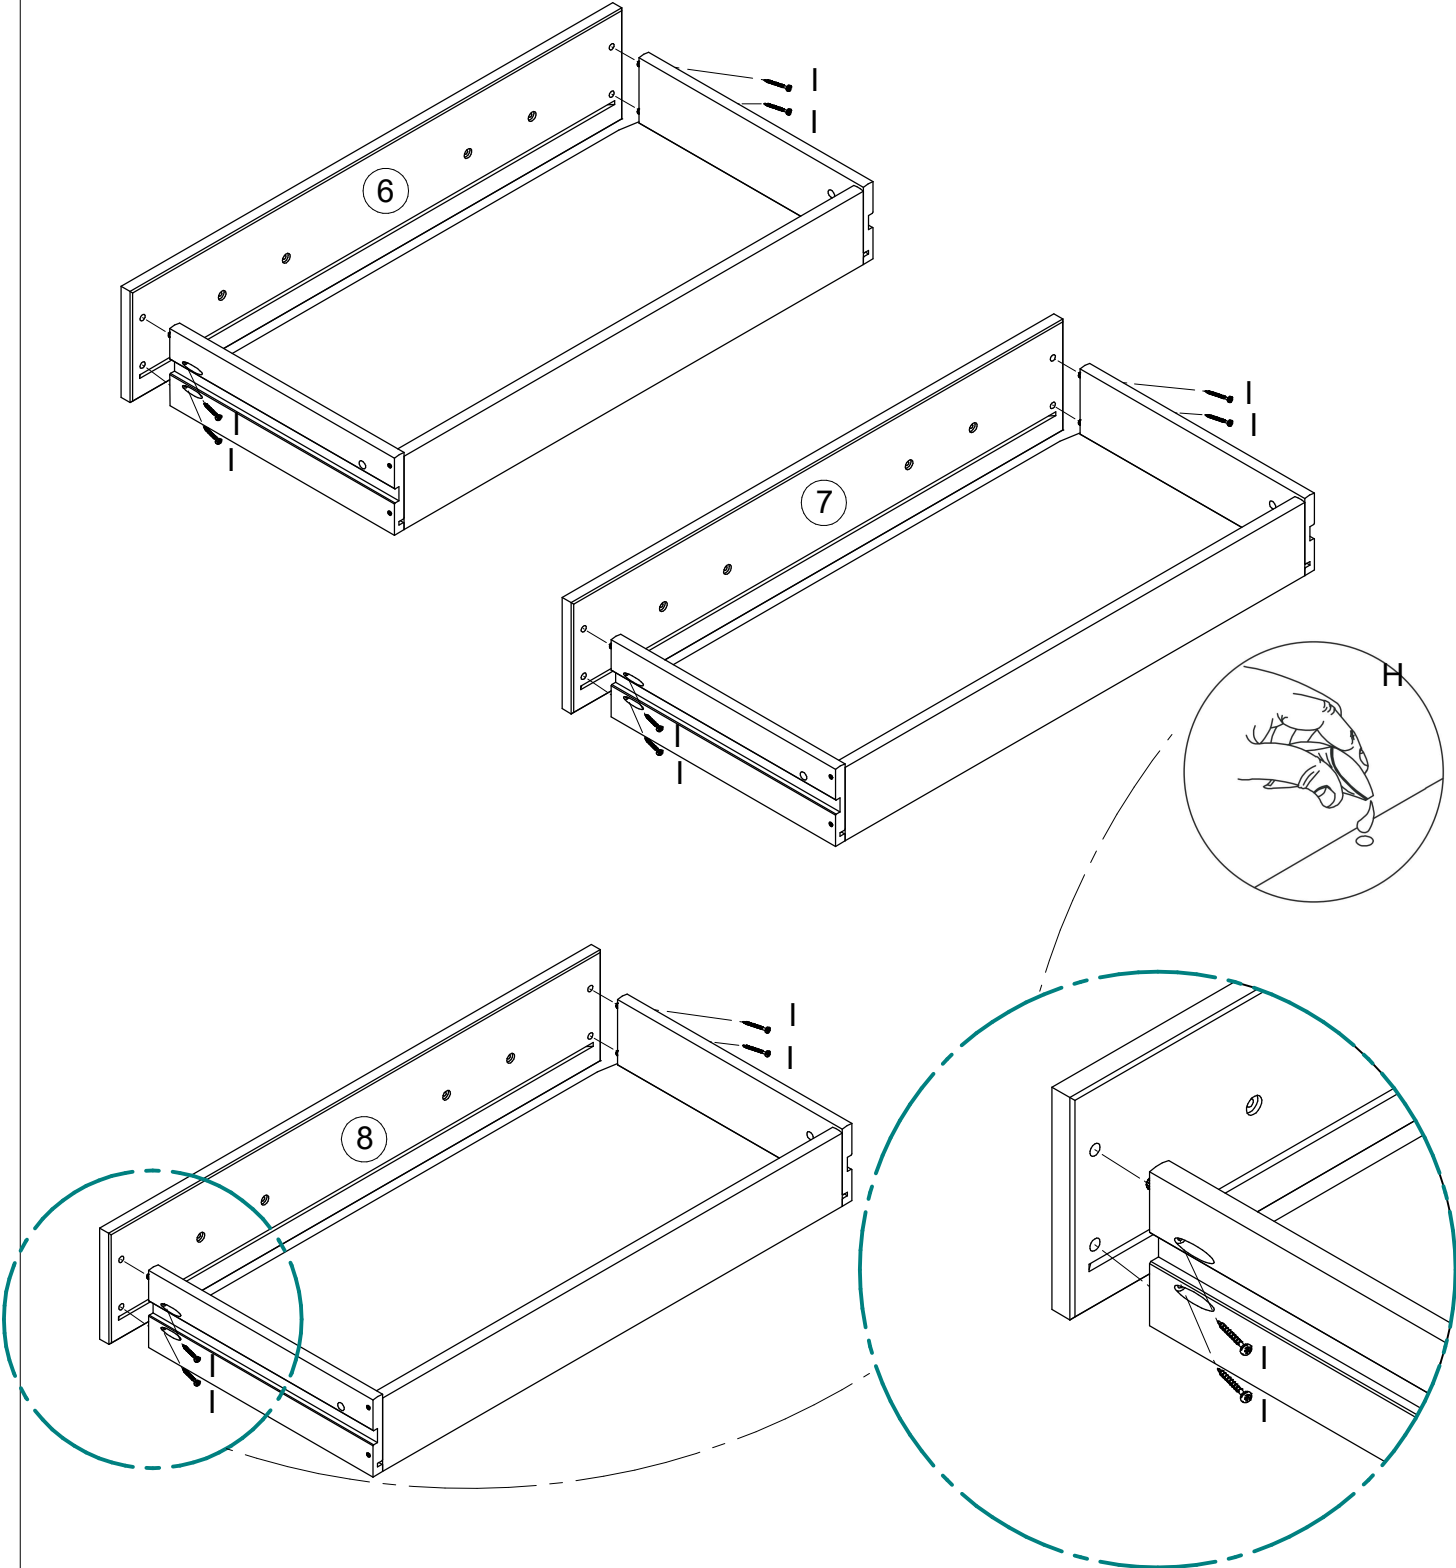

I		12
H		1


STEP 9 Attach knobs (G) to the Drawer Fronts with Screws (F).

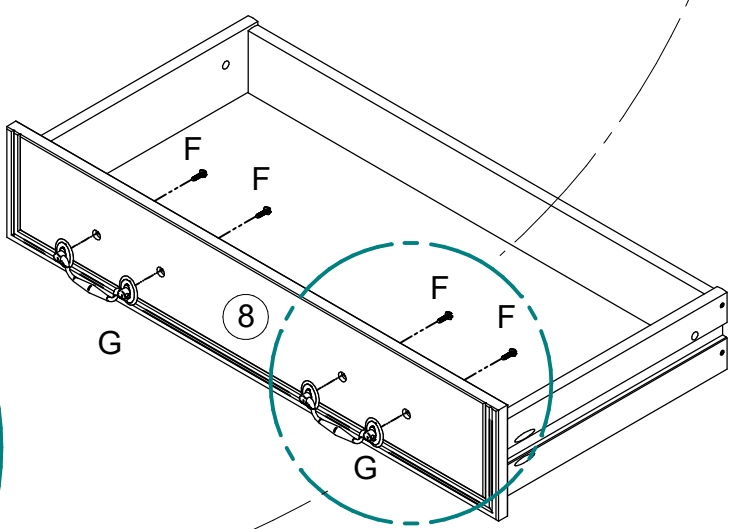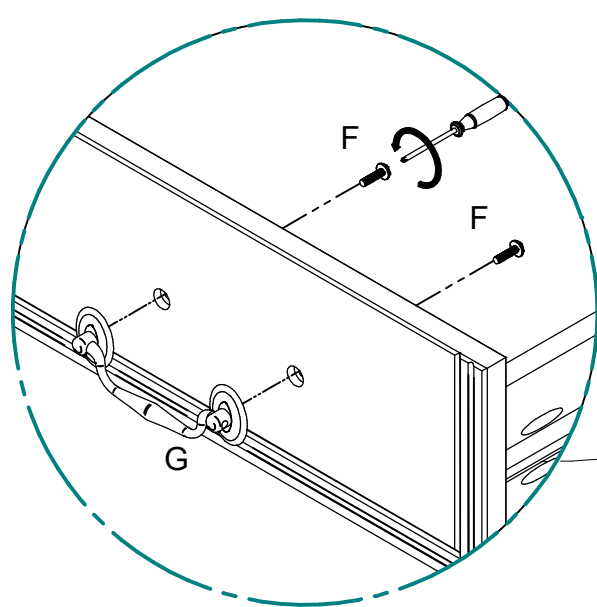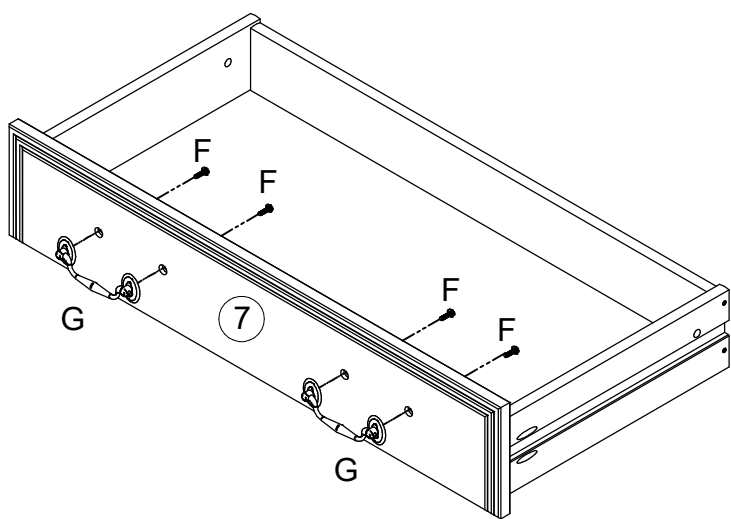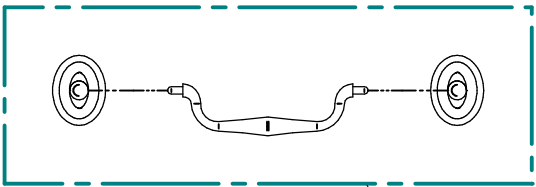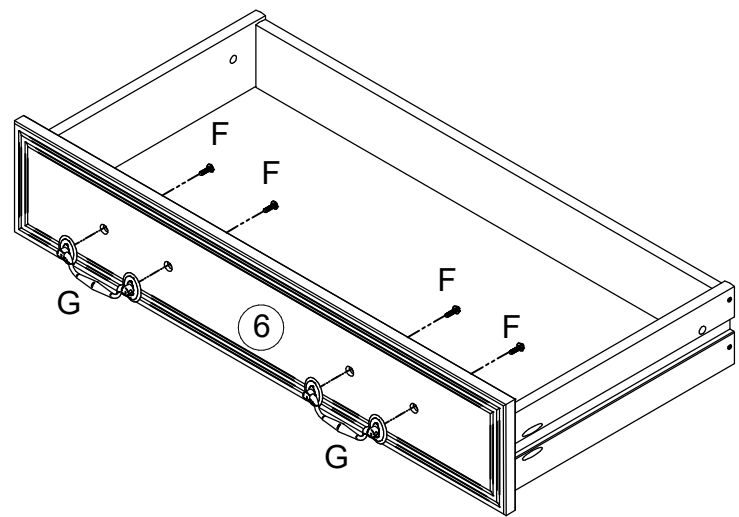

F		12
G		6

STEP 10


Part 1 of the drawer lock: fit the pin (A) into the drawer slide.

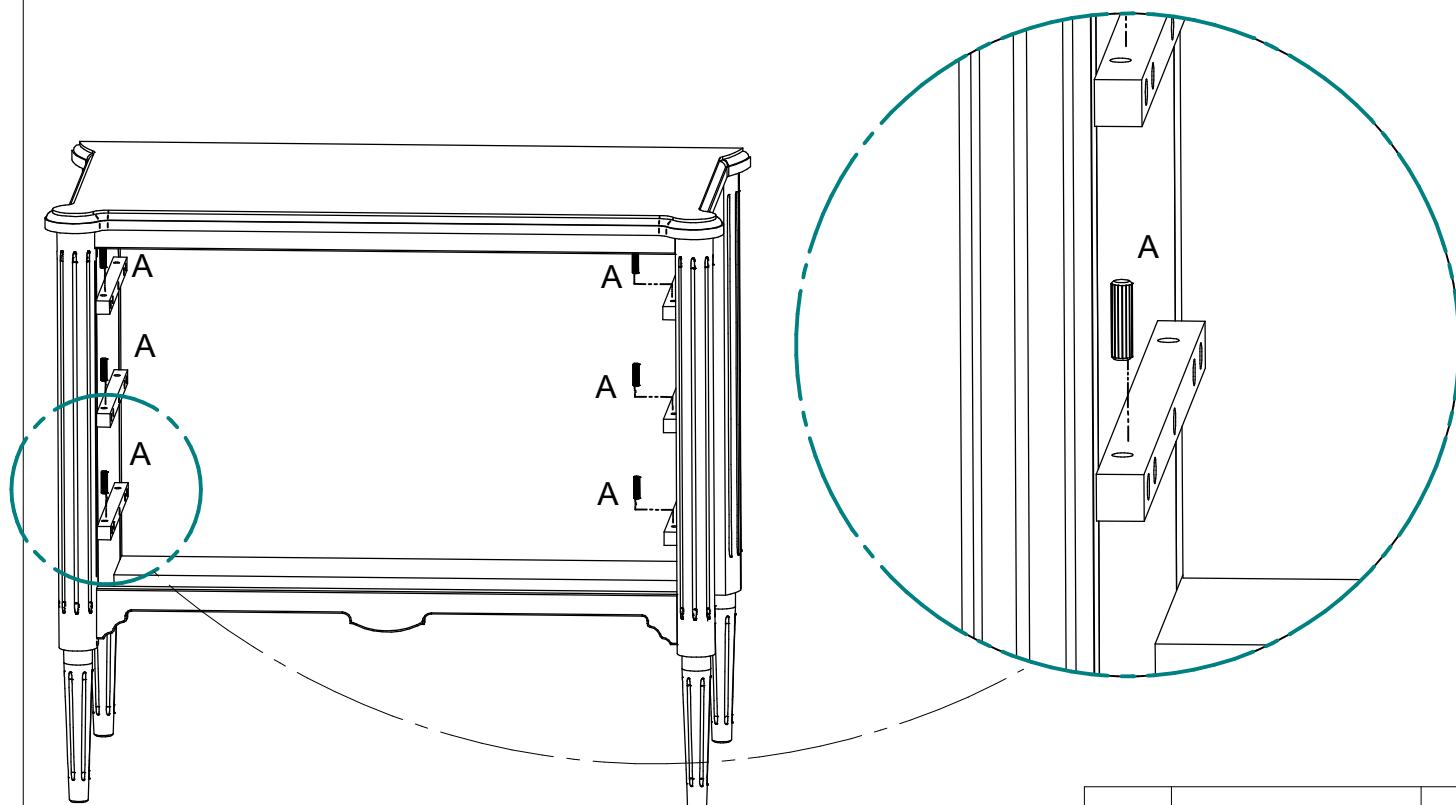

A		6
---	---	---


STEP 11

Drawer lock part 2: Fit the pin (B) into the sides of the drawer.

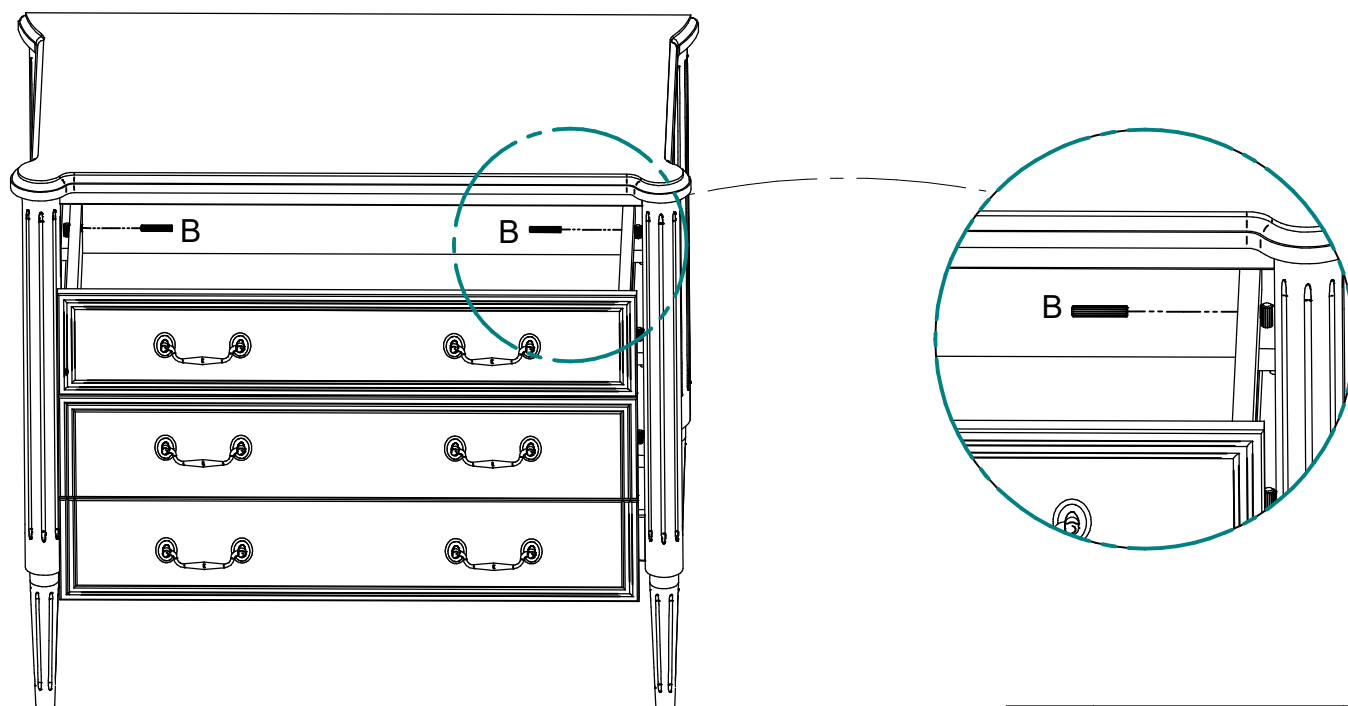


B		6
---	---	---

STEP 12 Full drawer lock.

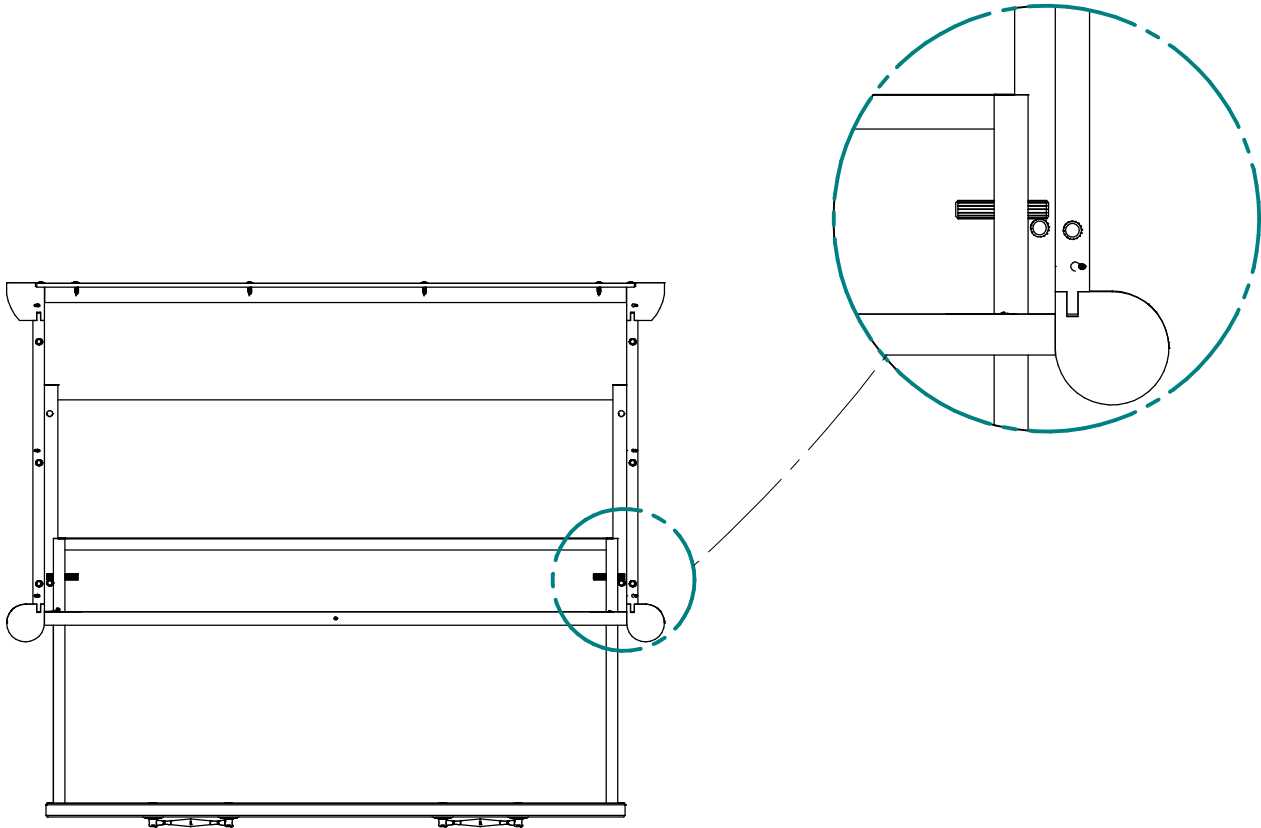


STEP 13 Use the included Straps (L), Screws (J), and Washers (K) to anchor the unit to the wall for safety.

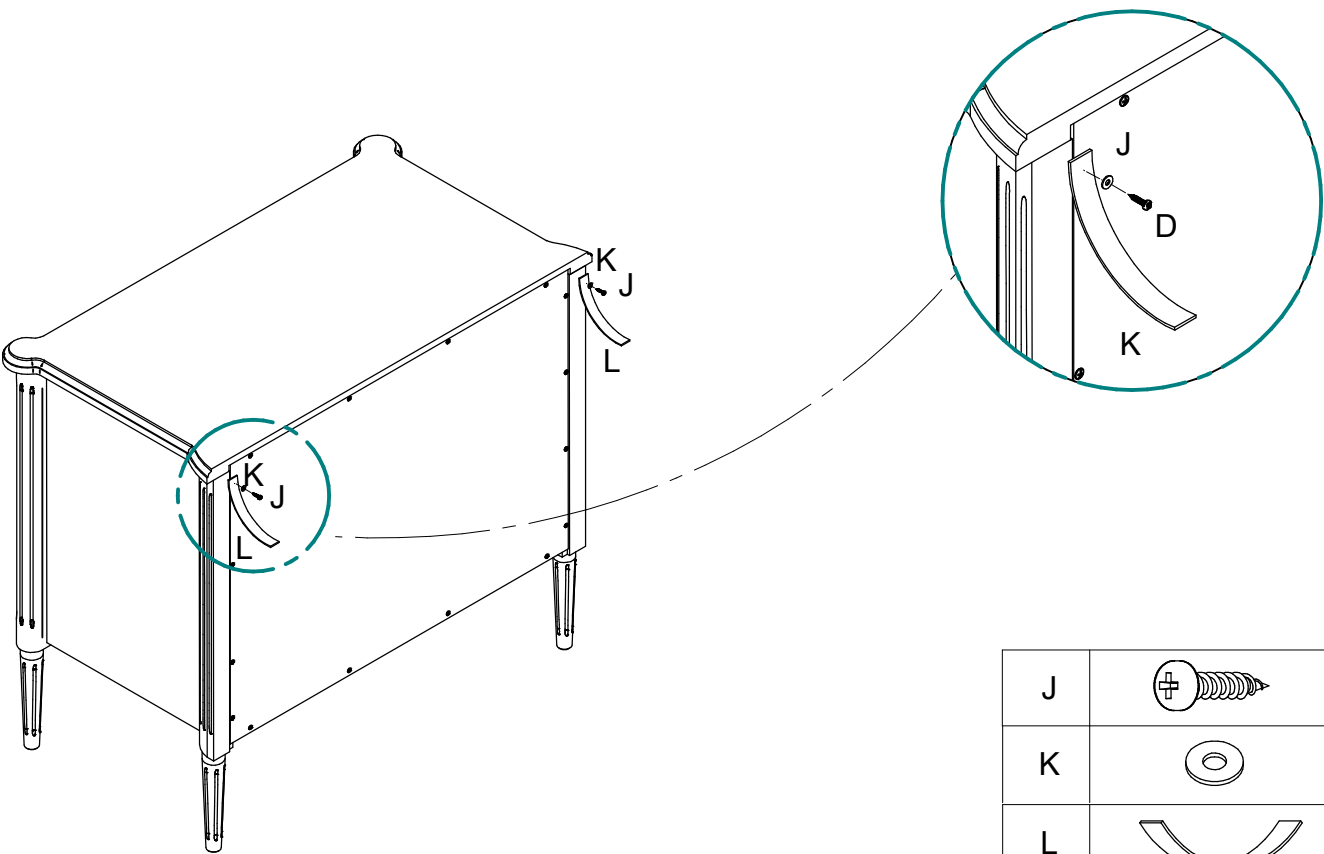

J		2
K		2
L		2

STEP 14

Use the screw(M) and fixing bushing(N) to fix the dresser to the wall, for greater security.

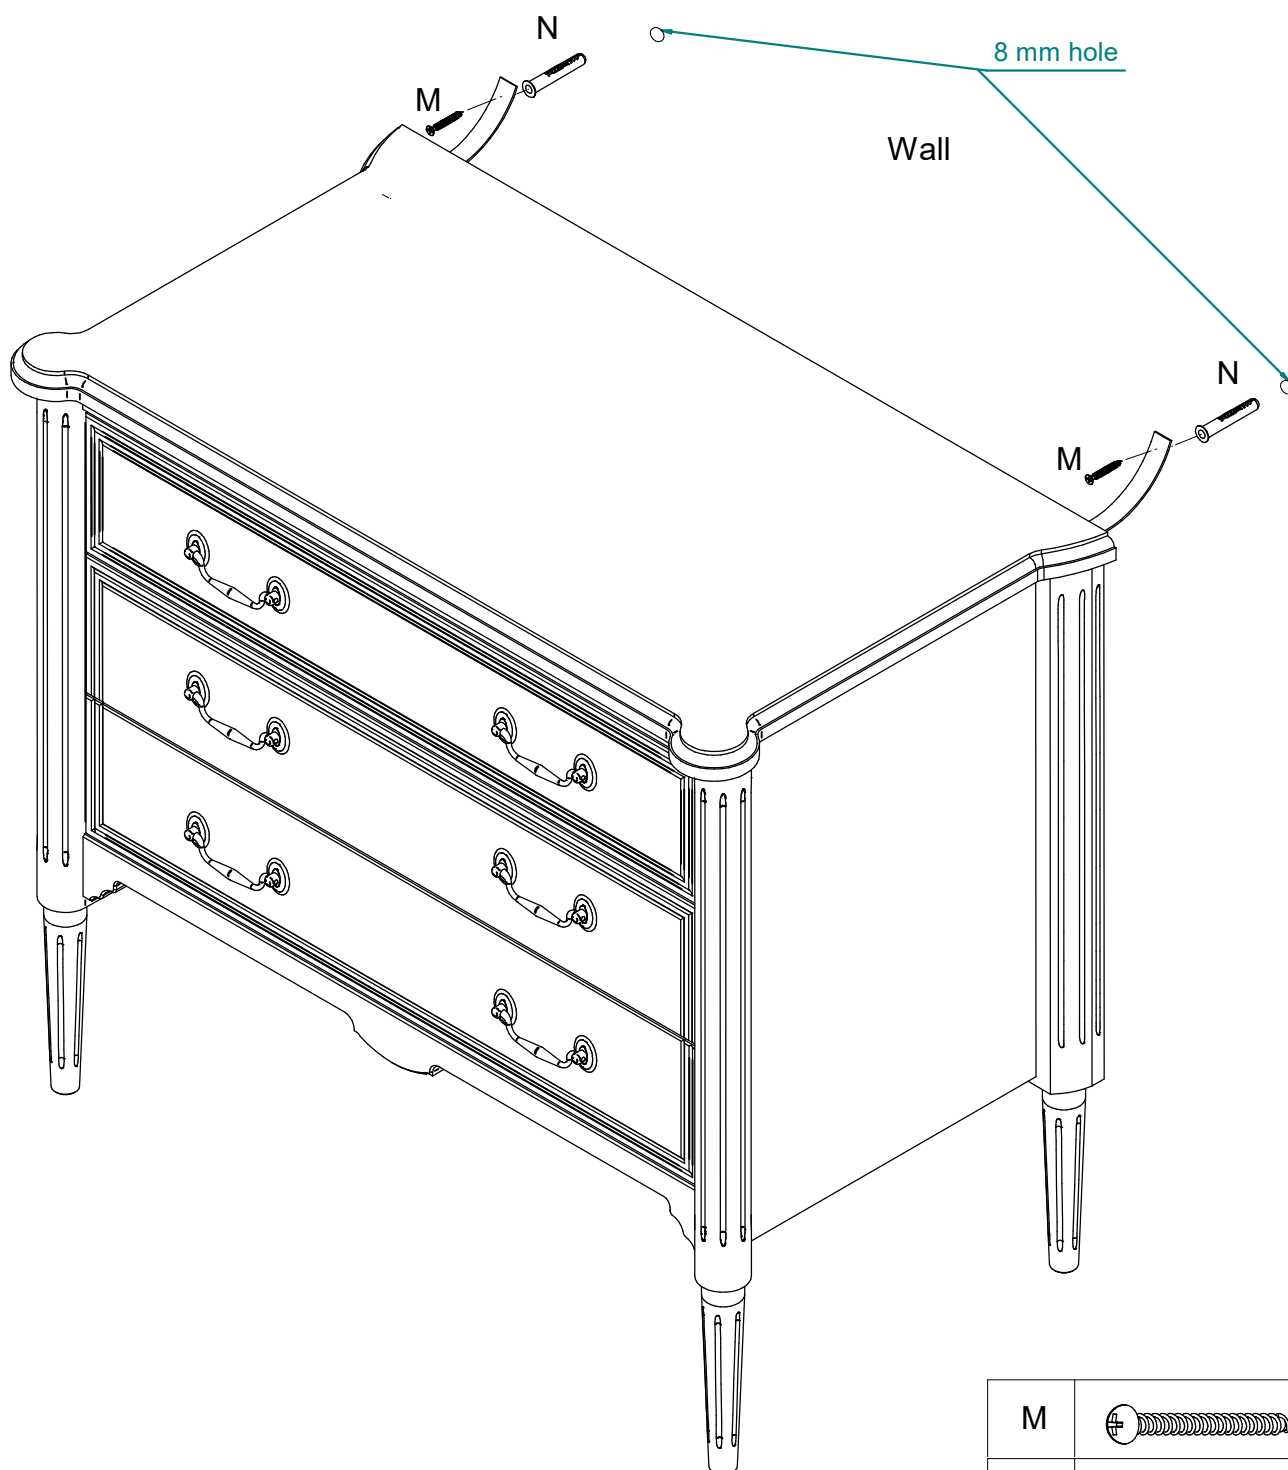

M		2
N		2