

# Bronzeville I Light Pendant

6514301 | 1.0

## VISUAL COMFORT & CO.

GENERATION LIGHTING

### GENERAL PRODUCT INFORMATION:

These fixtures are intended to be installed utilizing NEC compliant junction boxes.

This product is safety listed for damp locations.


This product may be dimmed with a standard incandescent dimmer.

This instruction shows a typical installation.

### CAUTION - RISK OF FIRE


This product must be installed in accordance with the applicable installation code by a person familiar with the construction and operation of the product and the hazards involved.

Use minimum 90°c supply conductors.

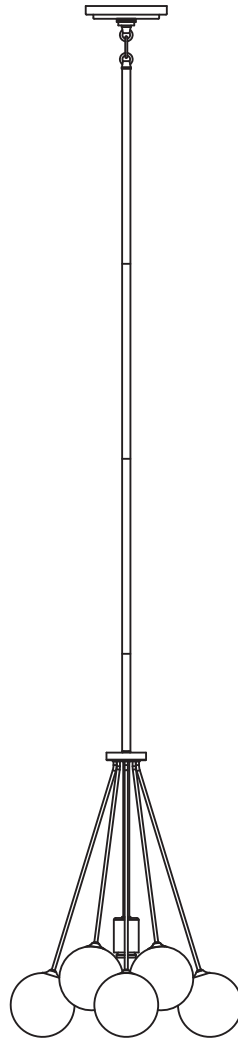

**SAVE THESE INSTRUCTIONS!**

# Install the Fixture

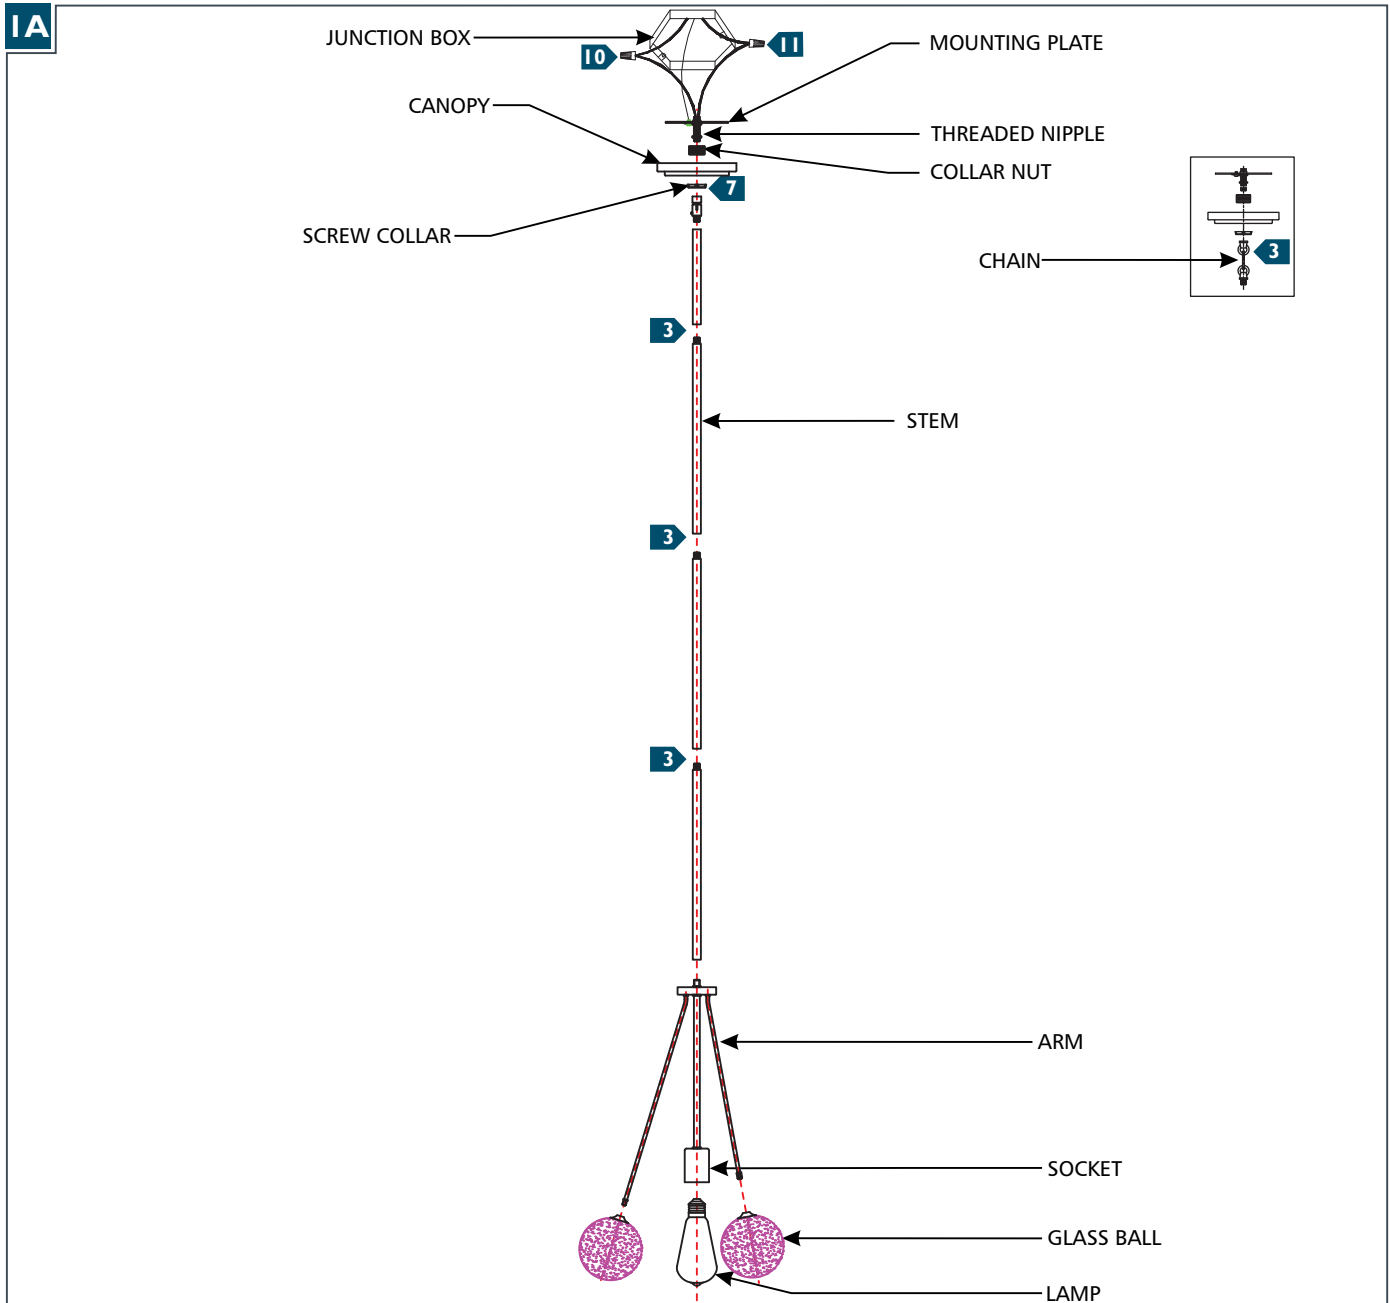

- 1** Screw the lamps into the sockets. Refer to the label on the socket for Max Wattage Information.
- 2** Carefully install the glass balls making sure to avoid making friction with the other glass balls. Screw the glass ball onto the end of the arm until snug. Make sure the glass ball is installed correctly before releasing. Repeat for remaining glass balls.
- 3** Determine the wanted height or look of the fixture with the provided stems and/or chain and assemble them by screwing them together. All the parts may be used alone or used in combination.
- 4** Feed the fixture wires through the hub cover, threaded rod, rod cover, spacer, and washer and screw the assembly to the fixture.
- 5** Unscrew the collar nut off the screw collar and place it onto the stem/chain followed by the canopy.
- 6** If necessary, screw the threaded nipple tightly onto the mounting plate.
- 7** Feed the fixture wires through the threaded nipple and screw the mounting plate assembly onto the stem/chain assembly.
- 8** Align and secure the mounting plate to the junction box.
- 9** Connect the fixture to a suitable ground in accordance to local electrical codes.
- 10** Connect the white fixture wire (square and/or rigid) to the neutral power line wire with a wire nut.
- 11** Connect the black fixture wire (round and/or smooth) to the hot power line wire with a wire nut.
- 12** Neatly place all the wires into the junction box, place the canopy onto the ceiling, and secure it in place by screwing the collar nut tightly into the screw collar.