

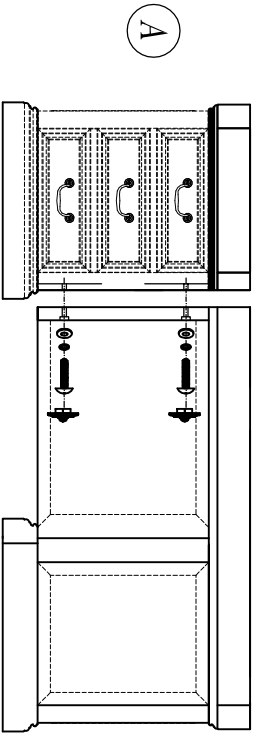
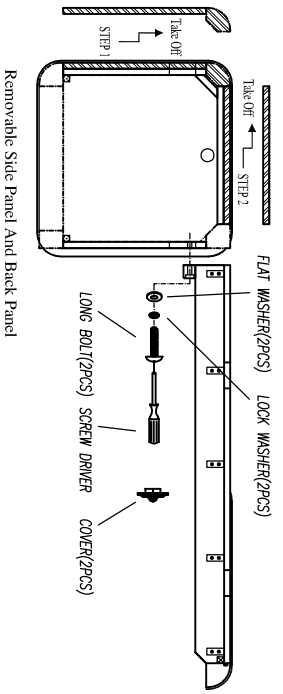


JUNE 2008
7-9147

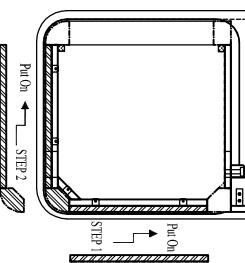



ASSEMBLY INSTRUCTIONS

- 1) UNPACK (2) CARTONS , LOCATE LISTED HARDWARE AND POSITION PARTS .
- 2) ALIGN LH PEDestal AND LH BACK PANEL BOLTING AS INDICATED IN DIAGRAM "A".
- 3) REPEAT SEQUENCE WITH RH PEDestal AND RH BACK PANEL.
- 4) REMOVE UPPER END AND BACK CAPS FROM LH PEDestal. THIS IS ACCOMPLISHED BY FIRST SLIDING THE END CAP TO BACK OF THE PEDestal THEN FOLLOW SLIDING REAR CAP TOWARDS OUTSIDE OF PEDestal.
- 5) REPEAT SEQUENCE WITH RH PEDestal CAPS.
- 6) ALIGN LH TOP ASSEMBLY ON LH PEDestal AND BACK AS INDICATED IN DIAGRAM "B".
- 7) ATTACH TOP, INSERTING SCREWS THROUGH METAL BRACKETS. THE PENCIL DRAWER CAN SLIDE FORWARD TO REACH REAR BRACKETS.
- 8) REPEAT SEQUENCE WITH RH TOP ASSEMBLY.
- 9) ALIGN LH DESK ASSEMBLY AND RH DESK ASSEMBLY. TABLE PINS WILL ALIGN DESK AT CONNECTING JOINT AS INDICATED IN DIAGRAM "C".
- 10) CLOSE TABLE LOCKS FROM UNDERSIDE TO DRAW DESK TIGHT.
- 11) INSERT LONG BOLTS INTO INSIDE REAR CORNER TO SECURE ASSEMBLY.
- 12) REPLACE PEDestal REAR CAPS FOLLOWED BY THE PEDestal END CAPS.
- 13) INSERT HOLE PLUGS TO COVER BOLT HEADS.
- 14) INSTALL SPACE BLOCK BETWEEN PENCIL DRAWERS. USE SHORT BOLTS SECURING BLOCK FROM UNDERSIDE OF TOP AS INDICATED IN DIAGRAM "D".

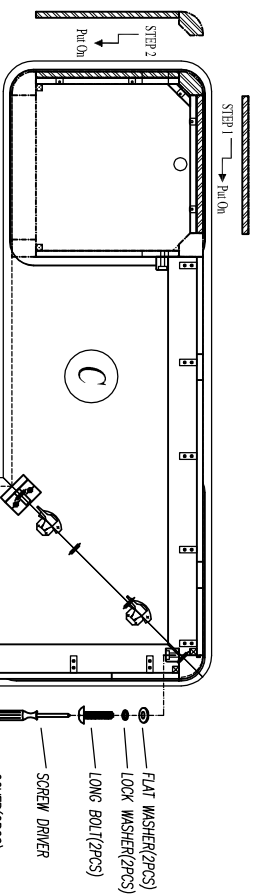

ASSEMBLY PARTS LISTING

- (6) LONG BOLTS
- (2) SHORT BOLTS
- (8) FLAT WASHERS
- (8) LOCK WASHERS
- (6) BOLT COVER CAPS
- (16) WOOD SCREWS

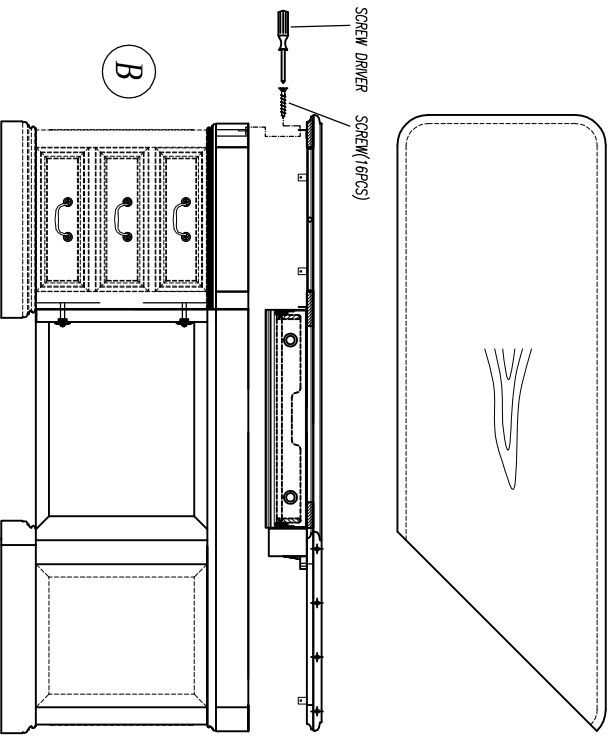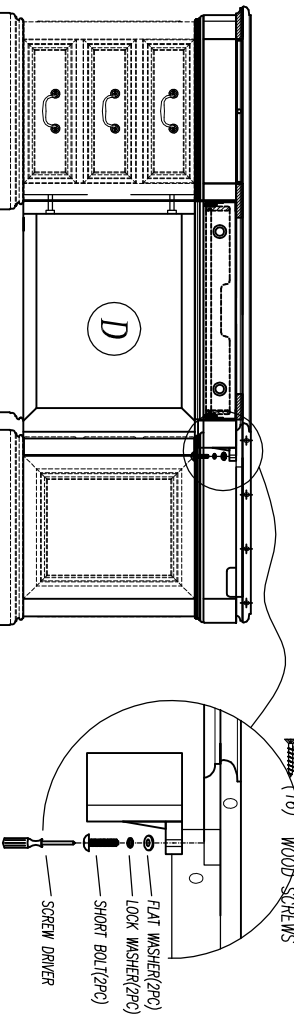

A

B

D

C